

Uputstvo za upotrebu

BEKO mašina za pranje veša WRE 6411 BWW

The Beko logo is displayed in a bold, blue, sans-serif font. A thick blue horizontal line is positioned below the letters 'o' and 'k', extending to the left and slightly under the 'e'.

Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:


<https://tehnoteka.rs/p/beko-masina-za-pranje-vesa-wre-6411-bww-akcija-cena/>

Washing Machine

User's Manual

Mašina za pranje veša

Uputstvo za upotrebu

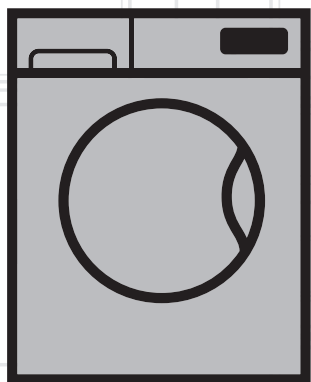

WRE 6411 BWW

EN | SRB |

Document Number: 2820670696_B

beko



1 Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

1.1 General safety

- This product can be used by children at and above 8 years old and by persons whose physical, sensory or mental capabilities were not fully developed or who lack experience and knowledge provided that they are supervised or trained on the safe usage of the product and the risks it brings out. Children must not play with the product. Cleaning and maintenance works should not be performed by children unless they are supervised by someone.
- Children of less than 3 years should be kept away unless continuously supervised.
- Never place the product on a carpet-covered floor. Otherwise, lack of airflow beneath the machine will cause electrical parts to overheat. This will cause problems with your product.
- If the product has a failure, it should not be operated unless it is repaired by the Authorized Service Agent. There is the risk of electric shock!
- This product is designed to resume operating in the event of powering on after a power interruption. If you wish to cancel the programme, see "Cancelling the programme" section.
- Connect the product to a grounded outlet protected by a 16 A fuse. Do not neglect to have the grounding installation made by a qualified electrician. Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.
- The water supply and draining hoses must be securely fastened and remain undamaged. Otherwise, there is the risk of water leakage.
- Never open the loading door or remove the filter while there is still water in the drum. Otherwise, risk of flooding and injury from hot water will occur.
- Do not force open the locked loading door. The loading door will be ready to open just a few minutes after the washing cycle comes to an end. In case of forcing the loading door to open, the door and the lock mechanism may get damaged.
- Unplug the product when not in use.
- Never wash the product by spreading or pouring water onto it! There is the risk of electric shock!
- Never touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by grabbing the plug.
- Use detergents, softeners and supplements suitable for automatic washing machines only.
- Follow the instructions on the textile tags and on the detergent package.
- The product must be unplugged during installation, maintenance, cleaning and repairing procedures.
- Always have the installation and repairing procedures carried out by the Authorized Service Agent. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
- If the power cable is damaged, it must be replaced by the manufacturer, after sales service or a similarly qualified person (preferably an electrician) or someone designated by the importer in order to avoid possible risks.
- Place the product on a rigid, flat and level surface.
- Do not place it on a long-pile rug or similar surfaces.
- Do not place the product on a high platform or near the edge on a cascaded surface.
- Do not place the product on the power cable.
- Never use sponge or scrub materials. These will damage the painted, chrome plated and plastic surfaces.

1.2 Intended use

- This product has been designed for domestic use. It is not suitable for commercial use and it must not be used out of its intended use.
- The product must only be used for washing and rinsing of laundry that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.

1.3 Children's safety

- Packaging materials are dangerous to children. Keep packaging materials in a safe place away from reach of the children.
- Electrical products are dangerous for the children. Keep children away from the product when it is in use. Do not let them to tamper with the product. Use child lock to prevent children from intervening with the product.

- Do not forget to close the loading door when leaving the room where the product is located.
- Store all detergents and additives in a safe place away from the reach of the children by closing the cover of the detergent container or sealing the detergent package.



While washing the laundry at high temperatures, the loading door glass becomes hot. Therefore, keep especially the children away from the loading door of the machine while the washing operation is in progress.

1.4 Package information

- Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

1.5 Disposing of the waste product

- This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Therefore, do not dispose the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. Please consult your local authorities to learn the nearest collection point. Help protect the environment and natural resources by recycling used products. For children's safety, cut the power cable and break the locking mechanism of the loading door so that it will be non-functional before disposing of the product.

1.6 Compliance with WEEE Directive



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

2 Installation

Refer to the nearest Authorised Service Agent for installation of the product. To make the product ready for use, review the information in the user manual and make sure that the electricity, tap water supply and water drainage systems are appropriate before calling the Authorized Service Agent. If they are not, call a qualified technician and plumber to have any necessary arrangements carried out.



Preparation of the location and electrical, tap water and waste water installations at the place of installation is under customer's responsibility.



WARNING: Installation and electrical connections of the product must be carried out by the Authorized Service Agent. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.



WARNING: Prior to installation, visually check if the product has any defects on it. If so, do not have it installed. Damaged products cause risks for your safety.



Make sure that the water inlet and discharge hoses as well as the power cable are not folded, pinched or crushed while pushing the product into its place after installation or cleaning procedures.

2.1 Appropriate installation location

- Place the machine on a rigid floor. Do not place it on a long pile rug or similar surfaces.
- Total weight of the washing machine and the dryer -with full load- when they are placed on top of each other reaches to approx. 180 kilograms. Place the product on a solid and flat floor that has sufficient load carrying capacity!
- Do not place the product on the power cable.
- Do not install the product at places where temperature may fall below 0°C.

- Place the product at least 1 cm away from the edges of other furniture.

2.2 Removing packaging reinforcement



Tilt the machine backwards to remove the packaging reinforcement. Remove the packaging reinforcement by pulling the ribbon.

2.3 Removing the transportation locks




WARNING: Do not remove the transportation locks before taking out the packaging reinforcement.



WARNING: Remove the transportation safety bolts before operating the washing machine! Otherwise, the product will be damaged.

1. Loosen all the bolts with a suitable spanner until they rotate freely (C).
2. Remove transportation safety bolts by turning them gently.
3. Attach the plastic covers supplied in the User Manual bag into the holes on the rear panel (P)

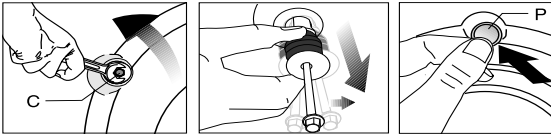

Keep the transportation safety bolts in a safe place to reuse when the washing machine needs to be moved again in the future.

Never move the product without the transportation safety bolts properly fixed in place!

2.4 Connecting water supply



The water supply pressure required to run the product is between 1 to 10 bars (0.1 – 1 MPa). It is necessary to have 10 – 80 liters of water flowing from the fully open tap in one minute to have your machine run smoothly. Attach a pressure reducing valve if water pressure is higher.



If you are going to use the double water-inlet product as a single (cold) water-inlet unit, you must install the supplied stopper to the hot water valve before operating the product. (Applies for the products supplied with a blind stopper group.)



WARNING: Models with a single water inlet should not be connected to the hot water tap. In such a case the laundry will get damaged or the product will switch to protection mode and will not operate.



WARNING: Do not use old or used water inlet hoses on the new product. It may cause stains on your laundry.




1. Tighten all hose nuts by hand. Never use a tool when tightening the nuts.
2. Open the taps completely after making the hose connection to check for water leaks at the connection points. If any leaks occur, turn off the tap and remove the nut. Retighten the nut carefully after checking the seal. To prevent water leakages and damages caused by them, keep the taps closed when the machine is not in use.

2.5 Connecting to the drain

- The end of the drain hose must be directly connected to the wastewater drain or to the washbasin.



WARNING: Your house will be flooded if the hose comes out of its housing during water discharge. Moreover, there is risk of scalding due to high washing temperatures! To prevent such situations and to ensure smooth water intake and discharge of the machine, fix the end of the discharge hose tightly so that it cannot come out.

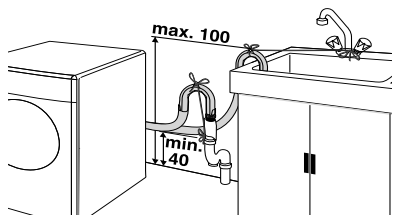


- The hose should be attached to a height of at least 40 cm, and 100 cm at most.
- In case the hose is elevated after laying it on the floor level or close to the ground (less than 40 cm above the ground), water discharge becomes more difficult and the laundry may come out excessively wet. Therefore, follow the heights described in the figure.
- To prevent flowing of dirty water back into the machine and to allow for easy discharge, do not immerse the hose end

into the dirty water or do not drive it in the drain more than 15 cm. If it is too long, cut it short.


- The end of the hose should not be bent, it should not be stepped on and the hose must not be pinched between the drain and the machine.
- If the length of the hose is too short, use it by adding an original extension hose. Length of the hose may not be longer than 3.2 m. To avoid water leak failures, the connection between the extension hose and the drain hose of the product must be fitted well with an appropriate clamp as not to come off and leak.

2.6 Adjusting the feet

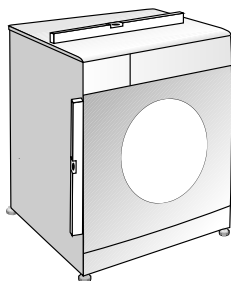

WARNING: In order to ensure that the product operates more silently and vibration-free, it must stand level and balanced on its feet. Balance the machine by adjusting the feet. Otherwise, the product may move from its place and cause crushing and vibration problems.

1. Loosen the lock nuts on the feet by hand.
2. Adjust the feet until the product stands level and balanced.
3. Tighten all lock nuts again by hand.

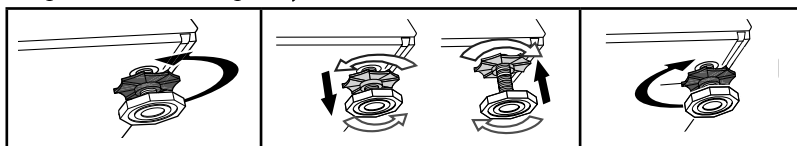

WARNING: Do not use any tools to loosen the lock nuts. Otherwise, they will get damaged.

2.7 Electrical connection

Connect the product to a grounded outlet protected by a 16 A fuse. Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.

- Connection must comply with national regulations.
- Power cable plug must be within easy reach after installation.
- If the current value of the fuse or breaker in the house is less than 16 Amps, have a qualified electrician install a 16 Amp fuse.
- The voltage specified in the "Technical specifications" section must be equal to your mains voltage.
- Do not make connections via extension cables or multi-plugs.



WARNING: Damaged power cables must be replaced by the Authorized Service Agents.

Transportation of the product

1. Unplug the product before transporting it.
2. Remove water drain and water supply connections.
3. Drain all water that has remained in the product.
4. Install transportation safety bolts in the reverse order of removal procedure.



Never move the product without the transportation safety bolts properly fixed in place!



WARNING: Packaging materials are dangerous to children. Keep packaging materials in a safe place away from reach of the children.

3 Preparation

3.1 Sorting the laundry

- Sort laundry according to type of fabric, colour, and degree of soiling and allowable water temperature.
- Always obey the instructions given on the garment tags.

3.2 Preparing laundry for washing


- Laundry items with metal attachments such as, underwired bras, belt buckles or metal buttons will damage the machine. Remove the metal pieces or wash the clothes by putting them in a laundry bag or pillow case.
- Take out all substances in the pockets such as coins, pens and paper clips, and turn pockets inside out and brush. Such objects may damage the product or cause noise problem.
- Put small size clothes such as infant's socks and nylon stockings in a laundry bag or pillow case.
- Place curtains in without compressing them. Remove curtain attachment items.
- Fasten zippers, sew loose buttons and mend rips and tears.
- Wash "machine washable" or "hand washable" labeled products only with an appropriate programme.
- Do not wash colours and whites together. New, dark coloured cottons release a lot of dye. Wash them separately.
- Tough stains must be treated properly before washing. If unsure, check with a dry cleaner.
- Use only dyes/colour changers and limescale removers suitable for machine wash. Always follow the instructions on the package.
- Wash trousers and delicate laundry turned inside out.
- Keep laundry items made of Angora wool in the freezer for a few hours before washing. This will reduce pilling.
- Laundry that are subjected to materials such as flour, lime dust, milk powder, etc. intensely must be shaken off before placing into the machine. Such dusts and powders on the laundry may build up on the inner parts of the machine in time and can cause damage.

3.3 Things to be done for energy saving

Following information will help you use the product in an ecological and energy-efficient manner.

- Operate the product in the highest capacity allowed by the programme you have selected, but do not overload; see, "Programme and consumption table".
- Always follow the instructions on the detergent packaging.
- Wash slightly soiled laundry at low temperatures.
- Use faster programmes for small quantities of lightly soiled laundry.
- Do not use prewash and high temperatures for laundry that is not heavily soiled or stained.
- If you plan to dry your laundry in a dryer, select the highest spin speed recommended during washing process.
- Do not use detergent in excess of the amount recommended on the detergent package.

3.4 Initial use

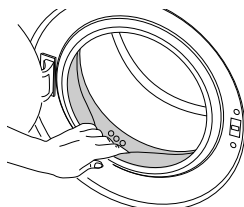

Before starting to use the product, make sure that all preparations are made in accordance with the instructions in sections "Important safety instructions" and "Installation".

To prepare the product for washing laundry, perform first operation in Drum Cleaning programme. If your product is not equipped with Drum Cleaning programme, perform the Initial Use procedure in accordance with the methods described under "5.2 Cleaning the loading door and the drum" section of the user manual.



Use an detergents suitable for the washing machines.

Some water might have remained in the product due to the quality control processes in the production. It is not harmful for the product.

3.5 Correct load capacity

The maximum load capacity depends on the type of laundry, the degree of soiling and the washing programme desired.

The machine automatically adjusts the amount of water according to the weight of the loaded laundry.



WARNING: Follow the information in the "Programme and consumption table". When overloaded, machine's washing performance will drop. Moreover, noise and vibration problems may occur.

3.6 Loading the laundry

1. Open the loading door.
2. Place laundry items loosely into the machine.
3. Push the loading door to close until you hear a locking sound. Ensure that no items are caught in the door.



The loading door is locked while a programme is running. The door can only be opened a while after the programme comes to an end.




WARNING: In case of misplacing the laundry, noise and vibration problems may occur in the machine.

3.7 Using detergent and softener



When using detergent, softener, starch, fabric dye, bleach or limescale remover read the manufacturer's instructions on the package carefully and follow the suggested dosage values. Use measuring cup if available.

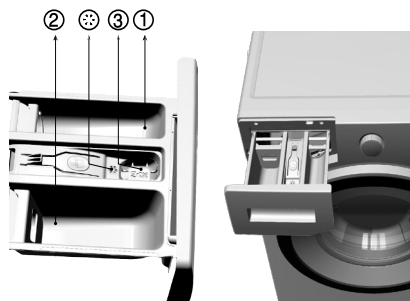

Detergent Drawer

The detergent drawer is composed of three compartments:

- (1) for prewash
- (2) for main wash
- (3) for softener
- (*) in addition, there is siphon piece in the softener compartment.

Detergent, softener and other cleaning agents

- Add detergent and softener before starting the washing programme.
- Never leave the detergent drawer open while the washing programme is running!
- When using a programme without prewash, do not put any detergent into the prewash compartment (compartment nr. "1").
- In a programme with prewash, do not put liquid detergent into the prewash compartment (compartment nr. "1").
- Do not select a programme with prewash if you are using a detergent bag or dispensing ball. Place the detergent bag or the dispensing ball directly among the laundry in the machine.
- If you are using liquid detergent, do not forget to place the liquid detergent cup into the main wash compartment (compartment nr. "2").

Choosing the detergent type

The type of detergent to be used depends on the type and colour of the fabric.

- Use different detergents for coloured and white laundry.
- Wash your delicate clothes only with special detergents (liquid detergent, wool shampoo, etc.) used solely for delicate clothes.
- When washing dark coloured clothes and quilts, it is recommended to use liquid detergent.
- Wash woolens with special detergent made specifically for woolens.




WARNING: Use only detergents manufactured specifically for washing machines.

WARNING: Do not use soap powder.

Adjusting detergent amount

The amount of washing detergent to be used depends on the amount of laundry, the degree of soiling and water hardness.

- Do not use amounts exceeding the dosage quantities recommended on the detergent package to avoid problems of excessive foam, poor rinsing, financial savings and finally, environmental protection.
- Use lesser detergent for small amounts or lightly soiled clothes.

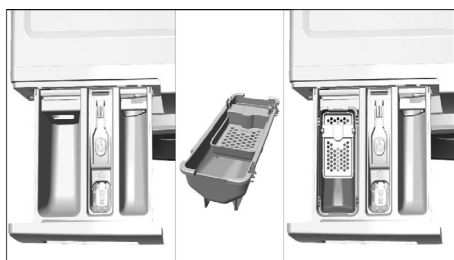

Using softeners

Pour the softener into the softener compartment of the detergent drawer.

- Do not exceed the (>max<) level marking in the softener compartment.
- If the softener has lost its fluidity, dilute it with water before putting it in the detergent drawer.

Using liquid detergents

If the product contains a liquid detergent cup:

- Make sure that you have placed the liquid detergent cup in compartment nr. "2".
- If the liquid detergent has lost its fluidity, dilute it with water before putting in the detergent cup.

		Light colours and whites	Colours	Dark colours	Delicates/Woolens/ Silks
		(Recommended temperature range based on soiling level: 40-90 °C)	(Recommended temperature range based on soiling level: cold -40 °C)	(Recommended temperature range based on soiling level: cold -40 °C)	(Recommended temperature range based on soiling level: cold -30 °C)
Soiling Level	Heavily Soiled (difficult stains such as grass, coffee, fruits and blood.)	It may be necessary to pre-treat the stains or perform prewash. Powder and liquid detergents recommended for whites can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches.	Powder and liquid detergents recommended for colours can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches. Use detergents without bleach.	Liquid detergents suitable for colours and dark colours can be used at dosages recommended for heavily soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.
	Normally Soiled (For example, stains caused by body on collars and cuffs)	Powder and liquid detergents recommended for whites can be used at dosages recommended for normally soiled clothes.	Powder and liquid detergents recommended for colours can be used at dosages recommended for normally soiled clothes. Use detergents without bleach.	Liquid detergents suitable for colours and dark colours can be used at dosages recommended for normally soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.
	Lightly Soiled (No visible stains exist.)	Powder and liquid detergents recommended for whites can be used at dosages recommended for lightly soiled clothes.	Powder and liquid detergents recommended for colours can be used at dosages recommended for lightly soiled clothes. Use detergents without bleach.	Liquid detergents suitable for colours and dark colours can be used at dosages recommended for lightly soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.

If the product does not contain a liquid detergent cup:

- Do not use liquid detergent for the prewash in a programme with prewash.
- Liquid detergent stains your clothes when used with Delayed Start function. If you are going to use the Delayed Start function, do not use liquid detergent.

Using gel and tablet detergent

Apply the following instructions when using tablet, gel and similar detergents.

- If the gel detergent thickness is fluidal and your machine does not contain a special liquid detergent cup, put the gel detergent into the main wash detergent compartment during first water intake. If your machine contains a liquid detergent cup, fill the detergent into this cup before starting the programme.
- If the gel detergent thickness is not fluidal or in the shape of capsule liquid tablet, put it directly into the drum before washing.
- Put tablet detergents into the main wash compartment (compartment nr. "2") or directly into the drum before washing.



Tablet detergents may leave residues in the detergent compartment. If you encounter such a case, place the tablet detergent between the laundry, close to the lower part of the drum in future washings.

Use the tablet or gel detergent without selecting the prewash function.

Using starch


- Add liquid starch, powder starch or the fabric dye into the softener compartment.
- Do not use softener and starch together in a washing cycle.
- Wipe the inside of the machine with a damp and clean cloth after using starch.

Using bleaches

- Select a programme with prewash and add the bleaching agent at the beginning of the prewash. Do not put detergent in the prewash compartment. As an alternative application, select a programme with extra rinse and add the bleaching agent while the machine is taking water from the detergent compartment during first rinsing step.
- Do not use bleaching agent and detergent by mixing them.
- Use just a little amount (approx. 50 ml) of bleaching agent and rinse the clothes very well as it causes skin irritation. Do not pour the bleaching agent onto the clothes and do not use it for coloured clothes.
- When using oxygen based bleaches, select a programme that washes at a lower temperature.
- Oxygen based bleaches can be used together with detergents; however, if its thickness is not the same with the detergent, put the detergent first into the compartment nr. "2" in the detergent drawer and wait until the detergent flows while the machine is taking in water. Add the bleaching agent from the same compartment while the machine is still taking in water.

Operating the product

4.1 Control panel

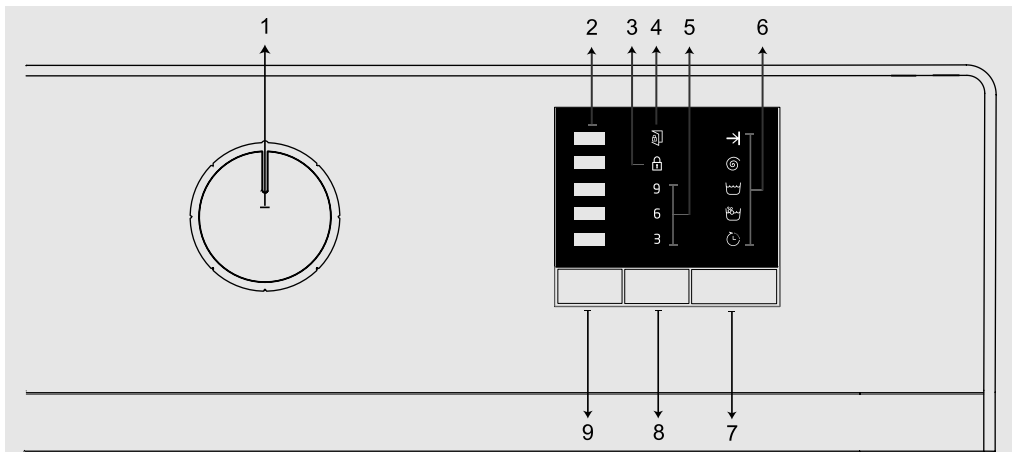

1 - Programme Selection knob (Uppermost position On / Off)

2 - Spin Speed Indicator LEDs

3 - Child Lock Enabled LED

4 - Door Lock Enabled LED

5 - Delayed Start Indicator LEDs

6 - Programme Follow-up LEDs

7 - Start/Pause Button

8 - Delayed Start Setting Button

9 - Spin Speed Adjustment button

4.2 Preparing the machine

1. Make sure that the hoses are connected tightly.
2. Plug in your machine.
3. Turn the tap on completely.
4. Place the laundry in the machine.
5. Add detergent and fabric softener.

4.3 Programme selection and tips for efficient washing


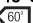
1. Select the programme suitable for the type, quantity and soiling degree of the laundry in accordance with the "Programme and consumption table" and the temperature table below.
2. Select the desired programme with the Programme Selection knob.

4.4 Programme and consumption table

Programme °C		Maximum load (kg)	Programme Duration (min)	Water consumption (l)	Power consumption (kVt/h)	Spin speed
Cottons 90°	90	6	180	83	1,95	800
Cottons 40°	40	6	180	81	1,0	800
Cottons 20°	20	6	180	81	0,5	800
Cottons 60° with Prewash	60	6	200	92	1,8	800
Cottons Eco 60°	60**	6	250	47,5	0,855	800
Cottons Eco 60°	60**	3	195	35	0,54	800
Cottons Eco 40°	40**	3	195	33,7	0,53	800
Synthetics 40°	40	2,5	120	66	0,75	800
Synthetics 20°	20	2,5	120	66	0,25	800
Mini 30°	30	6	28	60	0,15	800
Woollens / Hand Wash 40°	40	1,5	65	45	0,45	800
Down Wear 40°	40	1,5	105	85	0,8	800
Shirts 40°	40	2,5	80	42	0,6	800
Drum Clean	90	-	160	67	2,1	600

** : Energy Label programme (EN 60456 Ed.3)



** "Cotton Economic 40°C and Cotton Economic 60°C are standard programmes." These programmes are known as "40°C cotton standard programme" and "60°C cotton standard programme" and indicated with the   symbols on the panel.



Water and power consumption may vary subject to the changes in water pressure, water hardness and temperature, ambient temperature, type and amount of laundry, spin speed, and changes in electric voltage.

Depending on the amount of laundry you have loaded into your machine, there may be a difference of 1-1.5 hours between the duration shown in the Programme and consumption table and the actual washing duration. Duration will be automatically updated soon after the washing starts.

4.5 Main programmes

Depending on the type of fabric, use the following main programmes.

• Cottons

Use this programme for your cotton laundry (sheets, bedlinen, towels, bathrobes, underwear etc.). Your laundry will be washed with vigorous washing action for a longer washing cycle.

• Synthetics

Use to wash your synthetic clothes (shirts, blouses, synthetic/cotton blends, etc.). Your laundry will be washed with a gentle action for a shorter washing cycle when compared to the Cottons programme. For curtains and tulle, it is recommended to use Synthetics 20°C or 40°C programme.

• Wool / Hand Wash

Use to wash your woolen/delicate laundry. Your laundry will be washed with a very gentle washing action in order not to damage the clothes.



APPAREL CARE

"The wool wash cycle of this machine has been approved by The Woolmark Company for the washing of machine washable wool products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. M0000."
"In UK, Eire, Hong Kong and India the Woolmark trade mark is a Certification trade mark."

4.6 Additional programmes

For special cases, additional programmes are available in the machine.



Additional programmes may differ according to the model of the machine.

- Cotton Economy

Use this programme to wash your laundry washable in cottons programme for a longer time, still with a very good performance for saving purposes.



Cotton Eco programme consumes less energy compared to other cotton programmes.

- Cottons with Prewash

Use this programme only for heavily soiled cotton clothes. Add detergent into the prewash compartment.

- Mini 30

Use this programme to wash your lightly soiled cotton clothes in a short time.

- Shirts

This programme is used to wash the shirts made from cotton, synthetic and synthetic blended fabrics altogether. It reduces wrinkles. Pre-treatment algorithm is executed.

- Apply the pre-treatment chemical on your garments directly or add it together with detergent when the machine starts to take water from the main washing compartment. Thus the machine will wash them in a short period of time and expected lifespan of your shirts will extend.

- Down Wear

Use this programme to wash your coats, vest, jackets etc. containing feathers with a "machine-washable" label on them. Thanks to special spinning profiles, it is ensured that the water reaches the air gaps amongst the feathers.

- Drum Cleaning

Use regularly (once in every 1-2 months) to clean the drum and provide the required hygiene. Operate the programme while the machine is completely empty. To obtain better results, put powder lime-scale remover for washing machines into the detergent compartment no. "2". When the programme is over, leave the loading door ajar so that the inside of the machine gets dry.



This is not a washing programme. It is a maintenance programme.

Do not run the programme when there is something in the machine. If you try to do so, the machine detects that there is load inside and aborts the programme.

4.7 Special programmes

For specific applications, select any of the following programmes.

- Rinse

Use when you want to rinse or starch separately.

- Spin+Pump

You can use this function to remove the water on the garment of drain the water in the machine.

Before selecting this programme, select the desired spin speed and press Start / Pause button. First, the machine will drain the water inside of it. Then, it will spin the laundry with the set spin speed and drain the water coming out of them. If you wish to drain only the water without spinning your laundry, select the Pump+Spin programme and then select the No Spin function with the help of Spin Speed Adjustment button. Press Start / Pause button.



Use a lower spin speed for delicate laundries.

4.8 Speed selection

Whenever a new programme is selected, the recommended spin speed of the selected programme is displayed on the spin speed indicator.

To decrease the spin speed, press the Spin Speed Adjustment button. Spin speed decreases gradually. Then, depending on the model of the product, "Rinse Hold" and "No Spin" options appear on the display. When "No Spin" is selected, the rinse level indicator lights will not turn on.

Rinse hold

If you are not going to unload your clothes immediately after the programme completes, you can use rinse hold function to keep your laundry in the final rinsing water in order to prevent them from getting wrinkled when there is no water in the machine. Press Start / Pause button after this process

if you want to drain the water without spinning your laundry. Programme will resume and complete after draining the water. If you want to spin the laundry held in water, adjust the Spin Speed and press Start / Pause button.

The programme will resume. Water is drained, laundry is spun and the programme is completed.



If the programme has not reached the spinning step, you can change the speed without switching the machine to Pause mode.

4.9 Delayed Start

With the Delayed Start function the startup of the programme may be delayed up to 3, 6 or 9 hours.



Do not use liquid detergents when you set Delayed Start! There is the risk of staining of the clothes.

1. Open the loading door, place the laundry and put detergent, etc.
2. Select a washing programme and spin speed.
3. Set the desired time by pressing the Delayed Start button. When the button is pressed once, 3 hours delayed start is selected. When the same button is pressed again, 6 hours delay is selected, and when it is pressed for the third time, 9 hours delayed start is selected. If you press the Delayed Start button once again, Delayed Start function will be canceled.
4. Press Start / Pause button. Previous delayed start time light turns off and next delayed start time light turns on after every 3 hours.
5. At the end of the countdown, all delayed start lights will turn off and the selected programme will start.



You can switch the machine to pause mode and add laundry during the delayed start period.

Changing the delayed start period

If you want to change the time during countdown, you will need to cancel the programme and set the delay time again.

Canceling the Delayed Start function

If you want to cancel the delayed start countdown and start the programme immediately:

1. Turn the Programme Selection knob to any programme. Thus, Delayed Start function will be canceled. The End/Cancel light flashes continuously.
2. Then, select the programme you want to run again.
3. Press Start / Pause button to start the programme.

4.10 Starting the programme

1. Press Start / Pause button to start the programme.
2. Programme follow-up light showing the startup of the programme will turn on.

4.11 Child Lock

Use Child Lock function to prevent children from tampering with the machine. Thus you can avoid any changes in a running programme.



If the Programme Selection knob is rotated when the child lock is active, "Child Lock Enabled LED" will flash 3 times. The Child Lock does not allow any change in the programmes or the selected speed.



Even if another programme is selected with the Programme Selection knob while the Child Lock is active, previously selected programme will continue running.

When the Child Lock is active and the machine is running, you can switch the machine to Pause mode without deactivating the Child Lock by turning the Programme Selection knob to On / Off position. When you turn the Programme Selection knob afterwards, the programme will resume.

To activate the Child Lock:

Press and hold Speed and Delayed Start buttons for 3 seconds. While you are holding for 3 seconds, the "Child Lock Enabled LED" will flash. You can release the buttons when the LEDs become permanently on.

To deactivate the Child Lock:

Press and hold Speed and Delayed Start buttons for 3 seconds while any programme is running. While you are holding for 3 seconds, the "Child Lock Enabled LED" will flash. You can release the buttons when the LED turns off completely.



In addition to the method above, to deactivate the Child Lock, switch the Programme Selection knob to On / Off position when no programme is running, and select another programme.

Child Lock is not deactivated after power failures or when the machine is unplugged.

4.12 Progress of programme

Progress of a running programme can be followed from the Programme Follow-up indicator. At the beginning of every programme step, the relevant indicator light will turn on and light of the completed step will turn off. You can change the speed settings without stopping the programme flow while the programme is running. To do this, the change you are going to make must be in a step after the running programme step. If the change is not compatible, relevant lights will flash for 3 times.



If the machine does not proceed to the spinning step, the Rinse Hold function might be active or the automatic unbalanced load detection system might be activated due to the unbalanced distribution of the laundry in the machine.

4.13 Loading door lock

There is a locking system on the loading door of the machine that prevents opening of the loading door in cases when the water level is unsuitable. Loading door light will start flashing when the machine is switched to Pause mode. The machine checks the level of the water inside. If the level is suitable, the Loading Door light turns off and the loading door can be opened within 1-2 minutes. If the level is unsuitable, the Loading Door light remains on and the loading door cannot be opened. If you are obliged to open the Loading Door while the Loading Door light is on, you must cancel the current programme. See "Cancelling the programme"

4.14 Changing the selections after programme has started

Switching the machine to pause mode

Press the Start / Pause button to switch the machine to pause mode while a programme is running. The light of the step which the machine is in starts flashing in the Programme Follow-up indicator to show that the machine has been switched to the pause mode. Additionally, when the loading door is openable, the Loading Door light turns off completely.

Changing the speed settings

You can change the speed settings of the programme that is currently running. See "Speed selection".



If no change is allowed, the relevant light will flash 3 times.

Adding or taking out laundry

1. Press Start / Pause button to switch the machine to pause mode. The programme follow-up light of the relevant step during which the machine was switched into the pause mode will flash.
2. Wait until the Loading Door can be opened.
3. Open the Loading Door and add or take out the laundry.
4. Close the Loading Door.
5. Make changes in speed settings, if necessary.
6. Press Start / Pause button to start the machine.

4.15 Cancelling the programme

To cancel the programme, turn the Programme Selection knob to select another programme. Previous programme will be cancelled. End / Cancel light will flash continuously to notify that the programme has been canceled. Your machine will end the programme when you turn the Programme Selection knob; however, it does not drain the water inside. When you select and start a new programme, the newly selected programme will start depending on the step the previous programme was canceled in. For example, it may take in additional water or continue to wash with the water inside.



Some programmes may start by discharging the water inside the machine. Depending on the step where the programme was canceled in, you may have to put detergent and softener again for the programme you have selected anew.

4.16 End of programme

When the programme ends, "End" LED becomes on at the Programme Follow-up indicator.

1. Wait until the "Door Lock Enabled LED" goes off completely.
2. To switch off the machine, turn the Programme Selection Knob to On/Off position.
3. Take out your laundry and close the loading door. Your machine is ready for the next washing cycle.


4.17 Your machine features "Pause Mode"

After you switch on your machine with the programme selection button (by switching the button to a different position than the On/Off position), if no programme is started or no other procedure is performed in the selection step or no action is taken within approx. 2 minutes after the selected programme ends, your machine will switch to energy saving mode automatically. The brightness of the indicator lights will decrease. Also, if your product has a display that shows programme time, this display will be completely turned off. If you turn the Programme Selection knob or touch any button, lights and display will switch back to previous condition. The selections which you make when exiting from the energy efficiency may change. Please check the correctness of your selections before starting the programme. If necessary, please make your settings again. This is not an error.

5 Maintenance and cleaning

Service life of the product extends and frequently faced problems decrease if cleaned at regular intervals.

5.1 Cleaning the detergent drawer

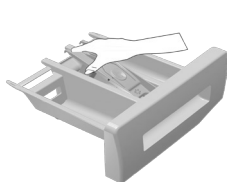

Clean the detergent drawer at regular intervals (every 4-5 washing cycles) as shown below in order to prevent accumulation of powder detergent in time.

Lift the rear part of the siphon to remove it as illustrated.



If more than normal amount of water and softener mixture starts to gather in the softener compartment, clean the siphon.

- 2 Wash the detergent drawer and the siphon with plenty of lukewarm water in a washbasin. Wear protective gloves or use an appropriate brush to avoid touching of the residues in the drawer with your skin when cleaning.
- 3 After cleaning, replace the siphon back to its seating and push its front section downwards to make sure that the locking tab engages.


5.2 Cleaning the loading door and the drum

Residues of softener, detergent and dirt may accumulate in your machine in time and may cause unpleasant odours and washing complaints. To avoid this, use the Drum Cleaning programme. If your machine is not featured with Drum Cleaning programme, use Cottons-90 programme and select Additional Water or Extra Rinse auxiliary functions as well. Run the programme without any laundry in the machine. Before starting the programme, put max. 100 g of powder detergents into the main wash detergent compartment (compartment nr. 2). If the detergent is in tablet form, put only one tablet into compartment nr. 2. Dry the inside of the bellow with a clean piece of cloth after the programme has come to an end.



Repeat Drum Cleaning process in every 2 months.

Use an detergents suitable for the washing machines.

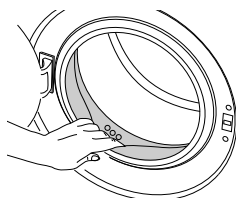

After every washing check that no foreign substance is left in the drum. If the holes on the bellow shown in the figure is blocked, open the holes using a toothpick.



Foreign metal substances will cause rust stains in the drum. Clean the stains on the drum surface by using cleaning agents for stainless steel. Never use steel wool or wire wool.



WARNING: Never use sponge or scrub materials. These will damage the painted and plastic surfaces.


5.3 Cleaning the body and control panel

Wipe the body of the machine with soapy water or non-corrosive mild gel detergents as necessary, and dry with a soft cloth.

Use only a soft and damp cloth to clean the control panel.

5.4 Cleaning the water intake filters

There is a filter at the end of each water intake valve at the rear of the machine and also at the end of each water intake hose where they are connected to the tap. These filters prevent foreign substances and dirt in the water to enter the washing machine. Filters should be cleaned as they get dirty.

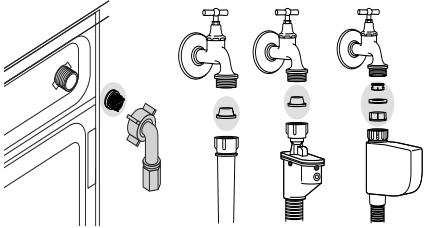

- 1 Close the taps.
- 2 Remove the nuts of the water intake hoses to access the filters on the water intake valves. Clean them with an appropriate brush. If the filters are too dirty, take them out by means of pliers and clean them.
- 3 Take out the filters on the flat ends of the water intake hoses together with the gaskets and clean thoroughly under running water.
- 4 Replace the gaskets and filters carefully in their places and tighten the hose nuts by hand.

5.5 Draining remaining water and cleaning the pump filter

The filter system in your machine prevents solid items such as buttons, coins and fabric fibers clogging the pump impeller during discharge of washing water. Thus, the water will be discharged without any problem and the service life of the pump will extend.

If the machine fails to drain water, the pump filter is clogged. Filter must be cleaned whenever it is clogged or in every 3 months. Water must be drained off first to clean the pump filter.

In addition, prior to transporting the machine (e.g., when moving to another house) and in case of freezing of the water, water may have to be drained completely.




WARNING: If the product is not in use, turn the tap off, detach the supply hose and drain the water inside the machine against any freezing possibility in the region of installation.

WARNING: After each use close the supply hose tap of the product.



WARNING: Foreign substances left in the pump filter may damage your machine or may cause noise problem. Please check and if necessary clean your pump filter.

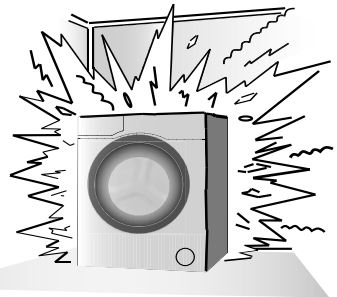

In order to clean the dirty filter and discharge the water:


1 Unplug the machine to cut off the supply power.



WARNING: Temperature of the water inside the machine may rise up to 90 °C. To avoid burning risk, clean the filter after the water in the machine cools down.



- 2 Open the filter cap.
- 3 Some of our products have emergency draining hose and some does not have. Follow the steps below to discharge the water.

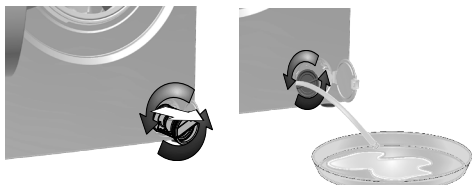


Discharging the water when the product has an emergency draining hose:

- a Pull the emergency draining hose out from its seat
- b Place a large container at the end of the hose. Drain the water into the container by pulling out the plug at the end of the hose. When the

container is full, block the inlet of the hose by replacing the plug. After the container is emptied, repeat the above procedure to drain the water in the machine completely.

- c When draining of water is finished, close the end by the plug again and fix the hose in its place.
- d Turn the pump filter to take it out.

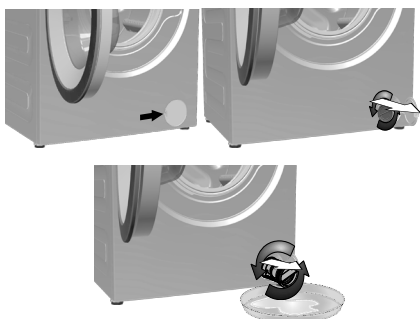

Discharging the water when the product does not have an emergency draining hose:

- a Place a large container in front of the filter to catch water from the filter.
- b Loosen pump filter (anticlockwise) until water starts to flow. Fill the flowing water into the container you have placed in front of the filter. Always keep a piece of cloth handy to absorb any spilled water.
- c When the water inside the machine is finished, take out the filter completely by turning it.

4 Clean any residues inside the filter as well as fibers, if any, around the pump impeller region.

5 Install the filter.

6 If the filter cap is composed of two pieces, close the filter cap by pressing on the tab. If it is one piece, seat the tabs in the lower part into their places first, and then press the upper part to close.

6 Technical specifications

Complying Commission Delegated Regulation (EU) No 1061/2010	
Supplier name or trademark	Beko
Model name	WRE 6411 BWW
Rated capacity (kg)	6
Energy efficiency class / Scale from A+++ (Highest Efficiency) to D (Lowest Efficiency)	A+++
Annual Energy Consumption (kWh) ⁽¹⁾	152
Energy consumption of the standard 60°C cotton programme at full load (kWh)	0.855
Energy consumption of the standard 60°C cotton programme at partial load (kWh)	0.540
Energy consumption of the standard 40°C cotton programme at partial load (kWh)	0.530
Power consumption in 'off-mode' (W)	0.25
Power consumption in 'left-on mode' (W)	1.00
Annual Water Consumption (l) ⁽²⁾	8799
Spin-drying efficiency class / Scale from A (Highest Efficiency) to G (Lowest Efficiency)	D
Maximum spin speed (rpm)	800
Remaining moisture Content (%)	71
Standard cotton programme ⁽³⁾	Cotton Eco 60°C and 40°C
Programme time of the standard 60°C cotton programme at full load (min)	250
Programme time of the standard 60°C cotton programme at partial load (min)	195
Programme time of the standard 40°C cotton programme at partial load (min)	195
Duration of the left-on mode (min)	N/A
Airborne acoustical noise emissions washing/spinning (dB)	61/76
Built-in	Non
Rated capacity (kg)	6
Height (cm)	84
Width (cm)	60
Depth (cm)	41.5
Net weight (±4 kg.)	55
Single Water inlet / Double Water inlet	• / -
• Available	
Electrical input (V/Hz)	230 V / 50Hz
Total current (A)	10
Total power (W)	1550
Woolmark №	M-14022
⁽¹⁾ Energy Consumption based on 220 standard washing cycles for cotton programmes at 60°C and 40°C at full and partial load, and the consumption of the low-power modes. Actual energy consumption will depend on how the appliance is used.	
⁽²⁾ Water consumption based on 220 standard washing cycles for cotton programmes at 60°C and 40°C at full and partial load. Actual water consumption will depend on how the appliance is used.	
⁽³⁾ "Standard 60°C cotton programme" and the "standard 40°C cotton programme" are the standard washing programmes to which the information in the label and the fiche relates and these programmes are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumption.	
Technical specifications may be changed without prior notice to improve the quality of the product.	

7 Troubleshooting

Programme cannot be started or selected.

- Washing machine has switched to self protection mode due to a supply problem (line voltage, water pressure, etc.). >>> To cancel the programme, turn the Programme Selection knob to select another programme. Previous programme will be cancelled. (See “Canceling the programme”)

Water in the machine.

- Some water might have remained in the product due to the quality control processes in the production. >>> This is not a failure; water is not harmful to the machine.

Machine vibrates or makes noise.

- Machine might be standing unbalanced. >>> Adjust the feet to level the machine.
- A hard substance might have entered into the pump filter. >>> Clean the pump filter.
- Transportation safety bolts are not removed. >>> Remove the transportation safety bolts.
- Laundry quantity in the machine might be too little. >>> Add more laundry to the machine.
- Machine might be overloaded with laundry. >>> Take out some of the laundry from the machine or distribute the load by hand to balance it homogenously in the machine.
- Machine might be leaning on a rigid item. >>> Make sure that the machine is not leaning on anything.

Machine stopped shortly after the programme started.

- Machine might have stopped temporarily due to low voltage. >>> It will resume running when the voltage restores to the normal level.

Programme time does not countdown. (On models with display)

- Timer may stop during water intake. >>> Timer indicator will not countdown until the machine takes in adequate amount of water. The machine will wait until there is sufficient amount of water to avoid poor washing results due to lack of water. Timer indicator will resume countdown after this.
- Timer may stop during heating step. >>> Timer indicator will not countdown until the machine reaches the selected temperature.
- Timer may stop during spinning step. >>> Automatic unbalanced load detection system might be activated due to the unbalanced distribution of the laundry in the drum.
- Machine does not switch to spinning step when the laundry is not evenly distributed in the drum to prevent any damage to the machine and to its surrounding environment. Laundry should be rearranged and re-spun.

Foam is overflowing from the detergent drawer.

- Too much detergent is used. >>> Mix 1 tablespoonful softener and ½ l water and pour into the main wash compartment of the detergent drawer.
- Put detergent into the machine suitable for the programmes and maximum loads indicated in the “Programme and consumption table”. When you use additional chemicals (stain removers, bleaches and etc), reduce the amount of detergent.

Laundry remains wet at the end of the programme

- Excessive foam might have occurred and automatic foam absorption system might have been activated due to too much detergent usage. >>> Use recommended amount of detergent.
- Machine does not switch to spinning step when the laundry is not evenly distributed in the drum to prevent any damage to the machine and to its surrounding environment. Laundry should be rearranged and re-spun.



WARNING: If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.

1 Važna uputstva vezana za bezbednost i životnu sredinu

Ovaj deo sadrži sigurnosna uputstva koja će vam pomoći da se zaštitite od opasnosti koje mogu dovesti do telesnih povreda ili materijalnih šteta. Garancija prestaje da važi ako se ne poštuju ova uputstva.

1.1 Opšta bezbednost

- Ovaj proizvod mogu da koriste osmogodišnja deca, starija deca i ljudi čije telesne, senzoričke ili mentalne sposobnosti nisu u potpunosti razvijene, kao i neiskusne i nevešte osobe samo pod nadzorom ili ako su dobili obuku o bezbednom korišćenju proizvoda i opasnostima koje donosi. Deca ne smeju da se igraju sa ovim proizvodom. Čišćenje i održavanje nikad ne smeju obavljati deca, osim pod nečijim nadzorom.
- Deca mlađa od 3 godine ne treba da se približavaju osim ako nisu pod neprekidnim nadzorom.
- Nikad ne stavljajte proizvod na pod pokriven tepihom. U suprotnom može doći do pregrevanja električnih delova zbog nedostatka strujanja vazduha ispod mašine. To može da prouzrokuje probleme sa vašim proizvodom.
- U slučaju da je proizvod u kvaru, ne sme da se uključuje dok ga ne popravi ovlašćeni serviser. Postoji opasnost od strujnog udara!
- Ovaj proizvod je projektovan tako da nastavi da radi u slučaju ponovnog uspostavljanja napajanja posle nestanka struje. Ako želite da otkazete program, pogledajte deo "Otkazivanje programa".
- Proizvod priključite na uzemljenu utičnicu koja je zaštićena osiguračem od 16 A. Neka Vam instalaciju uzemljenja uradi kvalifikovani električar. Naša firma neće biti odgovorna za bilo kakva oštećenja do kojih može da dođe kad se proizvod koristi bez uzemljenja u skladu sa lokalnim propisima.
- Creva za dovod i ispuštanje vode uvek moraju da budu dobro učvršćena i neoštećena. U suprotnom postoji opasnost od curenja vode.
- Nikada nemojte da otvarate vrata mašine ili vadite filter dok još ima vode u bubnju. U suprotnom će postojati opasnost od poplave i povreda zbog vruće vode.
- Nikada nemojte na silu da otvarate zaključana vrata za punjenje veša. Vrata za punjenje veša biće spremna za otvaranje samo nekoliko minuta posle kraja ciklusa pranja. U slučaju da se vrata za punjenje veša silom otvaraju može doći do oštećivanja vrata i mehanizma zaključavanja.
- Isključite proizvod kad se ne koristi.
- Nikad ne perite proizvod polivanjem vode po njemu! Postoji opasnost od strujnog udara!
- Nikada nemojte da dirate utikač mokrim rukama! Nikad nemojte da isključujete mašinu iz struje tako da je vučete za kabl, uvek hvatajte samo utikač.
- Koristite samo deterdžente, omekšivače i dodatke koji se upotrebljavaju za mašinsko pranje.
- Pratite uputstva na etiketama i kutiji deterdženta.
- Proizvod mora da se isključi iz struje za vreme instalacije, održavanja, čišćenja i popravke.
- Sve radove na instalaciji i popravci uvek prepustite ovlašćenom serviseru. Proizvođač neće biti odgovoran za oštećenja do kojih može da dođe kada takve radove obavljaju neovlašćena lica.
- Ukoliko se kabl za napajanje ošteti, mora da ga zameni proizvođač, serviser ili slično kvalifikovano lica (po mogućstvu električar) ili osoba koju je odredio uvoznik da bi se izbegli mogući rizici.

1.2 Namena

- Ovaj proizvod je napravljen za upotrebu u domaćinstvu. On nije pogodan za komercijalnu upotrebu i sme da se koristi samo u skladu sa svojom namenom.
- Ovaj proizvod sme da se koristiti samo za pranje i ispiranje veša prema njihovim etiketama.
- Proizvođač odriče bilo kakvu odgovornost zbog šteta nastalih usled nepravilne upotrebe i transporta.

1.3 Bezbednost dece

- Ambalažni materijali su opasni za decu. Ambalažne materijale čuvajte na sigurnom mestu, van domašaja dece.
- Električni proizvodi su opasni za decu. Držite decu dalje od proizvoda dok se koristi. Ne dajte im da diraju ovaj proizvod. Koristite funkciju zaključavanja zbog dece da biste sprečili da deca manipulišu ovim proizvodom.
- Nemojte zaboraviti da zatvorite vrata za punjenje veša kada napuštate prostoriju u kojoj se nalazi ovaj proizvod.
- Držite sve deterdžente i aditive na sigurnom mestu, dalje od domašaja dece i zatvarajte poklopac posude sa deterdžentom ili zapečatite pakovanje deterdženta.

1.4 Informacije o ambalaži

Ambalažni materijali ovog proizvoda su proizvedeni od materijala koji se recikliraju u skladu sa nacionalnim propisima o zaštiti životne sredine.

Ambalažne materijale ne odlažite zajedno sa kućnim ili drugim otpadima. Odnosite ih na mesta za sakupljanje sekundarnih sirovina određena od strane lokalnih vlasti.

1.5 Odlaganje dotrajalog proizvoda

Ovaj proizvod je proizveden korišćenjem visokokvalitetnih delova i materijala koji se mogu ponovo iskoristiti ili su pogodni za reciklažu.

Zbog toga ovaj proizvod ne odlažite sa običnim kućnim otpadom na kraju njegovog veka trajanja. Odnosite ga u sabirni centar za reciklažu električne i elektronske opreme. Obratite se lokalnim vlastima da biste saznali informacije o najbližem sabirnom centru. Dajte svoj doprinos u očuvanju životne sredine i prirodnih resursa reciklirajući korišćene proizvode. Radi bezbednosti dece, pre odlaganja proizvoda odsecite kabl za napajanje i polomite mehanizam za zaključavanje vrata za punjenje tako da se onemogući njegovo funkcionisanje.

1.6 Evropskoj WEEE direktivi



Ovaj proizvod nosi oznaku selektivnog razvrstavanja za odbačene električne i elektroničke uređaje (WEEE).

To znači da s proizvodom treba da se postupa prema Evropskoj direktivi 2002/96/EC da bi se reciklirao ili rastavio da bi se smanjio njegov uticaj na okolinu. Za ostale informacije, molimo da se javite Vašim lokalnim ili regionalnim vlastima.





Elektronski proizvodi koji nisu uključeni u proces selektivnog razvrstavanja su potencijalno opasni za okolinu i ljudsko zdravlje zbog prisutnosti štetnih materija.

Usklađenost sa RoHS direktivom:

Proizvod koji ste kupili je u skladu sa direktivom EU RoHS (2011/65 / EU). Ne sadrži štetne i zabranjene materijale navede u Direktivi.

2 Instalacija

Obratite se najbližem ovlašćenom serviseru za instalaciju ovog proizvoda. Da bi proizvod bio spreman za upotrebu, pročitajte informacije iz korisničkog priručnika i pre nego što pozovete ovlašćeni servis obezbedite priključak za struju, vodu i kanalizaciju. Ako to nije obezbeđeno, pozovite kvalifikovanog električara i vodoinstalatera da instalira potrebne priključke.

	Priprema lokacije i priključaka za struju, vodovod i kanalizaciju na mestu instalacije proizvoda su odgovornost kupca.
	UPOZORENJE: Sve radove na instalaciji i električnom povezivanju mora da obavi ovlašćeni serviser. Proizvođač neće biti odgovoran za oštećenja do kojih može da dođe kada takve radove obavljaju neovlašćena lica.
	UPOZORENJE: Pre instalacije vizuelno proverite da li na njemu postoje oštećenja. Ako postoje, nemojte ga instalirati. Oštećeni proizvodi predstavljaju opasnost za vašu bezbednost.
	Pazite da se creva za dovod i odvod vode, kao i električni kabl, ne saviju, uklješte ili prignječe prilikom postavljanja proizvoda na mesto posle instalacije i procedura čišćenja.

2.1 Odgovarajuća lokacija za instalaciju


- Stavite mašinu na čvrst pod. Ne stavljajte je na krparu ili slične površine.
- Ukupna težina mašine za pranje veša i mašine za sušenje veša kada su pune i postavljene jedna na drugu iznosi oko 180 kilograma. Proizvod postavite na čvrst i ravan pod koji ima dovoljnu nosivost!
- Ne stavljajte proizvod na strujni kabl.
- Ne instalirajte proizvod na mestima na kojima temperatura može pasti ispod 0°C.
- Proizvod postavite najmanje 1 cm od ivica drugog nameštaja.

2.2 Uklanjanje pojačanja pakovanja





Nagnite mašinu unazad da biste uklonili pojačanja pakovanja. Uklonite pojačanje pakovanja povlačenjem trake.

2.3 Uklanjanje transportnih brava


	UPOZORENJE: Ne uklanjajte transportne brave pre skidanja transportnog ojačanja.
	UPOZORENJE: Uklonite transportne bezbednosne vijke pre uključivanja mašine za pranje veša! U suprotnom se proizvod može oštetiti.

1. Otpustite sve vijke odgovarajućim ključem dok se ne budu okretali slobodno (C).
2. Skinite transportne bezbednosne vijke laganim okretanjem.
3. Stavite plastične poklopce dostavljene u kesici sa Korisničkim priručnikom u rupe na zadnjoj stranici (P)

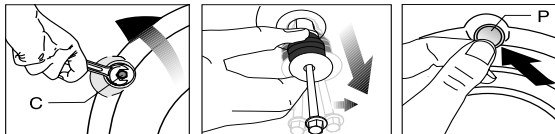

	Držite transportne bezbednosne vijke na sigurnom mestu da biste ih mogli ponovo koristiti kad se mašina bude jednom ponovo prenosila.
	Nikad ne pomerajte proizvod bez montiranih bezbednosnih vijaka!

2.4 Povezivanje dovoda vode

	Pritisak dovoda vode potreban da bi mašina radila mora da bude od 1 do 10 bara (0,1 – 1 MPa). Morate da imate 10 – 80 litara vode koja teče iz potpuno otvorene slavine u jednom minutu da bi mašina radila kako treba. Dodajte ventil za smanjivanje pritiska ako je pritisak vode prejak.
--	---




Ako treba da koristite proizvod s duplim dovodom vode kao jedinicu sa jednostrukim dovodom (hladne vode, morate da montirate čep koji ste dobili uz proizvod na ventil za toplu vodu. (Odnosi se na proizvode dostavljene sa posebnim slepim čepom.)



UPOZORENJE: Modeli sa jednostrukim dovodom vode ne smeju da se spajaju na slavinu sa toplom vodom. U tom slučaju će se oštetiti veš ili će proizvod uključiti zaštitu i neće raditi.



UPOZORENJE: Ne koristite stara ili korišćena creva za dovod vode na novom proizvodu. To može da prouzrokuje fleke na vašem vešu.

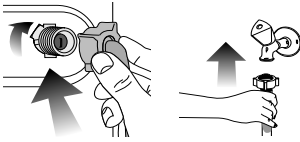


1. Sve navrtke creva pritegnite ručno. Nikad ne koristite alat za pritezanje ovih navrtki.
2. Otvorite slavine do kraja kad spojite crevo da biste proverili da li na sastavima curi voda. Ako curi, zatvorite slavinu i uklonite navrtku. Proverite zaptivač i ponovo pažljivo pritegnite navrtku. Da biste sprečili curenje vode i oštećenja koja mogu da nastanu kao posledica toga, držite slavine zatvorene kad se mašina ne upotrebljava.

2.5 Spajanje na odvod

- Kraj creva mora da se spoji direktno na odvod za vodu ili na lavabo.




UPOZORENJE: Vaša kuća može da bude poplavljena ako crevo izađe iz kućišta za vreme izbacivanja vode. Osim toga, postoji opasnost od opekotina zbog visokih temperature pranja! Da biste sprečili takve situacije, obezbedite neometan dovod vode i ispraznite mašinu, kraj creva za odvod vode dobro učvrstite da crevo ne bi ispalo.

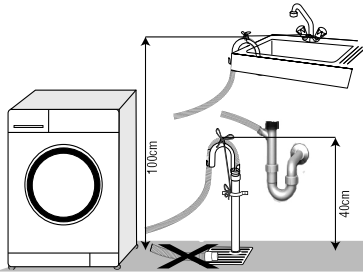

- Crevo treba da se spoji na visinu od najmanje 40 cm a najviše 100 cm.
- U slučaju da je crevo dignuto posle stajanja na podu ili blizu poda (manje od 40 cm iznad zemlje), ispuštanje vode postaje teže i veš može da izađe mokar. Zato treba da se držite visina opisanih na slici.
- Da biste sprečili vraćanje prljave vode u mašinu i omogućili lako izbacivanje vode, kraj creva ne smete da potopite u izbačenu vodu ili da ga vodite u odvod duže od 15 cm. Ako je previše dugačko, skratite ga.


- Kraj creva ne sme da se savija i ne sme da se gazi, a crevo se ne sme uklestiti između odvoda i mašine.
- Ako je dužina creva prekratka, produžite ga originalnim dodatnim crevom. Dužina creva ne sme da bude veća od 3,2 m. Da biste izbegli kvarove s curenjem vode, sastavi između produžnog creva i odvodnog creva proizvoda treba da budu dobro izvedeni putem odgovarajuće spojnice da crevo ne bi spalo i da ne bi curilo.

2.6 Podešavanje nožica

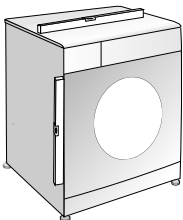

UPOZORENJE: Da bi osigurali tiši rad proizvoda bez vibracija, on mora da stoji ravno i u ravnoteži na svojim nožicama. Uravnotežite mašinu podešavanjem nožica. U suprotnom se može desiti da se proizvod pomera sa svog mesta i izazove probleme sa vibracijama i lomovima.

1. Rukom otpustite blokirajuće navrtke na nožicama.
2. Podešavajte ih dok proizvod ne bude stajao ravno i uravnoteženo.
3. Sve blokirajuće navrtke pritegnite ručno.

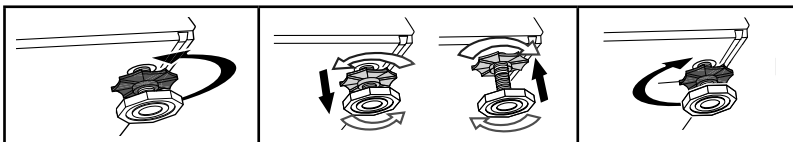



UPOZORENJE: Ne koristite nikakve alate za popuštanje blokirajućih navrtki. U suprotnom se mogu oštetiti.

2.7 Elektroinstalacije

Proizvod priključite na uzemljenu utičnicu koja je zaštićena osiguračem od 16 A. Naša firma neće biti odgovorna za bilo kakva oštećenja do kojih može da dođe kad se proizvod koristi bez uzemljenja u skladu sa lokalnim propisima.

- Povezivanje mora da bude obavljeno prema nacionalnim standardima.
- Utikač kabla za napajanje mora da bude pristupačan nakon instalacije.
- Ako je trenutna vrednost osigurača u Vašoj kući manja od 16 ampera, neka vam električar ugradi osigurač od 16 ampera.
- Napon naveden u "Tehničkim specifikacijama" mora da bude jednak naponu vaše električne mreže.
- Ne priključivati preko produžnih kablova ili razvodnika.



UPOZORENJE: Oštećeni strujni kabl mora zameniti ovlašćeni električar.

Transport proizvoda

1. Isključite proizvod iz struje pre transporta.
2. Demontirajte spojeve za dovod i odvod vode.
3. Ispustite svu vodu koja je preostala u proizvodu. Pogledajte 6.5
4. Instalirajte transportne bezbednosne vijke obrnutim redosledom u odnosu na postupak njihovog uklanjanja; pogledajte odeljak 3.3.



Nikad ne pomerajte proizvod bez montiranih bezbednosnih vijaka!



UPOZORENJE: Ambalažni materijali su opasni za decu. Ambalažne materijale čuvajte na sigurnom mestu, van domašaja dece.

3 Priprema

3.1 Sortiranje veša

- Sortirajte veš prema vrsti tkanine, boji, prema tome koliko je prljav i prema dozvoljenoj temperaturi vode.
- Uvek se držite uputstava koja su navedena na etiketama odeće.

3.2 Priprema veša za pranje


- Veš sa metalnim dodacima kao što su brushalteri, kopče kaiša i metalna dugmad mogu da oštete mašinu. Uklonite metalne dodatke ili operite takav veš tako što ćete ga staviti u vreću za veš ili jastučnicu.
- Izvadite sve stvari iz džepova, kao što su novčići, olovke i spjalice, izvrnite džepove naopačke i iščetkajte ih. Takvi objekti mogu da oštete proizvod ili da izazovu problem sa bukom.
- Odeću male veličine, kao što su dečije sokne i najlon čarape, stavite u vreću za veš ili jastučnicu.
- Zavesu stavljajte tako da ih ne pritisnete. Uklonite dodatke sa zavesa.
- Zatvorite rajsferšluse, zašijte dugmad koja visi i ušijte pocepano.
- Perite proizvode označene sa „pere se u mašini“ ili „pere se na ruke“ samo na odgovarajućem programu.
- Ne perite beli i obojeni veš zajedno. Novi tamni pamučni veš može da ispusti puno boje. Perite ih posebno.
- Uporne fleke se moraju pravilno obraditi pre pranja. Ako niste sigurni, raspitajte se u radnji za hemijsko čišćenje.
- Koristite samo one boje/sredstva za promenu boje i sredstva protiv kamenca koji su pogodni za mašinsko pranje. Uvek se držite uputstava na pakovanju.
- Pantalone i osetljivo rublje perite izvrnuto naopačke.
- Komade odeće od angore držite u frižideru nekoliko sati pre pranja. To će smanjiti čebanje.
- Veš koji je bio izložen materijama kao što su brašno, prašina, mleko u prahu itd. mora dobro da se istrese pre stavljanja u mašinu. Takve prašine i praškovi na vešu mogu da se natalože u unutrašnjosti mašine tokom vremena i izazovu oštećenje.

3.3 Šta treba uraditi da se uštedi energija

- Sledeće informacije će vam pomoći da ovaj proizvod koristite na ekološki i energetski efikasan način.
- Proizvod koristiti za najveći kapacitet koji dozvoljava izabrani program, ali ne preopterećujte mašinu. Pogledajte „Tabelu programa i korišćenja“.
 - Uvek se držite uputstava sa pakovanja deterdženta.

- Malo prljav veš perite na niskim temperaturama.
- Koristite brže programe za male količine ili malo prljav veš.
- Ne koristite pretpranje i visoke temperature za veš koji nije mnogo prljav ili isflekan.
- Ako planirate da sušite veš u mašini za sušenje veša, izaberite najveću brzinu centrifuge koja je preporučena za proces pranja.
- Ne koristite više deterdženta nego što je preporučeno na pakovanju deterdženta.

3.4 Prvo korišćenje

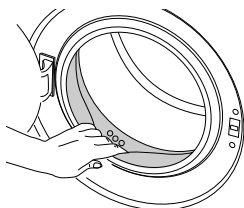

Pre nego što počnete da koristite proizvod, uverite se da su obavljene sve pripreme u skladu sa uputstvima u poglavljima „Važna sigurnosna uputstva“ i „Instalacija“.

Da biste pripremili proizvod za pranje veša, prvo uključite program za čišćenje doboša. Ako vaša mašina nema ovaj program, primenite metodu opisanu u 6.2.



Koristite sredstvo za uklanjanje kamenca koje je podesno za mašine za pranje veša.



U proizvodu je možda ostalo malo vode iz procesa kontrole kvaliteta u proizvodnji. To ne šteti proizvodu.

3.5 Odgovarajući kapacitet punjenja

Maksimalni kapacitet punjenja zavisi o vrsti veša, o tome koliko je prljav i koji program želite da koristite. Mašina automatski prilagođava količinu vode prema težini veša koji se nalazi u njoj.



UPOZORENJE: Držite se informacija iz „Tabele programa i korišćenja“. Ako je preopterećena, rezultati pranja mašine biće slabiji. Štaviše, mogu se javiti problemi sa bukom i vibriranjem.

3.6 Stavljanje veša

- 1 Otvorite vrata za punjenje veša.
- 2 Komotno stavite veš u mašinu.
- 3 Gurnite vrata za punjenje da biste ih zatvorili tako da pritom čujete zvuk zaključavanja. Pazite da vrata ništa ne zahvate.



Vrata za punjenje su zaključana dok je program u toku. Vrata se mogu otvoriti samo posle završetka programa.




UPOZORENJE: U slučaju da se veš pogrešno stavi, mogu se javiti problemi sa bukom i vibriranjem kod mašine.

3.7 Korišćenje deterdženta i omekšivača



Kada se koristi deterdžent, omekšivač, štirak, boja za tkaninu, izbeljivač ili sredstvo za uklanjanje kamenca, pažljivo pročitajte uputstvo proizvođača na pakovanju i držite se navedenih vrednosti za doziranje. Koristite čašicu za merenje ako postoji.

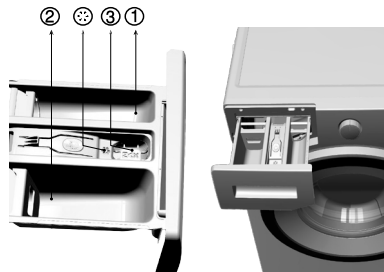

Fioka za deterdžent

Fioka za deterdžent se sastoji od 3 odeljka:

- (1) za pretpranje
- (2) za glavno pranje
- (3) za omekšivač
- (*) osim toga, postoji sifonski deo u odeljku za omekšivač.

Deterdžent, omekšivači i druga sredstva za pranje

- Dodajte deterdžent i omekšivač pre pokretanja programa pranja.
- Nikada ne ostavljajte otvorenu fioku za deterdžent dok program pranja radi!

- Kada koristite program bez pretpranja, ne stavljajte deterdžent u odeljak za pretpranje (odeljak br. "1").
- Kod programa sa pretpranjem ne stavljajte tečni deterdžent u odeljak za pretpranje (odeljak br. "1").
- Ne birajte program sa pretpranjem ako koristite kesu s deterdžentom ili kuglu za raspršivanje. Stavite kesu s deterdžentom ili kuglu za raspršivanje u mašinu, direktno među vešom.
- Ako koristite tečni deterdžent, nemojte zaboraviti da šolju sa tečnim deterdžentom stavite u odeljak za glavno pranje (odeljak br. "2").

Izbor vrste deterdženta

Vrsta deterdženta koji se koristi zavisi od vrste i boje tkanine.

- Koristite različite deterdžente za beli veš i veš u boji.
- Osetljivu odeću perite specijalnim deterdžentima (tečni deterdžent, šampon za vunu itd.) koji se koriste isključivo za osetljivu odeću.
- Kada perete odeću tamnije boje i kiltove, preporučuje se korišćenje tečnog deterdženta.
- Vunene stvari perite specijalnim deterdžentom koji je namenjen za vunu.



UPOZORENJE: Koristite samo deterdžente proizvedene specijalno za mašinsko pranje.




UPOZORENJE: Ne koristite sapun u prahu.

Podlašavanje količine deterdženta

Količina deterdženta koja će da se koristi zavisi od količine veša, od toga koliko je prljav i od tvrdoće vode.

- Nemojte da koristite količine koje prelaze doze preporučene na pakovanju da biste izbegli problem sa previše pene, lošim ispiranjem, finansijskom uštedama i, na kraju, zaštitom okoline.
- Koristite manje deterdženta za male količine veša ili za malo prljav veš.

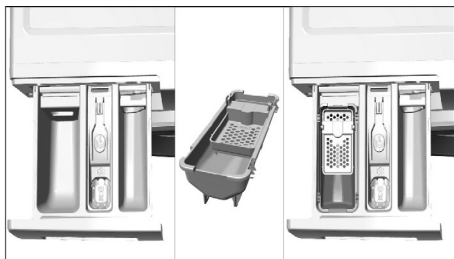

Korišćenje omekšivača

Sipajte omekšivač u odeljak za omekšivač fiokice za deterdžent.

- Nemojte da pređete znak (>max<) na odeljku za omekšivač.
- Ako je omekšivač izgubio tečnost, razblažite ga vodom pre nego što ga stavite u fioku za deterdžent.

Korišćenje tečnih deterdženta

Ako proizvod sadrži šolju za tečni deterdžent:

- Šolju za tečni deterdžent stavite u odeljak br. "2".
- Ako je omekšivač izgubio tečnost, razblažite ga vodom pre nego što ga stavite u šolju za deterdžent.

Ako proizvod ne sadrži šolju za tečni deterdžent:

- Ne koristite tečni deterdžent za pretpranje u programima sa pretpranjem.
- Tečni deterdžent ostavlja fleke na vašoj odeći ako se koristi sa funkcijom odloženog početka. Ako hoćete da koristite funkciju odloženog početka, ne koristite tečni deterdžent.

Korišćenje deterdženta u obliku gela i tablete

- Ako je gustina gel-deterdženta fluidna, a vaša mašina nema specijalnu šolju za tečni deterdžent, gel stavite u odeljak za glavno pranje prilikom prvog uzimanja vode. Ako vaša mašina sadrži šolju za tečni deterdžent, sipajte ga u tu šolju pre nego što pokrenete program.
- Ako gustina gel-deterdženta nije fluidna ili je u deterdžent u obliku tablete sa kapsuliranom tečnošću, pre pranja ga stavite direktno u doboš.
- Deterdžent u obliku tablete stavite u odeljak za glavno pranje (odeljak br. "2") ili direktno u doboš pre pranja.



Tabletirani deterdženti mogu da ostave talog u fioci za deterdžent. U tom slučaju tabletu deterdženta stavite među veš, bliže dnu doboša.



Tabletirani ili gel deterdžent koristite bez biranja funkcije pretpranja.

Korišćenje štirka

- Tečni štirak, štirak u prahu ili boju dodajte u odeljak za omekšivač.
- Nemojte koristiti omekšivač i štirak zajedno u ciklusu pranja.
- Posle korišćenja štirka, obrišite unutrašnjost mašine vlažnom i čistom krpom.

Korišćenje izbeljivača

- Izaberite program sa pretpranjem i dodajte sredstvo za izbeljivanje na početku pretpranja. Ne stavljajte deterdžent u odeljak za pretpranje. Drugi način bi bio da izaberete program sa dodatnim ispiranjem i dodate sredstvo za izbeljivanje dok mašina uzima vodu preko fioke za deterdžent tokom prve faze ispiranja.
- Ne mešajte sredstvo za izbeljivanje i deterdžent.
- Sredstvo za izbeljivanje koristite u maloj količini (oko 50 ml) i isperite dobro odeću jer može da iritira kožu. Ne sipajte sredstvo za izbeljivanje direktno na odeću i ne koristite ga za odeću u boji.
- Kada koristite izbeljivače na bazi kiseonika, izaberite program koji pere na nižoj temperaturi.
- Izbeljivači na bazi kiseonika mogu da se koriste zajedno sa deterdžentima; međutim, ako njihova gustina nije ista kao gustina deterdženta, prvo stavite deterdžent u odeljak br. "2" fioke za deterdžent i sačekajte da deterdžent bude pokupljen prilikom uzimanja vode. Dodajte sredstvo za izbeljivanje u isti odeljak dok mašina i dalje uzima vodu.


Korišćenje sredstva za uklanjanje kamenca

- Ako je potrebno, koristite sredstva za uklanjanje kamenca koja su proizvedena specijalno za mašine za pranje veša.

		Odeća			
		Pastelne boje i beli veši	Boje	Tamne boje	Osetljivo/Vuna/Svila
		(Preporučeni opseg temperatura zavisno od zaprljanosti: 40-90 stepeni C)	(Preporučeni opseg temperatura zavisno od zaprljanosti: hladnoća -40 stepeniC)	(Preporučeni opseg temperatura zavisno od zaprljanosti: hladnoća -40 stepeniC)	(Preporučeni opseg temperatura zavisno od zaprljanosti: hladnoća -30 stepeniC)
Zaprljanost	Veoma prljav (teške mrlje, kao što su mrlje od trave, kafe, vođa i krvi.)	Moguće je da bude potrebno da se mrlje tretiraju ili da se obavi pretpranje. Praškasti i tečni deterdženti koji su preporučeni za beli veš mogu se koristiti u dozama preporučenim za veoma prljav veš. Preporučuje se korišćenje praškastih deterdženata za čišćenje mrlja od blata, kao i mrlja koje reaguju na izbeljivače.	Praškesti i tečni deterdženti koji su preporučeni za veš u boji mogu se koristiti u dozama preporučenim za veoma prljav veš. Preporučuje se korišćenje praškastih deterdženata za čišćenje mrlja od blata, kao i mrlja koje reaguju na izbeljivače. Koristite deterdžente bez izbeljivača.	Praškesti i tečni deterdženti koji su preporučeni za veš u boji i tamne boje mogu se koristiti u dozama preporučenim za veoma prljav veš.	Za osetljivu odeću je bolje koristiti tečne deterdžente. Vunena i svilena odeća mora da se pere specijalnim deterdžentima za vunu.
	Normalno prljav (Na primer, za mrlje koje su izazvane znojenjem na okovratnicima i manžetnama)	Praškesti i tečni deterdženti koji su preporučeni za beli veš mogu se koristiti u dozama preporučenim za normalno prljav veš.	Praškesti i tečni deterdženti koji su preporučeni za veš u boji mogu se koristiti u dozama preporučenim za normalno prljav veš. Koristite deterdžente bez izbeljivača.	Praškesti i tečni deterdženti koji su preporučeni za veš u boji i tamne boje mogu se koristiti u dozama preporučenim za normalno prljav veš.	Za osetljivu odeću je bolje koristiti tečne deterdžente. Vunena i svilena odeća mora da se pere specijalnim deterdžentima za vunu.
	Malo prljav (Nema vidljivih mrlja.)	Praškesti i tečni deterdženti koji su preporučeni za beli veš mogu se koristiti u dozama preporučenim za malo prljav veš.	Praškesti i tečni deterdženti koji su preporučeni za veš u boji mogu se koristiti u dozama preporučenim za malo prljav veš. Koristite deterdžente bez izbeljivača.	Praškesti i tečni deterdženti koji su preporučeni za veš u boji i tamne boje mogu se koristiti u dozama preporučenim za malo prljav veš.	Za osetljivu odeću je bolje koristiti tečne deterdžente. Vunena i svilena odeća mora da se pere specijalnim deterdžentima za vunu.

4.3 Rukovanje proizvodom

4.3.1 Kontrolna ploča

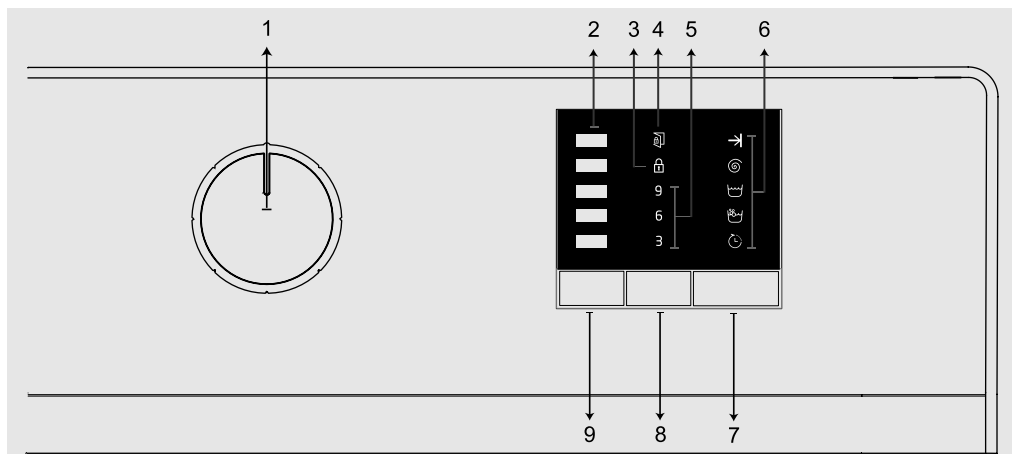

- 1 - Dugme programatora (najviši položaj Uklj/isklj)
- 2 - LED indikator brzine obrtanja
- 3 - LED lampica o aktivnosti dečije blokade
- 4 - LED lampica o aktivnosti zaključanih vrata
- 5 - LED indikator Odloženog starta
- 6 - LED indikator praćenja programa
- 7 - Tipka Start /Pauza
- 8 - Tipka za podešavanje Odloženog starta
- 9 - Tipka za podešavanje brzine centrifuge

4.3.2 Priprema mašine

1. Uvjerite se da su creva čvrsto spojena.
2. Uključite vašu mašinu.
3. Otvorite slavinu potpuno.
4. Stavite veš u mašinu.
5. Dodajte deterđent i omekšivač za tkaninu.





4.3.3 Odabir programa i saveti za efikasno pranje

1. Odaberite program koji odgovara vrsti, količini i stepenu zaprljanja veša u skladu sa "Tabelom programa i potrošnje" i tabelom temperature u nastavku.
2. Odaberite željeni program pomoću dugmeta programatora.

4.3.4 Tabela programa i potrošnje

Program °C		Maks. opterećenje (kg)	Trajanje programa (min)	Potrošnja vode (l)	Potrošnja struje (kWh)	Centrifuga
Pamuk 90°	90	6	180	83	1,95	800
Pamuk 40°	40	6	180	81	1,0	800
Pamuk 20°	20	6	180	81	0,5	800
Pamuk 60° za pretpranje	60	6	200	92	1,8	800
Pamuk Eco 60°	60**	6	250	47,5	0,855	800
Pamuk Eco 60°	60**	3	195	35	0,54	800
Pamuk Eco 40°	40**	3	195	33,7	0,53	800
Sintetika 40°	40	2,5	120	66	0,75	800
Sintetika 20°	20	2,5	120	66	0,25	800
Mini 30°	30	6	28	60	0,15	800
Vuna / Ručno pranje 40°	40	1,5	65	45	0,45	800
Perje 40°	40	1,5	105	85	0,8	800
Košulje 40°	40	2,5	80	42	0,6	800
Čišćenje bubnja	90	-	160	67	2,1	600

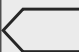** : Energetska oznaka programa (EN 60456 Ed,3)

	** "Pamuk ekonomik 40°C i pamuk ekonomik 60°C" su standardni programi." Ovi programi su poznati kao "40°C pamuk standardni program" i "60°C pamuk standardni program" i naznačeni su sa   simbolima na ploči.
	Potrošnja energije i vode može varirati uslijed promjena pritiska vode, tvrdoće i temperature vode, temperature ambijenta, vrste i količine rublja, brzine obrtanja te promjena u naponu. Zavisno od količine veša koje se stavili u mašinu, može se javiti razlika od 1 - 1,5 sat između vremena trajanja koje je prikazano u tabeli programa i potrošnje i stvarnog vremena trajanja ciklusa pranja. Vreme trajanja će se automatski ažurirati ubrzo nakon što pranje započne.

4.3.5 Glavni programi

Zavisno o vrsti tkanine, koristite sledeće glavne programe.

• Pamuk


Koristite ovaj program za vaše pamučno rublje (čaršafe, posteljina, peškiri, ogrtači, donji veš itd). Vaše veš će se oprati snažnom aktivnošću pranja tokom dužeg ciklusa pranja.

• Sintetika

Za pranje sintetičke odeće (košulje, bluze, mešovine sintetika/pamuk itd). Za zavese i til, preporučljivo je koristiti program za sintetiku 20°C ili 40°C.

• Vuna / Ručno pranje

Koristite za pranje vašeg vunenog/osetljivog veša. Vaš veš će biti opran nežnom aktivnošću pranja kako se odeća ne bi oštetila.

	"Ciklus pranja za vunu ove mašine odobren je od strane Woolmark kompanije za pranje mašinski perivih vunelih proizvoda, pod uslovom da se proizvodi peru u skladu sa uputstvima na etiketi proizvoda i onim koje izdaje proizvođač ove mašine za pranje veša. M0000." "U Velikoj Britaniji, Republici Irskoj, Hong Kongu i Indiji Woolmark zaštitni znak je sertifikacioni zaštitni znak."
--	---

4.3.6 Dodatni programi

Za posebne namene, dodatni programi su dostupni na mašini.



Dodatni programi se mogu razlikovati ovisno od modela mašine.

• Pamuk Eco

Koristite ovaj program da perete vaš veš u programu za pamuk na duže vreme, a i dalje sa vrlo dobrim performansama za svrhe štednje.



Cotton Eco (pamuk eko) program troši manje energije u poređenju sa drugim programima za pamuk.

• Pamuk za pretpranje

Koristite ovaj program samo za teško zaprljalu pamučnu odeću. Dodajte deterdžent u odeljak za pretpranje.

• Mini

Koristite ovaj program da perete vašu lagano zaprljalu pamučnu odeću za kratko vrijeme.

• Košulje

Ovaj program se koristi za pranje košulja od pamuka, sintetike i tkanina s mešavinom sintetike. On smanjuje nabore. Izvršava se algoritam predobrade.

• Nanesite hemikaliju za predobradu na direktno na vašu odeću ili dodajte zajedno s deterdžentom kada mašina počne primati vodu iz odjeljka glavnog pranja. Time će mašina oprati dato rublje u kratkom vremenskom periodu a očekivani vek trajanja vaših košulja će biti produžen.

• Posteljina / perje

Koristite ovaj program za pranje vaših jorgana s vlaknima koji nose oznaku "perivo u mašini". Uverite se da ste jorgan pravilno stavili da se ne bi oštetila mašina ili jorgan. Uklonite prekrivač jorgana prije stavljanja jorgana u mašinu. Presavijte jorgan na dvoje i stavite ga u mašinu. Stavite jorgan u mašinu vodeći računa da se stavi na način na koji neće dodirivati ispod ili po staklu.



Nemojte stavljati više od 1 duplog jorgana s vlaknima (200 x 200 cm).

Nemojte prati u mašini vaše jorgane, jastuke i sl. koji sadrže pamuk.



PAŽNJA: Nemojte prati stvari, osim jorgana, kao što su tepisi, prostirke itd. u mašini. Trajno oštećenje se pojavljuje na mašini.

• Perje

Koristite ovaj program da perete kapute, veste, jakne i sl. koji sadrže perje s oznakom "perivo u mašini" na datim odjevnim predmetima. Zahvaljujući posebnim profilima obrtanja, osigurano je da voda dosegne do vazdušnog prostora između perja.

• Čišćenje bubnja

Koristite ovaj program redovno (jednom u svakih 1-2 meseca) da očistite bubanj i obezbedite potrebnu higijenu. Pokrenite program kada je mašina potpuno prazna. Da biste postigli bolje rezultate, stavite sredstvo u prahu za uklanjanje kamenca za mašine za pranje veša u odjeljak za deterdžent br. "2". Kada program završi, ostavite vrata za punjenje odškrinuta tako da se unutrašnjost mašine osuši.



Ovo nije program pranja. To je program održavanja.

Nemojte pokretati ovaj program ako ima nešto u mašini. Ako pokušate to, mašina otkriva da se nešto nalazi unutra i prekida program.

4.3.7 Posebni programi

Za posebne primene, odaberite bilo koji od sledećih programa.

• Ispiranje

Koristite kada želite ispirati ili štirkatati odvojeno.

• Centrifuga + Ceđenje

Ovu funkciju možete koristiti da biste uklonili vodu s odeće i iscedili vodu iz mašine.

Pre nego odaberete ovaj program, odaberite željenu brzinu okretanja i pritisnite tipku Start / Pauza. Prvo, mašina će izbaciti vodu van. Potom će ona okretati veš podešenom brzinom i isušiti vodu koja se cedi iz veša.

Ako želite samo da isušite vodu bez okretanja vašeg rublja, odaberite program Pumpa+Okretanje i zatim odaberite funkciju Bez okretanja uz pomoć tipke za podešavanje brzine okretanja. Pritisnite tipku Start / Pauza.



Koristite nižu brzinu okretanja za osjetljivo rublje.

4.3.8 Odabir brzine

Kad god se odabere novi program, preporučena brzina okretanja odabranog programa je prikazana na indikatoru brzine okretanja.

Da biste smanjili brzinu obrtanja, pritisnite tipku za podešavanje brzine obrtanja. Brzina obrtanja se smanjuje postepeno. Zatim, ovisno o modelu proizvoda, opcije "Rinse Hold" (ispiranje zadržano) i "No Spin" (bez obrtanja) se pojavljuju na ekranu. Kada je odabrana opcija "No Spin" (bez obrtanja), indikatorska svjetla nivoa ispiranja se neće uključiti.

Ispiranje zadržano

Ako ne namjeravate isprazniti vaš veš odmah po završetku programa, možete koristiti funkciju zadržavanja ispiranja da držite vaš veš u vodi za završno ispiranje i kako biste sprečili stvaranje nabora kada nema vode u mašini. Pritisnite tipku Start / pauza nakon ovog procesa ako želite isušiti vodu bez obrtanja vašeg veša. Program će nastaviti i završiti nakon pražnjenja vode.

Ako želite obaviti obrtanje veša u vodi, podesite brzinu obrtanja i pritisnite tipku Start / pauza. Program će nastaviti s radom. Voda je ispražnjena, veš se centrifugirao i program je dovršen.



Ako program nije dosegao korak obrtanja, možete promijeniti brzinu bez prebacivanja mašine na režim pauze.

4.3.9 Odloženi start

Pomoću funkcije za Odloženi start, pokretanje programa može biti odloženo do 3, 6 ili 9 sati.



Nemojte koristiti tečne deterdžente kada podesite odloženi start! Postoji rizik od bojenja odjeće.

1. Otvorite vrata za punjenje, stavite veš i dodajte deterdžent, itd.

2. Odaberite program pranja i brzinu obrtanja.

3. Podesite željeno vreme tako što ćete pritisnuti tipku za odloženi start. Kada je tipka pritisnuta jednom, odabrano je vreme od 3 sata za odloženi start. Kada se ista tipka pritisne ponovo, 6 sati odloženog starta je odloženi, a kada se tipka pritisne treći put, 9 sati odloženog starta je odabrano. Ako pritisnete tipku odloženi start još jednom, funkcija odloženog starta će biti otkazana.

4. Pritisnite tipku Start / pauza. Svetlo prethodnog vremena odloženog starta se gasi i sledeće svetlo vremena odloženog starta se pali nakon svaka 3 sata.

5. Na kraju odbrojavanja, sva svetla odloženog starta će se ugasiti i odabrani program će se pokrenuti.



Mašinu možete prebaciti na režim pauze i dodati veš tokom perioda odloženog starta.

Menjanje perioda odloženog starta

Ako želite promeniti vreme tokom odbrojavanja, potrebno je da otkazete program i da ponovo podesite vreme odlaganja.

Otkazivanje funkcije odloženog starta

Ako želite da otkazete odbrojavanje odloženog starta i odmah pokrenuti program:

1. Okrenite tipku za odabir programa na bilo koji program. Time će se funkcija odloženog starta otkazati.

Svetlo Završi/otkaži treperi neprestano.

2. Zatim, odaberite program za koji želite da ponovo bude u funkciji.

3. Pritisnite tipku Start / pauza da biste pokrenuli program.

4.3.10 Pokretanje programa

1. Pritisnite tipku Start / pauza da biste pokrenuli program.

2. Svetlo praćenja programa koje pokazuje početak programa će se upaliti.

4.3.11 Dečija brava

Koristite dečije bravu da sprečite decu da se poigravaju s mašinom. Na taj način možete izbeći bilo kakve promene na tekućem programu.



Ako se tipka odabira programa okrene kada je dečija brava aktivna, "LED Dečija brava uključena" će treperiti 3 puta. Dečija brava ne dozvoljava bilo kakve promene u programima ili odabranoj brzini.



Čak i ako je drugi program odabran pomoću tipke za odabir programa kada je dečja brava aktivna, prethodno odabrani program će nastaviti s radom.

Kada je dečja brava aktivna i mašina radi, možete prebaciti mašinu na režim pauze bez deaktiviranja dečije brave tako što ćete okrenuti tipku odabira programa u položaj On / Off (uklj/isklj). Kada okrenete tipku odabira programa naknadno, program će nastaviti s radom.

Da aktivirate dečiju bravu:

Pritisnite i držite tipke brzina i odgođeni start tokom 3 sekunde. Dok držite tipke pritisnute tokom 3 sekunde, "LED Dečija brava uključena" će treperiti. Možete otpustiti tipke kada LED lampice počnu neprestano svetleti.

Da deaktivirate dečiju bravu:

Pritisnite i držite tipke dečiju i odgođeni start tokom 3 sekunde dok je bilo koji program u fazi rada. Dok držite tipke pritisnute tokom 3 sekunde, "LED Dečija brava uključena" će treperiti. Možete otpustiti tipke kada se LED lampice potpuno isključe.



Pored gore navedenog metoda, da biste deaktivirali dečiju bravu, okrenite tipku odabira programa u položaj On / Off kada nijedan program nije u toku, te odaberite neki drugi program.

Dečija brava nije deaktivirana nakon što nestane struje ili kada se mašina isključi iz utičnice.

4.3.12 Napredovanje programa

Napredovanje tekućeg programa može biti praćeno od strane indikatora praćenja programa. Na početku svakog koraka programa, odgovarajuće indikatorsko svetlo će se upaliti, a svetlo završenog koraka će se isključiti.

Možete prmeniti postavke brzine bez zaustavljanja toka programa dok je program u fazi rada. Da biste ovo uradili, promena koju nameravate napraviti mora biti u koraku nakon koraka programa koji se izvršava. Ako promena nije kompatibilna, odgovarajuće svetlo će treperiti 3 puta.



Ako mašina nije nastavila s korakom okretanja, funkcija zadržavanja ispiranja može biti aktivna ili sistem automatskog otkrivanja neuravnoteženog punjenja se može aktivirati zbog neuravnotežene distribucije veša u mašini.

4.3.13 Brava vrata za punjenje

Sistem zaključavanja na vratima za punjenje mašine sprečava otvaranje vrata za punjenje u slučaju da nivo vode nije odgovarajući.

Svetlo vrata za punjenje će početi treperiti kada je mašina prebačena na režim pauze. Mašina proverava nivo vode u unutrašnjosti. Ako je nivo odgovarajući, svetlo vrata za punjenje će se ugasiti i vrata za punjenje se mogu otvoriti za 1-2 minute.

Ako nivo nije odgovarajući, svetlo vrata za punjenje će nastaviti svetleti i vrata za punjenje se ne mogu otvoriti. Ako trebate otvoriti vrata za punjenje dok je svetlo vrata za punjenje upaljeno, morate otkazati trenutni program. Pogledajte "Otkazivanje programa"

4.3.14 Promena izbora nakon što je program pokrenut

Prebacivanje mašine na režim pauze

Pritisnite tipku Start / pauza kako biste prebacili mašinu na režim pauze dok se program izvršava. Svetlo koraka u kojem se mašina nalazi počinje svetleti na indikatoru praćenja programa kako bi se pokazalo da je mašina prebačena na režim pauze.

Pored toga, kada se vrata za punjenje mogu otvoriti, svetlo vrata za punjenje će se potpuno isključiti.

Promjena postavki brzine

Možete promeniti postavke brzine programa koji je trenutno u fazi rada. Pogledajte "Odabir brzine".



Ako promena nije dozvoljena, odgovarajuće svetlo će treperiti 3 puta.

Stavljanje ili vađenje veša

Možete napuniti/isprazniti veš kada je program u fazi rada ako je nivo vode odgovarajući da možete otvoriti vrata. Da biste to uradili:

1. Pritisnite tipku Start / pauza da biste prebacili mašinu na režim pauze. Svetlo praćenja programa odgovarajućeg koraka tokom kojeg je mašina prebačena na režim pauze će treperiti.
2. Sačekajte da se vrata za punjenje mogu otvoriti.
3. Otvorite vrata za punjenje i dodajte ili izvadite rublje.
4. Zatvorite vrata za punjenje.

5. Napravite promene u postavkama brzine ako je potrebno.
6. Pritisnite tipku Start / pauza kako biste pokrenuli mašinu.

4.3.15 Otkazivanje programa

Da biste otkazali program, okrenite tipku za odabir programa kako biste odabrali neki drugi program. Prethodni program će biti otkazan. Svetlo Završi / otkazi će svetleti neprestano kako bi obavestilo da je program otkazan.

Vaša mašina će završiti program kada okrenete tipku odabira programa; međutim, neće isušiti vodu iz mašine. Kada odaberete i pokrenete novi program, novoizabrani program će se pokrenuti ovisno o koraku u kojem je prethodni program otkazan. Na primer, može uzeti još vode ili nastaviti pranje s vodom koja je unutra.



Neki programi se mogu pokrenuti pražnjenjem vode iz mašine. Ovisno o koraku u kojem je program otkazan, možda ćete morati ponovo staviti deterdžent i omekšivač za novi program koji ste odabrali.

4.3.16 Kraj programa

Kada se program završi, LED s oznakom "End" se uključuje na indikatoru praćenja programa.

1. Sačekajte da se "LED lampica o aktivnosti zaključanih vrata" potpuno isključi.
2. Da biste isključili mašinu, okrenite tipku za odabir programa u položaj uklj/isklj (On/Off).
3. Izvadite vaš veš i zatvorite vrata za punjenje. Vaša mašina je spremna za sledeći ciklus pranja.


4.3.17 Funkcija "Pause Mode" (pauza) na vašoj mašini.

Nakon što uključite mašinu pomoću tipke za odabir programa (okretanjem tipke u položaj drugačiji od položaja uklj/isklj (On/Off)), ako nije pokrenut nijedan program ili nijedan drugi postupak se ne izvodi kod odabira koraka ili nijedna aktivnost nije preduzeta u roku od približno 2 minute nakon što se odabrani program završi, vaša mašina će se automatski prebaciti na režim uštede energije. Osvetljenje indikatorskog svetla će se smanjiti. Takođe, ako vaš proizvod ima displej koji pokazuje vreme programa, ovaj displej će se isključiti u potpunosti. Ako okrenete tipku za odabir programa ili dodirnete bilo koju tipku, svetla i displej će se vratiti u prethodno stanje. Odabiri koje napravite kada izlazite iz režima energetske efikasnosti se mogu promeniti. Proverite ispravnost vaših odabira prije pokretanja programa. Ako je potrebno, uredite ponovo vaše postavke. Ovo nije greška.

5 Održavanje i čišćenje

Servisni vek trajanja ovog proizvoda se produžava, a problemi se manje javljaju ako se redovno čisti.

5.1 Čišćenje fioke za deterdžent

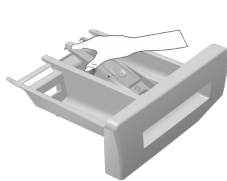

Redovno (svakih 4-5 ciklusa pranja) čistite fioku za deterdžent kao što je pokazano u nastavku da biste sprečili taloženje praška tokom vremena. Podignite zadnji deo sifona da biste ga izvadili, kao što je pokazano na slici.



Ako u odeljku za omekšivač počne da se nakuplja više mešavine vode i omekšivača nego obično, očistite sifon.

- 2 Operite fioku za deterdžent i sifon u lavabou sa puno mlake vode. Nosite zaštitne rukavice ili koristite odgovarajuću četku da biste izbegli dodir između ostataka u fioci i vaše kože kada je čistite.
- 3 Nakon čišćenja, vratite sifon na mesto i njegov prednji deo gurnite nadole da bi se uglavio jezičak za fiksiranje.


5.2 Čišćenje vrata za punjenje i doboša

Ostaci omekšivača, deterdženta i prljavština mogu se vremenom nataložiti u vašoj mašini i prouzrokovati neprijatne mirise i loše pranje. Da biste to izbegli, koristite program za čišćenje doboša. U slučaju da vaša mašina nema program za čišćenje doboša, izaberite program Pamuk-90 i dodatne funkcije Dodatna voda ili Dodatno čišćenje. Pokrenite program bez veša u mašini. Pre nego što pokrenete program stavite najviše 100 g sredstva za uklanjanje kamenca (u prahu) u odeljak za glavno pranje fioke za deterdžent (odeljak br. 2). Ako je sredstvo za uklanjanje kamenca u obliku tablete, stavite jednu tabletu u odeljak br. 2. Kad se ovaj program završi, osušite odeljak čistom krpom.



Proces čišćenja doboša treba ponavljati na svaka 2 meseca.

Koristite sredstvo za uklanjanje kamenca koje je podesno za mašine za pranje veša.

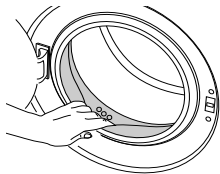

Posle svakog pranja proverite da nikakve materije nisu zaostale u dobošu. Ako su otvori na odeljku (kao na slici) blokirani, otvorite ih pomoću čačkalice.



Strani metal će dovesti do stvaranja mrlja od rđe u dobošu. Očistite mrlje sa površine doboša korišćenjem sredstva za čišćenje nerđajućeg čelika. Nikad ne koristite čeličnu vunu ili žicu.



UPOZORENJE: Nikad ne koristite sunder ili materijale za ribanje. To će oštetiti obojene i plastične površine.


5.3 Čišćenje kućišta i komandne table

Kućište mašine obrišite sapunicom ili nekorozivnim blagim gel deterdžentom, ako je potrebno, i osušite mekom krpom.

Za čišćenje komandne table koristite samo meku i vlažnu krpu.

5.4 Čišćenja filtera za dovod vode

Na kraju svakog ventila za dovod vode na poleđini mašine i na kraju svakog creva za dovod vode, na mestu gde se spaja na slavinu, nalazi se filter. Ti filteri sprečavaju ulazak stranih tela i prljavštine iz vode u mašinu za pranje veša. Filteri treba da se čiste kad se uprljaju.

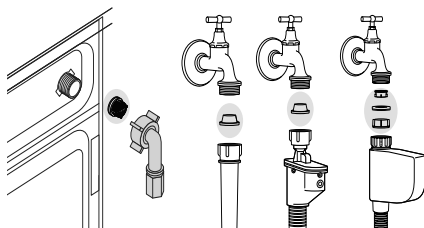

- 1 Zatvorite slavine.
- 2 Izvadite navrtke creva za dovod vode da biste pristupili filterima na ventilima za dovod vode. Očistite ih prikladnom četkom. Ako su filteri previše prljavi, izvucite ih pomoću klešta i očistite.
- 3 Izvadite filtere na ravnim krajevima creva za dovod vode zajedno sa zaptivačima i dobro ih očistite pod tekućom vodom.
- 4 Pažljivo vratite zaptivače i filtere na njihova mesta i pritegnite navrtke creva rukom.

5.5 Ispuštanje preostale vode i čišćenje filtera pumpe

Sistem filtera u Vašoj mašini sprečava da predmeti kao što su dugmad, novčići i niti tkanina začepe propeler pumpe za vreme izbacivanja vode od pranja. Zbog toga će voda biti izbačena bez ikakvih problema, a servisni vek trajanja pumpe će biti duži.

Ako mašina ne uspe da izbaci vodu, filter pumpe može da bude začepljen. Filter se mora čistiti kad god je začepljen ili na svaka 3 meseca. Da bi se očistio filter pumpe prvo se mora izbaciti voda.

Osim toga, pre transportovanja mašine (npr. preseljenje u drugu kuću) i u slučaju zamrzavanja vode, vodu ćete možda morati u potpunosti da izbacite.




UPOZORENJE: Ako se proizvod ne upotrebljava, zatvorite slavinu, odvojite dovodno crevo i ispusite vodu iz mašine da bi se zaštitila od zamrzavanja u području instalacije.

UPOZORENJE: Nakon svake upotrebe zatvorite slavinu sa crevom za dovod vode u proizvod.



UPOZORENJE: Strane materije koje su zaostale u filteru pumpe mogu da oštete vašu mašinu ili da izazovu problem sa bukom.

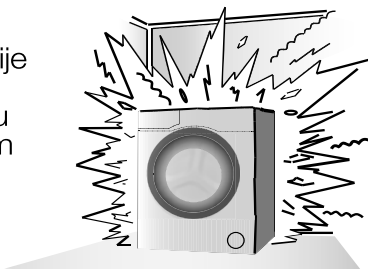

Da biste očistili prljavi filter i ispustili vodu:

1 Isključite mašinu da biste prekinuli dovod električne energije.




UPOZORENJE: Temperatura vode u mašini može da se poveća do 90 °C. Da biste izbegli opasnost od opekotina, očistite filter nakon što se voda u mašini ohladi.

2 Otvorite poklopac filtera.



3 Neki naši proizvodi imaju odvodno crevo za hitne slučajeve, a neke ne. Postupite na sledeći način da biste ispustili vodu.

Ispuštanje vode kada proizvod ima crevo za odvod za hitne slučajeve:

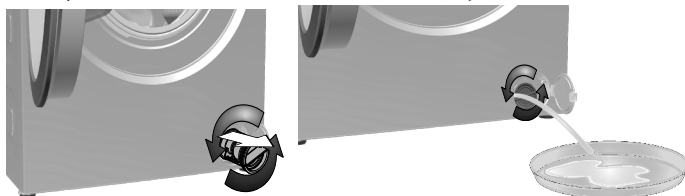


a Crevo za odvod za hitne slučajeve izvucite iz njegovog ležišta.

b Na kraju creva postavite veliku kofu. Ispustite vodu u kofu povlačenjem čepa na kraju creva. Kada kofa bude puna, blokirajte ulaz creva tako što ćete vratiti čep. Kad ispraznite posudu ponovite gornju proceduru da biste potpuno ispustili vodu iz mašine.

c Po završetku ispuštanja vode, ovo crevo ponovo zatvorite čepom i fiksirajte na svoje mesto.

d Okrećite filter pumpe da biste ga izvadili.

Ispuštanje vode kada proizvod nema crevo za odvod za hitne slučajeve:

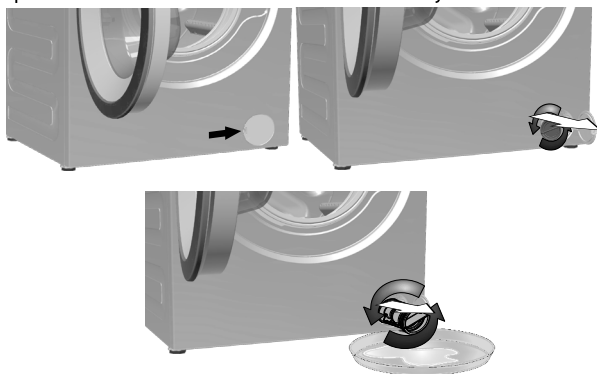

a Stavite veliku kofu ispred filtera da biste sakupili vodu iz filtera.

b Otpustite filter pumpe (suprotno smeru kazaljki na satu) dok voda ne počne da ističe. Usmerite vodu koja teče u kofu koju ste stavili ispred filtera. Imajte uvek pri ruci krpu da biste pokupili prolivenu vodu.

c Kada se voda iz mašine potpuno izbaci, okrećite filter da biste ga skinuli.

4 Očistite sav talog u filteru, kao i vlakna oko propelera pumpe, ako ih ima.

5 Namestite filter.

6 Ako se poklopac filtera sastoji iz dva dela, zatvorite poklopac filtera pritiskom na polugicu. Ako je iz jednog komada, polugice na nižem delu prvo postavite na njihova mesta, a zatim pritisnite gornji deo radi zatvaranja.

6 Tehničke specifikacije

Ispunjavanje propisa Komisije (EU) br. 1061/2010	
Naziv dobavljača ili zaštitni znak	Beko
Naziv modela	WRE 6411 BWW
Nominalni kapacitet (kg)	6
Klasa energetske efikasnosti / skala od A+++ (najviša efikasnost) do D (najniža efikasnost)	A+++
Godišnja potrošnja energije (kWh) ⁽¹⁾	152
Potrošnja energije na standardnom programu na 60 °C pri potpunom punjenju (kWh)	0.855
Potrošnja energije na standardnom programu na 60 °C pri delimičnom punjenju (kWh)	0.540
Potrošnja energije na standardnom programu na 40 °C pri delimičnom punjenju (kWh)	0.530
Potrošnja energije u „isključenom režimu“ (W)	0.25
Potrošnja energije u „režimu ostavljanja“ (W)	1.00
Godišnja potrošnja vode (l) ⁽²⁾	8799
Klasa efikasnosti sušenja centrifugom / skala od A (najviša efikasnost) do G (najniža efikasnost)	D
Maksimalna brzina obrtaja (opm)	800
Sadržaj preostale vlage (%)	71
Standardni program za pamuk ⁽³⁾	Pamuk eko 60 °C i 40° C
Vreme standardnog programa na 60 °C pri potpunom punjenju (min)	250
Vreme standardnog programa na 60 °C pri delimičnom punjenju (min)	195
Vreme standardnog programa na 40 °C pri delimičnom punjenju (min)	195
Trajanje režima ostavljanja (min)	N/A
Nivo akustične buke koja se prenosi vazduhom prilikom pranja/obrtanja (dB)	61/76
Ugrađeno	Non
Nominalni kapacitet (kg)	6
Visina (cm)	84
Širina (cm)	60
Dubina (cm)	41.5
Neto težina (±4 kg)	55
Jednostruki dovod vode / Dvostruki dovod vode	• / -
• Dostupno	
Napon napajanja (V/Hz)	230 V / 50Hz
Ukupna struja (A)	10
Ukupna snaga (W)	1550
Woolmark №	M-14022
⁽¹⁾ Potrošnja energije je zasnovana na 220 ciklusa standardnog pranja u programima za pamuk na 60 °C i 40 °C pri potpunom i delimičnom punjenju, i potrošnji u režimima za uštedu energije. Stvarna potrošnja energije će zavisići od načina upotrebe uređaja.	
⁽²⁾ Potrošnja vode je zasnovana na 220 ciklusa standardnog pranja u programima za pamuk na 60 °C i 40 °C pri potpunom ili delimičnom punjenju. Stvarna potrošnja vode će zavisići od načina upotrebe uređaja.	
⁽³⁾ „Standardni program za pamuk na 60 °C“ i „standardni program za pamuk na 40 °C“ su standardni programi za pranje na koje se podaci na etiketi i deklaraciji odnose i ovi programi su pogodni za pranje normalno zaprljanog pamučnog veša i to su najefikasniji programi kada je reč o kombinovanoj potrošnji energije i vode.	
Tehničke specifikacije mogu da se promene bez upozorenja da bi se poboljšao kvalitet proizvoda.	

7 Rešavanje problema

Program ne može da se uključi ili izabere.

- Mašina za pranje veša se možda prebacila u režim samozaštite zbog problema sa snabdevanjem (kao što su napon, pritisak vode, itd.). >>> Da biste otkazali program, okrenite dugme za izbor programa i izaberite drugi program. Prethodni program će biti otkazan. (Pogledajte "Otkazivanje programa")

Voda u mašini.

- U proizvodu je možda ostalo malo vode iz procesa kontrole kvaliteta u proizvodnji. >>> To nije kvar; voda nije štetna za mašinu.

Mašina vibrira ili pravi buku.

- Mašina možda nije nivelisana. >>> Nivelišite mašinu podešavanjem nožica.
- Čvrsta materija je možda ušla u filter pumpe. >>> Očistite filter pumpe.
- Nisu skinuti bezbednosni transportni vijci. >>> Skinite bezbednosne transportne vijke.
- Moguće je da je količina veša u mašini premala. >>> Dodajte više veša u mašinu.
- Mašina je možda preopterećena većom. >>> Izvadite malo veša iz mašine ili rukom popravite ravnotežu veša.
- Mašina se možda naslanja na kruti predmet. >>> Pobrnite se da se mašina ne naslanja ni na kakav predmet.

Mašina je stala ubrzo nakon početka programa.

- Mašina je možda privremeno zaustavljena zbog pada napona. >>> Ona će nastaviti s radom kada se napon bude vratio na normalan nivo.

Trajanje programa se ne odbrojava. (kod modela sa displejem)

- Tajmer je možda zaustavljen zbog uzimanja vode. >>> Tajmer neće odbrojavati dok mašina ne uzme dovoljnu količinu vode. Mašina će sačekati dok u njoj ne bude dovoljna količina vode da bi se izbegli slabi rezultati pranja zbog nedostatka vode. Indikator tajmera će nakon toga nastaviti sa odbrojanjem.
- Tajmer se može zaustaviti tokom koraka zagrevanja. >>> Indikator tajmera neće odbrojavati dok mašina ne dostigne izabranu temperaturu.
- Tajmer se može zaustaviti tokom koraka centrifugiranja. >>> Moguće je da je došlo do aktiviranja sistema za automatsku detekciju neuravnoteženog opterećenje zbog neujednačene raspodele veša u bubnju.
- Mašina se ne prebacuje na korak centrifuge ako veš nije raspodeljen ravnomerno u bubnju da bi se sprečilo oštećenje mašine i njene okoline. Veš treba da se ponovo preraspodeli i da se ponovo uključi centrifuga.

Pena izlazi iz fioke za deterdžent.

- Koristi se previše deterdženta. >>> Izmešajte 1 kašiku omekšivača i ½ litra vode i sipajte u odeljak za glavno pranje fioke za deterdžent.
- U mašinu stavite deterdžent koji je pogodan za programe i maksimalna opterećenja navedena u "Tabeli programa i korišćenja". Ako koristite dodatne hemikalije (sredstva za uklanjanje fleka, izbeljivače itd.) smanjite količinu deterdženta.

Veš ostaje mokar na kraju programa

- Moguće je da je došlo do stvaranja prevелиke pene i da je sistem za automatsku apsorpciju pene aktiviran zbog prekomerne količine deterdženta. >>> Koristite preporučenu količinu deterdženta.
- Mašina se ne prebacuje na korak centrifuge ako veš nije raspodeljen ravnomerno u bubnju da bi se sprečilo oštećenje mašine i njene okoline. Veš treba da se ponovo preraspodeli i da se ponovo uključi centrifuga.



Ako ne možete da eliminišete problem iako ste pratili uputstva iz ovog odeljka, obratite se svom dobavljaču ili ovlašćenom serviseru. Nikad nemojte sami da pokušavate da popravite neispravan proizvod.



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Beko, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/beko-masina-za-pranje-vesa-wre-6411-bww-akcija-cena/>