

## Uputstvo za upotrebu

HISENSE frižider RR154D4AW2

**Hisense**



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/hisense-frizider-rr154d4aw2-akcija-cena/>

# Hisense

life reimagined

## UPUTSTVO ZA UPOTREBU

Pre upotrebe ovog uređaja, molimo vas da temeljno pročitate ovo uputstvo i da ga zadržite za slučaj potrebe.

Srpski

## Sadržaj

Bezbednosne informacije i upozorenja	2	Čišćenje i nega	13
Instaliranje vašeg novog uređaja	8	Korisni saveti	15
Opis uređaja	11	Otklanjanje problema	16
Kontrole na displeju	12	Odlaganje uređaja	18
Upotreba vašeg uređaja	13		



### Bezbednosne informacije i upozorenja

U cilju bezbedne i pravilne upotrebe, pre instaliranja i prve upotrebe uređaja, pažljivo pročitati ovo korisničko uputstvo, uključujući savete i upozorenja. Kako bi se izbegle nepotrebne greške i nezgode, važno je osigurati da su sve osobe koje koriste uređaj dobro upoznate sa njegovom upotrebotom i sigurnosnim karakteristikama. Sačuvati ovo uputstvo i postarati se da ono prati uređaj ukoliko se uređaj premesti ili proda, kako bi se sve osobe koje će koristiti uređaj propisno informisale o njegovoj upotrebi i upoznale sa sigurnosnim napomenama.

Iz razloga zaštite zdravlja i imovine, primenjivati mere predostrožnosti iz ovog uputstva za upotrebu jer proizvođač neće biti odgovoran za štetu nastalu usled propusta.

### Bezbednost dece i ostalih ugroženih kategorija ljudi

- U skladu sa EN standardom

Ovaj uređaj mogu koristiti deca starija od 8 godina i osobe sa fizičkim, čulnim ili mentalnim invaliditetom kao i neiskusne osobe i osobe koje nisu upoznate sa upotrebotom ovog uređaja, ukoliko to čine pod nadzorom ili prema datim smernicama i na bezbedan način i ukoliko su svesne povezanih opasnosti. Deci nije dozvoljeno da se igraju sa uređajem. Čišćenje i korisničko održavanje uređaja ne smeju obavljati deca bez nadzora.

**Deca uzrasta od 3 do 8 godina mogu stavljati i uzimati hranu i druge proizvode iz rashladnih uređaja.**

- U skladu sa IEC standardom

Ovaj uređaj nije predviđen za upotrebu od strane osoba (uključujući decu) sa smanjenim fizičkim, čulnim ili mentalnim sposobnostima, kao i neiskusnih osoba i osoba koje nisu upoznate sa upotrebotom ovog uređaja, osim ukoliko to čine pod nadzorom ili prema smernicama za upotrebu uređaja datim od strane osobe odgovorne za njihovu bezbednost.

Deca moraju biti pod nadzorom kako bi se sprečilo njihovo igranje sa uređajem.

- Držati svu ambalažu van dohvata dece jer postoji rizik od gušenja.
- Ukoliko više nećete koristiti uređaj, isključiti ga iz struje, iseći strujni kabl (što bliže uređaju) i skinuti vrata, kako bi se sprečio strujni udar ili zatvaranje dece u frižideru tokom igre.
- Ukoliko se ovim uređajem, koji sadrži magnetne zaptivače na vratima, zameniti stariji uređaj koji sadrži ručicu sa oprugom na vratima ili poklopcu, obavezno onesposobiti ručicu sa oprugom pre odlaganja starog uređaja. To će sprečiti zaglavljivanje deteta u starom frižideru.

## Opšta bezbednost



- UPOZORENJE — Ovaj uređaj je predviđen za upotrebu u domaćinstvu i sličnim primenama kao što su
  - kuhinja za radno osoblje u prodavnicama, kancelarijama i drugim radnim okruženjima;
  - farmerske kućice i za klijente u hotelima, motelima i drugim postavkama stambenog tipa;
  - objektima koji nude noćenje sa doručkom;
  - ugostiteljske i slične nemaloprodajne primene.
- UPOZORENJE — Ne držati eksplozivne supstance kao što su boce sa aerosolima sa zapaljivom sadržinom u ovom uređaju.
- UPOZORENJE — Ukoliko je strujni kabl oštećen, mora se zameniti od strane proizvođača, njegovog ovlašćenog servisera ili drugih kvalifikovanih lica kako bi se izbegla opasnost.
- UPOZORENJE — Ukloniti sve prepreke sa otvora za ventilaciju u kućištu uređaja ili u objektu u kom se uređaj koristi.
- UPOZORENJE — Ne koristiti mehaničke uređaje ili druga sredstva za ubrzavanje procesa odmrzavanja, osim onih koje preporučuje proizvođač.
- UPOZORENJE — Čuvati kolo sa rashladnim sredstvom od oštećenja.
- UPOZORENJE — Ne koristiti električne uređaje unutar odeljaka za skladištenje hrane u uređaju, osim ukoliko su odobreni od strane proizvođača.

- UPOZORENJE — Rashladno sredstvo i izolacioni gas su zapaljivi. Pri odlaganju uređaja, to učiniti isključivo u ovlašćenom centru za odlaganje otpada. Ne izlagati otvorenom plamenu.
- UPOZORENJE — Pri pozicioniranju uređaja, uveriti se da strujni kabl nije zaglavljen ili oštećen.
- UPOZORENJE — Ne postavljati produžne kablove ili prenosive izvore napajanja sa zadnje strane uređaja.



Simbol predstavlja upozorenje i ukazuje na to da su rashladno sredstvo i izolacioni gas zapaljivi.

### **Upozorenje: Rizik od požara/zapaljivih materija**

### **Zamena lampica za osvetljenje**

- UPOZORENJE — Lampice za osvetljenje se ne smeju menjati od strane korisnika! Ukoliko dođe do oštećenja lampica za osvetljenje, kontaktirati korisničku službu za pomoć.

Ovo upozorenje važi samo za frižidere koji su opremljeni lampicama za osvetljenje.

### **Rashladno sredstvo**

Rashladni izobutan (R600a) se nalazi u rashladnom kolu uređaja i predstavlja prirodni gas sa visokim nivoom kompatibilnosti sa prirodnom sredinom, ali je zapaljiv. Tokom transporta i instalacije uređaja, sprečiti oštećivanje bilo koje komponente kola sa rashladnim sredstvom.

Rashladno sredstvo (R600a) je zapaljivo.

- UPOZORENJE — Frižideri sadrže rashladno sredstvo i gasove u izolaciji. Rashladno sredstvo i gasovi se moraju odlagati na stručan način jer mogu izazvati povrede očiju ili se mogu zapaliti.  
Uveriti se da cevi kola sa rashladnim sredstvom nisu oštećene pre pravilnog odlaganja.

Ukoliko dođe do oštećenja kola sa rashladnim sredstvom:

- Izbegavati otvorene plamenove i izvore vatre.
- Dobro provetriti prostoriju u kojoj se nalazi uređaj.

Opasno je menjati specifikacije ili modifikovati ovaj proizvod na bilo koji način.

Bilo koje oštećenje kabla može izazvati kratak spoj, požar i/ili strujni udar.



## **Električna bezbednost**

1. Strujni kabl se ne sme produžavati.
2. Uveriti se da utikač nije prgnječen ili oštećen.  
Prgnječen ili oštećen utikač se može pregrejati i izazvati požar.
3. Uveriti se da je omogućen pristup glavnom utikaču uređaja.
4. Ne vući glavni strujni kabl.
5. Ukoliko je utičnica labava, ne uključivati strujni utikač. Postoji rizik od strujnog udara ili požara.
6. Ne smete koristiti uređaj ukoliko fali poklopac unutrašnje lampice za osvetljenje.
7. Frižider se može napajati isključivo jednofaznom naizmeničnom strujom od 220~240V/50Hz. Ukoliko je fluktuacija napona u mestu korisnika toliko velika da napon prelazi gorenavedeni opseg, iz razloga bezbednosti obavezno povezati automatski regulator naizmeničnog napona, čija je snaga veća od 350W, na frižider. Frižider mora koristiti posebnu utičnicu a ne utičnicu koju deli sa drugim električnim uređajima. Žice za uzemljenje na utikaču frižidera i na utičnici se moraju poklapati.

## **Svakodnevna upotreba**

- Ne držati zapaljive gasove ili tečnosti u uređaju. Postoji rizik od eksplozije.
- Ne koristiti bilo koje električne uređaje u uređaju (npr. električne aparate za sladoled, miksere, itd.).
- Prilikom isključivanja iz struje uvek najpre izvući utikač iz utičnice a ne vući za kabl.
- Ne postavljati vruće predmete blizu plastičnih komponenti ovog uređaja.

- Ne postavljati prehrambene proizvode direktno uz odvod za vazduh na zadnjoj strani.
- Prethodno upakovane zamrznute namirnice držati u skladu sa smernicama proizvođača za zamrznutu hranu.
- Preporuke za skladištenje koje je definisano proizvođač uređaja se moraju strogo poštovati. Videti relevantne smernice za skladištenje.
- Ne stavljati gazirana pića ili sokove u odeljak za zamrzavanje jer se stvara pritisak u boci, koji može izazvati njeni pucanje i oštećenje uređaja.
- Zamrznuta hrana može izazvati promrzline ukoliko se konzumira direktno iz odeljka za zamrzavanje.
- Ne izlagati uređaj direktnoj sunčevoj svetlosti.
- Držati sveće, lampe i ostale predmete sa otvorenim plamenom dalje od uređaja kako se uređaj ne bi zapalio.
- Uređaj je predviđen za držanje namirnica i/ili pića u normalnom domaćinstvu kao što je opisano u ovom uputstvu. Uređaj je težak. Potrebno je biti oprezan pri premeštanju uređaja.
- Ne uklanjati niti dodirivati predmete iz odeljka za zamrzavanje ukoliko su vam ruke vlažne/mokre, jer to može izazvati nagrizanje kože ili promrzline.
- Nikada ne koristiti osnovu, fijoke, vrata, itd., za stajanje na njima ili kao oslonac.
- Zamrznuta hrana se ne sme ponovo zamrzavati nakon otapanja.
- Ne konzumirati ledene lizalice ili kockice leda direktno iz zamrzivača jer mogu izazvati promrzline u ustima i na usnama.
- Kako bi se izbeglo ispadanje predme i izazivanje fizičke povrede ili oštećenja uređaja, ne preopterećivati police na vratima niti stavljati previše hrane u fijoke za održavanje svežine.
- Ovaj rashladni uređaj nije predviđen za upotrebu kao ugradni uređaj.

## Oprez! Nega i čišćenje

- Pre održavanja, isključiti uređaj i izvaditi glavni utikač iz utičnice.
- Ne čistiti uređaj metalnim predmetima, paročistačima, eteričnim uljima, organskim razređivačima ili abrazivnim sredstvima za čišćenje.
- Ne koristiti oštре predmete za uklanjanje leda sa uređaja.  
Koristiti plastični strugač.

## Važno za instalaciju!

- U vezi sa električnim povezivanjem pažljivo pratiti smernice iz ovog uputstva.  
Otpakovati uređaj i proveriti da na njemu nema oštećenja.
- Ne povezivati uređaj ukoliko je oštećen. Sve moguće štete odmah prijaviti tamo gde ste kupili uređaj. U ovom slučaju zadržati ambalažu.
- Savetuje se da se sačeka najmanje četiri sata pre povezivanje uređaja kako bi se omogućilo vraćanje ulja u kompresor.
- Potrebno je obezbediti adekvatnu cirkulaciju vazduha oko uređaja, jer u suprotnom može doći do pregrevanja. Kako bi se postigla dovoljna ventilacija, pratiti smernice vezane za instalaciju.
- Gde je to moguće zadnja strana proizvoda ne bi trebalo da bude preblizu zida kako bi se izbeglo dodirivanje ili hvatanje za vruće delove (kompressor, kondenzator) kako bi se sprečio rizik od požara; poštovati smernice vezane za instalaciju.
- Uređaj se ne sme postavljati blizu radijatora ili šporeta.  
Uveriti se da je strujni utikač pristupačan nakon instaliranja uređaja.

## Servis

- Sve električne radove koji su potrebni za servisiranje uređaja bi trebalo da obavi kvalifikovani električan ili stručno lice.
- Ovaj proizvod se mora servisirati od strane ovlašćenog servisa i moraju se koristiti isključivo originalni rezervni delovi.
  - 1) Ukoliko je uređaj Frost Free (sprečava formiranje leda).
  - 2) Ukoliko uređaj sadrži odeljak za zamrzavanje.


## Instaliranje vašeg novog uređaja

Pre prve upotrebe uređaja, potrebno je upoznati se sa sledećim savetima.

### Upozorenje!

Za pravilnu instalaciju, ovaj frižider se mora postaviti na ravnu površinu od čvrstog materijala koji je iste debljine kao i ostatak poda. Ova površina mora biti dovoljno čvrsta da izdrži potpuno pun frižider.

Roleri, koji nisu točkići, bi trebalo da se koriste isključivo za pomeranje napred ili nazad. Pomeranje frižidera u stranu može oštetiti vaš pod i rolere.

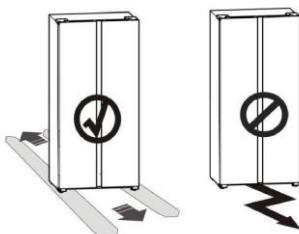


### Ventilacija uređaja

 Instalirati uređaj na ravnu i stabilnu površinu. Obezbediti dobru ventilaciju.

Preporučujemo ostavljanje slobodnog prostora od najmanje:

- 50-70mm od zadnje strane do zida
- 100mm od gornje strane do zida
- 100mm od bočnih strana do zida

Mora se obezbediti dovoljno prostora ispred uređaja kako bi se omogućilo otvaranje vrata kao što je prikazano na sledećim dijagramima.

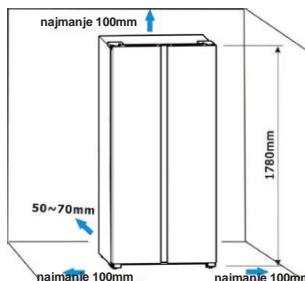

### Napomena:

Ovaj uređaj dobro radi u klimatskoj klasi od N do ST koje su prikazane u tabeli u nastavku. Možda neće raditi kako treba ukoliko se duže vreme ostavi na temperaturi višoj ili nižoj od prikazanog opsega.

Klimatska klasa	Temperatura sredine
N	+16°C do +32°C
ST	+16°C do +38°C

- Postavite vaš uređaj na suvo mesto kako bi se izbeglo oštećenje od vlage.
- Držati uređaj dalje od direktnog sunčevog svetlosti, kiše ili mraza. Postaviti uređaj dalje od izvora topline kao što su šporeti, kamini ili grejalice.

### Nivelisanje uređaja

- Kako bi se obavilo pravilno nivelisanje i omogućila cirkulacija vazduha u donjem zadnjem delu uređaja,

možda će biti neophodno podesiti nožice.  
Mogu se podesiti ručno ili pomoću  
odgovarajućeg ključa

- Kako bi se omogućilo samostalno zatvaranje vrata, nagnuti gornji deo unazad za oko 10-15 mm.



### Skidanje vrata

Kada su vaša ulazna vrata preuska da frižider prođe kroz njih, skinuti vrata frižidera. Zatim uneti frižider okretanjem na bok. Ukoliko ne morate da uklonite vrata uređaja, pređite na sledeći odeljak. Ukoliko morate da uklonite vrata, pratite korake opisane u nastavku.

### Upozorenje!

Prilikom **uklanjanja** vrata, uređaj se mora isključiti iz struje.

### Alati koji su vam potrebni (nisu obezbeđeni):

Krstasti odvijač	Ključ (8mm)


### Demontaža vrata

Neki modeli se mogu donekle razlikovati od prikazanih slika. Ukoliko ne možete pronaći neke delove koji su prikazani na slikama na vašem uređaju, molimo vas ignorišite njihov opis.

**Pošto su koraci za demontažu vrata frižidera slični kao za vrata zamrzivača, dolenavedene smernice se odnose isključivo na demontažu vrata zamrzivača osim koraka 2.**



**Možete pratiti korake u nastavku kako biste demontirali vrata frižidera.**

- 1.Dok su vrata zatvorena, ukloniti vijke pomoću krstastog (+) odvijača, pa zatim pažljivo skinuti poklopac gornje šarke, jer su priključci ispod poklopca šarke još uvek povezani.

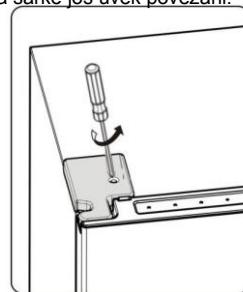


2. Isključiti priključak, otvoriti vrata u potpunosti i skinuti poklopac gornje šarke. Zatim zatvoriti vrata.


- Takođe morate ukloniti senzor temperature sa poklopca gornje šarke prilikom demontaže vrata frižidera.
- Pritisnuti plastične kukice priključka držeći jedan kraj priključka jednom rukom, istovremeno izvlačeći drugi kraj. Naglo izvlačenje priključka će ga oštetiti.

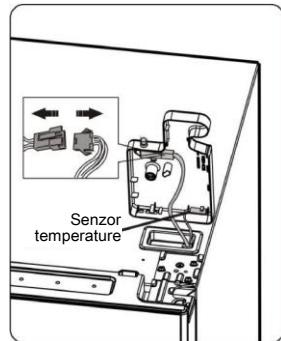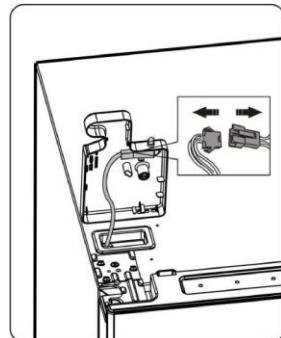


3. Ukloniti 3 vijka koji su pričvršćeni na šarci pomoću ključa (8mm). Zatim skinuti gornju šarku.

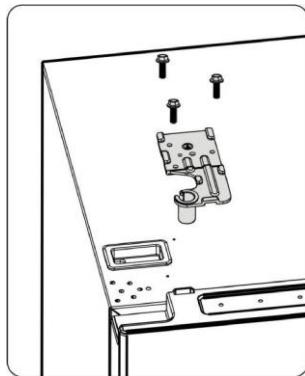

4. Malo otvoriti vrata zamrzivača, zatim ih podići obema rukama i skinuti ih.  
(Voditi računa o policama prilikom skidanja vrata.)

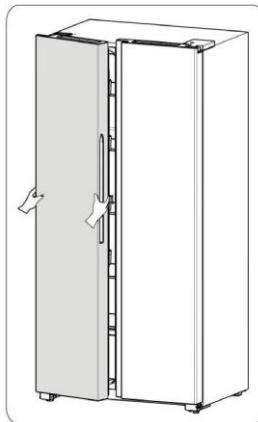


5. Ukloniti sve police i fijke unutar uređaja. Oboriti frižider na zadnju stranu, ukloniti vijke koji drže šarku ključem. Zatim ukloniti donju šarku.

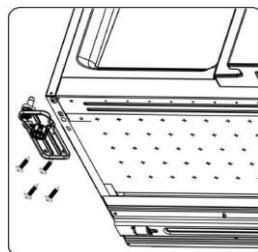

#### Ponovo montirati vrata

Možete ponovo montirati vrata obrnutim redosledom u odnosu na demontažu vrata.

## Opis uređaja

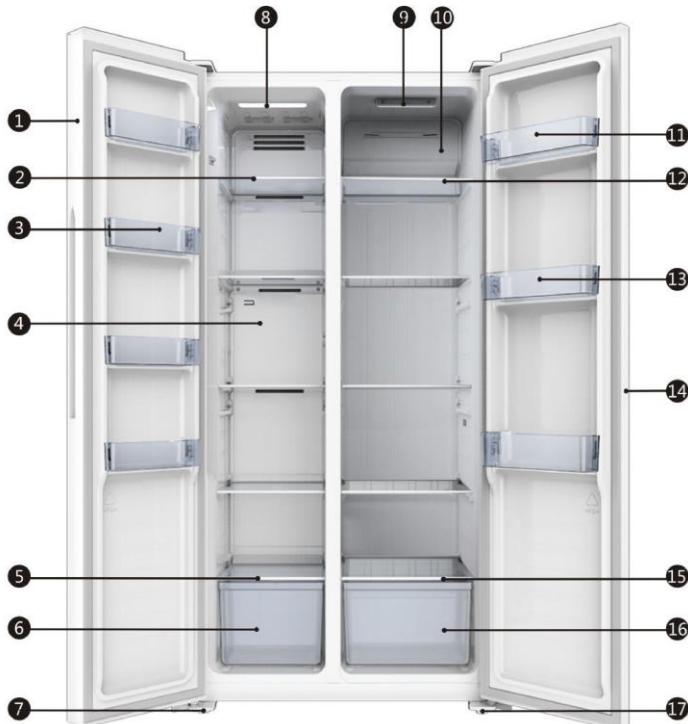

1. Vrata zamrzivača
2. Staklena polica zamrzivača
3. Polica zamrzivača
4. Kanal sa ventilacijom u zamrzivaču
5. Poklopac fijoke zamrzivača
6. Fijoka zamrzivača
7. Leva podesiva nožica
8. LED sijalica zamrzivača
9. Panel displeja i LED sijalica
10. Kanal sa ventilacijom u frižideru
11. Gornja polica frižidera
12. Staklena polica frižidera
13. Polica frižidera
14. Vrata frižidera
15. Poklopac fijoke za održavanje svežine
16. Fijoka za voće i povrće
17. Desna podesiva nožica


### Napomena!

Usled neprekidnog razvoja naših proizvoda, izgled vašeg frižidera se može donekle razlikovati od primera iz ovog uputstva, ali njegove funkcije i metode upotrebe ostaju isti.

- Kako bi se postigla najbolja energetska efikasnost ovog proizvoda, molimo vas da sve police i fijoke postavite u njihov predviđen položaj kao što je prikazano na ilustraciji iznad.

## Kontrole na displeju

Koristite vaš uređaj u skladu sa sledećim kontrolama. Vaš uređaj sadrži odgovarajuće funkcije koje su prikazane na panelima displeja na slikama u nastavku.

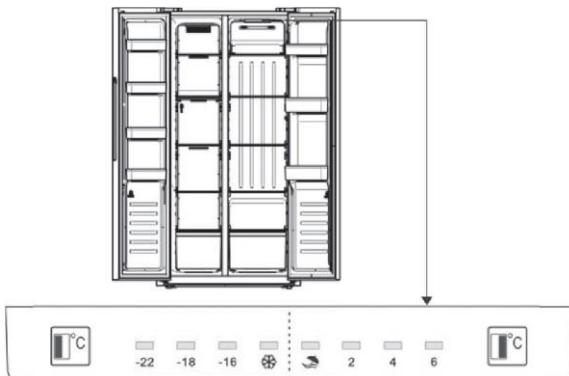

### Kontrola temperature

Za optimalno čuvanje hrane, preporučujemo da prilikom prvog uključivanja uređaja, temperaturu frižidera podešite na  $4^{\circ}\text{C}$  a temperaturu zamrzivača na  $-18^{\circ}\text{C}$ . Ukoliko želite da promenite temperaturu, pratite korake opisane u nastavku.

 
**NAPOMENA:** Podešena visoka temperatura će ubrzati propadanje hrane.

Oprez! Kada podešavate temperaturu, vi podešavate prosečnu temperaturu za celu komoru frižidera. Temperature unutar svakog odeljka se mogu razlikovati od temperature prikazane na panelu, u zavisnosti od toga koliko hrane ste smestili u frižider i gde ste je smestili. Temperatura sredine takođe može uticati na stvarnu temperaturu u uređaju.

#### 1. Frižider ( )


Pritisnuti "Frižider" kako biste podešili temperaturu frižidera na vrednost između  $2^{\circ}\text{C}$  i  $6^{\circ}\text{C}$  prema potrebi, a panel na displeju će prikazati odgovarajuće

vrednosti prema sledećem redosledu.



#### 2. Zamrzivač ( )

 Pritisnuti "Zamrzivač" kako biste podešili temperaturu zamrzivača na vrednosti između  $-16^{\circ}\text{C}$  i  $-22^{\circ}\text{C}$  prema potrebi, a panel na displeju će prikazati odgovarajuće vrednosti sledećim redosledom.



#### 3. Režim Holiday ( ) (godišnji odmor)

Ukoliko ćete biti odsutni duže vreme, možete aktivirati ovu funkciju.

**Važno!** Za to vreme ne stavljati bilo kakvu hranu u frižider.



#### Super Freeze ( ) (super zamrzavanje)

Super Freeze će brzo spustiti temperaturu u zamrzivaču tako da će se hrana brže zamrznuti. To može zadržati sve vitamine i hranljive sastojke sveže hrane i sačuvati svežinu hrane duže vreme.

- Ukoliko je potrebno zamrznuti maksimalnu količine hrane, sačekati oko 24h.
- Režim Super Freeze se automatski

isključuje nakon 52 sata a zatim će se temperatura zamrzivača vratiti na prethodnu postavku.

## Upotreba vašeg uređaja

Ovaj odeljak opisuje kako ćete koristiti većinu korisnih opcija. Preporučujemo da ih pažljivo pročitate pre upotrebe uređaja. Mogu se razlikovati u zavisnosti od modela.

### Upotreba komore frižidera

Komora frižidera je podesna za čuvanje povrća i voća. Hrana u komori bi trebalo da se upakuje kako bi se sprečilo njeno isušivanje ili da hrana ne bi upila jake mirise drugih namirnica.

### Upotreba komore zamrzivača

Komora zamrzivača je podesna za držanje hrane koja se mora zalediti, uključujući meso, ribu, sladoled, itd.

**Oprez!** Nikada ne zatvarati vrata dok su police i/ili fijoke izvučene. To može oštetiti i fijke i frižider.

### Staklene police i police za vrata

Staklene police i police za vrata su podesne za držanje jaja, konzerviranih tečnosti, flaširanih pića i upakovane hrane. Mogu se premeštati na vratima prema vašim potrebama. Ali ne stavljati previše teških stvari u police. Pre nego što podignite policu za vrata vertikalno, molimo vas da izvadite namirnice iz nje.



**Napomena:** Sve police iz vrata se mogu izvaditi kako bi se očistile.

Kada uklonite police, polako ih izvucite ka napred sve dok se polica ne izvadi u potpunosti iz vođica police.

Kada vratite police, uverite se da nema nikakvih prepreka sa zadnje strane i polako gurnite policu nazad u njen položaj.

### Fijke

Podesne su za čuvanje voća i povrća. Mogu se izvaditi kako bi se očistile.

Kako biste ih izvadili najpre otvorite vrata do kraja.

Zatim izvucite fijoku tako što ćete podići prednji deo fijke i povući horizontalno.

## Čišćenje i nega

Iz higijenskih razloga uređaj (uključujući unutrašnje i spoljašnje elemente) bi trebalo redovno čistiti, najmanje svaka dva meseca.

### Oprez!

Uređaj ne bi trebalo da bude uključen u struju tokom čišćenja. Opasnost od strujnog udara! Pre održavanja, isključiti uređaj i izvaditi glavni utikač iz utičnice.


### Čišćenje spoljašnjosti

Kako bi se zadržao dobar izgled uređaja, potrebno je redovno čišćenje.

- Isprskati krpu za čišćenje vodom umesto direktnog prskanja površine uređaja.

To omogućuje ravnomerno raspoređivanje vlage po površini.

- Očistiti vrata, ručice i površine kućišta blagim deterdžentom pa zatim prebrisati mekom krpom.

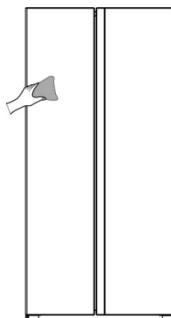


#### Oprez!

- Ne koristiti oštре predmete jer mogu izgrediti površinu.
- Ne koristiti razređivače, deterdžent za automobile, Clorox, eterična ulja, abrazivna sredstva za čišćenje ili organske rastvarače kao što je Benzen. Oni mogu oštetiiti površinu uređaja i izazvati požar.

#### Čišćenje unutrašnjosti



Potrebno je redovno čistiti unutrašnjost uređaja. Lakše je očistiti uređaj kad je u njemu malo hrane. Prebrisati unutrašnjost frižidera i zamrzivača blagim rastvorom sode bikarbune a zatim isprati topлом vodom pomoću iscedeñenog sunđera ili krpe. Pre ponovnog postavljanja polica i kutije za održavanje svežine prebrisati unutrašnjost dok ne bude potpuno suva.

Dobro osušiti sve površine i montažne delove pre vraćanja na mesto.

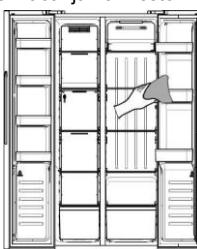

Iako se ovaj uređaj automatski otapa, na unutrašnjim zidovima komore zamrzivača se može formirati sloj leda ukoliko se vrata zamrzivača često otvaraju ili se predugo drže otvorenim. Ukoliko je led previše debeo, izabratи trenutak kada je zamrzivač skoro prazan i postupiti na sledeći način:

1. Izvaditi hranu i pomoćne elemente i korpe, isključiti uređaj iz struje i ostaviti otvorena vrata.
2. Kada je otapane gotovo, očistite zamrzivač kao što je opisano u nastavku.
3. **Otvore na zadnjoj strani komore za ventilaciju u zamrzivaču je teško očistiti brisanjem. Možete koristiti vazduh pod pritiskom za njihovo čišćenje. Najpre naprskati blag rastvor sode bikarbune a zatim isprati mlakom vodom. Prebrisati nakon čišćenja dok se površina ne osuši.**

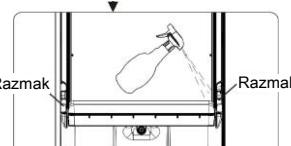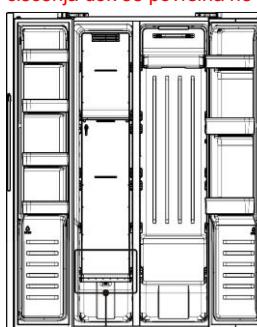


#### Upozorenje!

Ne koristiti oštре predmete za uklanjanje leda iz komore zamrzivača. Tek kada se unutrašnjost potpuno osuši uređaj bi trebalo uključiti u struju.

## Čišćenje dihtunga vrata

Voditi računa da dihtunzi vrata budu uvek čisti. Lepljiva hrana i pića mogu uzrokovati slepljivanje dihtunga za konstrukciju i njihovo cepanje prilikom otvaranja vrata. Oprati dihtung blagim deteržentom i topлом vodom. Isprati i dobro osušti nakon čišćenja.

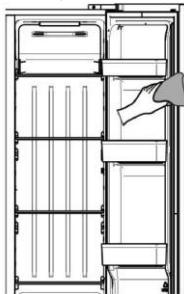

**Oprez!** Tek kada je dihtung vrata

potpuno suv uključiti uređaj.

## Zamena LED sijalice:

Upozorenje: LED sijalica se ne sme menjati od strane korisnika! Ukoliko dođe do oštećenja LED sijalice, kontaktirati korisničku službu za pomoć. Za zamenu LED sijalice obaviti korake opisane u nastavku:

1. Isključiti uređaj iz struje.
2. Ukloniti poklopac sijalice podizanjem nagore i povlačenjem.
3. Jednom rukom držati poklopac LED sijalice i povući ga drugi rukom uz istovremeno pritiskanje jezička za pričvršćivanje.
4. Zameniti LED sijalicu pa postaviti poklopac.

## Korisni saveti

### Saveti za uštedu energije

Preporučujemo da poštujete savete koji su dati u nastavku kako biste uštedeli struju. Izbegavati duže otvaranje vrata kako bi se uštedela energija.

Uverite se da su uređaji daleko od svih izvora toplote (direktna sunčeva svetlost, električna rerna ili šporet, itd.)

Ne podešavati nižu temperaturu nego što je to potrebno.

Ne stavljati toplu hranu ili tečnosti koje isparavaju u uređaju.

Postaviti uređaj u dobro proventrenu prostoriju bez vlage. Pročitati poglavlje Instaliranje vašeg novog uređaja.

Ukoliko dijagram pokazuje tačan raspored fijoka, odeljka za održavanje svežine i police, ne menjati takvu kombinaciju jer je projektovana tako da omogući najveće uštede energije.

### Saveti za čuvanje sveže hrane

- Ne stavljati vrelu hranu direktno u frižider

ili zamrzivač, unutrašnja temperatura će se povećati što je uzrokovati neprekidan rad kompresora i veću potrošnju struje.

Pokriti ili obmotati hranu, naročito ukoliko ima jak miris.

Pravilno rasporediti namirnice kako bi se omogućila cirkulacija vazduha oko njih.

### Saveti za hlađenje

- Meso (sve vrste) umotati u polietilensku foliju za hranu i staviti na staklenu policu iznad fijoke za povrće. Uvek poštovati rokove čuvanja namirница i iskoristiti ih do datuma koje preporučuju proizvođači.

Kuvana hrana, hladna jela, itd.:

Potrebno je pokriti ih i mogu se postaviti na bilo koju policu.

- Voće i povrće:

Potrebno je držati ih u specijalnoj fijoci koja je predviđena za tu svrhu.

- Maslac i sir:

Obmotati nepropusnom aluminijumskom ili plastičnom folijom.

- Flaše za mleko:

Moraju imati poklopac i moraju se držati u polici u vratima.

#### Saveti za zamrzavanje

Prilikom prvog uključivanja nakon dužeg perioda nekorišćenja, ostaviti uređaj da radi najmanje 2 sata na višoj temperaturi pre stavljanja hrane u komoru.

Namirnice podeliti u male porcije kako bi se omogućilo njihovo brzo i potpuno zamrzavanje i kasnije omogućilo otapanje samo one količine koja je potrebna.

- Umotati namirnice u aluminijumsku foliju ili polietilensku foliju za hranu koje omogućuju dobru zaptivenost.

- Sprečiti da sveža, nezamrznuta hrana dodirne zamrznutu hranu, kako bi se izbeglo zagrevanje zamrzнуте hrane.

- Ukoliko se konzumiraju odmah nakon vađenja iz komore za zamrzavanje, zaleđeni proizvodi će verovatno uzrokovati promrzline na koži.

Preporučuje se da se na svakom

zamrznutom pakovanju napiše naziv i datum zamrzavanja kako bi se pratilo vreme držanja.

#### Saveti za čuvanje zamrznutih namirnica

Uveriti se da je zamrznuta hrana pravilno čuvana u prodavnici

Kada se odlede, namirnice brzo propadaju i ne mogu se ponovo zalediti. Ne prekoračivati period čuvanja koji je naznačen od strane proizvođača.

#### Isključivanje vašeg uređaja

Ukoliko je potrebno isključiti uređaj na duži vremenski period, potrebno je preduzeti sledeće korake kako bi se sprečila pojava buđi u uređaju.

1. Izvaditi svu hranu.
2. Izvaditi utikač iz utičnice.
3. Temeljno očistiti i osušiti unutrašnjost.
4. Uveriti se da su oba vrata blokirana u blago otvorenom položaju kako bi se omogućila cirkulacija vazduha.

## Otklanjanje problema

Ukoliko se suočite sa problemom u vezi sa vašim uređajem ili mislite da vaš uređaj ne funkcioniše kako treba, možete obaviti neke jednostavne provere pre pozivanja servisa, kao što je opisano u nastavku.

**Upozorenje!** Ne pokušavajte da sami popravite uređaj. Ukoliko se problem nastavi nakon što se obavili provere pomenute u nastavku, kontaktirajte kvalifikovanog električara, ovlašćenog servisera ili prodavnicu u kojoj ste kupili proizvod.

**Upozorenje!** Uputstvo za upotrebu ili priručnik za upotrebu i održavanje koji dolaze uz svaki frižider, sadrže upozorenje o mogućnosti zaglavljivanja dece u frižideru.

**OPASNOST:** Rizik od zaglavljivanja dece. Pre odlaganja starog frižidera ili zamrzivača:

- Skinuti vrata.

Ostaviti police unutra kako deca ne bi mogla da uđu u frižider.

Problem	Mogući uzrok i rešenje
Uređaj ne funkcioniše kako treba	Proveriti da li je utikač pravilno uključen u utičnicu.
	Proveriti osigurač ili strujno kolo vašeg napajanja, zameniti ukoliko je potrebno.

	<p>Temperatura sredine je preniska. Pokušati za podešavanjem temperature komore na niži nivo kako bi se razrešio ovaj problem.</p> <p>Tokom ciklusa otapanja kao i kratko vreme nakon uključivanja uređaja, zamrzivač obično ne radi kako bi se zaštitio kompresor.</p>
Mirisi iz komora	<p>Unutrašnjost se možda mora očistiti</p> <p>Neke namirnice, posude ili omotači mogu izazvati neprijatne mirise.</p>
Šum iz uređaja	<p>Zvuci opisani u nastavku su normalni:</p> <ul style="list-style-type: none"> <li>• Šum prilikom rada kompresora.</li> <li>• Šum od kretanja vazduha od malog motora ventilatora u komori zamrzivača ili drugim komorama.</li> <li>• Zvuk mehurića sličan kao pri ključanju vode.</li> <li>• Zvuk pucanja nakon automatskog otapanja.</li> <li>• Zvuk kličkova pre uključivanja kompresora.</li> <li>• Zvuk kličkova kada točite vodu.</li> <li>• Šumovi rada motora kada uzimate led.</li> </ul> <p>Drugi neuobičajeni šumovi su posledica doleopisanih razloga i možda će zahtevati vašu proveru i preuzimanje mera:</p> <p>Frižider nije nivелisan.</p> <p>Zadnja strana uređaja dodiruje zid.</p> <p>Flaše ili posude su pale ili se kotrljaju.</p>
Neprekidan rad motora	<p>Normalno je da se zvuk motora često čuje, jer će u sledećim okolnostima morati više da radi:</p> <ul style="list-style-type: none"> <li>• Podešena temperatura je niža nego što je potrebno</li> <li>• Velika količina vruće hrane je nedavno stavljena u uređaj.</li> <li>• Temperatura van uređaja je previsoka.</li> <li>• Vrata su predugo otvorena ili se otvaraju prečesto.</li> <li>• Nakon instaliranja uređaja ili dugog perioda van upotrebe.</li> </ul>
U komori se javlja sloj leda	<p>Proveriti da otvor za vazduh nisu blokirani hranom i uveriti se da je hrana raspoređena u uređaju tako da je omogućena dovoljna ventilacija. Uveriti se da su vrata potpuno zatvorena. Za uklanjanje leda, molimo pogledajte poglavije "Čišćenje i</p>
Unutrašnja temperatura je previsoka	<p>Možda ste ostaviti vrata otvorenim predugo ili prečesto; ili su vrata otvorena zbog neke prepreke; ili je uređaj postavljen tako da nije obezbeđeno dovoljno slobodnog prostora sa bočnih strana, sa zadnje ili sa gornje strane.</p>
Unutrašnja temperatura je preniska	<p>Povećati temperaturu u skladu sa poglavljem "Kontrole na displeju".</p>
Vrata se ne mogu lako zatvoriti	<p>Proveriti da li je gornji deo frižidera nagnut unazad za 10-15mm kako bi se omogućilo samostalno zatvaranje vrata, ili nešto unutra sprečava zatvaranje vrata.</p>

Svetlo ne radi	<ul style="list-style-type: none"> <li>LED sijalica je možda oštećena. Za zamenu LED sijalica videti poglavlje Čišćenje i nega.</li> <li>Upravljački sistem je isključio sijalicu zbog toga što su vrata bila otvorena predugo. Zatvoriti i ponovo otvoriti vrata kako bi se svetla aktivirala.</li> </ul>
Zvuk mehurića vode u frižideru	To je uobičajeno. Žuborenje se čuje kada rashladna tečnost cirkuliše kroz frižider.

## Odlaganje uređaja

Zabranjeno je odlagati ovaj uređaj zajedno sa kućnim otpadom.

### Ambalažni materijal

Ambalažni materijal obeležen simbolom za reciklažu se može reciklirati. Ambalažu odlagati u odgovarajući kontejner za otpad kako bi se omogućila njena reciklaža.

### Pre odlaganja uređaja

- Izvući utikač iz utičnice.
- Iseći strujni kabl i odložiti ga zajedno sa utikačem

**Upozorenje!** Frižideri sadrže rashladno sredstvo i gasove u izolaciji. Rashladno sredstvo i gasovi se moraju odlagati na stručan način jer mogu izazvati povrede očiju ili se mogu zapaliti.

Uveriti se da cevi kola sa rashladnim sredstvom nisu oštećene pre pravilnog odlaganja.

	<b>Pravilno odlaganje ovog proizvoda</b>
	Ova oznaka ukazuje na to da se ovaj proizvod u EU ne sme odlagati zajedno sa otpadom iz domaćinstva. Kako bi se sprečio mogući štetni uticaj na životnu sredinu ili zdravlje ljudi usled nekontrolisanog odlaganja otpada, reciklirati otpad na odgovoran način kako bi se promovisala održiva ponovna upotreba materijalnih resursa. Za vraćanje vašeg polovnog uređaja, molimo vas da koristite sisteme staro-za-novo ili kontaktirajte maloprodavca od koga ste kupili proizvod. Oni mogu preuzeti ovaj proizvod za reciklažu na ekološki-bezbedan način.

Kako bi se izbegla kontaminacija hrane, molimo pratite sledeće smernice

- Otvaranje vrata na duže vreme može izazvati znatno povećanje temperature u komorama uređaja.
- Redovno čistiti površine koje dolaze u dodir sa hranom i pristupačne sisteme za pražnjenje vode.
- Sveže meso i ribu držati u odgovarajućim posudama u frižideru, tako da ne dođu u dodir ili kako ne bi kapali na druge namirnice.
- Odeljci za zamrznutu hrani su dve zvezdice su podesni za skladištenje prethodno zamrznute hrane, čuvanje ili pravljenje sladoleda i pravljenje ledenih lizalica.
- Odeljci sa jedno, dve ili tri zvezdice, nisu podesni za zamrzavanje sveže hrane.

Redosled	TIP odeljka	Ciljna temp. čuvanja hrane [°C]	Odgovarajuće namirnice
1	Frižider	+2~+8	Jaja, kuvana hrana, upakovana hrana, voće i povrće, mlečni proizvodi, torte, pića i druge namirnice koje nisu podesne za zamrzavanje.
2	(***)*-Zamrzivač	≤-18	Morska hrana (riba, škampi, školjke), namirnice od slatkodovnih životinja i proizvodi od mesa (preporučeno 3 meseca, što je duže vreme čuvanja, lošiji je ukus i hranljiva vrednost), podesno za zamrznutu svežu hrani.
3	***-Zamrzivač	≤-18	Morska hrana (riba, škampi, školjke), namirnice od slatkodovnih životinja i proizvodi od mesa (preporučeno 3 meseca, što je duže vreme čuvanja, lošiji je ukus i hranljiva vrednost), nije podesno za zamrznutu svežu hrani.
4	**-Zamrzivač	≤-12	Morska hrana (riba, škampi, školjke), namirnice od slatkodovnih životinja i proizvodi od mesa (preporučeno 2 meseca, što je duže vreme čuvanja, lošiji je ukus i hranljiva vrednost), nije podesno za zamrznutu svežu hrani.
5	*-Zamrzivač	≤-6	Morska hrana (riba, škampi, školjke), namirnice od slatkodovnih životinja i proizvodi od mesa (preporučeno 1 meseca, što je duže vreme čuvanja, lošiji je ukus i hranljiva vrednost), nije podesno za zamrznutu svežu hrani.
6	0-zvezdica	-6~0	Sveža svinjetina, junetina, riba, piletina, određene upakovane prehrambene namirnice, itd. (Preporučeno da se jedne istog dana, uz preporuku da ne prođe više od 3 dana). Delimično upakovane prehrambene namirnice (namirnice koje se ne smeju zamrzavati)
7	Hlađenje	-2~+3	Sveža/zamrznuta svinjetina, junetina, piletina, proizvodi od slatkodovnih životinja, itd. (7 dana ispod 0 °C a iznad 0 °C se preporučuje za konzumaciju istog dana, poželjno ne duže od 2 dana). Morska hrana (ispod 0 stepeni - 15 dana, ne preporučuje se držanje na temperaturi višoj od 0 °C)

8	Sveža hrana	0~+4	Sveža svinjetina, junetina, riba, spremljena hrana, itd. (Preporučeno da se jedne istog dana, uz preporuku da ne prođe više od 3 dana).
9	Vino	+5~+20	crveno vino, belo vino, penušavo vino, itd.

Napomena: molimo vas da različite namirnice čuvate u skladu sa odeljcima, odnosno ciljnim temperaturama čuvanja u vašem uređaju.

- Ukoliko je rashladni uređaj prazan duže vreme, isključiti ga, otopiti, očistiti, osušiti i ostaviti vrata otvorenim kako bi se sprečilo formiranje buđi u uređaju.

Čišćenje uređaja za točenje vode (važi za proizvode sa uređajem za točenje vode):

- Očistiti rezervoare za vodu ukoliko nisu korišćeni 48h; isprati sistem za vodu koji je povezan sa dovodom vode ukoliko vode nije točena 5 dana.

**UPOZORENJE!** Hrana se mora spakovati u kesice pre stavljanja u frižider a tečnosti se moraju staviti u flaše ili posude sa poklopcem kako bi se izbegli problemi jer konstrukcija proizvoda nije laka za čišćenje.

# Hisense

life reimagined

## USER'S OPERATION MANUAL

Before operating this unit, please read this manual thoroughly, and retain for future reference

English

## Contents

Safety and warning information	2	Cleaning and care	17
Installing your new appliance	8	Helpful hints and tips	19
Description of the appliance	11	Troubleshooting	20
Display controls	13	Disposal of the appliance	22
Using your appliance	16		



## Safety and warning information

For your safety and correct usage, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life, will be properly informed on its usage and safety notices.

For the safety of life and property, keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

### Safety for children and others who are vulnerable people

- According to EN standard

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

- According to IEC standard

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning

use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- Keep all packaging away from children as there is risk of suffocation.
- If you are discarding the appliance, pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside it.
- If this appliance, featuring a magnetic door seals, is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make the spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

## General safety

- 
- **WARNING** —This appliance is intended to be used in household and similar applications such as
    - staff kitchen areas in shops, offices and other working environments;
    - farm houses and by clients in hotels, motels and other residential type environments;
    - bed and breakfast type environments;
    - catering and similar non-retail applications.
  - **WARNING** — Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
  - **WARNING** — If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
  - **WARNING** — Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
  - **WARNING** — Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
  - **WARNING** — Do not damage the refrigerant circuit.
  - **WARNING** — Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

- **WARNING** — The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.
- **WARNING** — When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING** — Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.



The symbol is a warning and indicates the refrigerant and insulation blowing gas are flammable.

#### **Warning: Risk of fire / flammable materials**

### **Replacing the illuminating lamps**

- **WARNING** — The illuminating lamps must not be replaced by the user! If the illuminating lamps is damaged, contact the customer helpline for assistance.

This warning is only for refrigerators that contain illuminating lamps.

### **Refrigerant**

The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

The refrigerant (R600a) is flammable.

- **WARNING** — Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damage prior to proper disposal.

If the refrigerant circuit should be damaged:

- Avoid opening flames and sources of ignition.
- Thoroughly ventilate the room in which the appliance is situated.

It is dangerous to alter the specifications or modify this product in any way.

Any damage to the cord may cause a short circuit, fire, and/or electric shock.



## **Electrical safety**

1. The power cord must not be lengthened.
2. Make sure that the power plug is not crushed or damaged. A crushed or damaged power plug may overheat and cause a fire.
3. Make sure that you can access the main plug of the appliance.
4. Do not pull the main cable.
5. If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
6. You must not operate the appliance without the interior lighting lamp cover.
7. The fridge is only applied with power supply of single phase alternating current of 220~240V/50Hz. If fluctuation of voltage in the district of user is so large that the voltage exceeds the above scope, for safety sake, be sure to apply A.C. Automatic voltage regulator of more than 350W to the fridge. The fridge must employ a special power socket instead of common one with other electric appliances. Its plug must match the socket with ground wire.

## **Daily use**

- Do not store flammable gass or liquids in the appliance, There is a risk of an explosion.
- Do not operate any electrical appliances in the appliance (e.g.electric ice cream makers,mixers etc.).
- When unplugging always pull the plug from the mains socket,do not pull on the cable.
- Do not place hot items near the plastic components of this appliance.

- 
- Do not place food products directly against the air outlet on the rear wall.
  - Store pre-packed frozen food in accordance with the frozen food manufacture's instructions.
  - The appliances manufactures storage recommendations should be strictly adhered to. Refer to relevant instructions for storage.
  - Do not place carbonated or fizzy drinks in the freeze compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.
  - Frozen food can cause frost burns if consumed straight from the freezer compartment.
  - Do not place the appliance in direct sunlight.
  - Keep burning candles, lamps and other items with naked flames away from the appliance so that do not set the appliance on fire.
  - The appliance is intended for keeping food stuff and/or beverages in normal household as explained in this instruction booklet. The appliance is heavy. Care should be taken when moving it.
  - Do not remove nor touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
  - Never use the base, drawers, doors etc. to stand on or as supports.
  - Frozen food must not be refrozen once it has been thawed out.
  - Do not consume ice popsicles or ice cubes straight from the freezer as this can cause freezer burn to the mouth and lips.
  - To avoid items falling and causing injury or damage to the appliance, do not overload the door racks or put too much food in the crisper drawers.
  - This refrigerating appliance is not intended to be used as a built-in appliance.
-

**caution!****Care and cleaning**

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects, steam cleaner, ethereal oils, organic solvents or abrasive cleansers.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.

**Installation Important!**

- For electrical connection carefully, follow the instructions given in this manual.  
Unpack the appliance and check if there are damages on it.
- Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In this case retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation, follow the instructions relevant to installation.
- Wherever possible the back of the product should not be too close to a wall to avoid touching or catching warm parts (compressor, condenser) to prevent the risk of a fire, follow the instructions relevant to installation.
- The appliance must not be located close to radiators or cookers. Make sure that the mains plug is accessible after the installation of the appliance.

**Service**

- Any electrical work required to do the servicing of the appliance should be carried out by qualified electrician or competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.
  - 1) If the appliance is Frost Free.
  - 2) If the appliance contains freezer compartment.


## Installing your new appliance

Before using the appliance for the first time, you should be informed of the following tips.

### Warning!

For proper installation, this refrigerator must be placed on a level surface of hard material that is the same height as the rest of the flooring. This surface should be strong enough to support a fully loaded refrigerator.

The rollers, which are not castors, should be only used for forward or backward movement. Moving the refrigerator sideways may damage your floor and the rollers.

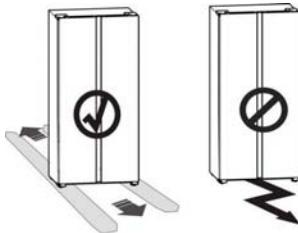

### Ventilation of appliance




Install the appliance in a plane and stable surface. Assure good ventilation.

We recommend letting a space at least:

- 50-70mm from the back to the wall
- 100mm from the top to the wall
- 100mm from its side to the wall

Enough space must be provided in the front of the appliance to allow the doors to open as shown in follow diagrams.

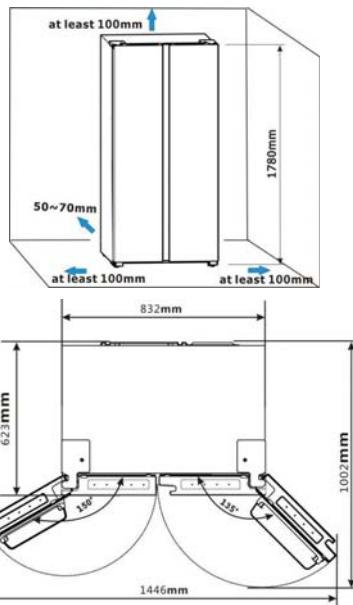

### Note:

- The appliance is designed for a certain climate class. Depending on the climate class, the appliance can be operated at the following ambient temperatures. The climate class is specified on the rating plate.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C


- Stand your appliance in a dry place to avoid high moisture.
- Keep the appliance out of direct sunlight, rain or frost. Stand the appliance away from heat sources such as stoves, fires or heaters.

### Leveling of appliance

- For sufficient leveling and air circulating in the lower rear section of the appliance,

the bottom feet may need to be adjusted. You can adjust them manually by hand or by using a suitable spanner.

- To allow the doors to self-close, tilt the top backwards by 10-15 mm.

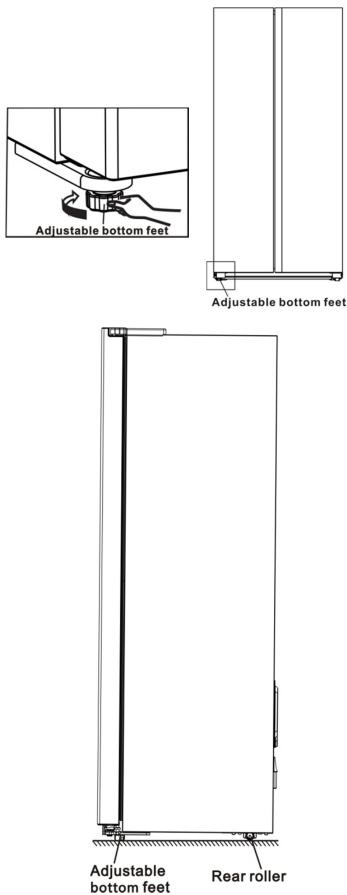

#### Doors removal

In case when your access door is too narrow for the refrigerator to pass through, remove the refrigerators. Then pass the refrigerator laterally. If you do not need to remove the appliance doors, go to next part. If you need to remove the doors, continue below.

#### Warning!

When **removing** the door, the appliance must be unplugged.

#### The tools you will need (Not provided):


Philips screwdriver	Wrench(8mm)

#### Disassembling the doors

Some models may be slightly different from pictures. If some parts show in the picture cannot be found in your appliance, please ignore the relevant description.



Since the steps to disassemble the fridge door are similar to the freezer door, the instructions below are only for disassembling the freezer door except step 2. You could refer to the steps below to disassemble the fridge door.

1. With the door closed, remove the screws with Philips (+) screwdriver, and then remove the upper hinge cover carefully, because terminals under hinge cover are still connected.

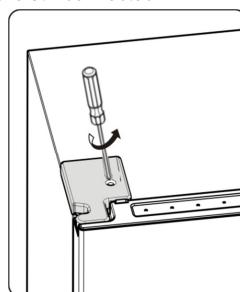


2. Disconnect terminal, open the door totally and take down upper hinge cover. Then close the door.


- You also have to remove the temperature sensor from upper hinge cover when you disassemble fridge door.
- Press the plastic hooks of the terminal holding one side of the terminal with one hand, at the same time pull out the other side out. Pulling out the terminal straightway will damage it.

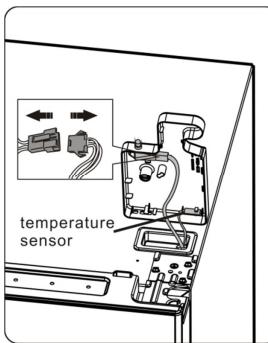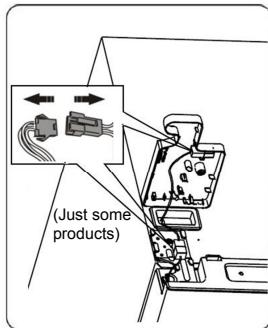


3. Remove the 3 screws fixed on the hinge with a Wrench (8mm). Then remove the upper hinge.

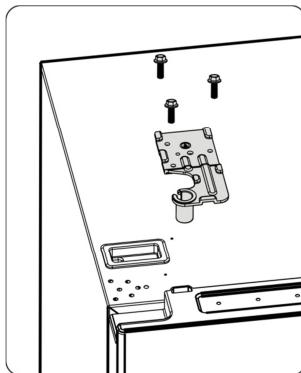

4. Open the freezer door for a small angle, then lift it up with both hands and take it off.  
(Be careful of racks while remove the door.)

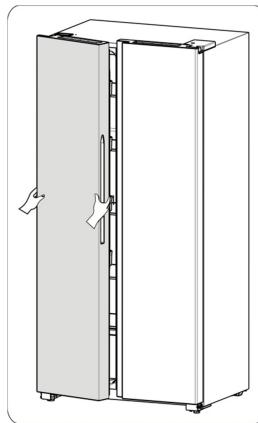


5. Remove all shelves and drawers inside the appliance. Tip the refrigerator backwards, remove the screws fixed on the hinge with a Wrench. Then remove the lower hinge.

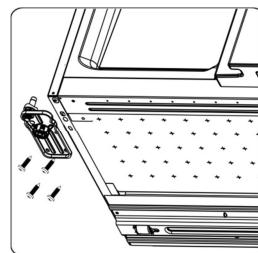

#### Re-attach the door

You could re-attach the door in reverse order of disassembling the door.

## Description of the appliance (Only for some products)

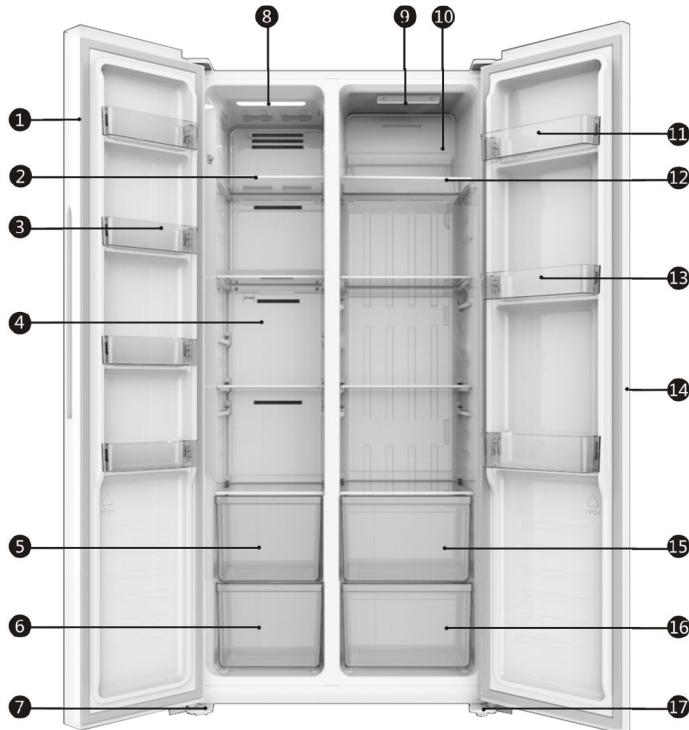


- |                                |                                  |
|--------------------------------|----------------------------------|
| 1. Freezer door                | 9. Display panel and LED light   |
| 2. Freezer glass shelf         | 10. Fridge wind channel part     |
| 3. Freezer rack                | 11. Upper fridge rack            |
| 4. Freezer wind channel part   | 12. Fridge glass shelf           |
| 5. Freezer drawer (optional)   | 13. Fridge rack                  |
| 6. Freezer drawer              | 14. Fridge door                  |
| 7. Left adjustable bottom feet | 15. Crisper (optional)           |
| 8. Freezer LED light           | 16. Fruit and vegetable crisper  |
|                                | 17. Right adjustable bottom feet |

### Note !

- Due to unceasing modification of our products, your refrigerator may be slightly different from this instruction manual, but its functions and using methods remain the same.
- To get the best energy efficiency of this product, please place all shelves, drawers and baskets on their original position as the illustration above.

## Description of the appliance (Only for some products)

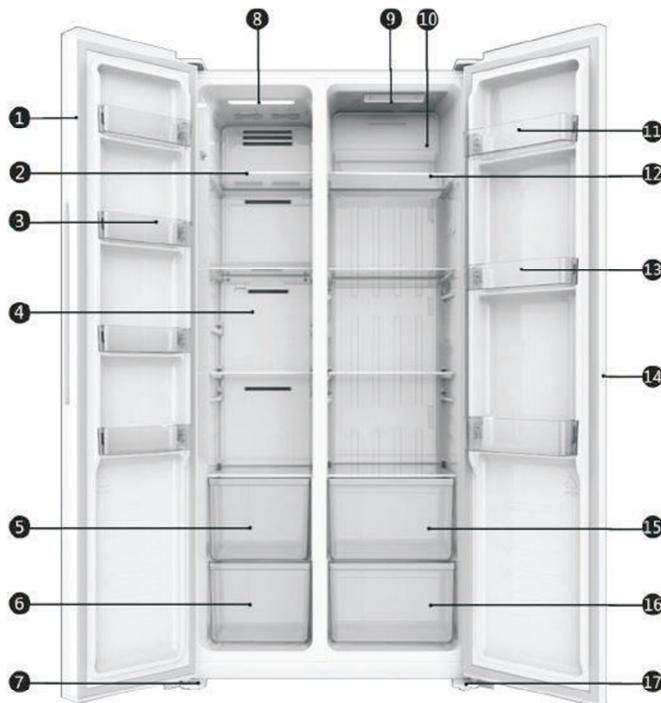

1. Freezer door

2. Freezer glass shelf

3. Freezer rack

4. Freezer wind channel part

5. Freezer drawer (optional)

6. Freezer drawer

7. Left adjustable bottom feet

8. FreezerLED light

9. Fridge LED light

10. Fridge wind channel part

11. Upper fridge rack

12. Fridge glass shelf

13. Fridge rack

14. Fridge door

15. Fruit and vegetable crisper (optional)

16. Fruit and vegetable crisper

17. Right adjustable bottom feet


### Note!

- Due to unceasing modification of our products, your refrigerator may be slightly different from this instruction manual, but its functions and using methods remain the same.

- To get the best energy efficiency of this product, please place all shelves, drawers and baskets on their original position as the illustration above.

## Display Controls (Only for some products)

Use your appliance according to the following control regulations, your appliance has the corresponding functions as the display panels showed in the pictures below.

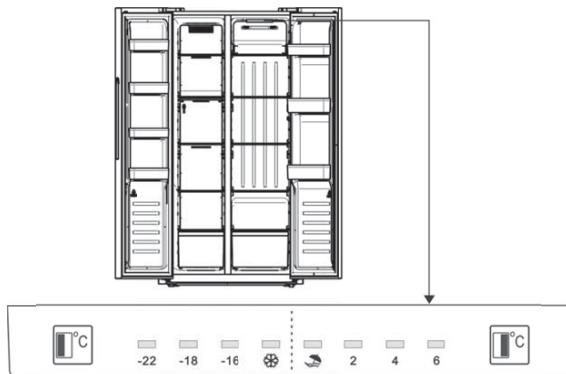

### Controlling the temperature

For optimum food preservation, we recommend that when you start your refrigerator for the first time, the temperature for the refrigerator is set to 4°C and the freezer to -18°C. If you want to change the temperature, follow the instructions below.

 
**NOTE:** High temperature setting will accelerate food waste.

**Caution!** When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment may vary from the temperature values displayed on the panel, depending on how much food you store and where you place them. Ambient temperature may also affect the actual temperature inside the appliance.

#### 1. Fridge ( °C )


Press "Fridge" to set fridge temperature between 2°C and 6°C as needed, and display panel will display corresponding

values according to the following sequence.



#### 2. Freezer ( °C )

 Press "Freezer" to set freezer temperature between -16°C and -22°C as needed, and the display panel will display corresponding value according to the following sequence.



#### 3. Mode

##### Holiday ( )

If you are going to be away for a long period of time, you can activate this function.

**Important!** Do not store any food in the fridge during this time.

##### Super Freeze.( )

Super Freeze will quickly lower the temperature within the freezer so food will freeze faster. This can lock in the vitamins



and nutrients of fresh food and keep food fresh longer.

- In case of the maximum amount of food to be frozen, please wait about 24 h.
- Super freeze automatically switches off

after 52 hours and after 52 hours, the freezer temperature setting will revert back to the previous setting.

## Display Controls (Only for some products)

Use your appliance according to the following control regulations, your appliance has the corresponding functions as the display panels showed in the pictures below.

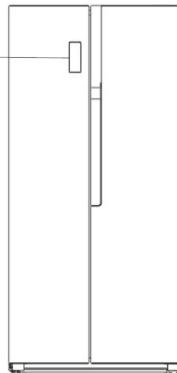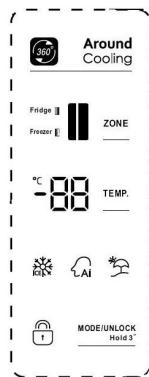

### Controlling the temperature

For optimum food preservation, we recommend that when you start your refrigerator for the first time, the temperature for the refrigerator is set to 5°C and the freezer to -18°C. If you want to change the temperature, follow the instructions below.

**NOTE:** High temperature setting will accelerate food waste.

**Caution!** When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment may vary from the temperature values displayed on the panel, depending on how much food you store and where you place them. Ambient temperature may also affect the actual temperature inside the appliance.

### Unlock

When the appliance is powered on for the first time, the backlighting of the icons on display panel starts working. If no buttons have been pressed and the doors are closed, the backlighting will turn off after 60 seconds.

All the buttons are locked if the icon " MODE/UNLOCK " is illuminated, press the " Hold 3" button for 3 seconds to unlock them. And it will be locked itself after 20 seconds no pressing any button.

### Mode Selection

You can select " " " " three modes by pressing the " Hold 3" button in the unlock state. And it will be selected after 10 seconds no pressing any button.

#### 1. Super Freeze( )

Super Freeze will quickly lower the temperature within the freezer so food will freeze faster. This can lock in the vitamins and nutrients of fresh food and keep food fresh longer.

- When the function is activated, the temperature of the freezer is automatically switched to -24°C.
- In case of the maximum amount of food to be frozen, please wait about 24 h.
- Super freeze automatically switches off after 52 hours and after 52 hours, the freezer temperature setting will revert back

to the previous setting.

## 2. Artificial Intelligence()

- When the function is selected, the temperature of the appliance is automatically adjusted.
- When the Artificial Intelligence function is activated, the temperature of the fridge is automatically switched to 5°C and the freezer to -18°C.

## 3. Holiday()

If you are going to be away for a long period of time, you can activate this function. When the function is activated, the temperature of the fridge is automatically switched to 15°C and the freezer to -18°C.

**Important!** Do not store any food in the fridge during this time.

 
### Temperature setting

- You should choose to control Fridge() temperature or Freezer() temperature by pressing the "ZONE" button in unlock state. The corresponding icon of the selected compartment will flash, and the other one will stay on.

- You can press the "TEMP." button to control the Fridge temperature when the corresponding icon() flashes. When you press the button continuously, the temperature will be set as the following sequence.



- You can press the "TEMP." button to control the Freezer temperature when the corresponding icon() flashes. When you press the button continuously, the temperature will be set as the following sequence.



### Door Alarm

- When the door of fridge or freezer has been opened for over 2 minutes, the door alarm will sound and display "" on the display panel. In case of door alarm, buzzer will sound 3 times every 1 minute and "" display all the time, it will stop alarming automatically after 8 minutes.

## Using your appliance

This section tells you how to use most of the useful features. We recommend that you read through them carefully before using the appliance. It may be different depending on the model

### Using your refrigerator compartment

The refrigerator compartment is suitable for storage of vegetables and fruit. Food inside should be packed to store in order to avoid losing moisture or flavor permeating into other foods.

 
### Using the freezer compartment

The freezer compartment is suitable for storage of food which needs to be frozen, including meat, fish, ice cream, etc..

**Caution!** Never close the door while the shelves and/or drawers are extended. It may damage both them and the refrigerator.

### Glass shelves and Door racks

The glass shelves and door racks are suitable for the storage of eggs, canned liquid, bottled drinks and packed food. They can be placed at different heights according to your need. But do not place too many heavy things in racks. Before you lift up the door shelf vertically, please take the food out.



**Note:** All the door racks and shelves can

be taken out to be cleaned.

When you remove the shelves, gently pull them forward until the shelf comes clear of the shelf guides.

When you return the shelves, make sure there is no obstacle behind and gently push the shelf back into the position.

### Drawers

These are suitable for storage of fruits and vegetables. And it can be taken out to be cleaned.

To take them out, open the door to the final location first. Then pull out the drawer and tilt up the front of the drawer after moving slightly in the direction.

## Cleaning and care

For hygienic reasons the appliance (including exterior and interior accessories) should be cleaned regularly at least every two months.


#### Caution!

The appliance must not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains socket.

#### Exterior cleaning

To maintain good appearance of your appliance, you should clean it regularly.

- Spray water onto the cleaning cloth instead of spraying directly on the surface of the appliance. This helps ensure an even distribution of moisture to the surface.
- Clean the doors, handles and cabinet surfaces with a mild detergent and then wiped dry with a soft cloth.

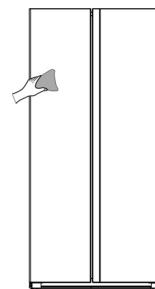


#### Caution!

- Don't use sharp objects as they are likely to scratch the surface.
- Don't use Thinner, Car detergent, Clorox, ethereal oil, abrasive cleansers or organic solvent such as Benzene for cleaning. They may damage the surface of the appliance and may cause fire.

#### Interior cleaning

You should clean the appliance interior regularly. It will be easier to clean when food stocks are low. Wipe the inside of the fridge freezer with a weak solution of bicarbonate of soda, and then rinse with warm water using a wrung-out sponge or cloth. Wipe completely dry before

replacing the shelves and baskets. Thoroughly dry all surfaces and removable parts before putting them back into place.

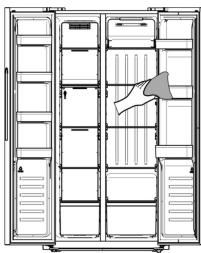


Although this appliance automatically defrosts, a layer of frost may occur on the freezer compartment's interior walls if the freezer door is opened frequently or kept open too long. If the frost is too thick, choose a time when the freezer is nearly empty and proceed as follow:

1. Remove existing food and accessories baskets, unplug the appliance from the mains power and leave the doors open. Ventilate the room thoroughly to accelerate the process.

2. When defrosting is completed, clean your freezer as described above.

3. **The gaps beside the freezer wind channel part are difficult to clean by wipe. You can use a pressure sprayer to help you clean. Spray weak solution of bicarbonate of soda firstly, and then rinse with warm water. Wipe completely dry after clean.**

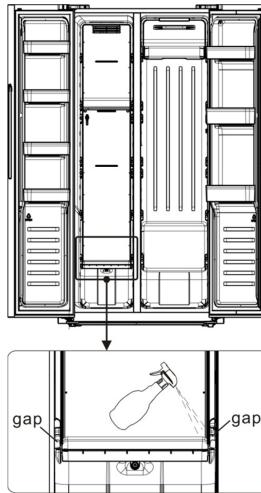


#### **Warning!**

Do not use sharp objects to remove frost from the freezer compartment. Only after the interior is completely dry should the appliance be switched back on and plugged back into the mains socket.

#### **Door seals cleaning**

Take care to keep door seals clean. Sticky food and drinks can cause seals to stick to the cabinet and tear when you open the door. Wash seal with a mild detergent and warm water. Rinse and dry it thoroughly after cleaning.

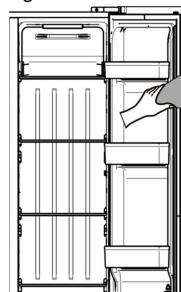

**Caution!** Only after the door seals are completely dry should the appliance be powered on

### **Replacing the LED light:**

Warning: The LED light must not be replaced by the user! If the LED light is damaged, contact the customer helpline for assistance. To replace the LED light, the below steps can be followed:

1. Unplug your appliance.

2. Remove light cover by pushing up and out.
3. Hold the LED cover with one hand and pull it with the other hand while pressing the connector latch.
4. Replace LED light and snap it correctly in place.

## **Helpful hints and tips**

### **Energy saving tips**

We recommend that you follow the tips below to save energy.

- Try to avoid keeping the door open for long periods in order to conserve energy.
- Ensure the appliance is away from any sources of heat (Direct sunlight, electric oven or cooker etc)
- Don't set the temperature colder than necessary.
- Don't store warm food or evaporating liquid in the appliance.
- Place the appliance in a well ventilated, humidity free, room. Please refer to Installing your new appliance chapter.
- If the diagram shows the correct combination for the drawers, crisper and shelves, do not adjust the combination as this is designed to be the most energy efficient configuration.

### **Hints for fresh food refrigeration**

- Do not place hot food directly into the fridge or freezer, the internal temperature will increase resulting in the compressor having to work harder and will consume more energy.
- Do cover or wrap the food, particularly if it has a strong flavor.
- Place food properly so that air can circulate freely around it.

### **Hints for refrigeration**

- Meat (All Types) Wrap in polythene food:

wrap and place on the glass shelf above the vegetable drawer. Always follow food storage times and use by dates suggested by manufacturers.

• Cooked food, cold dishes, etc.: They should be covered and may be placed on any shelf.

• Fruit and vegetables: They should be stored in the special drawer provided.

• Butter and cheese: Should be wrapped in airtight foil or plastic film wrap.

• Milk bottles: Should have a lid and be stored in the door racks.

### **Hints for freezing**

- When first starting-up or after a period out of use, let the appliance run at least 2 hours on the higher settings before putting food in the compartment.
- Prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible to subsequently thaw only the quantity required.
- Wrap up the food in aluminum foil or polyethylene food wraps which are airtight,
- Do not allow fresh, unfrozen food to touch the food which is already frozen to avoid temperature rise of the latter.
- Iced products, if consumed immediately after removal from the freezer

compartment, will probably cause frost burns to the skin.

• It is recommended to label and date each frozen package in order to keep track of the storage time.

#### Hints for the storage of frozen food

- Ensure that frozen food has been stored correctly by the food retailer
- Once defrosted, food will deteriorate rapidly and should not be re-frozen. Do not exceed the storage period indicated by the

food manufacturer.

#### Switching off your appliance

If the appliance needs to be switched off for an extended period, the following steps should be taken prevent mould on the appliance.

1. Remove all food.
2. Remove the power plug from the mains socket.
3. Clean and dry the interior thoroughly.
4. Ensure that all the doors are wedged open slightly to allow air to circulate.

## Troubleshooting

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service, please see below.

**Warning!** Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service engineer or the shop where you purchased the product.

**Warning!** A child entrapment warning statement is included in either the operating instructions or in a use and care manual provided with each refrigerator.

**DANGER:** Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

Problem	Possible cause & Solution
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	Check the fuse or circuit of your power supply, replace if necessary.
	The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.
	It is normal that the freezer is not operating during the defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
Odours from the compartments	The interior may need to be cleaned Some food, containers or wrapping cause odours.
Noise from the appliance	The sounds below are quite normal: •Compressor running noises.

	<ul style="list-style-type: none"> <li>• Air movement noise from the small fan motor in the freezer compartment or other compartments.</li> <li>• Gurgling sound similar to water boiling.</li> <li>• Popping noise during automatic defrosting.</li> <li>• Clicking noise before the compressor starts.</li> <li>• Clicking noise when you get the water.</li> <li>• The motor running noises when you get the ice.</li> </ul> <p>Other unusual noises are due to the reasons below and may need you to check and take action:</p> <p>The cabinet is not level.</p> <p>The back of appliance touches the wall.</p> <p>Bottles or containers fallen or rolling.</p>
The motor runs continuously	<p>It is normal to frequently hear the sound of the motor, it will need to run more when in following circumstances:</p> <ul style="list-style-type: none"> <li>• Temperature setting is set colder than necessary</li> <li>• Large quantity of warm food has recently been stored within the appliance.</li> <li>• The temperature outside the appliance is too high.</li> <li>• Doors are kept open too long or too often.</li> <li>• After your installing the appliance or it has been switched off for a long time.</li> </ul>
A layer of frost occurs in the compartment	Check that the air outlets are not blocked by food and ensure food is placed within the appliance to allow sufficient ventilation. Ensure that door is fully closed. To remove the frost, please refer to the “Cleaning and care” chapter.
Temperature inside is too warm	You may have left the doors open too long or too frequently; or the doors are kept open by some obstacle; or the appliance is located with insufficient clearance at the sides, back and top
Temperature inside is too cold	Increase the temperature by following the “Display controls” chapter.
Doors can't be closed easily	Check whether the top of the refrigerator is tilted back by 10-15mm to allow the doors to self close, or if something inside is preventing the doors from closing.
The light is not working	<ul style="list-style-type: none"> <li>• The LED light may be damaged. Refer to replace LED lights in cleaning and care chapter.</li> <li>• The control systems has disabled the lights due to the door being kept open too long, close and reopen the door to reactivate the lights.</li> </ul>
Hear water bubbling in the refrigerator	This is normal. The bubbling comes from the refrigerant coolant liquid circulating through the refrigerator.

## Disposal of the appliance

It is prohibited to dispose of this appliance as household waste.

### Packaging materials

Packaging materials with the recycle symbol are recyclable. Dispose of the packaging into a suitable waste collection container to recycle it.

### Before disposal of the appliance

1. Pull out the mains plug from the mains socket.
2. Cut off the power cord and discard with the mains plug

**Warning!** Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.

	<b>Correct Disposal of this product</b>
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

To avoid contamination of food, please respect the following instructions

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making icecream and making ice cubes.
- One-, two- and three-star compartments are not suitable for the freezing of fresh food.

Order	Compartments TYPE	Target storage temp.[°C]	Appropriate food
1	Fridge	+2 ~ +8	Eggs, cooked food, packaged food, fruits and vegetables, dairy products, cakes, drinks and other foods are not suitable for freezing.
2	(***)*-Freezer	≤ -18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), suitable for frozen fresh food.
3	***-Freezer	≤ -18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), are not suitable for frozen fresh food.
4	**-Freezer	≤ -12	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 2 months, the longer the storage time, the worse the taste and nutrition), are not suitable for frozen fresh food.
5	*-Freezer	≤ -6	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 1 months, the longer the storage time, the worse the taste and nutrition), are not suitable for frozen fresh food.
6	0-star	-6 ~ 0	Fresh pork, beef, fish, chicken, some packaged processed foods, etc. (Recommended to eat within the same day, preferably no more than 3 days). Partially encapsulated processed foods (non-freezable foods)
7	Chill	-2 ~ +3	Fresh/frozen pork, beef, chicken, freshwater aquatic products, etc.(7 days below 0 °C and above 0 °C is recommended for consumption within that day, preferably no more than 2 days). Seafood (less than 0 for 15 days, it is not recommended to store above 0 °C)

8	Fresh Food	0 ~ +4	Fresh pork, beef, fish, chicken, cooked food, etc. (Recommended to eat within the same day, preferably no more than 3 days)
9	Wine	+5 ~ +20	red wine, white wine, sparkling wine etc.

Note: please store different foods according to the compartments or target storage temperature of your purchased products.

- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

**Water dispenser cleaning (special for water dispenser products):**

- Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days.

**WARNING!** Food needs to be packed in bags before putting into the refrigerator, and liquids need to be packed in bottles or capped containers to avoid the problem that the product design structure is not easy to clean.

**Hisense**  
life reimagined

4186222

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Hisense, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanesenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljudazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/hisense-frizider-rr154d4aw2-akcija-cena/>