

Uputstvo za upotrebu

HISENSE side by side frižider RS677N4AIF

Hisense



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/hisense-side-by-side-frizider-rs677n4aif-akcija-cena/>

Hisense

life reimagined

UPUTSTVO ZA UPOTREBU

Pre upotrebe ovog uređaja, molimo vas da temeljno pročitate ovo uputstvo i da ga zadržite za slučaj potrebe.

Srpski

Sadržaj

Bezbednosne informacije i upozorenja 2	Čišćenje i nega..... 21
Instaliranje vašeg novog uređaja 7	Korisni saveti 22
Opis uređaja 9	Otklanjanje problema 23
Kontrole na displeju..... 12	Odlaganje uređaja 26
Upotreba uređaja 18	



Bezbednosne informacije i upozorenja

U cilju bezbedne i pravilne upotrebe, pre instaliranja i prve upotrebe uređaja, pažljivo pročitati ovo korisničko uputstvo, uključujući savete i upozorenja. Kako bi se izbegle nepotrebne greške i nezgode, važno je osigurati da su sve osobe koje koriste uređaj dobro upoznate sa njegovom upotrebom i sigurnosnim karakteristikama. Sačuvati ovo uputstvo i postarati se da ono prati uređaj ukoliko se uređaj premesti ili proda, kako bi se sve osobe koje će koristiti uređaj propisno informisale o njegovoj upotrebi i upoznale sa sigurnosnim napomenama.

Iz razloga zaštite zdravlja i imovine, primenjivati mere predostrožnosti iz ovog uputstva za upotrebu jer proizvođač neće biti odgovoran za štetu nastalu usled propusta.

Bezbednost dece i ostalih ugroženih kategorija ljudi

- U skladu sa EN standardom

Ovaj uređaj mogu koristiti deca starija od 8 godina i osobe sa fizičkim, čulnim ili mentalnim invaliditetom kao i neiskusne osobe i osobe koje nisu upoznate sa upotrebom ovog uređaja, ukoliko to čine pod nadzorom ili prema datim smernicama i na bezbedan način i ukoliko su svesne povezanih opasnosti. Deci nije dozvoljeno da se igraju sa uređajem. Čišćenje i korisničko održavanje uređaja ne smeju obavljati deca bez nadzora.

Deca uzrasta od 3 do 8 godina mogu stavljati i uzimati hranu i druge proizvode iz rashladnih uređaja.

U skladu sa IEC standardom

Ovaj uređaj nije predviđen za upotrebu od strane osoba (uključujući decu) sa smanjenim fizičkim, čulnim ili mentalnim sposobnostima, kao i neiskusnih osoba i osoba koje nisu upoznate sa upotrebom ovog uređaja, osim ukoliko to čine pod nadzorom ili prema smernicama za upotrebu uređaja datim od strane osobe odgovorne za njihovu bezbednost.

Deca bi trebalo da budu pod nadzorom kako bi se sprečilo njihovo igranje sa uređajem.

- Držati svu ambalažu van dohvata dece jer postoji rizik od gušenja.
- Ukoliko više nećete koristiti uređaj, isključiti ga iz struje, iseći strujni kabl (što bliže uređaju) i skinuti vrata, kako bi se sprečio strujni udar ili zatvaranje dece u frižideru tokom igre.
- Ukoliko se ovim uređajem, koji sadrži magnetne zaptivače na vratima, zameniti stariji uređaj koji sadrži ručicu sa oprugom na vratima ili poklopcu, obavezno onesposobiti ručicu sa oprugom pre odlaganja starog uređaja.

To će sprečiti zaglavljivanje deteta u starom frižideru.

Opšta bezbednost



- UPOZORENJE — Ovaj uređaj je predviđen za upotrebu u domaćinstvu i sličnim primenama kao što su
 - kuhinja za radno osoblje u prodavnicama, kancelarijama i drugim radnim okruženjima;
 - farmerske kućice i za klijente u hotelima, motelima i drugim postavkama stambenog tipa;
 - objektima koji nude noćenje sa doručkom;
 - ugostiteljske i slične nemaloprodajne primene.
- UPOZORENJE — Ne držati eksplozivne supstance kao što su boce sa aerosolima sa zapaljivom sadržinom u ovom uređaju.
- UPOZORENJE — Ukoliko je strujni kabl oštećen, mora se zameniti od strane proizvođača, njegovog ovlašćenog servisera ili drugih kvalifikovanih lica kako bi se izbegla opasnost.
- UPOZORENJE — Ukloniti sve prepreke sa otvora za ventilaciju u kućištu uređaja ili u objektu u kom se uređaj koristi.
- UPOZORENJE — Ne koristiti mehaničke uređaje ili druga sredstva za ubrzavanje procesa odmrzavanja, osim onih koje preporučuje proizvođač.
- UPOZORENJE — Čuvati kolo sa rashladnim sredstvom od oštećenja.
- UPOZORENJE — Ne koristiti električne uređaje unutar odeljaka za skladištenje hrane u uređaju, osim ukoliko su odobreni od strane proizvođača.
- UPOZORENJE — Rashladno sredstvo i izolacioni gas su zapaljivi. Pri odlaganju uređaja, to učiniti isključivo u ovlašćenom centru za odlaganje otpada. Ne izlagati otvorenom plamenu.
- UPOZORENJE — Pri pozicioniranju uređaja, uveriti se da strujni kabl nije zaglavljen ili oštećen.
- UPOZORENJE — Ne postavljati produžne kablove ili prenosive izvore napajanja sa zadnje strane uređaja.

Zamena lampica za osvetljenje

- UPOZORENJE — Lampice za osvetljenje se ne smeju menjati od strane korisnika! Ukoliko dođe do oštećenja lampica za osvetljenje, kontaktirati korisničku službu za pomoć.
Ovo upozorenje važi samo za frižidere koji su opremljeni lampicama za osvetljenje.

Rashladno sredstvo

Rashladni izobutan (R600a) se nalazi u rashladnom kolu uređaja i predstavlja prirodni gas sa visokim nivoom kompatibilnosti sa prirodnom sredinom, ali je zapaljiv. Tokom transporta i instalacije uređaja, sprečiti oštećivanje bilo koje komponente kola sa rashladnim sredstvom.

Rashladno sredstvo (R600a) je zapaljivo.

- **UPOZORENJE** — Frižideri sadrže rashladno sredstvo i gasove u izolaciji. Rashladno sredstvo i gasovi se moraju odlagati na stručan način jer mogu izazvati povrede očiju ili se mogu zapaliti. Uveriti se da cevi kola sa rashladnim sredstvom nisu oštećene pre pravilnog odlaganja.



- Simbol  predstavlja upozorenje i označava da su rashladna tečnost i izolacioni gas zapaljivi.

- **Upozorenje! Rizik od požara/zapaljivih materijala**

Ukoliko dođe do oštećenja kola sa rashladnim sredstvom:

- Izbegavati otvorene plamenove i izvore vatre.
- Dobro provetriti prostoriju u kojoj se nalazi uređaj.

Opasno je menjati specifikacije ili modifikovati ovaj proizvod na bilo koji način.

Bilo koje oštećenje kabla može izazvati kratak spoj, požar i/ili strujni udar.



Električna bezbednost

1. Strujni kabl se ne sme produžavati.
2. Uveriti se da utikač nije prignječen ili oštećen. Prignječen ili oštećen utikač se može pregrijati i izazvati požar.
3. Uveriti se da je omogućen pristup glavnom utikaču uređaja.
4. Ne vući glavni strujni kabl.
5. Ukoliko je utičnica labava, ne uključivati strujni utikač. Postoji rizik od strujnog udara ili požara.
6. Ne smete koristiti uređaj ukoliko fali poklopac unutrašnje lampice za osvetljenje.
7. Frižider se može napajati isključivo jednofaznom naizmjeničnom strujom od 220~240V/50Hz. Ukoliko je fluktuacija napona u mestu korisnika toliko velika da napon prelazi gorenavedeni opseg, iz razloga bezbednosti obavezno povezati automatski regulator naizmjeničnog napona, čija je snaga veća od 350W, na frižider. Frižider mora koristiti posebnu utičnicu a ne utičnicu koju deli sa drugim električnim uređajima. Žice za uzemljenje na utikaču frižidera i na utičnici se moraju poklapati.

Svakodnevna upotreba

- Ne držati zapaljive gasove ili tečnosti u uređaju. Postoji rizik od eksplozije.
- Ne koristiti bilo kakve električne uređaje unutar uređaja (npr. električne uređaje za pravljenje sladoleda, miksera, itd.)
- Prilikom isključivanja iz struje uvek najpre izvući utikač iz utičnice a ne vući za kabl.
- Ne postavljati vruće predmete blizu plastičnih komponenti ovog uređaja.
- Ne postavljati prehrambene proizvode direktno uz odvod za vazduh na zadnjoj strani.
- Prethodno upakovane zamrznute namirnice držati u skladu sa smernicama proizvođača za zamrznutu hranu.

- Preporuke za skladištenje koje je definisano proizvođač uređaja se moraju strogo poštovati. Videti relevantne smernice za skladištenje.
- Ne stavljati gazirana pića ili sokove u odeljak za zamrzavanje jer se stvara pritisak u boci, koji može izazvati njeno pucanje i oštećenje uređaja.
- Zamrznuta hrana može izazvati promrzline ukoliko se konzumira direktno iz odeljka za zamrzavanje.
- Ne izlagati uređaj direktnoj sunčevoj svetlosti.
- Držati upaljene sveće, lampe i ostale predmete sa otvorenim plamenom dalje od uređaja kako se uređaj ne bi zapalio.
- Uređaj je predviđen za držanje namirnica i/ili pića u normalnom domaćinstvu kao što je opisano u ovom uputstvu. Potrebno je voditi računa prilikom premeštanja uređaja jer je veoma težak.
- Ne uklanjati niti dodirivati predmete iz odeljka za zamrzavanje ukoliko su vam ruke vlažne/mokre, jer to može izazvati nagrizanje kože ili promrzline.
- Nikada ne koristiti osnovu, fijke, vrata, itd., za stajanje na njima ili kao oslonac.
- Zamrznuta hrana se ne sme ponovo zamrzavati nakon otapanja.
- Ne konzumirati ledene lizalice ili kockice leda direktno iz zamrzivača jer mogu izazvati promrzline u ustima i na usnama.
- Kako bi se izbeglo ispadanje predme i izazivanje fizičke povrede ili oštećenja uređaja, ne preopterećivati police na vratima niti stavljati previše hrane u fijke za održavanje svežine.
- Ovaj rashladni uređaj nije predviđen za upotrebu kao ugradni uređaj.

Oprez!

Nega i čišćenje

- Pre održavanja, isključiti uređaj i izvaditi glavni utikač iz utičnice.
- Ne čistiti uređaj metalnim predmetima, paročistačima, eteričnim uljima, organskim razređivačima ili abrazivnim sredstvima za čišćenje.
- Ne koristiti oštre predmete za uklanjanje leda iz uređaja. Koristiti plastični strugač.

Važno za instalaciju!

- U vezi sa električnim povezivanjem pažljivo pratiti smernice iz ovog uputstva. Otpakovati uređaj i proveriti da na njemu nema oštećenja.
- Ne povezivati uređaj ukoliko je oštećen. Sve moguće štete odmah prijaviti tamo gde ste kupili uređaj. U ovom slučaju zadržati ambalažu.
- Savetuje se da se sačeka najmanje četiri sata pre povezivanje uređaja kako bi se omogućilo vraćanje ulja u kompresor.
- Potrebno je obezbediti adekvatnu cirkulaciju vazduha oko uređaja, jer u suprotnom može doći do pregrevanja. Kako bi se postigla dovoljna ventilacija, pratiti smernice vezane za instalaciju.

- Gde je to moguće zadnja strana proizvoda ne bi trebalo da bude preblizu zida kako bi se izbeglo dodirivanje ili hvatanje za vruće delove (kompresor, kondenzator) kako bi se sprečio rizik od požara; poštovati smernice vezane za instalaciju.
- Uređaj se ne sme postavljati blizu radijatora ili šporeta.
- Uveriti se da je strujni utikač pristupačan nakon instaliranja uređaja.

Servis

- Sve električne radove koji su potrebni za servisiranje uređaja bi trebalo da obavi kvalifikovani električan ili stručno lice.
- Ovaj proizvod se mora servisirati od strane ovlašćenog servisa i moraju se koristiti isključivo originalni rezervni delovi.
 - 1) Ukoliko je uređaj Frost Free (sprečava formiranje leda).
 - 2) Ukoliko uređaj sadrži odeljak za zamrzavanje


Instaliranje vašeg novog uređaja

Pre prve upotrebe uređaja, potrebno je upoznati se sa sledećim savetima.

Kako bi se unapredila efikasnost rashladnog sistema i uštedela energija, neophodno je omogućiti dobru ventilaciju oko uređaja u svrhu disipacije toplote. Iz ovog razloga je potrebno ostaviti dovoljno slobodnog prostora oko frižidera.

Predlog: Savetuje se ostavljanje prostora od 50-70mm od zadnje strane do zida, najmanje 100mm od gornje strane, najmanje 100mm od bočnih strana do zida i slobodan prostor ispred uređaja kako bi se omogućilo otvaranje vrata do 135/150°.

Molimo pogledajte sledeće dijagrame.

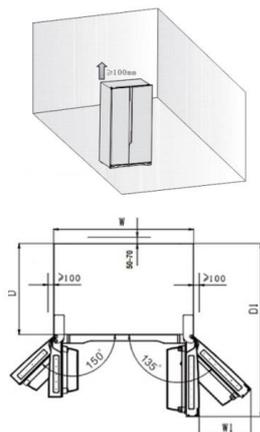

Potreban prostor (mm)

W	W1	D	D1
908	441,5	550	1096,5

Napomena:

• Ovaj uređaj dobro radi u klimatskoj klasi od SN do ST koje su prikazane u tabeli u nastavku. Možda neće raditi kako treba ukoliko se duže vreme ostavi na temperaturi višoj ili nižoj od prikazanog opsega.

Klimatska klasa	Temperatura sredine
SN	+10°C do +32°C
N	+16°C do +32°C

ST	16°C do +38°C
T	+16°C do +43°C

- Postavite vaš uređaj na suvo mesto kako bi se izbeglo oštećenje od vlage.
- Držati uređaj dalje od direktne sunčeve svetlosti, kiše ili mraza. Postaviti uređaj dalje od izvora toplote kao što su šporeti, kamini ili grejalice.

Nivelisanje uređaja




- Kako bi se obavilo pravilno nivelisanje i omogućila cirkulacija vazduha u donjem zadnjem delu uređaja, možda će biti neophodno podesiti nožice.

Mogu se podesiti ručno ili pomoću odgovarajućeg ključa

- Nakon pozicioniranja uređaja, molimo vas da podesite dve prednje nožice sa donje strane frižidera. Donja ivica nožica mora biti što bliža podlozi kako bi se sprečilo prevrtanje proizvoda nakon punjenja polica u vratima.
- Kako bi se omogućilo samostalno zatvaranje vrata, nagnuti gornji deo unazad za oko 10mm ili 0,5° okretanjem podesive nožice.
- Kada god želite da premestite uređaj, ne zaboravite da zavijete nožice kako bi uređaj mogao neometano da se kotrlja.

Nakon premeštanja ponovo obaviti instaliranje proizvoda.

Oprez! Roleri, koji nisu točkici, bi trebalo da se koriste isključivo za pomeranje napred ili nazad. Pomeranje frižidera u stranu može oštetiti vaš pod i rolere.

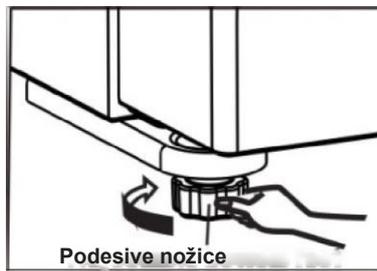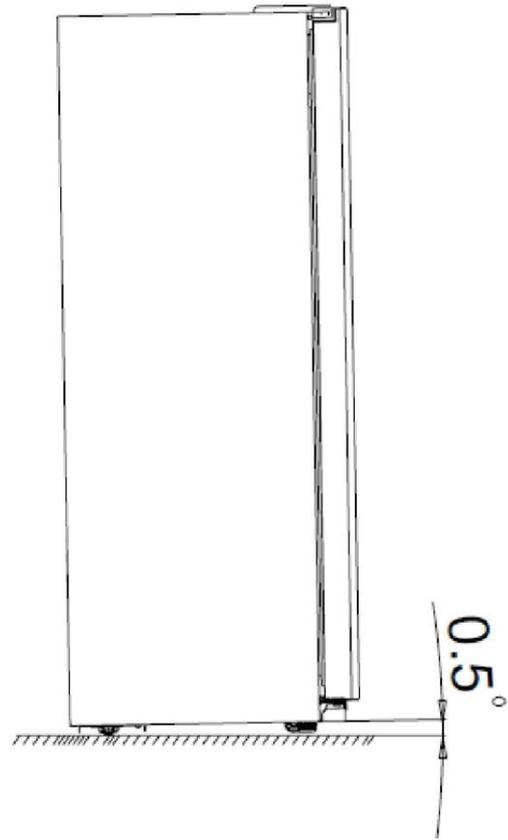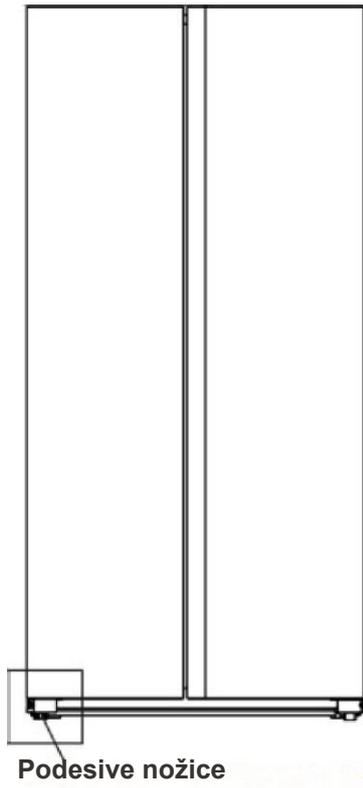

Opis uređaja

Izgled uređaja



- | | |
|---------------------------------------|--|
| 1. LED sijalica zamrzivača | 10. Polica frižidera |
| 2. Polica zamrzivača | 11. Kanal sa ventilacijom u frižideru |
| 3. Vrata zamrzivača | 12. Vrata frižidera |
| 4. Kanal sa ventilacijom u zamrzivaču | 13. Staklena polica frižidera |
| 5. Staklena polica zamrzivača | 14. Polica za jaja (unutra) |
| 6. Fijoka zamrzivača | 15. Fijoka za voće i povrće |
| 7. Fijoka zamrzivača | 16. Fijoka za održavanje svežine voća i povrća |
| 8. Leva podesiva nožica | 17. Desna podesiva nožica |
| 9. LED sijalica frižidera | |

Napomena!

Usled neprekidnog razvoja naših proizvoda, izgled vašeg frižidera se može donekle razlikovati od primera iz ovog uputstva, ali njegove funkcije i metode upotrebe ostaju isti.

• Kako bi se postigla najbolja energetska efikasnost ovog proizvoda, molimo vas da sve police i fijoke postavite u njihov predviđen položaj kao što je prikazano na ilustraciji iznad.

Izgled uređaja



- | | |
|---------------------------------------|---------------------------------------|
| 1. LED sijalica zamrzivača | 10. LED sijalica frižidera |
| 2. Polica zamrzivača | 11. Polica frižidera |
| 3. Vrata zamrzivača | 12. Kanal sa ventilacijom u frižideru |
| 4. Kanal sa ventilacijom u zamrzivaču | 13. Vrata frižidera |
| 5. Staklena polica zamrzivača | 14. Staklena polica frižidera |
| 6. Fijoka za led | 15. Polica za jaja (unutra) |
| 7. Fijoka zamrzivača | 16. Fijoka za voće i povrće |
| 8. Fijoka zamrzivača | 17. Fijoka za voće i povrće |
| 9. Leva podesiva nožica | 18. Desna podesiva nožica |

Napomena!

Usled neprekidnog razvoja naših proizvoda, izgled vašeg frižidera se može donekle razlikovati od primera iz ovog uputstva, ali njegove funkcije i metode upotrebe ostaju isti.

• Kako bi se postigla najbolja energetska efikasnost ovog proizvoda, molimo vas da sve police i fijoke postavite u njihov predviđen položaj kao što je prikazano na ilustraciji iznad.

Izgled uređaja



- | | |
|---------------------------------------|---------------------------------------|
| 1. LED sijalica zamrzivača | 10. Polica frižidera |
| 2. Polica | 11. Rezervoar |
| 3. Vrata zamrzivača | 12. Kanal sa ventilacijom u frižideru |
| 4. Kanal sa ventilacijom u zamrzivaču | 13. Vrata frižidera |
| 5. Staklena polica zamrzivača | 14. Staklena polica frižidera |
| 6. Fijoka zamrzivača | 15. Polica za jaja (unutra) |
| 7. Fijoka zamrzivača | 16. Fijoka za voće i povrće |
| 8. Leva podesiva nožica | 17. Fijoka za voće i povrće |
| 9. LED sijalica frižidera | 18. Desna podesiva nožica |

Napomena!


Usled neprekidnog razvoja naših proizvoda, izgled vašeg frižidera se može donekle razlikovati od primera iz ovog uputstva, ali njegove funkcije i metode upotrebe ostaju isti.

• Kako bi se postigla najbolja energetska efikasnost ovog proizvoda, molimo vas da sve police i fijke postavite u njihov predviđen položaj kao što je prikazano na ilustraciji iznad.

Kontrole na displeju (samo kod nekih proizvoda)

Uređaj koristiti pomoću opisanih kontrola. Vaš uređaj sadrži funkcije koje su prikazani na panelu displeja kao na slikama u nastavku.

Kontrola temperature

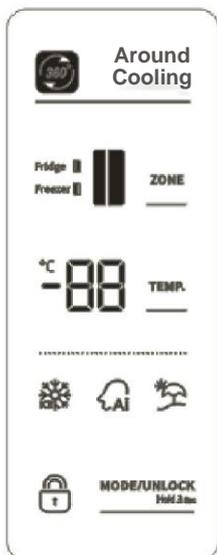

Za optimalno čuvanje hrane preporučujemo da kada prvi put uključite frižider, podesite temperaturu frižidera na 5°C a temperaturu zamrzivača na -18°C. Ukoliko želite da promenite temperaturu, pratite smernice date u nastavku.

Napomena:

Podešena visoka temperatura će ubrzati propadanje hrane.

Oprez! Prilikom podešavanja temperature, vi podešavate prosečnu temperaturu u kompletnoj komori frižidera. Temperature unutar svakog odeljka se mogu razlikovati od temperature prikazane na panelu, u zavisnosti od toga koliko hrane ima u frižideru i kako ste je rasporedili. Temperatura sredine takođe može uticati na stvarnu temperaturu u uređaju.

Otključavanje

Kada se uređaj uključi po prvi put, pozadina ikonice na panelu displeja će se aktivirati. Ukoliko nije pritisnuto nijedno dugme a vrata su zatvorena, pozadina će se 60 isključiti.

Svi tasteri su zaključani ukoliko ikonice "🔒" svetli, pritisnuti taster "MODE/UNLOCK Hold 3 sec",

MODE/UNLOCK
Hold 3 sec

3 sekunde za otključavanje. A zaključaće se sam nakon 20 sekundi ukoliko se ne pritisne nijedno dugme.

Odabir režima rada

Možete izabrati „❄️“, „AI“, „🌿“ tri režima rada pritiskom na taster "MODE/UNLOCK Hold 3 sec" u otključanom stanju. Automatski će se izabrati nakon 10 sekundi ukoliko se ne pritisne nijedno dugme.

1. Super Freeze (❄️) (super zamrzavanje)

Super Freeze će brzo spustiti temperaturu u zamrzivaču tako da će se hrana brže zamrznuti. To može zadržati sve vitamine i hranjive sastojke sveže hrane i sačuvati svežinu hrane duže vreme.

- Kada se funkcija aktivira, temperatura zamrzivača se automatski prebacuje na -24°C.
- Ukoliko je potrebno zamrznuti maksimalnu količinu hrane, sačekati oko 24h.
- Režim Super Freeze se automatski isključuje nakon 52 sata a zatim će se temperatura zamrzivača vratiti na prethodnu postavku.

2. Veštačka inteligencija (AI)

- Kada se funkcija izabere, temperatura uređaja će se automatski podesiti.
- Kada se aktivira funkcija veštačke inteligencije, temperatura frižidera se automatski podešava na 5°C a zamrzivača na -18°C.

3. Holiday 🌿 (godišnji odmor)

Ukoliko ćete biti odsutni duže vreme, možete aktivirati ovu funkciju.

Kada je funkcija aktivirana, temperatura zamrzivača se automatski podešava na 15°C a zamrzivača na -18°C.

Važno! Za to vreme ne stavljati bilo kakvu hranu u frižider.

Podešavanje temperature

- Za kontrolu temperature frižidera bi trebalo da izaberete () a za kontrolu temperature zamrzivača () pritiskom na taster "ZONA" u otključanom stanju. Odgovarajuća ikonica odabrane komore će treptati a druga će ostati uključena.

- Možete pritisnuti taster "TEMP." kako biste kontrolisali temperaturu frižidera kada odgovarajuća ikonica () trepti. Kada držite taster pritisnutim, temperatura će se podesiti prema sledećem redosledu.

5 → 4 → 3 → 2 → 8 → 7 → 6 (°C)




- Možete pritisnuti taster "TEMP." kako biste kontrolisali temperaturu zamrzivača kada odgovarajuća ikonica () trepti. Kada držite taster pritisnutim, temperatura će se podesiti prema sledećem redosledu.

Alarm za vrata

- Ukoliko su vrata frižidera otvorena duže od **2 minuta**, oglasiće se alarm za vrata. Zvučni signal će automatski prestati sa oglašavanjem nakon 10 minuta.

-18 → -19 → -20...-23 → -24 → -14 → -15 → -16 → -17 (°C)

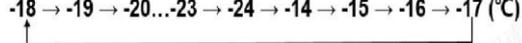


- Kako biste uštedeli energiju, molimo vas da izbegavati duže otvaranje vrata prilikom upotrebe uređaja. Alarm vrata se takođe može prekinuti zatvaranjem vrata.

Kontrole na displeju (samo kod nekih proizvoda)

Uređaj koristiti pomoću opisanih kontrola. Vaš uređaj sadrži funkcije koje su prikazani na panelu displeja kao na slikama u nastavku.

Kontrola temperature

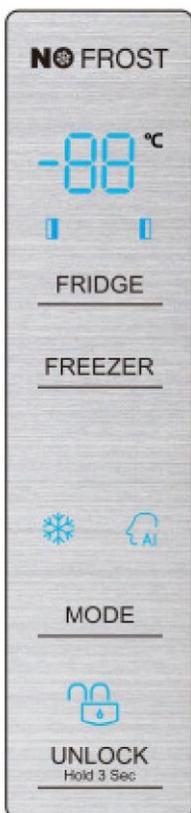

Za optimalno čuvanje hrane preporučujemo da kada prvi put uključite frižider, podesite temperaturu frižidera na 5°C a temperaturu zamrzivača na -18°C. Ukoliko želite da promenite temperaturu, pratite smernice date u nastavku.

Napomena: Podešena visoka temperatura će ubrzati propadanje hrane.

Oprez! Prilikom podešavanja temperature, vi podešavate prosečnu temperaturu u kompletnoj komori frižidera.

Temperature unutar svakog odeljka se mogu razlikovati od temperature prikazane na panelu, u zavisnosti od toga koliko hrane ima u frižideru i kako ste je rasporedili. Temperatura sredine takođe može uticati na stvarnu temperaturu u uređaju.

Otključavanje

Kada se uređaj uključi po prvi put, pozadina ikonice na panelu displeja će se aktivirati. Ukoliko nije pritisnuto nijedno dugme a vrata su zatvorena, pozadina će se 60 isključiti.

Svi tasteri su zaključani ukoliko ikonice "🔒" svetli, pritisnuti taster "UNLOCK Hold 3 Sec" 3 sekunde za otključavanje. A zaključaće se sam nakon 20 sekundi ukoliko se ne pritisne nijedno dugme.

Odabir režima rada

Možete izabrati „❄️“, „AI“ dva režima rada pritiskom tastera "MODE" u otključanom stanju.

Automatski će se izabrati nakon 10 sekundi ukoliko se ne pritisne nijedno dugme.

1. Super Freeze (❄️) (super zamrzavanje)

Super Freeze će brzo spustiti temperaturu u zamrzivaču tako da će se hrana brže zamrznuti. To može zadržati sve vitamine i hranljive sastojke sveže hrane i sačuvati svežinu hrane duže vreme.

- Kada se funkcija aktivira, temperatura zamrzivača se automatski prebacuje na -24°C.
- Ukoliko je potrebno zamrznuti maksimalnu količinu hrane, sačekati oko 24 časa.
- Režim Super Freeze se automatski isključuje nakon 52 sata a zatim će se temperatura zamrzivača vratiti na prethodnu postavku.

2. Veštačka inteligencija (AI)

- Kada se funkcija izabere, temperatura uređaja će se automatski podesiti.
- Kada se aktivira funkcija veštačke inteligencije, temperatura frižidera se automatski podešava na 5°C a zamrzivača na -18°C.

Podešavanje temperature

- Možete pritisnuti taster "FRIDGE" za kontrolu temperature frižidera kada odgovarajuća ikonice (📊) trepti. Kada istovremeno pritisnete taster, temperatura će se podesiti u skladu sa sledećim redosledom.

5 → 4 → 3 → 2 → 8 → 7 → 6 (°C)

• Možete pritisnuti taster „FREEZER“ za kontrolu temperature zamrzivača kada odgovarajuća ikonica () trepti.

Kada držite taster pritisnutim, temperatura će se podesiti prema sledećem redosledu.

-18 → -19 → -20...-23 → -24 → -14 → -15 → -16 → -17 (°C)


Alarm za vrata

- Ukoliko su vrata frižidera otvorena duže od **2 minuta**, oglasiće se alarm za vrata. Zvučni signal će automatski prestati sa oglašavanjem nakon 10 minuta.
- Kako biste uštedeli energiju, molimo vas da izbegavati duže otvaranje vrata prilikom upotrebe uređaja. Alarm vrata se takođe može prekinuti zatvaranjem vrata.

Kontrole na displeju (samo kod nekih proizvoda)

Koristiti uređaj pomoću opisanih kontrola. Vaš uređaj sadrži odgovarajuće funkcije i režime rada koji su prikazani na upravljačkim panelima na slikama u nastavku. Kada se uređaj uključuje prvi put, pozadina ikonice na panelu displeja će svetleti 3 sekunde, zatim će panel displeja početi da radi. Ukoliko se ne pritisne nijedan taster a vrata frižidera se otvore/zatvore, pozadinsko svetlo će se isključiti nakon 1 minuta.

backlighting will turn off after 1minutes.

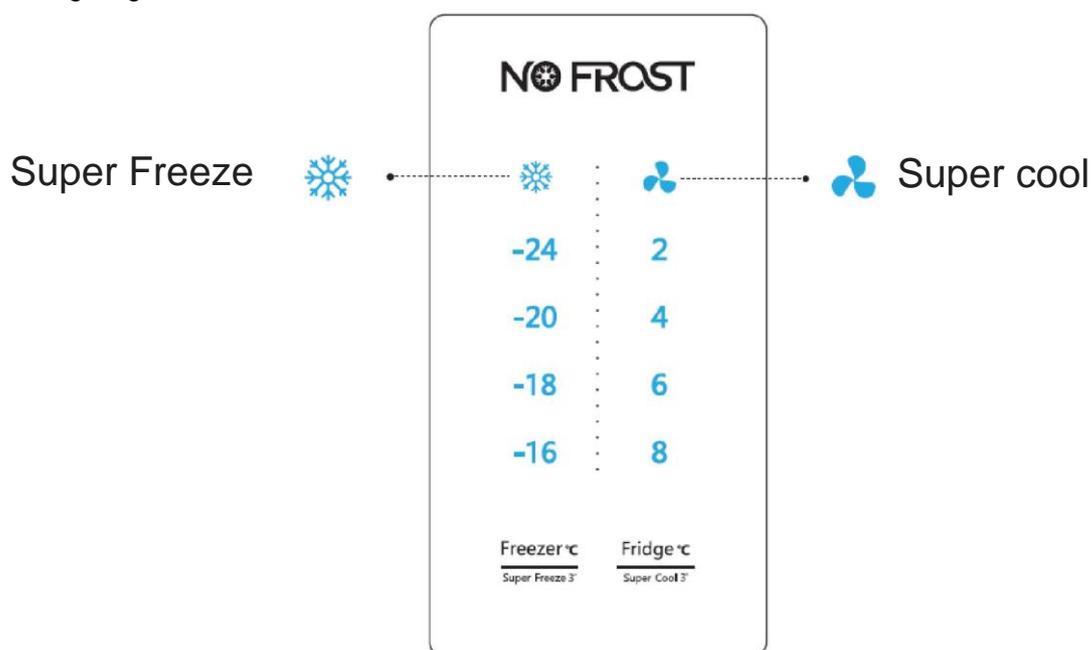

Kontrola temperature


Preporučujemo da kada prvi put uključite frižider, podesite temperaturu frižidera na 4°C a temperaturu zamrzivača na -18°C. Ukoliko želite da promenite temperaturu, pratite smernice date u nastavku.

Opres! Prilikom podešavanja temperature, vi podešavate prosečnu temperaturu u kompletnoj komori frižidera. Temperature unutar svakog odeljka se mogu razlikovati od temperature prikazane na panelu, u zavisnosti od toga koliko hrane ima u frižideru i kako ste je rasporedili. Temperatura sredine takođe može uticati na stvarnu temperaturu u uređaju.

1. Zamrzivač


Pritisnuti sredinu tastera , za podešavanje temperature zamrzivača na vrednost između

-16°C i -24°C, prema vašim preferencijama, a indikator temperature zamrzivača će prikazati odgovarajuću vrednost prema sledećem redosledu.

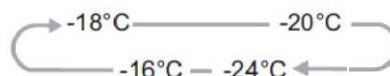

2. Frižider

Pritisnuti sredinu tastera , za podešavanje temperature frižidera na vrednost između 8°C i 2°C, a indikator temperature frižidera će prikazati odgovarajuću vrednost prema sledećem redosledu.

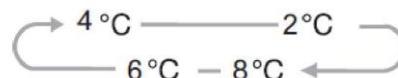

1. Super Freeze

 Super Freeze može brzo spustiti temperaturu i zamrznuti vašu

hranu znatno brže nego obično.

- Ova opcija takođe pomaže da se duže vreme sačuvaju vitamini i hranljivi sastojci sveže hrane.

- Pritisnuti srednji deo tastera  3 sekunde kako bi se aktivirala funkcija super freeze (super zamrzavanje). Lampica  će zasvetleti a indikator temperature zamrzivača će prikazati -24°C.

- Super freeze se automatski isključuje nakon 52 sata.

- Kada je funkcija Super Freeze uključena možete je isključiti pritiskom na srednji deo tastera  i podešena temperatura zamrzivača će se vratiti nazad na prethodnu postavku.

Napomena: Kada izaberete funkciju Super

Freeze, uverite se da u komori zamrzivača nema flaširanih ili konzerviranih pića (naročito gaziranih pića). Flaše i konzerve mogu eksplodirati.



4. Super Cool

Funkcija Super Cool može brže ohladiti hranu i duže održati svežinu hrane.

Pritisnuti sredinu tastera  3 sekunde za aktiviranje ove funkcije. Lampica  će se upaliti a indikator temperature frižidera će pokazati 2°C. Super Cool funkcija se automatski isključuje nakon 3 sata.

Kada je Super Cool funkcija uključena, možete je isključiti pritiskom na sredinu tastera  i podešena temperatura frižidera će se vratiti na prethodnu vrednost.


Upotreba vašeg uređaja

Ovaj odeljak opisuje kako ćete koristiti većinu korisnih opcija. Preporučujemo da ih pažljivo pročitate pre upotrebe uređaja. Mogu se razlikovati u zavisnosti od modela.

1. Podešavanje vrata

Kada primetite da vrata nisu dobro nivelisana, možete podesiti vrata pomoću odvijača.

Kada su vrata zamrzivača viša od vrata frižidera. Najpre može pomoću odvijača okrenuti vijak suprotno od smera kazaljke na satu na donjoj šarki, što će podići vrata. Zatim pomoću odvijača pričvrstiti navrtku.

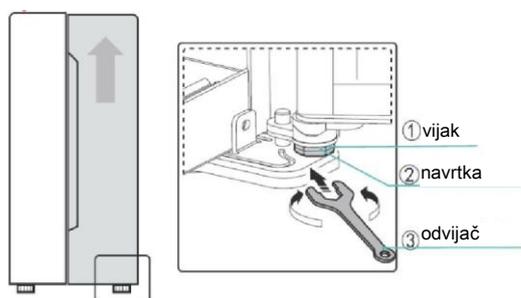

2. Upotreba komore frižidera

Komora frižidera je podesna za čuvanje povrća i voća. Hrana u komori bi trebalo da se upakuje kako bi se sprečilo njeno isušivanje ili da hrana ne bi upila jake mirise drugih namirnica.

Opres! Nikada ne zatvarati vrata frižidera dok su police i/ili fijke izvučene. To može oštetiti i fijke i frižider.


Staklene police i police za vrata

Staklene police i police za vrata su podesne za držanje jaja, konzerviranih tečnosti, flaširanih pića i upakovane hrane.

Mogu se premeštati na vratima prema vašim potrebama. Ali ne stavljati previše teških stvari u police. Pre nego što podignete policu za vrata vertikalno, molimo vas da izvadite namirnice iz nje.

Kada uklonite police, polako ih izvucite ka napred sve dok se policica ne izvadi u potpunosti iz vođica police.

Kada vratite police, uverite se da nema

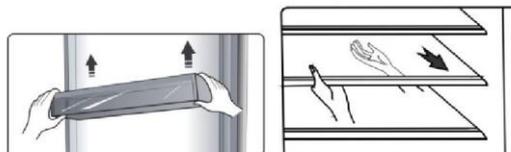

nikakvih prepreka sa zadnje strane i polako gurnite policu nazad u njen položaj.

Napomena: Sve police iz vrata se mogu izvaditi kako bi se očistile.

Fijoke

Podesne su za čuvanje voća i povrća. Mogu se izvaditi kako bi se očistile.

Kako biste ih izvadili najpre otvorite vrata do kraja. Zatim izvucite fijoku tako što ćete podići prednji deo fijke i povući horizontalno.

3. Upotreba komore zamrzivača

Komora zamrzivača je podesna za držanje hrane koja se mora zalediti, uključujući meso, ribu, sladoled, itd.

Opres! Nikada ne zatvarati vrata dok su police i/ili fijke izvučene. To može oštetiti i fijke i frižider.

4. Upotreba fijke za led (isključivo kod modela sa fijkom za led)

Fijoka za led je samostalan deo koji se može izvaditi iz komore zamrzivača.

Upotreba fijke za led

- Izvaditi fijoku za led koja se nalazi na platformi, zatim sipati vodu tako da nivo vode ne premaši liniju za maksimum.
- Vratiti punu fijoku za led u komoru zamrzivača.

- Kada se kockice leda formiraju okrenuti dugme u smeru kazaljke na satu i led će ispasti u fijoku za led ispod.

- Kockice leda se mogu čuvati u fijoci za led a ukoliko vam trebaju, možete izvući fijoku za led i uzeti ih.



sipanje vode



uzimanje leda

Ukoliko fijoku za led koristite po prvi put ili ukoliko nije korišćena duže vreme, obavezno je očistite pre upotrebe.



5. Uređaj za točenje vode (isključivo kod modela sa uređajem za točenje vode)

Uređaj za točenje vode, koji se nalazi u vratima frižidera, služi za čuvanje pijaće vode. Pomoću ovog uređaja lako možete dobiti hladnu vodu bez otvaranja frižidera. Potrebno je da se upoznate sa sledećim savetima.

• Pre upotrebe

Pre prve upotrebe uređaja, potrebno je pratiti sledeće korake.


1. Čvrsto držati rezervoar za vodu sa obe strane, zatim ga podići mrdajući gore dole.
2. Odšrafiti glavu, zatim očistiti glavu i unutrašnjost rezervoara za vodu.

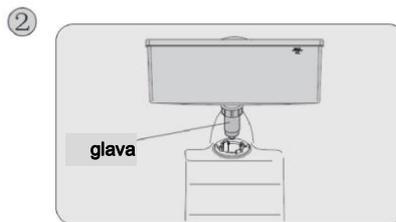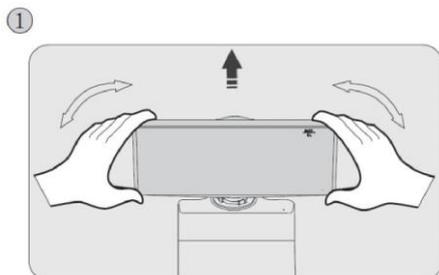

• Montaža

Pre montaže, molimo vas da ispraznite vodu iz rezervoara i proverite da li je podloška okrenuta ili ne.

1. Ubaciti glavu u otvor.
2. Postaviti rezervoar na vođice na vratima.
3. Pritisnuti rezervoar sa obe strane.
4. Kada čujete klik, to znači da je montaža završena.

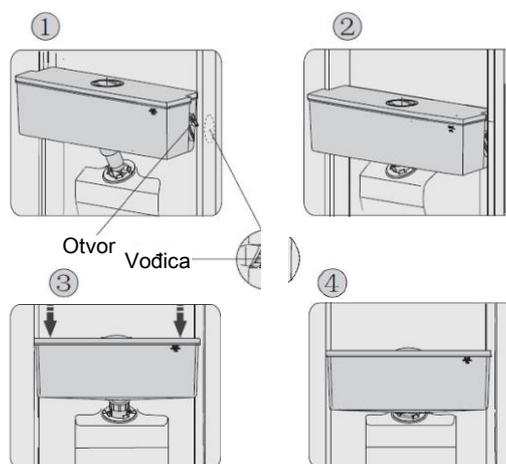

Upozorenje!

1. Voditi računa da se glava ne pritiska;
2. Prilikom montaže rezervoara za vodu, obavezno prvo ubaciti glavu u otvor;

• Punjenje vodom

Pre nego što sipate pijaću vodu u rezervoar za vodu, uveriti se da je rezervoar za vodu stabilan i u odgovarajućem položaju.


Opres!

Napunite do 3l vode (predloženo) i nikako iznad nivoa.

U suprotnom može doći do preliivanja kada se poklopac zatvori.

Preporučujemo da vodu sipate na sledeći način.

1. Skinuti mali poklopac i napuniti vodu preko otvora na velikom poklopcu.
2. Ukloniti poklopac rezervoara a zatim direktno sipati vodu unutra.

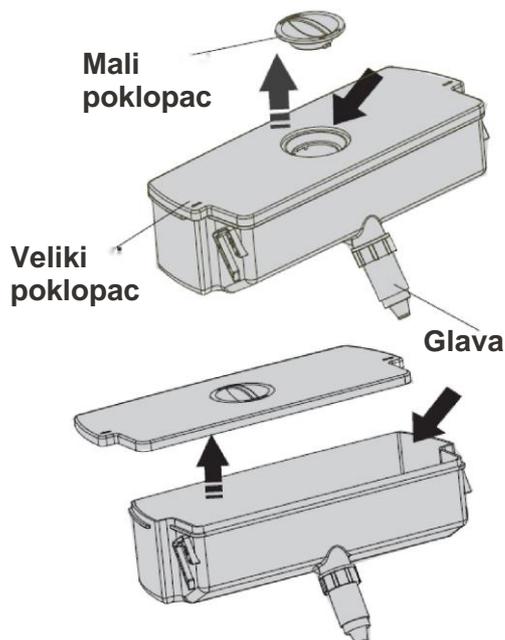

Upozorenje!


Ne dodirivati druge delove uređaja prilikom sipanja vode, to može izazvati curenje vode.

• Točenje vode

1. Uveriti se da je poklopac rezervoara za vodu postavljen.
2. Zatvoriti vrata frižidera i proveriti uređaj za točenje.

• Sipanje vode

Trebalo bi da koristite odgovarajuću čašu u koju ćete sipati vodu ispod uređaja za točenje.

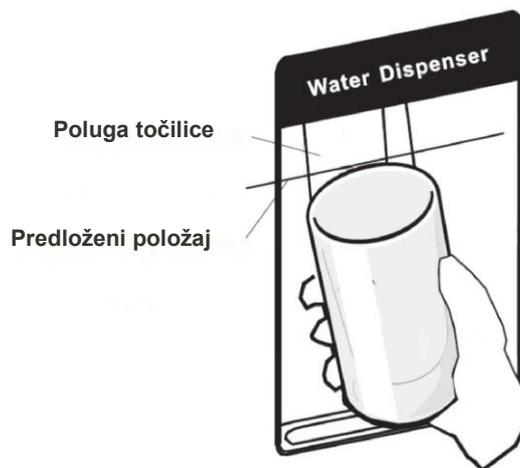

Upozorenje!

Ne gurati polugu uređaja za točenje vode unapred bez šolje, jer to može izazvati curenje vode iz uređaja za točenje.

• Čišćenje

1. Pažljivo izvaditi rezervoar iz vrata pa zatim vodom isprati rezervoar, poklopac i glavu.
2. Nakon uspešnog čišćenja uređaja, potrebno je psušiti ga prirodnim sušenjem ili pomoću fena za kosu.

Ukoliko ste koristili uređaj za točenje vode puno puta, može doći do kapanja vode iz čaše na pod, što ga može ukvasiti, i potrebno je redovno čistiti rezervoar suvim peškirom pre preliivanja.



Čišćenje i nega

Iz higijenskih razloga uređaj (uključujući unutrašnje i spoljašnje elemente) bi trebalo redovno čistiti, najmanje svaka dva meseca.


Oprez!

Uređaj ne bi trebalo da bude uključen u struju tokom čišćenja. Opasnost od strujnog udara! Pre održavanja, isključiti uređaj i izvaditi glavni utikač iz utičnice.

Čišćenje spoljašnjosti

Kako bi se zadržao dobar izgled uređaja, potrebno je redovno čišćenje.

- Navlažiti krpom za čišćenje vodom umesto prskanja direktno na površinu uređaja. To omogućuje ravnomerno raspoređivanje vlage po površini.
- Očistiti vrata, ručice i površine kutije blagim deterdžentom pa zatim obrisati mekom krpom.

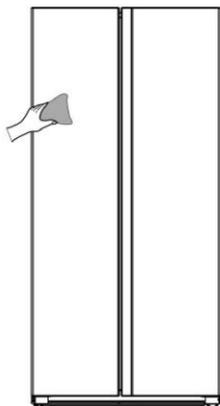

Oprez!


- Ne koristiti oštre predmete jer mogu izgrebati površinu.
- Ne koristiti razređivače, deterdžent za automobile, Clorox, eterična ulja, abrazivna sredstva za čišćenje ili organske rastvarače kao što je Benzen. Oni mogu oštetiti površinu uređaja i izazvati požar.

Čišćenje unutrašnjosti

Potrebno je redovno čistiti unutrašnjost uređaja. Lakše je očistiti uređaj kad je u njemu malo hrane. Prebrisati unutrašnjost frižidera i zamrzivača blagim rastvorom sode bikarbone a zatim isprati toplom vodom pomoću iscećenog sunđera ili krpe. Pre ponovnog

postavljanja polica i kutije za održavanje svežine prebrisati unutrašnjost dok ne bude potpuno suva.


Dobro osušiti sve površine i montažne delove pre vraćanja na mesto.

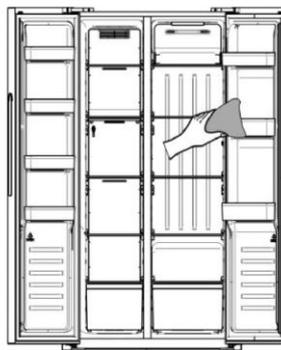

Iako se ovaj uređaj automatski otapa, na unutrašnjim zidovima komore zamrzivača se može formirati sloj leda ukoliko se vrata zamrzivača često otvaraju ili se predugo drže otvorenim. Ukoliko je led previše deo, izabrati trenutak kada je zamrzivač skoro prazan i postupiti na sledeći način:

1. Izvaditi hranu i pomoćne elemente i korpe, isključiti uređaj iz struje i ostaviti otvorena vrata. Dobro provetriti prostoriju kako bi se ubrzao procesa otapanja.
2. Kada je otapanje gotovo, očistite zamrzivač kao što je opisano u nastavku.
3. Otvore na zadnjoj strani komore za ventilaciju u zamrzivaču je teško očistiti brisanjem.

Možete koristiti vazduh pod pritiskom za njihovo čišćenje. Najpre naprskati blag rastvor sode bikarbone a zatim isprati mlakom vodom. Prebrisati nakon čišćenja dok se površina ne osuši.

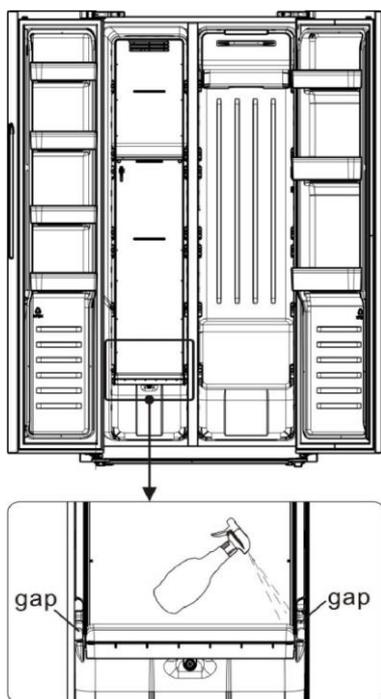


Upozorenje!

Ne koristiti oštre predmete za uklanjanje leda iz komore zamrzivača. Tek kada se unutrašnjost potpuno osuši uređaj bi trebalo uključiti u struju.

Čišćenje dihtunga vrata

Voditi računa da dihtunzi vrata budu uvek čisti. Lepljiva hrana i pića mogu uzrokovati slepljivanje dihtunga za konstrukciju i njihovo cepanje prilikom otvaranja vrata. Oprati dihtung blagim deterdžentom i toplom vodom. Isprati i dobro osušiti nakon čišćenja.

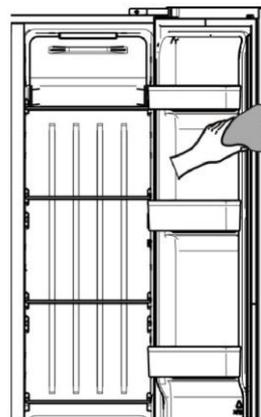

Opres! Uređaj se može uključiti tek nakon što se dihtunzi vrata potpuno osuše.

Zamena LED sijalice:

Upozorenje: LED sijalica se ne sme menjati od strane korisnika! Ukoliko dođe do oštećenja LED sijalice, kontaktirati korisničku službu za pomoć. Za zamenu LED sijalice obaviti korake opisane u nastavku:

1. Isključiti uređaj iz struje.
2. Ukloniti poklopac sijalice podizanjem nagore i povlačenjem.
3. Jednom rukom držati poklopac LED sijalice i povući ga drugom rukom uz istovremeno pritiskanje jezička za pričvršćivanje.
4. Zameniti LED sijalicu pa postaviti poklopac.

Korisni saveti

Saveti za uštedu energije

Preporučujemo da poštujuete savete koji su dati u nastavku kako biste uštedeli struju.

- Izbegavati duže otvaranje vrata kako bi se uštedela energija.

Uverite se da su uređaji daleko od svih izvora toplote (direktna sunčeva svetlost, električna rerna ili šporet, itd.)

- Ne podešavati nižu temperaturu nego što je to potrebno.
- Ne stavljati toplu hranu ili tečnosti koje isparavaju u uređaj.

- Postaviti uređaj u dobro provetrenu prostoriju bez vlage. Pročitati poglavlje Instaliranje vašeg novog uređaja.
- Ukoliko dijagram pokazuje tačan raspored fijoka, odeljka za održavanje svežine i police, ne menjati takvu kombinaciju jer je projektovana tako da omogući najveće uštede energije.

Saveti za čuvanje sveže hrane

- Ne stavljati vrelu hranu direktno u frižider ili zamrzivač, unutrašnja temperatura će se povećati što je uzrokovati neprekidan rad kompresora i veću potrošnju struje.

Pokriti ili obmotati hranu, naročito ukoliko ima jak miris.

Pravilno rasporediti namirnice kako bi se omogućila cirkulacija vazduha oko njih.

Saveti za hlađenje

- Meso (sve vrste) umotati u polietilensku foliju za hranu i staviti na staklenu policu iznad fijke za povrće. Uvek poštovati rokove čuvanja namirnica i iskoristiti ih do datuma koje preporučuju proizvođači.

- Kuvana hrana, hladna jela, itd.:

Potrebno je pokriti ih i mogu se postaviti na bilo koju policu.

- Voće i povrće:

Potrebno je držati ih u specijalnoj fijoci koja je predviđena za tu svrhu.

- Maslac i sir:

Obmotati nepropusnom aluminijumskom ili plastičnom folijom.

- Flaše za mleko:

Moraju imati poklopac i moraju se držati u polici u vratima.

Saveti za zamrzavanje

Prilikom prvog uključivanja nakon dužeg perioda nekorišćenja, ostaviti uređaj da radi najmanje 2 sata na višoj temperaturi pre stavljanja hrane u komoru.

Namirnice podeliti u male porcije kako bi se omogućilo njihovo brzo i potpuno

zamrzavanje i kasnije omogućilo otapanje samo one količine koja je potrebna.

- Umotati namirnice u aluminijumsku foliju ili polietilensku foliju za hranu koje omogućuju dobru zaptivenost.

- Sprečiti da sveža, nezamrznuta hrana dodirne zamrznutu hranu, kako bi se izbeglo zagrevanje zamrznute hrane.

- Ukoliko se konzumiraju odmah nakon vađenja iz komore za zamrzavanje, zaleđeni proizvodi će verovatno uzrokovati promrzline na koži.

- Preporučuje se da se na svakom zamrznutom pakovanju napiše naziv i datum zamrzavanja kako bi se pratilo vreme držanja.

Saveti za čuvanje zamrznutih namirnica

Uveriti se da je zamrznuta hrana pravilno čuvana u prodavnici

- Kada se odlede, namirnice brzo propadaju i ne mogu se ponovo zalediti. Ne prekoračivati period čuvanja koji je naznačen od strane proizvođača.

Isključivanje vašeg uređaja

Ukoliko je potrebno isključiti uređaj na duži vremenski period, potrebno je preduzeti sledeće korake kako bi se sprečila pojava buđi u uređaju.

1. Izvaditi svu hranu.
2. Izvaditi utikač iz utičnice.
3. Temeljno očistiti i osušiti unutrašnjost.
4. Uveriti se da su oba vrata blokirana u blago otvorenom položaju kako bi se omogućila cirkulacija vazduha.

Otklanjanje problema

Ukoliko se suočite sa problemom u vezi sa vašim uređajem ili mislite da vaš uređaj ne funkcioniše kako treba, možete obaviti neke jednostavne provere pre pozivanja servisa, kao što je opisano u nastavku.

Upozorenje! Ne pokušavajte da sami popravite uređaj. Ukoliko se problem nastavi nakon što se obavili provere pomenute u nastavku, kontaktirajte kvalifikovanog električara, ovlašćenog servisera ili prodavnicu u kojoj ste kupili proizvod.

Upozorenje! Uputstvo za upotrebu ili priručnik za upotrebu i održavanje koji dolaze uz svaki frižider, sadrže upozorenje o mogućnosti zaglavljivanja dece u frižideru.

OPASNOST: Rizik od zaglavljivanja dece. Pre odlaganja starog frižidera ili zamrzivača:

- Skinuti vrata.
- Ostaviti police unutra kako deca ne bi mogla da uđu u frižider.

Problem	Mogući uzrok i rešenje
Uređaj ne funkcioniše kako treba	Proveriti da li je utikač pravilno uključen u utičnicu.
	Proveriti osigurač ili strujno kolo vašeg napajanja, zameniti ukoliko je potrebno.
	Temperatura sredine je preniska. Pokušati za podešavanjem temperature komore na niži nivo kako bi se razrešio ovaj problem.
	Tokom ciklusa otapanja kao i kratko vreme nakon uključivanja uređaja, zamrzivač obično ne radi kako bi se zaštitio kompresor.
Neprijatni mirisi iz komora	Unutrašnjost se možda mora očistiti
	Neke namirnice, posude ili omotači mogu izazvati neprijatne mirise.
Šum iz uređaja	Zvuci opisani u nastavku su normalni: <ul style="list-style-type: none"> • Šum prilikom rada kompresora. • Šum od kretanja vazduha od malog motora ventilatora u komori zamrzivača ili drugim komorama. • Zvuk mehurića sličan kao pri ključanju vode. • Zvuk pucanja nakon automatskog otapanja. • Zvuk klikova pre uključivanja kompresora. • Zvuk klikova kada točite vodu. • Šumovi rada motora kada uzimate led.
	Drugi neuobičajeni šumovi su posledica doleopisanih razloga i možda će zahtevati vašu proveru i preduzimanje mera: <p>Frižider nije nivelisan.</p> <p>Zadnja strana uređaja dodiruje zid.</p> <p>Flaše ili posude su pale ili se kotrljaju.</p>
Neprekidan rad motora	Normalno je da se zvuk motora često čuje, jer će u sledećim okolnostima morati više da radi: <ul style="list-style-type: none"> • Podešena temperatura je niža nego što je potrebno • Velika količina vruće hrane je nedavno stavljena u uređaj. • Temperatura van uređaja je previsoka. • Vrata su predugo otvorena ili se otvaraju prečesto. • Nakon instaliranja uređaja ili dugog perioda van upotrebe.

U komori se javlja sloj leda	Proveriti da otvori za vazduh nisu blokirani hranom i uveriti se da je hrana raspoređena u uređaju tako da je omogućena dovoljna ventilacija. Uveriti se da su vrata potpuno zatvorena. Za uklanjanje leda, molimo pogledajte poglavlje "Čišćenje i nega".
Unutrašnja temperatura je previsoka	Možda ste ostavili vrata otvorenim predugo ili prečesto; ili su vrata otvorena zbog neke prepreke; ili je uređaj postavljen tako da nije obezbeđeno dovoljno slobodnog prostora sa bočnih strana, sa zadnje ili sa gornje strane.
Unutrašnja temperatura je preniska	Povećati temperaturu u skladu sa poglavljem "Kontrole na displeju".
Vrata se ne mogu lako zatvoriti	Proveriti da li je gornji deo frižidera nagnut unazad za 10-15mm kako bi se omogućilo samostalno zatvaranje vrata, ili nešto unutra sprečava zatvaranje vrata.
Voda kaplje na pod	Posuda za vodu (koja se nalazi sa donje zadnje strane frižidera) možda nije pravilno nivelisana, ili drenažna cev (koja se nalazi ispod gornje strane odeljka sa kompresorom) nije pravilno postavljena za usmeravanje vode u ovu posudu, ili je drenažna cev zapušena. Možda ćete morati da izvučete frižider dalje od zida kako biste proverili posudu i cev.
Svetlo ne radi	<ul style="list-style-type: none"> • LED sijalica je možda oštećena. Za zamenu LED sijalica videti poglavlje Čišćenje i nega. • Upravljački sistem je isključio sijalicu zbog toga što su vrata bila otvorena predugo. Zatvoriti i ponovo otvoriti vrata kako bi se svetla aktivirala.
Zvuk mehurića vode u frižideru	To je uobičajeno. Žuborenje se čuje kada rashladna tečnost cirkuliše kroz frižider.

Odlaganje uređaja

Zabranjeno je odlagati ovaj uređaj zajedno sa kućnim otpadom.

Ambalažni materijal

Ambalažni materijal obeležen simbolom za reciklažu se može reciklirati. Ambalažu odlagati u odgovarajući kontejner za otpad kako bi se omogućila njena reciklaža.

Pre odlaganja uređaja

1. Izvući utikač iz utičnice.
2. Iseći strujni kabl i odložiti ga zajedno sa utikačem

Upozorenje! Frižideri sadrže rashladno sredstvo i gasove u izolaciji. Rashladno sredstvo i gasovi se moraju odlagati na stručan način jer mogu izazvati povrede očiju ili se mogu zapaliti. Uveriti se da cevi kola sa rashladnim sredstvom nisu oštećene pre pravilnog odlaganja.

Pravilno odlaganje ovog proizvoda	
	<p>Ova oznaka ukazuje na to da se ovaj proizvod u EU ne sme odlagati zajedno sa otpadom iz domaćinstva. Kako bi se sprečio mogući štetni uticaj na životnu sredinu ili zdravlje ljudi usled nekontrolisanog odlaganja otpada, reciklirati otpad na odgovoran način kako bi se promovisala održiva ponovna upotreba materijalnih resursa. Za vraćanje vašeg polovnog uređaja, molimo vas da koristite sisteme staro-za-novo ili kontaktirajte maloprodavca od koga ste kupili proizvod. Oni mogu preuzeti ovaj proizvod za reciklažu na ekološki-bezbedan način.</p>

Kako bi se izbegla kontaminacija hrane, molimo pratite sledeće smernice

- Otvaranje vrata na duže vreme može izazvati znatno povećanje temperature u komorama uređaja.
- Redovno čistiti površine koje dolaze u dodir sa hranom i pristupačne sisteme za pražnjenje vode.
- Sveže meso i ribu držati u odgovarajućim posudama u frižideru, tako da ne dođu u dodir ili kako ne bi kapali na druge namirnice.
- Odeljci za zamrznutu hranu sa dve zvezdice su podesni za skladištenje prethodno zamrznute hrane, čuvanje ili pravljenje sladoleda i pravljenje ledenih lizalica.
- Odeljci sa jednom, dve ili tri zvezdice, nisu podesni za zamrzavanje sveže hrane.

Redosled	TIP odeljka	Ciljna temp. čuvanja hrane [°C]	Odgovarajuće namirnice
1	Frižider	+2~+8	Jaja, kuvana hrana, upakovana hrana, voće i povrće, mlečni proizvodi, torte, pića i druge namirnice koje nisu podesne za zamrzavanje.
2	(***)*-Zamrzivač	≤-18	Morska hrana (riba, škampi, školjke), proizvodi od slatkovodnih životinja i proizvodi od mesa (preporučeno vreme je 3 meseca – hranljive vrednosti i ukus opadaju vremenom), podesno za zamrznutu svežu hranu.
3	***-Zamrzivač	≤-18	Morska hrana (riba, škampi, školjke), proizvodi od slatkovodnih životinja i proizvodi od mesa (preporučeno vreme je 3 meseca – hranljive vrednosti i ukus opadaju vremenom). Nije podesno za zamrzavanje sveže hrane.
4	** -Zamrzivač	≤-12	Morska hrana (riba, škampi, školjke), proizvodi od slatkovodnih životinja i proizvodi od mesa (preporučeno vreme je 2 meseca – hranljive vrednosti i ukus opadaju vremenom). Nije podesno za zamrzavanje sveže hrane.
5	*-Zamrzivač	≤-6	Morska hrana (riba, škampi, školjke), proizvodi od slatkovodnih životinja i proizvodi od mesa (preporučeno vreme je 3 mesec – hranljive vrednosti i ukus opadaju vremenom). Nije podesno za zamrzavanje sveže hrane.
6	0-zvezdica	-6~0	Sveža svinjetina, junetina, riba, piletina, određeni upakovani prehrambeni proizvodi, itd. (Preporučuje se da se pojedu istog dana, poželjno nakon ne više od 3 dana).
7	Hlađenje	-2~+3	Sveža/zamrznuta svinjetina, junetina, piletina, namirnice od slatkovodnih životinja, itd. (7 dana ispod 0°C a iznad 0°C preporučuje se konzumiranje u toku tog dana, najduže nakon 2 dana).

			Morska hrana (ispod 0 stepeni - 15 dana, ne preporučuje se držanje na temperaturi višoj od 0°C)
8	Sveža hrana	0~+4	Sveža svinjetina, junetina, riba, spremljena hrana, itd. (Preporučeno da se jedne istog dana, uz preporuku da ne prođe više od 3 dana).
9	Vino	+5~+20	crveno vino, belo vino, penušavo vino, itd.

Napomena: molimo vas da različite namirnice čuvate u skladu sa odeljcima, odnosno ciljnim temperaturama čuvanja u vašem uređaju.

- Ukoliko je rashladni uređaj prazan duže vreme, isključiti ga, otopiti, očistiti, osušiti i ostaviti vrata otvorenim kako bi se sprečilo formiranje buđi u uređaju.

Čišćenje uređaja za točenje vode (važi za proizvode sa uređajem za točenje vode):

- Očistiti rezervoare za vodu ukoliko nisu korišćeni 48h, isprati sistem za vodu koji je povezan sa dovodom vode ukoliko voda nije točena 5 dana.

UPOZORENJE! Hrana se mora spakovati u kesice pre stavljanja u frižider a tečnosti se moraju staviti u flaše ili posude sa poklopcem kako bi se izbegli problemi jer konstrukcija proizvoda nije laka za čišćenje.

Hisense

life reimagined

USER'S OPERATION MANUAL

Before operating this unit, please read this manual thoroughly, and retain for future reference

English

Contents

Safety and warning information.....2	Cleaning and care.....21
Installing your new appliance..... 7	Helpful hints and tips.....22
Description of the appliance.....9	Troubleshooting.....23
Display controls.....12	Disposal of the appliance.....26
Using your appliance..... 18	



Safety and warning information

For your safety and correct usage, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life, will be properly informed on its usage and safety notices.

For the safety of life and property, keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

Safety for children and others who are vulnerable people

- According to EN standard

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children aged from 3 to 8 years are allowed to load and unload refrigeration appliances.

According to IEC standard

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person being responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

- Keep all packaging away from children as there is a risk of suffocation.
- If you are discarding the appliance, pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside it.
- If this appliance, featuring a magnetic door seals, is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make

the spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

General safety



- **WARNING** —This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- **WARNING** — Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **WARNING** — If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING** — Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING** — Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING** — Do not damage the refrigerant circuit.
- **WARNING** — Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- **WARNING** — The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.
- **WARNING** —When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING** —Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Replacing the illuminating lamps

- **WARNING**—The illuminating lamps must not be replaced by the user! If the illuminating lamps is damaged, contact the customer helpline for assistance.
This warning is only for refrigerators that contain illuminating lamps.

Refrigerant

The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit

becomes damaged.

The refrigerant (R600a) is flammable.

- **WARNING** — Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.



- The symbol  is a warning and indicates the refrigerant and insulation blowing gas are flammable.
- **Warning: Risk of fire/flammable materials**

If the refrigerant circuit should be damaged:

-Avoid opening flames and sources of ignition.

-Thoroughly ventilate the room in which the appliance is situated.

It is dangerous to alter the specifications or modify this product in any way.

Any damage to the cord may cause a short circuit, fire, and/or electric shock.



Electrical safety

1. The power cord must not be lengthened.
2. Make sure that the power plug is not crushed or damaged. A crushed or damaged power plug may overheat and cause a fire.
3. Make sure that you can access the main plug of the appliance.
4. Do not pull the main cable.
5. If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
6. You must not operate the appliance without the interior lighting lamp cover.
7. The fridge is only applied with power supply of single phase alternating current of 220~240V/50Hz. If fluctuation of voltage in the district of user is so large that the voltage exceeds the above scope, for safety sake, be sure to apply A.C. Automatic voltage regulator of more than 350W to the fridge. The fridge must employ a special power socket instead of common one with other electric appliances. Its plug must match the socket with ground wire.

Daily use

- Do not store flammable gas or liquids in the appliance, There is a risk of an explosion.
- Do not operate any electrical appliances in the appliance (e. g. electric ice cream makers, mixers etc.).
- When unplugging always pull the plug from the mains socket, do not pull on the cable.
- Do not place hot items near the plastic components of this appliance.
- Do not place food products directly against the air outlet on the rear wall.
- Store pre-packed frozen food in accordance with the frozen food

manufacture's instructions.

- The appliances manufactures storage recommendations should be strictly adhered to. Refer to relevant instructions for storage.
- Do not place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.
- Frozen food can cause frost burns if consumed straight from the freezer compartment.
- Do not place the appliance in direct sunlight.
- Keep burning candles, lamps and other items with naked flames away from the appliance so that do not set the appliance on fire.
- The appliance is intended for keeping food stuff and/or beverages in normal household as explained in this instruction booklet . You should take care when move it as the appliance is heavy.
- Do not remove nor touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Never use the base, drawers, doors etc. to stand on or as supports.
- Frozen food must not be refrozen once it has been thawed out.
- Do not consume ice popsicles or ice cubes straight from the freezer as this can cause freezer burn to the mouth and lips.
- To avoid items falling and causing injury or damage to the appliance, do not overload the door racks or put too much food in the crisper drawers.
- This refrigerating appliance is not intended to be used as a built-in appliance.

caution!

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects, steam cleaner, ethereal oils, organic solvents or abrasive cleansers.
- Do use sharp objects to remove frost from the appliance. Use a plastic scraper.

Installation Important!

- For electrical connection carefully, follow the instructions given in this manual. Unpack the appliance and check if there are damages on it.
- Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In this case retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation, follow the instructions relevant to installation.

- Wherever possible the back of the product should not be too close to a wall to avoid touching or catching warm parts (compressor, condenser) to prevent the risk of a fire, follow the instructions relevant to installation.
- The appliance must not be located close to radiators or cookers.
- Make sure that the mains plug is accessible after the installation of the appliance.

Service

- Any electrical work required to do the servicing of the appliance should be carried out by qualified electrician or competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.
 - 1) If the appliance is Frost Free.
 - 2) If the appliance contains freezer compartment.

Installing your new appliance


Before using the appliance for the first time, you should be informed of the following tips.



In order to improve efficiency of the cooling system and save energy, it is necessary to maintain good ventilation around the appliance for the dissipation of heat. For this reason, sufficient clear space should be available around the refrigerator.

Suggest: It is advisable for there to be 50-70mm of space from the back to the wall, at least 100mm from its top, at least 100mm from its side to the wall and a clear space upfront to allow the doors to open 135/150°.

Please see the following diagrams.

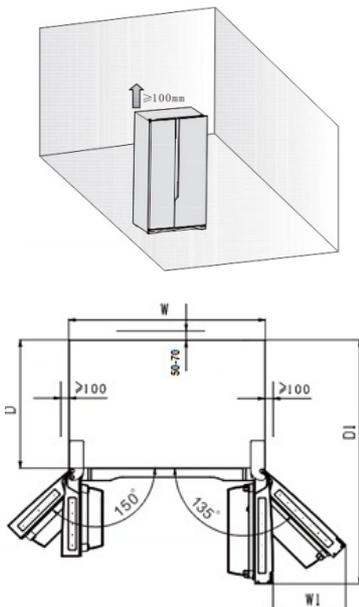

Space required(mm)

W	W1	D	D1
908	441.5	550	1096.5

Note:

• This appliance performs well in the climate class from SN to ST showed in the




table below. It may not work properly if being left at a temperature above or below the indicated range for a long period.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

- Stand your appliance in a dry place to avoid high moisture.
- Keep the appliance out of direct sunlight, rain or frost. Stand the appliance away from heat sources such as stoves, fires or heaters.

Leveling of appliance

- For sufficient leveling and air circulating in the lower rear section of the appliance, the bottom feet may need to be adjusted. You can adjust them manually by hand or by using a suitable spanner.
 - After the product is put in place, please adjust the two front support feet at the bottom of the refrigerator. The bottom of the support feet is required to be close to the ground, so as to prevent the product from toppling after the door is loaded.
 - To allow the doors to self-close, tilt back the top backwards for about 10mm or 0.5° by turning the adjustable feet.
 - Whenever you want to move the appliance, remember to turn the feet back up so that the appliance can roll freely. Reinstall the appliance when relocating.
- Caution!** The rollers, which are not castors, should be only used for forward or backward movement. Moving the refrigerator side ways may damage your floor and the rollers.

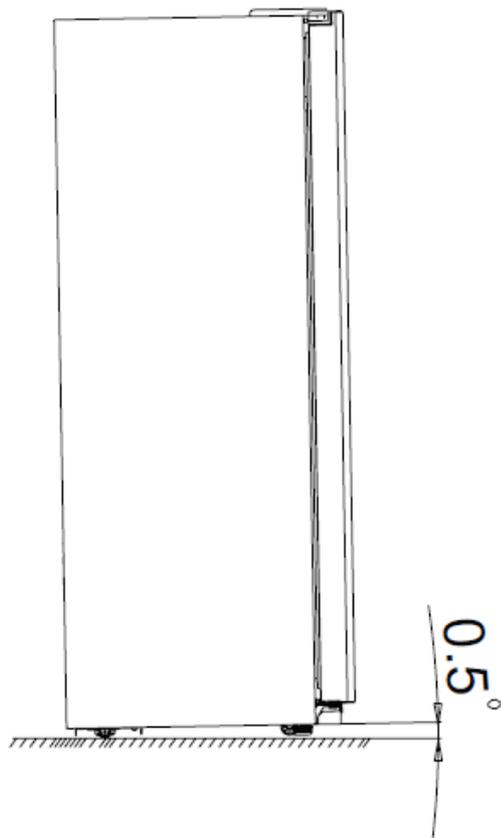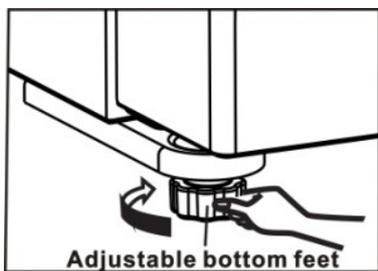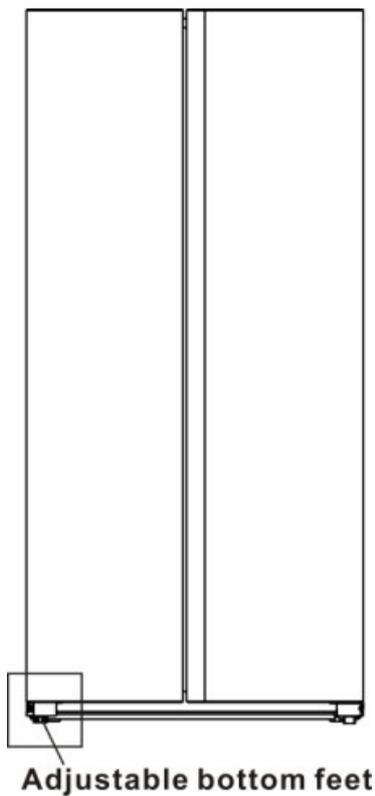

Description of the appliance

View of the appliance



1.Freezer LED light

2.Freezer rack

3.Freezer door

4.Freezer wind channel part

5.Freezer glass shelf

6.Freezer drawer

7.Freezer drawer

8.Left adjustable bottom feet

9.Fridge LED light

10.Fridge rack

11.Fridge wind channel part

12.Fridge door

13.Fridge glass shelf

14.Egg tray(inside)

15.Fruit and vegetable crisper

16.Fruit and vegetable crisper

17.Right adjustable bottomfeet

Note!

- Due to unceasing modification of our products, your refrigerator may be slightly different from this instruction manual, but its functions and using methods remain the same.

- To get the best energy efficiency of this product, please place all shelves, drawers and baskets on their original position as the illustration above.

Hisense Refrigerator

View of the appliance



1.Freezer LED light

2.Freezer rack

3.Freezer door

4.Freezer wind channel part

5.Freezer glass shelf

6.Ice box part

7.Freezer drawer

8.Freezer drawer

9.Left adjustable bottom feet

10.Fridge LED light

11.Fridge rack

12.Fridge wind channel part

13.Fridge door

14.Fridge glass shelf

15.Egg tray(inside)

16.Fruit and vegetable crisper

17.Fruit and vegetable crisper

18.Right adjustable bottomfeet

Note !

- Due to unceasing modification of our products, your refrigerator may be slightly different from this instruction manual, but its functions and using methods remain the same.
- To get the best energy efficiency of this product, please place all shelves, drawers and baskets on their original position as the illustration above.

View of the appliance



1.Freezer LED light

2.Freezer rack

3.Freezer door

4.Freezer wind channel part

5.Freezer glass shelf

6.Freezer drawer

7.Freezer drawer

8.Left adjustable bottom feet

9.Fridge LED light

10.Fridge rack

11.Water tank

12.Fridge wind channel part

13.Fridge door

14.Fridge glass shelf

15.Egg tray(inside)

16.Fruit and vegetable crisper

17.Fruit and vegetable crisper

18.Right adjustable bottomfeet

Note !


- Due to unceasing modification of our products, your refrigerator may be slightly different from this instruction manual, but its functions and using methods remain the same.

- To get the best energy efficiency of this product, please place all shelves, drawers and baskets on their original position as the illustration above.

Display Controls(Only for some products)

Use your appliance according to the following control regulations, your appliance has the corresponding functions as the display panels showed in the pictures below.

Controlling the temperature

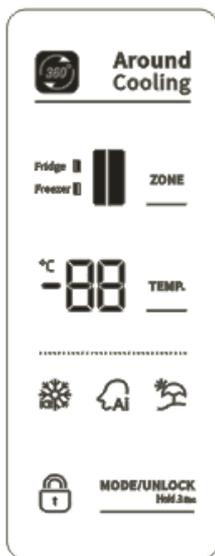

For optimum food preservation, we recommend that when you start your refrigerator for the first time, the temperature for the refrigerator is set to 5°C and the freezer to -18°C. If you want to change the temperature, follow the instructions below.

Note: High temperature setting will accelerate food waste.

Caution! When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment may vary from the temperature values displayed on the panel, depending on how much food you store and where you place them. Ambient temperature may also affect the actual temperature inside the appliance.

Unlock

When the appliance is powered on for the first time, the backlighting of the icons on display panel starts working. If no buttons have been pressed and the doors are closed, the backlighting will turn off after 60 seconds.

All the buttons are locked if the icon "  "

is illuminated, press the "  " button

for 3 seconds to unlock them. And it will be locked itself after 20 seconds no pressing any button.

Mode Selection

You can select "  " "  " "  " three modes by pressing the "  " button in the unlock state. And it will be selected after 10 seconds no pressing any button.

1. Super Freeze()

Super Freeze will quickly lower the temperature within the freezer so food will freeze faster. This can lock in the vitamins and nutrients of fresh food and keep food fresh longer.

- When the function is activated, the temperature of the freezer is automatically switched to -24°C.
- In case of the maximum amount of food to be frozen, please wait about 24 h.
- Super freeze automatically switches off after 52 hours and after 52 hours, the freezer temperature setting will revert back to the previous setting.

2. Artificial Intelligence()

- When the function is selected, the temperature of the appliance is automatically adjusted.
- When the Artificial Intelligence function is activated, the temperature of the fridge is automatically switched to 5°C and the freezer to -18°C.

3. Holiday()

If you are going to be away for a long period of time, you can activate this

function. When the function is activated, the temperature of the fridge is automatically switched to 15°C and the freezer to -18°C.

Important! Do not store any food in the fridge during this time.

Temperature setting

• You should choose to control Fridge (📺) temperature or Freezer (❄️) temperature

by pressing the “**ZONE**” button in unlock state. The corresponding icon of the selected compartment will flash, and the other one will stay on.

• You can press the “**TEMP.**” button to control the Fridge temperature when the corresponding icon (📺) flashes. When you press the button continuously, the temperature will be set as the following

sequence.

5 → 4 → 3 → 2 → 8 → 7 → 6 (°C)

• You can press the “**TEMP.**” button to control the Freezer temperature when the corresponding icon (❄️) flashes. When you press the button continuously, the temperature will be set as the following sequence.

-18 → -19 → -20...-23 → -24 → -14 → -15 → -16 → -17 (°C)

Door Alarm

- If the door of fridge or freezer is open for over **2 minutes**, the door alarm will sound. The buzzer will automatically stop alarming 10 minutes later.
- To save energy, please avoid keeping the door open for a long time when using the appliance. The door alarm can be cleared by closing the door.

Display Controls(Only for some products)

Use your appliance according to the following control regulations, your appliance has the corresponding functions as the display panels showed in the pictures below.

Controlling the temperature



For optimum food preservation, we recommend that when you start your refrigerator for the first time, the temperature for the refrigerator is set to 5°C and the freezer to -18°C. If you want to change the temperature, follow the instructions below.

Note: High temperature setting will accelerate food waste.

Caution! When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment

may vary from the temperature values displayed on the panel, depending on how much food you store and where you place them. Ambient temperature may also affect the actual temperature inside the appliance.

Unlock

When the appliance is powered on for the first time, the backlighting of the icons on display panel starts working. If no buttons have been pressed and the doors are closed, the backlighting will turn off after 60 seconds.

All the buttons are locked if the icon “” is illuminated, press the “” button for 3 seconds to unlock them. And it will be locked itself after 20 seconds no pressing

any button.

Mode Selection

You can select “” “” two modes by pressing the “” button in the unlock state. And it will be selected after 10 seconds no pressing any button.

1. Super Freeze()

Super Freeze will quickly lower the temperature within the freezer so food will freeze faster. This can lock in the vitamins and nutrients of fresh food and keep food fresh longer.

- When the function is activated, the temperature of the freezer is automatically switched to -24°C.
- In case of the maximum amount of food to be frozen, please wait about 24 hours.
- Super freeze automatically switches off after 52 hours and after 52 hours, the freezer temperature setting will revert back to the previous setting.

2. Artificial Intelligence()

- When the function is selected, the temperature of the appliance is automatically adjusted.
- When the Artificial Intelligence function is activated, the temperature of the fridge is automatically switched to 5°C and the freezer to -18°C.

Temperature setting

- You can press the “” button to control the Fridge temperature when the corresponding icon() flashes. When you press the button continuously, the temperature will be set as the following

sequence.

5 → 4 → 3 → 2 → 8 → 7 → 6 (°C)

• You can press the “FREEZER” button to control the Freezer temperature when the corresponding icon(❏) flashes. When you press the button continuously, the temperature will be set as the following sequence.


-18 → -19 → -20...-23 → -24 → -14 → -15 → -16 → -17 (°C)

Door Alarm

- If the door of fridge or freezer is open for over **2 minute**, the door alarm will sound. The buzzer will automatically stop alarming 10 minutes later.
- To save energy, please avoid keeping the door open for a long time when using the appliance. The door alarm can be cleared by closing the door.

Display Controls(Only for some products)

Use your appliance according to the following control regulations, your appliance has the corresponding functions and modes as the control panels showed in the pictures below. When the appliance is powered on for the first time, the backlighting of the icons on display panel will be illuminated for 3 seconds, then the display panel starts working. If no buttons have been pressed and the fridge door has no open/close motion, the backlighting will turn off after 1 minutes.

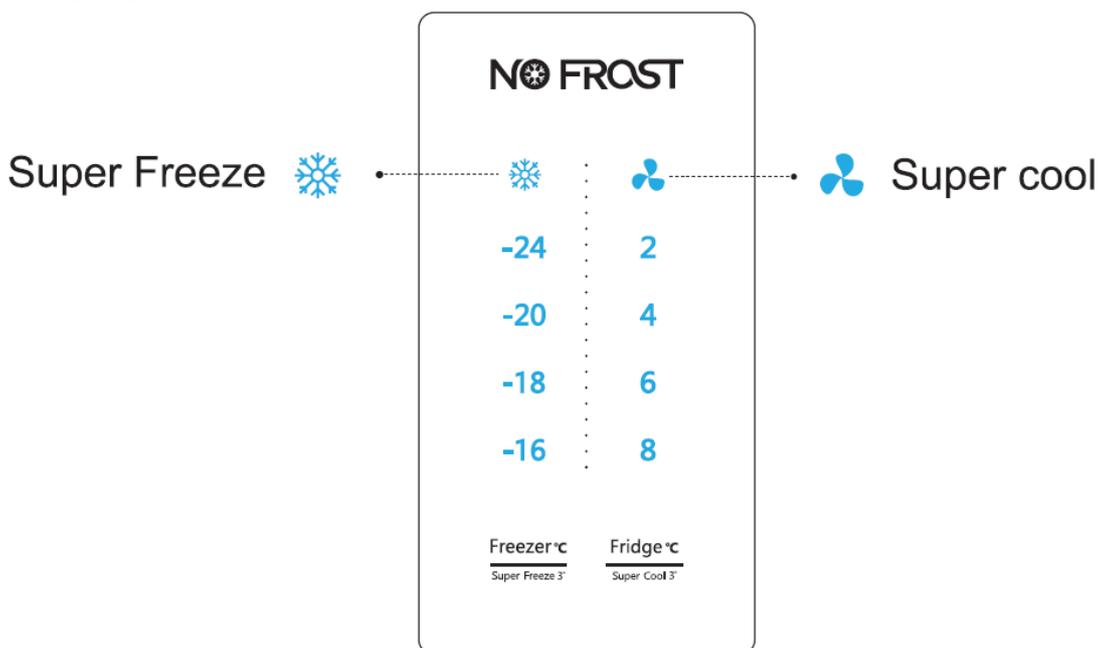

Controlling the temperature


We recommend that when you start your refrigerator for the first time, the temperature for the refrigerator is set to 4°C, and the freezer to -18°C. If you want to change the temperature, follow the instructions below.

Caution! When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment may vary from the temperature values displayed on the panel, depending on how much food you store and where you place them. Ambient temperature may also affect the actual temperature inside the appliance.

1. Freezer


Press the middle part of  button to set the freezer temperature between

-16°C and -24°C to suit your desired temperature, and the freezer temperature indicator will display corresponding value according to the following sequence.

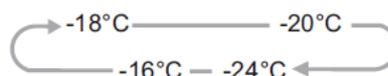

2. Fridge

Press the middle part of  button to set your desired fridge temperature between 8°C and 2°C, and the fridge temperature indicator will display corresponding value according to the following sequence.

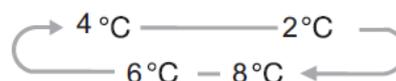

3. Super Freeze

 Super Freeze can rapidly lower frozen temperature and freeze you

food substantially faster than usual.

- This feature also helps to keep vitamins and nutrition of fresh food for longer period.

- Press the middle part of  button for 3 seconds to activate the super freeze function. The light  will be illuminated and the freezer temperature indicator will display -24°C.

- Super freeze automatically switches off after 52 hours.

- When super freeze function is on you can switch off super freeze function by pressing the middle part of  button and the freezer temperature setting will revert back to the previous setting.

Note: When selecting the Super Freeze function, ensure there are no bottled or

canned drinks (especially carbonated drinks) in the freezer compartment. Bottles and cans may explode.

4. Super Cool

 Super Cool can refrigerate the food quicker and, keep food fresh for a longer period

Press the middle part of  button for 3 seconds to activate this function. The light  will be illuminated and the fridge temperature indicator will display 2°C.

Super cool automatically switches off after 3 hours.

When super cool function is on you can switch it off by pressing the middle part of  button and the refrigerator temperature setting will revert back to the previous setting.


Using your appliance

This section tells you how to use most of the useful features. We recommend that you read through them carefully before using the appliance. It may be different depending on the model.

1. Adjust the door

When you find the doors are not at the same level, you can use the screwdriver to adjust the door.

When the freezer door is upper than the refrigerator door. First, you can use the screwdriver to turn the bolt anticlockwise on the lower hinge that can make the door go up. Then use the screwdriver to lock the nut in place.

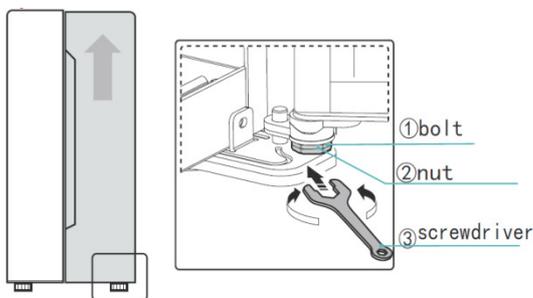


2. Using your refrigerator compartment

The refrigerator compartment is suitable for storage of vegetables and fruit. Food inside should be packed to store in order to avoid losing moisture or flavor permeating into other foods.

Caution! Never close the refrigerator door while the shelves, crisper and/or telescopic slides are extended. It may damage both them and the refrigerator.

Glass shelves and Door racks

The glass shelves and door racks are suitable for the storage of eggs, canned liquid, bottled drinks and packed food. They can be placed at different heights according to your need. But do not place too many heavy things in racks. Before you lift up the door shelf vertically, please take the food out.

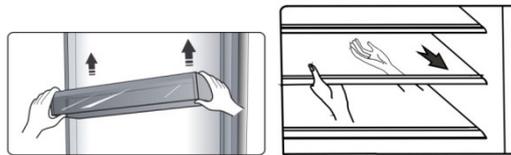

When you remove the shelves, gently pull them forward until the shelf comes clear of the shelf guides.

When you return the shelves, make sure there is no obstacle behind and gently push the shelf back into the position.

Note: All the door racks and shelves can be taken out to be cleaned.

Drawers

These are suitable for storage of fruits and vegetables. And it can be taken out to be cleaned.

To take them out, open the door to the final location first. Then pull out the drawer and tilt up the front of the drawer after moving slightly in the direction.

3. Using the freezer compartment

The freezer compartment is suitable for storage of food which needs to be frozen, including meat, fish, ice cream, etc..

Caution! Never close the door while the shelves and/or drawers are extended. It may damage both them and the refrigerator.

4. Using your ice box (only for the model with ice box)

The ice box is an independent part that can be taken out of the freezing chamber.

Using the ice box

- Take out the ice box placed on a platform, then pour water level shall not exceed the maximum line.
- Place the filled ice box back to the

freezing room.

- When ice cubes form, twist the knobs dockwise and the the ice will drop into the ice box below.

- Ice cubes can be stored in the ice box, if you need them, you can pull out the ice box and take them out.



water injection



take off ice

Note: If the ice box is used for the first time or has not been used for a long time, please clean it before using.

5. Water Dispenser (only for the model with Water Dispenser)



The water dispenser, located in the fridge door, is for storing drinking water.

With this appliance you can obtain chilled water easily without opening the refrigerator. You should be informed of following tips.

• Before using

Before using this appliance for the first time, you should use it as follows.


1. Hold the two sides of the water tank tightly, then pull up the water tank by shaking up and down.
2. Unscrew the head, then clean it and the inside of water tank.

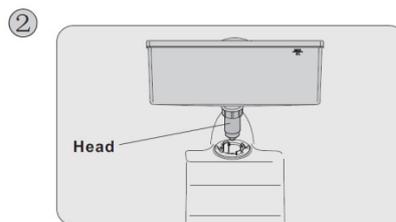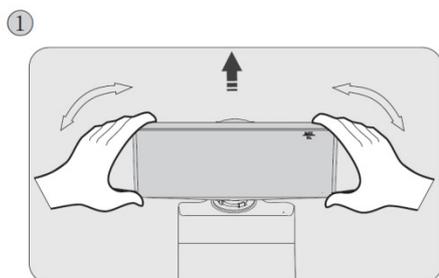

• Assembling

Before assembling, please drain the water inside the tank, and check whether the washer is reversed or not.

1. Insert the head into the hole.
2. Fit the tank along the guides on the door.
3. Press down on the two side of the tank.
4. When you hear a click sound, that means the installation is completed.

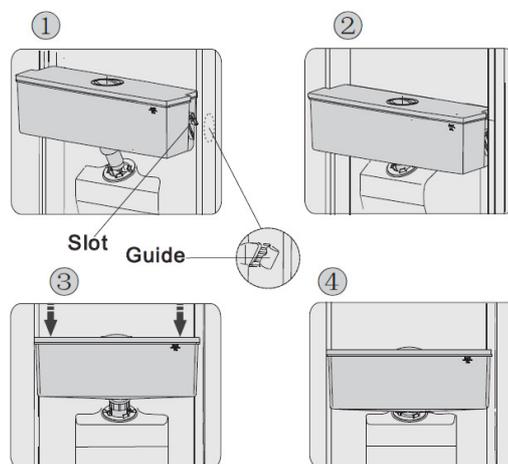

Warning!

1. Be careful not to press on the head;
2. When fitting the water tank, ensure the head inserted into the hole first;

• Filling water


Before you fill the drinking water into the water tank, ensure that the water tank is steady and in a correct position.

Caution!

Fill with water up to 3L (which is suggested), and not above the level. Otherwise, it may overflow when the lid is close.

We recommend that you fill the water by the following ways.

1. Remove the small lid and fill water from the inlet of the large lid.
2. Remove the cover of the tank, and then fill water inside directly.

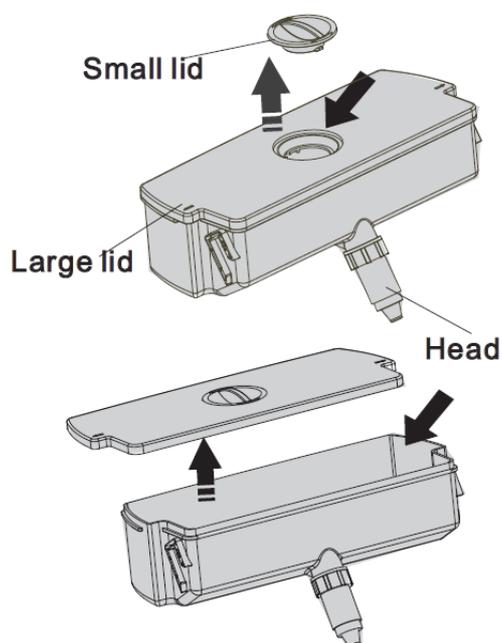

Warning!


Don't touch other parts of the appliance when filling water, it may cause the water leakage.

• Dispensing water

1. Make sure the cover of the water tank is fitted on.
2. Close the fridge door and check the dispenser.

• Receiving Water

You should use the correct cups to receive water underneath the water dispenser.

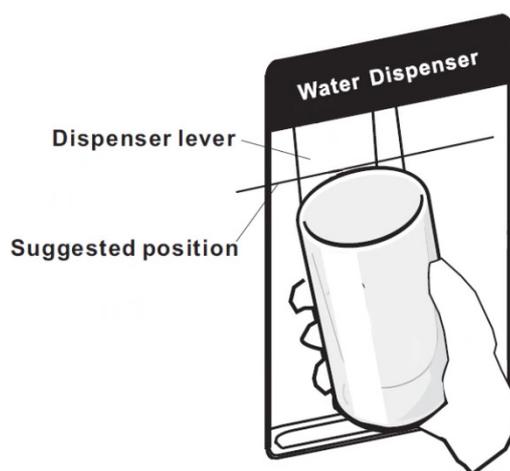


Warning!

Don't push the dispenser lever forward without cup, it may cause the water leak from the dispenser.

• Cleaning

1. Put the water tank out of the door carefully, and then wash the tank, lid, and head lightly in water.
2. After you have successfully cleaned the appliance, you should dry it by natural drying or using the dryer.
3. If you have used the water dispenser for many times, the water in the receiving tank may drop on the floor, which may make your floor wet, and you should clean the tank with dry towel regularly before overflow.

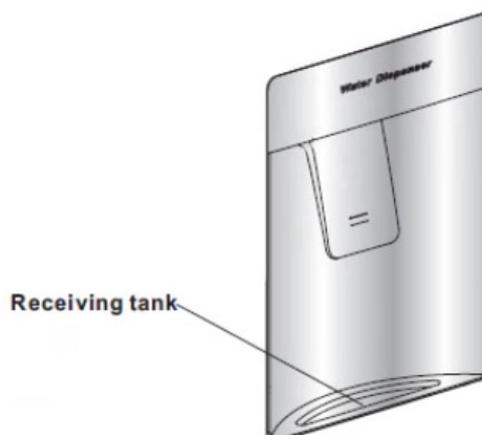

Cleaning and care

For hygienic reasons the appliance (including exterior and interior accessories) should be cleaned regularly at least every two months.


Caution!

The appliance must not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains socket.

Exterior cleaning

To maintain good appearance of your appliance, you should clean it regularly.

- Spray water onto the cleaning cloth instead of spraying directly on the surface of the appliance. This helps ensure an even distribution of moisture to the surface.
- Clean the doors, handles and cabinet surfaces with a mild detergent and then wiped dry with a soft cloth.

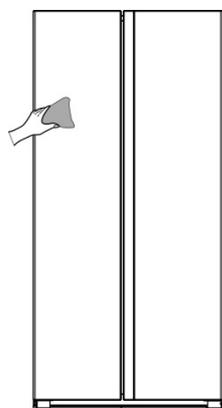


Caution!

- Don't use sharp objects as they are likely to scratch the surface.
- Don't use Thinner, Car detergent, Clorox, ethereal oil, abrasive cleansers or organic solvent such as Benzene for cleaning. They may damage the surface of the appliance and may cause fire.

Interior cleaning


You should clean the appliance interior regularly. It will be easier to clean when

food stocks are low. Wipe the inside of the fridge freezer with a weak solution of bicarbonate of soda, and then rinse with warm water using a wrung-out sponge or cloth. Wipe completely dry before replacing the shelves and baskets. Thoroughly dry all surfaces and removable parts before putting them back into place.

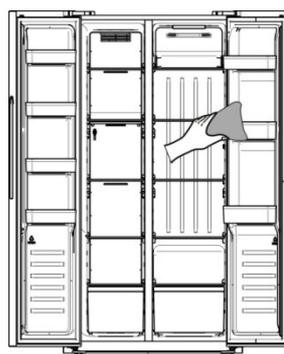

Although this appliance automatically defrosts, a layer of frost may occur on the freezer compartment's interior walls if the freezer door is opened frequently or kept open too long. If the frost is too thick, choose a time when the freezer is nearly empty and proceed as follow:

1. Remove existing food and accessories baskets, unplug the appliance from the mains power and leave the doors open. Ventilate the room thoroughly to accelerate the process.
2. When defrosting is completed, clean your freezer as described above.
3. The gaps beside the freezer wind channel part are difficult to clean by wipe. You can use a pressure sprayer to help you clean. Spray weak solution of bicarbonate of soda firstly, and then rinse with warm water. Wipe completely dry after clean.

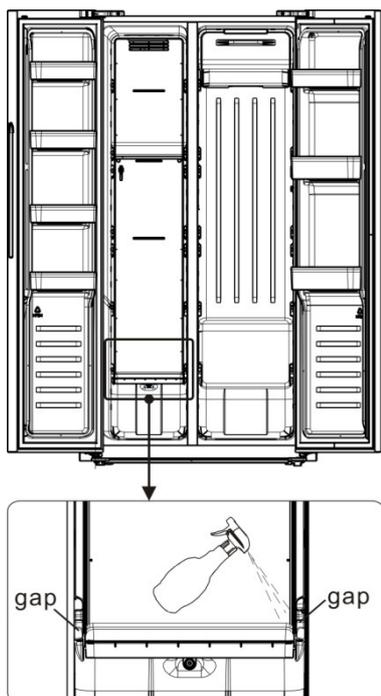


Warning!

Do not use sharp objects to remove frost from the freezer compartment. Only after the interior is completely dry should the appliance be switched back on and plugged back into the mains socket.

Door seals cleaning

Take care to keep door seals clean. Sticky food and drinks can cause seals to stick to the cabinet and tear when you open the door. Wash seal with a mild detergent and warm water. Rinse and dry it thoroughly after cleaning.

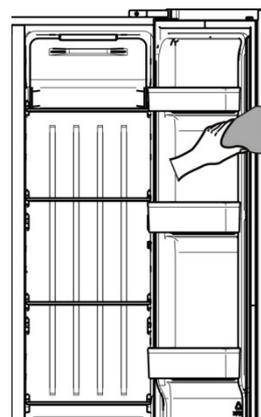

Caution! Only after the door seals are completely dry should the appliance be powered on

Replacing the LED light:

Warning: The LED light must not be replaced by the user! If the LED light is damaged, contact the customer helpline for assistance. To replace the LED light, the below steps can be followed:

1. Unplug your appliance.
2. Remove light cover by pushing up and out.
3. Hold the LED cover with one hand and pull it with the other hand while pressing the connector latch.
4. Replace LED light and snap it correctly in place.

Helpful hints and tips

Energy saving tips

We recommend that you follow the tips below to save energy.

- Try to avoid keeping the door open for long periods in order to conserve energy. Ensure the appliance is away from any sources of heat (Direct sunlight, electric oven or cooker etc)
- Don't set the temperature colder than necessary.

- Don't store warm food or evaporating liquid in the appliance.
- Place the appliance in a well ventilated, humidity free, room. Please refer to Installing your new appliance chapter.
- If the diagram shows the correct combination for the drawers, crisper and shelves, do not adjust the combination as this is designed to be the most energy efficient configuration.

Hints for fresh food refrigeration

- Do not place hot food directly into the fridge or freezer, the internal temperature will increase resulting in the compressor having to work harder and will consume more energy.
- Do cover or wrap the food, particularly if it has a strong flavor.
- Place food properly so that air can circulate freely around it.

Hints for refrigeration

• Meat (All Types) Wrap in polythene food: wrap and place on the glass shelf above the vegetable drawer. Always follow food storage times and use by dates suggested by manufacturers.

• Cooked food, cold dishes, etc.:

They should be covered and may be placed on any shelf.

• Fruit and vegetables:

They should be stored in the special drawer provided.

• Butter and cheese:

Should be wrapped in airtight foil or plastic film wrap.

• Milk bottles:

Should have a lid and be stored in the door racks.

Hints for freezing

- When first starting-up or after a period out of use, let the appliance run at least 2 hours on the higher settings before putting food in the compartment.
- Prepare food in small portions to enable it to be rapidly and completely frozen and

to make it possible to subsequently thaw only the quantity required.

• Wrap up the food in aluminum foil or polyethylene food wraps which are airtight,

• Do not allow fresh, unfrozen food to touch the food which is already frozen to avoid temperature rise of the latter.

• Iced products, if consumed immediately after removal from the freezer compartment, will probably cause frost burns to the skin.

• It is recommended to label and date each frozen package in order to keep track of the storage time.

Hints for the storage of frozen food

• Ensure that frozen food has been stored correctly by the food retailer

• Once defrosted, food will deteriorate rapidly and should not be re-frozen. Do not exceed the storage period indicated by the food manufacturer.

Switching off your appliance

If the appliance needs to be switched off for an extended period, the following steps should be taken prevent mould on the appliance.

1. Remove all food.
2. Remove the power plug from the mains socket.
3. Clean and dry the interior thoroughly.
4. Ensure that all the doors are wedged open slightly to allow air to circulate.

Troubleshooting

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service, please see below.

Warning! Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service

engineer or the shop where you purchased the product.

Warning! A child entrapment warning statement is included in either the operating instructions or in a use and care manual provided with each refrigerator.

DANGER: Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

Problem	Possible cause & Solution
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	Check the fuse or circuit of your power supply, replace if necessary.
	The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.
	It is normal that the freezer is not operating during the defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
Odours from the compartments	The interior may need to be cleaned
	Some food, containers or wrapping cause odours.
Noise from the appliance	<p>The sounds below are quite normal:</p> <ul style="list-style-type: none"> •Compressor running noises. •Air movement noise from the small fan motor in the freezer compartment or other compartments. •Gurgling sound similar to water boiling. •Popping noise during automatic defrosting. •Clicking noise before the compressor starts. • Clicking noise when you get the water. • The motor running noises when you get the ice.
	<p>Other unusual noises are due to the reasons below and may need you to check and take action:</p> <p>The cabinet is not level.</p> <p>The back of appliance touches the wall.</p> <p>Bottles or containers fallen or rolling.</p>
The motor runs continuously	<p>It is normal to frequently hear the sound of the motor, it will need to run more when in following circumstances:</p> <ul style="list-style-type: none"> •Temperature setting is set colder than necessary •Large quantity of warm food has recently been stored within the appliance. •The temperature outside the appliance is too high. •Doors are kept open too long or too often. •After your installing the appliance or it has been switched off for a long time.

A layer of frost occurs in the compartment	Check that the air outlets are not blocked by food and ensure food is placed within the appliance to allow sufficient ventilation. Ensure that door is fully closed. To remove the frost, please refer to the “Cleaning and care” chapter.
Temperature inside is too warm	You may have left the doors open too long or too frequently; or the doors are kept open by some obstacle; or the appliance is located with insufficient clearance at the sides, back and top
Temperature inside is too cold	Increase the temperature by following the “Display controls” chapter.
Doors can't be closed easily	Check whether the top of the refrigerator is tilted back by 10-15mm to allow the doors to self close, or if something inside is preventing the doors from closing.
Water drips on the floor	The water pan (located at the rear bottom of the cabinet) may not be properly leveled, or the draining spout (located underneath the top of the compressor depot) may not be properly positioned to direct water into this pan, or the water spout is blocked. You may need to pull the refrigerator away from the wall to check the pan and spout.
The light is not working	<ul style="list-style-type: none"> •The LED light may be damaged. Refer to replace LED lights in cleaning and care chapter. •The control systems has disabled the lights due to the door being kept open too long, close and reopen the door to reactivate the lights.
Hear water bubbling in the refrigerator	This is normal. The bubbling comes from the refrigerant coolant liquid circulating through the refrigerator.

Disposal of the appliance

It is prohibited to dispose of this appliance as household waste.

Packaging materials

Packaging materials with the recycle symbol are recyclable. Dispose of the packaging into a suitable waste collection container to recycle it.

Before disposal of the appliance

1. Pull out the mains plug from the mains socket.
2. Cut off the power cord and discard with the mains plug

Warning! Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.

Correct Disposal of this product	
 	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>

To avoid contamination of food, please respect the following instructions

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making icecream and making ice cubes.
- One-, two- and three- star compartments are not suitable for the freezing of fresh food.

Order	Compartments TYPE	Target storage temp.[°C]	Appropriate food
1	Fridge	+2~+8	Eggs, cooked food, packaged food, fruits and vegetables, dairy products, cakes, Drinks and other foods which are not suitable for freezing.
2	(***)*-Freezer	≤-18	Seafood(fish, shrimp, shellfish), freshwater aquatic products and meat products(recommended time is 3 months – nutrition values and taste decrease with time), suitable for frozen fresh food.
3	***-Freezer	≤-18	Seafood(fish, shrimp, shellfish), freshwater aquatic products and meat products(recommended time is 3 months – nutrition values and taste decrease with time). Not suitable for freezing fresh food.
4	** -Freezer	≤-12	Seafood(fish, shrimp, shellfish), freshwater aquatic products and meat products(recommended time is 2 months – nutrition values and taste decrease with time). Not suitable for freezing fresh food.
5	*-Freezer	≤-6	Seafood(fish, shrimp, shellfish), freshwater aquatic products and meat products(recommended time is 1 month – nutrition values and taste decrease with time). Not suitable for freezing fresh food.
6	0-star	-6~0	Fresh pork, beef, fish, chicken, some packaged processed foods, etc.(Recommended to eat within the same day, preferably not later than 3 days).
7	Chill	-2~+3	Fresh/frozen pork, beef, fish, chicken, freshwater aquatic products, etc.(7 days below 0°C and above 0°C is recommended)

			for consumption within that day, preferably no more than 2 days). Seafood(less than 0 for 15 days, it is not recommended to store above 0°C).
8	Fresh Food	0~+4	Fresh pork, beef, fish, chicken, cooked food, etc.(Recommended to eat within the same day, preferably no more than 3 days).
9	Wine	+5~+20	red wine, white wine, sparkling wine etc.

Note: please store different foods according to the compartments or target storage temperature of your purchased products.

- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Water dispenser cleaning(special for water dispenser products):

- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days.

WARNING! Food needs to be packed in bags before putting into the refrigerator, and liquids need to be packed in bottles or capped containers to avoid the problem that the product design structure is not easy to clean.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Hisense, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/hisense-side-by-side-frizider-rs677n4aif-akcija-cena/>