

## Uputstvo za upotrebu

SENCOR usisivač SVC 9300BK

**SENCOR**



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-usisivac-svc-9300bk-akcija-cena/>

# SENCOR® SVC 9300BK 4A+AAA ECO POWER



## EN ■ Bagged vacuum cleaner


*Translation of the original manual*




 




**READ CAREFULLY AND STORE THEM FOR FUTURE USE**




- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- If the power cord is damaged, it must be replaced by the manufacturer, its service technician or by a similarly qualified person, as this will prevent a dangerous situation from arising.
- Pull the power plug out of the socket before cleaning the appliance or performing maintenance.
- This vacuum cleaner is designed for use in households, offices and similar types of areas. Do not use it in industrial surroundings.
- Do not expose the vacuum cleaner to direct sunlight and do not place it near an open fire or appliances that are a source of heat.
- Before connecting the power cord to a power socket, check that the technical details on the vacuum cleaner's rating label match the electrical voltage in the socket.
- Make sure the power cord is not touching a hot surface or sharp objects.
- Do not submerge the vacuum cleaner under water or any other liquid and do not rinse it under running water.
- Before turning on the vacuum cleaner, make sure that the dust bag is inserted inside and that all the inflow and outflow filters are installed in their place.
- When the vacuum cleaner is running, ensure that the air outlets and the suction opening are not blocked.
- Do not use the vacuum cleaner to vacuum the following items:
  - smouldering cigarettes, burning items, matches or embers;
  - water and other liquids;
  - flammable or volatile materials;
  - sharp items, e.g. broken glass, needles, pins, etc.;
  - flour, wall plaster, cement and other building materials;
  - larger pieces of paper or plastic bags, which can easily block the suction hole.
- Vacuuming of some types of floors or floor surfaces can create an electrostatic discharge, which presents no danger to the user.
- Do not place the suction nozzle or tube against any parts of the face.

- Always turn off the vacuum cleaner and disconnect it from the power socket when leaving it without supervision, after finishing using it and before cleaning it. Disconnect the power cord from the power socket by pulling on the plug, never pulling on the cord. Otherwise, this could damage the power cord or the socket. It is recommended to hold the power cord in your hand when winding it up.
- If the power cord is damaged, have it replaced at a professional service centre. It is forbidden to use the vacuum cleaner if it has a damaged power cord.
- Do not use the vacuum cleaner if it is not working correctly, if it has been damaged or has been submerged in water. Do not repair the vacuum cleaner yourself or make any adjustments to it. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

A

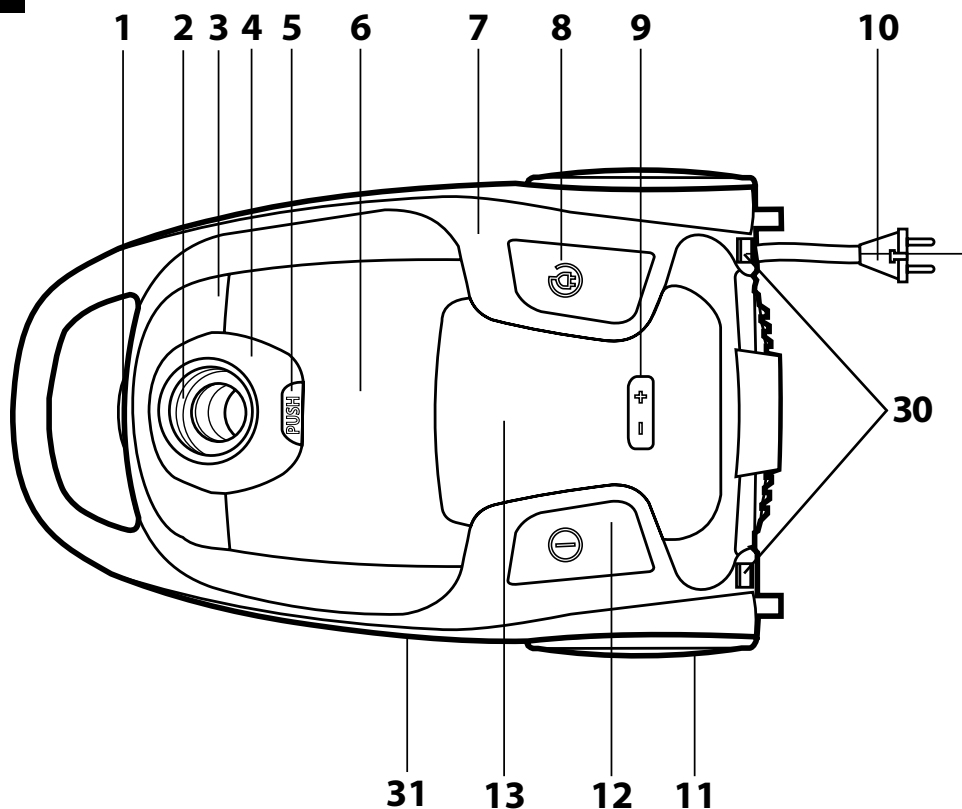

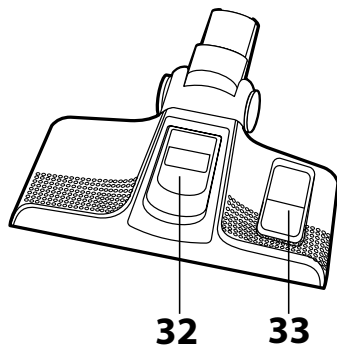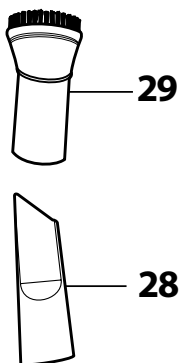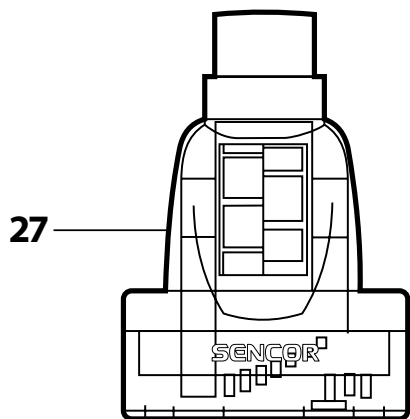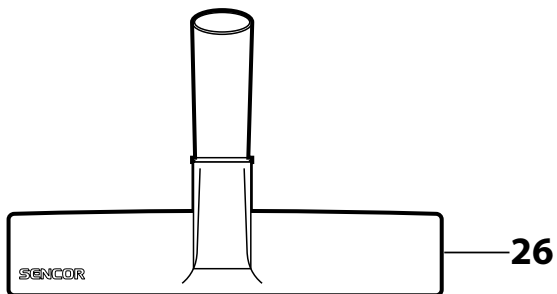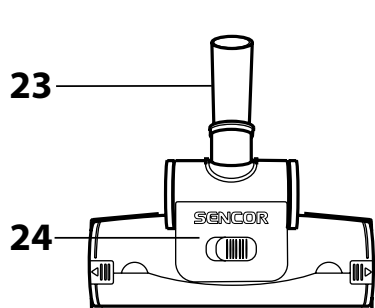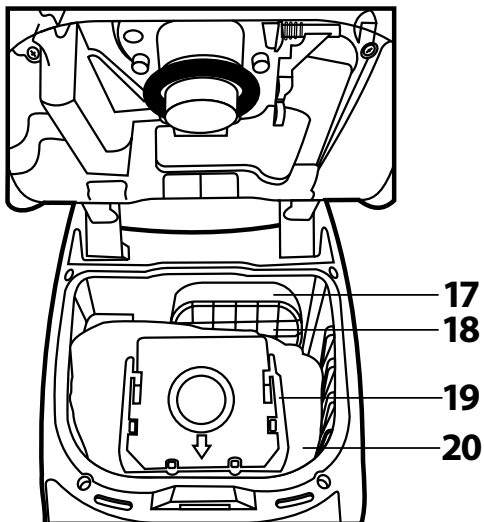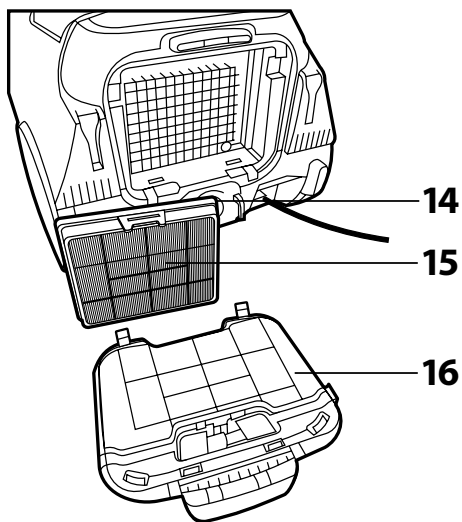

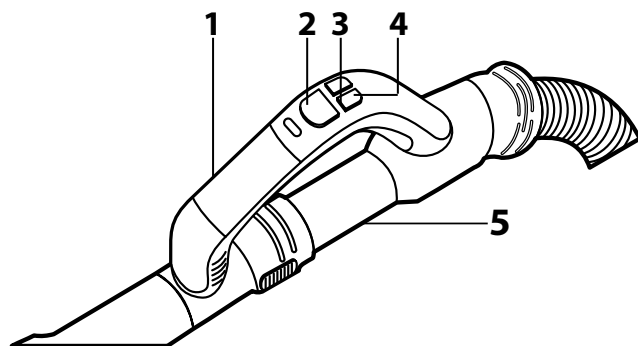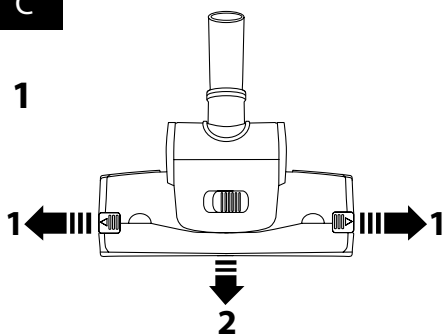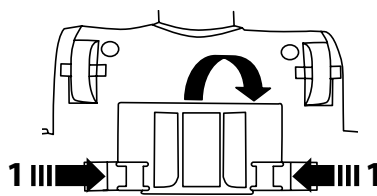**B****C****2**

# Bagged vacuum cleaner

## User's manual

- Prior to using this appliance, please read the user's manual thoroughly, even in cases where you have previously familiarised yourself with the operation of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

### DESCRIPTION OF THE APPLIANCE

- |  |   |
|--|---|
| <b>A1</b> Top cover release button                             | <b>A20</b> Dust bag   |
| <b>A2</b> Flexible hose connection hole                        | <b>A21</b> Flexible hose with remote control in the handle                                  |
| <b>A3</b> Dust bag compartment cover                           | <b>A22</b> Telescopic metal tube  |
| <b>A4</b> Inflow hole cover                                    | <b>A23</b> Turbo brush  |
| <b>A5</b> Accessory cover lid release button                   | <b>A24</b> Suction power control  |
| <b>A6</b> Accessory compartment cover                          | <b>A25</b> Long flexible crevice nozzle   |
| <b>A7</b> Vacuum cleaner unit                                  | <b>A26</b> Hard floor nozzle  |
| <b>A8</b> Automatic power cord winding button                  | <b>A27</b> Mini turbo-brush   |
| <b>A9</b> Stop suction power and select operating mode button  | <b>A28</b> Dusting brush  |
| <b>A10</b> Power cord  | <b>A29</b> Crevice nozzle   |
| <b>A11</b> Rear travel wheel                                   | <b>A30</b> Grooves for the horizontal parking position                                      |
| <b>A12</b> On/Off button                                       | <b>A31</b> Groove for the vertical parking position (at the bottom of the vacuum cleaner)   |
| <b>A13</b> Display   | <b>A32</b> Floor nozzle with an extensible brush and DEEP cleaning and EASY cleaning switch |
| <b>A14</b> Washable outflow filter (is inserted in the grille) | <b>A33</b> Flap for extending and retracting the brush                                      |
| <b>A15</b> Washable outflow HEPA filter                        |   |
| <b>A16</b> Removable grille                                    |   |
| <b>A17</b> Inflow filter                                       |   |
| <b>A18</b> Inflow filter grille                                |   |
| <b>A19</b> Dust bag holder                                     |   |

### DESCRIPTION OF THE REMOTE CONTROL IN THE HANDLE

- |   |   |
|---|---|
| <b>B1</b> Battery compartment cover     | <b>B5</b> Flexible hose with mechanical suction power control in the handle, with an integrated brush |
| <b>B2</b> Vacuum cleaner On/Off button  |   |
| <b>B3</b> Increase suction power button |   |
| <b>B4</b> Decrease suction power button |   |

### BEFORE FIRST USE

- Before first use, take the appliance and its accessories out of the packaging material and remove all promotional labels and stickers. Check that neither the appliance nor any of its parts is damaged.

### INTENDED USE OF THE ACCESSORIES

- The combination floor nozzle **A32** is suitable for vacuuming smooth hard floor areas and carpets. When vacuuming carpets with a higher pile, we recommend extending the floor nozzle travel wheels **A32**. This makes movement over the vacuumed area easier. When vacuuming smooth hard floor areas, heavy-duty carpets or carpets with a low pile, you may leave the wheels retracted. Use flap **A33** to extend and retract the travel wheels. Floor nozzle **A32** also has a switch for extending out a travel roller. This switch is located in the centre of the floor nozzle **A32** and it has two positions - deep cleaning and easy cleaning. The deep cleaning position (the travel roller is retracted) is ideal for deep and thorough vacuuming of carpets. The easy cleaning position (the travel roller is extended) makes movement over the vacuumed surface easier. We recommend to slightly lift up the floor nozzle **A32** when you wish to switch to the easy cleaning position.
- The hard floor nozzle **A26** ensures perfect and yet gentle vacuuming of smooth hard surfaces thanks to the brush being from 100 % natural bristles. It can be used to vacuum floors that are sensitive to scratching such as wooden and floating floors, tiles, linoleum, etc.
- The mini turbo-brush **A27** is an excellent helper for removing animal fur, hair, etc., while at the same time being suitable for vacuuming hard-to-reach places. Its use is not limited to the home, and can be used for vacuuming the car. Use it to quickly and effectively remove hair, animal fur and other materials from car seats, upholstery, pillows and other textile surfaces.
- The long flexible crevice nozzle **A25** serves to vacuum very hard-to-reach places anywhere in your car.
- The crevice nozzle **A29** can be used for vacuuming hard-to-reach places and the dusting brush **A28** is used for gently vacuuming various types of furniture.

### PREPARING FOR USE

- Make sure that the dust bar **A20**, inflow filter **A17**, outflow HEPA filter **A15** and the outflow filter **A14** are properly installed.
- Make sure that the dust bag compartment cover **A3** and the accessory compartment cover **A6** are properly closed
- Insert the end of the flexible hose **A21** into the hole **A2**. A secure connection of the flexible hose **A21** to the hole **A2** is indicated by the locking clips located on the end of the flexible hose **A21** extending out.



#### Note:

When disassembling, it is necessary to simultaneously press both locking clips at the end of the flexible hose **A21** while at the same time pulling the hose end **A21** out of the hole **A2**.

- Connect the telescopic tube **A22** to the free end of the flexible hose **A21**. A secure connection of these parts is indicated by a click.
- Use the ring to set the ergonomic height of the telescopic tube **A22**. Pull the ring up or down to release the extension lock on the telescopic tube **A22**. Set the desired length of the telescopic tube **A22** by sliding its inner part in or out. When the required length is set, release the ring and pull on the outer tube. This will lock the inner slider in place.
- Connect the required nozzle or brush to the free end of the telescopic tube **A22**. The long flexible crevice nozzle **A25**, the mini turbo-brush **A27**, dusting brush **A28** or crevice nozzle **A29** can be attached directly to the end of the flexible hose **A21** (after removing the telescopic tube **A21**).

### INSERTING BATTERIES INTO THE REMOTE CONTROL IN THE HANDLE

- In order to use the remote control in the handle, it is necessary to install 2x 1.5V type-AAA batteries. Remove the battery compartment cover and insert 2x new batteries of the same type. Ensure that the correct polarity as marked inside the battery compartment. Attach the battery compartment cover.
- When not using the remote control in the handle for an extended period of time, remove the batteries.



#### Note:

Always use new batteries of the same type. Never combine used and new batteries or various types of batteries. When not using the vacuum cleaner for an extended period of time, remove the batteries from the remote control. Never put the batteries in a fire, short circuit them or damage them in any way. Dispose of them ecologically at the end of their lifetime. Never throw batteries out with communal waste.

### USING YOUR VACUUM CLEANER

- Pull on the power plug to wind out the required length of the power cord and connect it to a power socket.



#### Attention:

The yellow mark on the power cord indicates that it is close to its end. The red mark indicates the very end of its length. Do not attempt to pull the power cord past this mark.

- To start the vacuum cleaner, press button **A12** on the vacuum cleaner unit. After turning on the vacuum cleaner, the display **A13** will be lit. Using buttons **A9** to set the suction power depending on the intended use of the vacuum cleaner – see table "Suction power table".
- When you have finished using it, turn off the vacuum cleaner by pressing the button **A12** on the vacuum cleaner unit. Disconnect the power cord from the power socket. To wind the power cord back into the vacuum cleaner, press button **A8**. It is recommended to hold the power cord with one hand when winding it up.

### USING THE VACUUM CLEANER WITH THE REMOTE CONTROL

- Pull on the power plug to wind out the required length of the power cord and connect it to a power socket.
- To start the vacuum cleaner, press button **A12** on the vacuum cleaner unit. After turning on the vacuum cleaner, the display **A13** will be lit.
- Hold down both suction power setting buttons **A9** on the vacuum cleaner unit until the symbols on the display start turning on intermittently. Then press button **B2** to turn on the remote control on the handle. This will pair the remote control with the vacuum cleaner and the vacuum cleaner can then be controlled using the remote control in the handle.
- Using buttons **B3** and **B4**, set the required suction power depending on the intended use of the vacuum cleaner – see table "Suction power table".
- When you have finished using it, turn off the vacuum cleaner by pressing the button **B2**. Disconnect the power cord from the power socket. To wind the power cord back into the vacuum cleaner, press button **A8**. It is recommended to hold the power cord with one hand when winding it up.

### Suction power table

Suction power	Icon	Suitable for
1 – lowest power		Curtains and drapes
2 – medium-low power		Upholstery and furniture
3 – medium power		Rugs, mats and other loosely-laid carpets
4 – medium-high power		Large-area carpets
5 – highest power		Smooth floor areas (wooden and floating floors, vinyl, tiles, etc.)

## STORING ACCESSORIES

- The vacuum cleaner is equipped with a handy accessory storage compartment. Press button **A5** to release the accessory compartment cover **A6**. Here you can place the dusting brush **A28** and the crevice nozzle **A29**.

## CLEANING AND MAINTENANCE

- Disconnect the power plug from the power socket before cleaning.



### Warning:

To prevent the risk of injury by electrical shock, do not submerge the appliance, power cord or power plug in water or any another liquid.

### Changing the dust bag

- When the indicator is lit red, it indicates the need to replace the dust bag or a clogged suction hole. In the event that the suction hole becomes clogged, remove the items that are clogging it. To replace the dust bag, proceed as follows.
- Press button **A3** to tilt open the dust bag compartment **A20**. Remove the used dust bag from the holder **A19** and insert a new bag of the same type. Then close the cover **A3**. The vacuum cleaner is equipped with a safety mechanism that prevents the cover **A3** from being closed unless the bag is correctly inserted or when it is not inserted at all.
- If the dust bag is not replaced in time, the vacuum cleaner's suction power will be reduced.



### Note:

Sometimes, while vacuuming, the indicator may briefly be lit red, which does not indicate a full dust bag, but rather that suction power is set too high for the given type of vacuumed surface. In such a case, reduce the suction power.

### Cleaning and replacing the inflow and outflow filters

- Press button **A3** to tilt open the dust bag compartment **A20**. Take out the dust bag **A20**. Remove the protective grille of the inflow filter **A18**. Take out the inflow filter **A17** and tap it out away from living areas. Then put it back in, insert the dust bag **A20** and close the cover **A3**. In the event that the inflow filter **A17** shows signs of wear, or is heavily soiled, replace it with a new one.
- In order to clean and replace the HEPA filter **A15**, which is located at the rear of the vacuum cleaner, press the clips on the removable grille **A16** and take it out. Then take out the HEPA filter **A15**. Tap it out away from living areas. Wash the HEPA filter **A15** under a weak current of running lukewarm water so that the water washes the dirt out of the folds. Allow it to dry naturally. Then insert it back in its place. It is recommended to replace the HEPA filter **A15** with a new one after 6 months of use.



### Attention:

Before putting the filters back into the vacuum cleaner, make sure that they are completely dry.  
When filters are soiled, their effectiveness is reduced, so do not neglect their regularly cleaning.

### Cleaning the accessories

- If the accessories are soiled, remove them from the vacuum cleaner and clean all dirt off of them (dust, hair, animal fur, etc.).
- To make removing hair wound on to the rotary brush easier to remove, you may cut this hair using scissors.

### Cleaning the turbo brush

Release the latches along the sides of the turbo brush **A23**, see figure C1. Remove the front cover and remove all dirt, hair, animal fur, etc. from the rotary brush and the inner area. After cleaning, put the front cover back and secure it in place using the locking latches.

Press the cover latches located on the underside of the turbo brush **A23** to release them, see figure C2. Remove the cover and remove any soils from the inner area of the turbo brush **A23**. Put the cover back in its place. An audible click will be heard when it slides back into place.

### Cleaning the outer surface of the vacuum cleaner

Clean the outer surface using a dry or a lightly dampened cloth. Then wipe it thoroughly dry.

For cleaning the vacuum cleaner, do not use steel wool, abrasive cleaning products, solvents etc.

## TECHNICAL SPECIFICATIONS

Rated voltage range .....	220 – 240 V~
Rated frequency .....	50 / 60 Hz
Rated power input .....	600 W
Power source of remote control .....	2x 1.5 V type AAA batteries
Noise level .....	59 dB(A)

The declared noise emission level of the appliance is 59 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.



### Safety class for electrical shock protection:

Class II – Electrical shock protection is provided by double or heavy-duty insulation.

We reserve the right to change text and technical specifications.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human

health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

### For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

### Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-usisivac-svc-9300bk-akcija-cena/>