

## Uputstvo za upotrebu

HISENSE zamrzivač FV206D4AW1

**Hisense**



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/hisense-zamrzivac-fv206d4aw1-akcija-cena/>

# Hisense

life reimagined

## USER'S OPERATION MANUAL

thoroughly, and retain for future reference

Before operating this unit, please read this manual

English

## Contents

Safety and warning information _____	2	Reversing the door _____	12
Installing your new appliance _____	8	Helpful hints and tips _____	13
Description of the appliance _____	9	Cleaning and care _____	14
Using your appliance _____	9	Troubleshooting _____	15
Control panel _____	10	Disposal of the appliance _____	16



## Safety and warning information

For your safety and correct usage, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life, will be properly informed on its usage and safety notices.

For the safety of life and property, keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

### **Safety for children and others who are vulnerable people**

- According to EN standard

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

- According to IEC standard

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning

---

use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- Keep all packaging away from children as there is risk of suffocation.
- If you are discarding the appliance, pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside it.
- If this appliance, featuring a magnetic door seals, is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make the spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

### **General safety**



- **WARNING** — This appliance is intended to be used in household and similar applications such as
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses and by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments;
  - catering and similar non-retail applications.
- **WARNING** — Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **WARNING** — If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING** — Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING** — Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING** — Do not damage the refrigerant circuit.
- **WARNING** — Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.



- 
- **WARNING** — The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.
  - **WARNING** —When positioning the appliance, ensure the supply cord is not trapped or damaged.
  - **WARNING** —Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
  - **WARNING**—Food needs to be packed in bags before putting into the refrigerator, and liquids need to be packed in bottles or capped containers to avoid the problem that the product design structure is not easy to clean.



The symbol  is a warning and indicates the refrigerant and insulation blowing gas are flammable.

**Warning: Risk of fire / flammable materials**

## Replacing the illuminating lamps

- **WARNING**—The illuminating lamps must not be replaced by the user! If the illuminating lamps is damaged, contact the customer helpline for assistance.

This warning is only for refrigerators that contain illuminating lamps.

## Refrigerant

The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

The refrigerant (R600a) is flammable.

- **WARNING** — Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.

If the refrigerant circuit should be damaged:

- Avoid opening flames and sources of ignition.
- Thoroughly ventilate the room in which the appliance is situated

It is dangerous to alter the specifications or modify this product in any way.

Any damage to the cord may cause a shortcircuit, fire, and/or electric shock.



### **Electrical safety**

1. The power cord must not be lengthened.
2. Make sure that the power plug is not crushed or damaged. A crushed or damaged power plug may overheat and cause a fire.
3. Make sure that you can access the main plug of the appliance.
4. Do not pull the main cable.
5. If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
6. You must not operate the appliance without the interior lighting lamp cover.
7. The fridge is only applied with power supply of single phase alternating current of 220~240V/50Hz. If fluctuation of voltage in the district of user is so large that the voltage exceeds the above scope, for safety sake, be sure to apply A.C. Automatic voltage regulator of more than 350W to the fridge. The fridge must employ a special power socket instead of common one with other electric appliances. Its plug must match the socket with ground wire.

### **Daily use**

- Do not store flammable gass or liquids in the appliance, There is a risk of an explosion.
- Do not operate any electrical appliances in the appliance (e.g. electric ice cream makers, mixers etc.).
- When unplugging always pull the plug from the mains socket, do not pull on the cable.
- Do not place hot items near the plastic components of this appliance.

- 
- Do not place food products directly against the air outlet on the rear wall.
  - Store pre-packed frozen food in accordance with the frozen food manufacture's instructions.
  - The appliances manufactures storage recommendations should be strictly adhered to. Refer to relrelevant instructions for storage.
  - Do not place carbonated or fizzy drinks in the freeze compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.
  - Frozen food can cause frost burns if consumed straight from the freezer compartment.
  - Do not place the appliance in direct sunlight.
  - Keep burning candles, lamps and other items with naked flames away from the appliance so that do not set the appliance on fire.
  - The appliance is intended for keeping food stuff and/or beverages in normal household as explained in this instruction booklet The appliance is heavy. Care should be taken when moving it.
  - Do not remove nor touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
  - Never use the base, drawers, doors etc. to stand on or as supports.
  - Frozen food must not be refrozen once it has been thawed out.
  - Do not consume ice popsicles or ice cubes straight from the freezer as this can cause freezer burn to the mouth and lips.
  - To avoid items falling and causing injury or damage to the appliance, do not overload the door racks or put too much food in the crisper drawers.
  - **This refrigerating appliance is not intended to be used as a built-in appliance.**

**caution!****Care and cleaning**

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects, steam cleaner, ethereal oils, organic solvents or abrasive cleansers.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.

**Installation Important!**

- For electrical connection carefully, follow the instructions given in this manual.  
Unpack the appliance and check if there are damages on it.
- Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In this case retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation, follow the instructions relevant to installation.
- Wherever possible the back of the product should not be too close to a wall to avoid touching or catching warm parts (compressor, condenser) to prevent the risk of a fire, follow the instructions relevant to installation.
- The appliance must not be locate close to radiators or cookers.
- Make sure that the mains plug is accessible after the installation of the appliance.

**Service**


- Any electrical work required to do the servicing of the appliance should be carried out by qualified electrician or competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.
  - 1)If the appliance is Frost Free.
  - 2)If the appliance contains freezer compartment.

## Installing your new appliance

Before using the appliance for the first time, you should review the following tips.

### Ventilation of appliance

⚠ In order to improve efficiency of the cooling system and save energy, it is necessary to maintain good ventilation around the appliance. For this reason, sufficient clear space should be available around the refrigerator. It is advisable for there to be 50-70mm of space from the back to the wall, at least 100mm from its top, at least 100mm from its side to the wall and a clear space in front to allow the doors to open 135°. Please see the following diagrams.

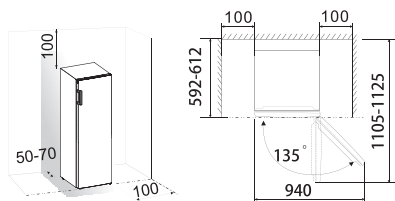

●Note:

This appliance performs well within the climate class from N to ST showed in the table below.


It may not work properly if left at a temperature above or below the indicated range for a long period.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

- Stand your appliance in a dry place to avoid moisture damage.
- Keep the appliance out of direct sunlight, rain or frost. Stand the appliance away from heat sources such as stoves, fires or heaters.

### Leveling of appliance


- For sufficient leveling and air circulating in the lower rear section of the appliance, the bottom feet may need to be adjusted.
- You can adjust them manually using a suitable spanner. To allow the doors to self-close, tilt the top backwards by about 10mm.

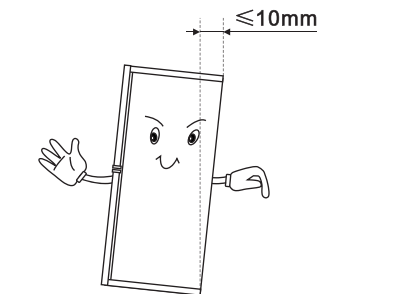

## Description of the appliance

### View of the appliance

1. Control panel
2. Serving tray
3. Middle drawer
4. Lower drawer
5. Adjustable bottom feet
6. Handle
7. Freezer door

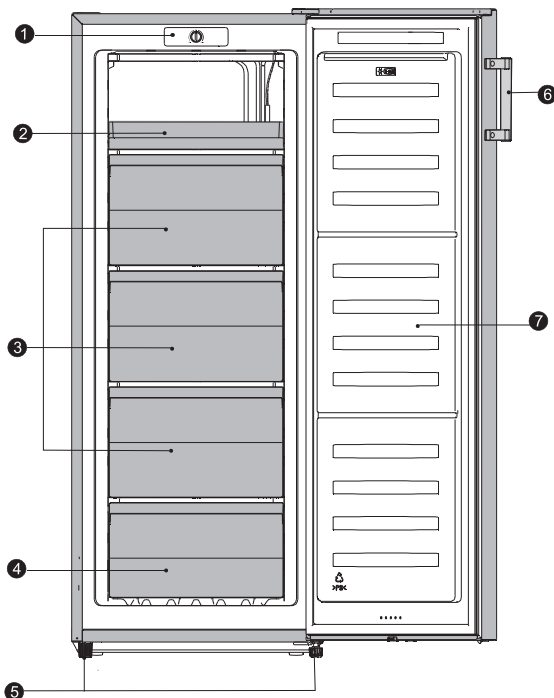

**Note:** Due to constant development of our products, your refrigerator may be slightly different from this instruction manual, but its functions and usage remain the same.

## Using your appliance

### Accessories 1)

#### Freezer Drawer

- For storing frozen food.

#### Ice-cube tray

- For making ice and storing ice-cubes.

#### Freezer food compartment 2)

- For freezing fresh food and storing frozen and deep-frozen food for long periods of time.

 
### Thawing food 2)

- In the freezer compartment.
- At room temperature.
- In a microwave oven.
- In a conventional or convection oven.
- Food once thawed should be re-frozen with the exception of special cases.

1) If the appliance contains related accessories and functions.

2) If the appliance contains a freezer compartment.

## Control panel



The thermostat control situated in the control panel regulates the temperature of the freezer compartment.

- Position "Cold"—Cold.
- Position "Mid"—Colder normally, setting at this position.

● Position "Colder"—Coldest.

The temperature will be affected by:

- Room temperature
- How often the door is opened
- How much food is stored
- Position of the appliance

In determining the correct temperature control setting, all these factors have to be considered and some experimentation may be necessary. Do not allow children to tamper with the controls or play with the

product. For optimum food preservation, a medium setting is generally the most suitable.

**Important!**—Normally we advise you select setting of "Mid", if you want the temperature higher or lower please turn the knob to Warmer or colder setting accordingly.

When you turn the knob to colder which can lead to the more energy efficiency. Otherwise, it would result the energy-consuming.

**Important!**—High ambient temperatures (e.g. on hot summer days) and a cold setting on the temperature regulator (position "Colder") can cause the compressor to run continuously or even non-stop!

**Reason:** when the ambient temperature is high, the compressor must run continuously to maintain the low temperature in the appliance.

### The freezer compartment

The **x\*\*\*** symbol means that your freezer will store frozen food at  $-18^{\circ}\text{C}$  ( $-0.4^{\circ}\text{F}$ ) or colder allowing for long term frozen-food storage and freezing of fresh food. The freezer temperature is controlled automatically by the thermostat situated in the control panel. Due to the different installations, methods of usage and weather conditions, adjustments to the temperature settings may be required.

These are best assessed against a temperature reading on a thermometer buried in the frozen food. The reading must

be taken quickly as the thermometer temperature will rise rapidly after removal. Place the fresh food in the top freezer drawer. Food may need rearranging to achieve this. During the freezing process the temperature of fresh food should be reduced quickly so that ice crystals are kept as small as possible to avoid damaging the structure of food. If freezing takes place slowly large ice crystals form and these will affect the quality of food once it has defrosted. Existing frozen food should be rearranged to leave space in the top two drawers for freezing.

The packets to be frozen should be placed in the drawer in contact with the drawer surface as far as possible and spaced apart to allow cold air to circulate between them. They should not touch existing packets. If there is enough room, transfer the food you have frozen to the baskets or drawers to allow you to freeze a further load in the top drawer. Exceptionally large items can be stored by removing the drawer. Frozen food should not be refrozen once it has thawed out. Do not remove items from the freezer if your hands are damp/wet, as this could cause skin abrasions or "frost/freezer burns". For safety reasons, the freezer drawer are fitted with stops but are readily removed by pulling them forward to the stop, then lifting the front and pulling all the way out. Refit by reversing this procedure.

### Frozen food storage

Pre-packed commercially frozen food should be stored in accordance with the manufacturer's instructions for a 4 star frozen food compartment and should be put in the freezer as soon as possible after purchase. Your freezer provides for long term storage which generally means up to 3 months but the length of the time can vary and it is important to follow the recommended times shown on packets of commercially frozen food. Do not place sealed containers or carbonated liquids such as fizzy drinks into the freezer as it creates pressure on the container which may cause it to explode leading to damage to the freezer. Ice cubes and ice lollies should not be consumed immediately after removal from the freezer as it may result in low temperature skin abrasions.








**NOTE:** High temperature setting will accelerate food waste.

## Reversing the door

The side at which the door opens can be changed, from the right side (as supplied) to the left side, if required.

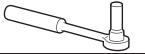
**Warning!** When reversing the door, the appliance must not be connected to the mains. Ensure that the plug is removed from the mains socket.
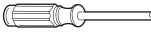
### Tools you will need

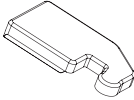
Not provided		
		
8mm socket wrench	Thin-blade screwdriver	Putty knife
		
Cross-shaped screwdriver	Monkey wrench	8mm wrench
Additional parts (in the plastic bag)		
		
Left Hinge Cover		

Note: If required you may lay the refrigerator on its back in order to gain access to the base, you should rest it on soft foam packaging or similar material to avoid damaging the backboard of the refrigerator. To reverse the door, the following steps are generally recommended.


1. Use a putty knife or thin-blade screwdriver to prize the screw hole cover which is at the top left corner of the refrigerator, and the upper hinge cover which is at the top right corner of the refrigerator.

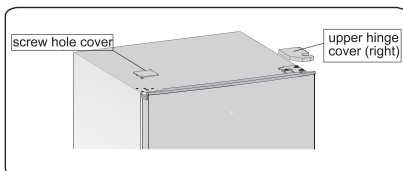


2. Unscrew the special flange self-tapping screws which are used for fixing the right upper hinge part by a 8mm socket driver or a spanner (please support the upper door with your hand when doing it).

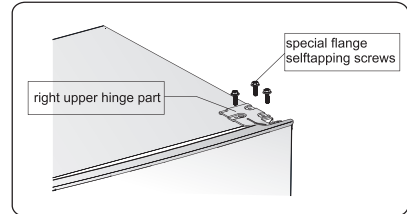

3. Remove the upper hinge axis, transfer it to reversed side and tighten securely, then put it in a safe place.

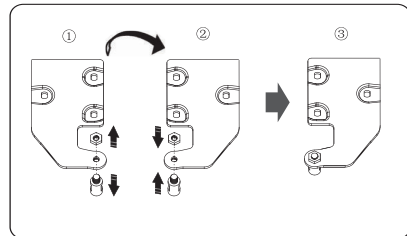



4. Remove the door from the lower hinge.  
**NOTE:** When removing the door, watch for washer(s) between the lower hinge and the bottom of the lower door that may stick to the door. Do not lose.

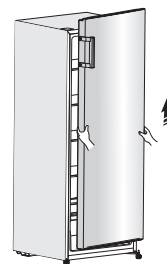




5. Place it on a smooth surface with its panel upwards. Loose screw ②


①,

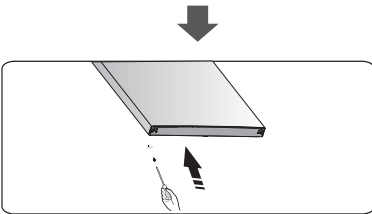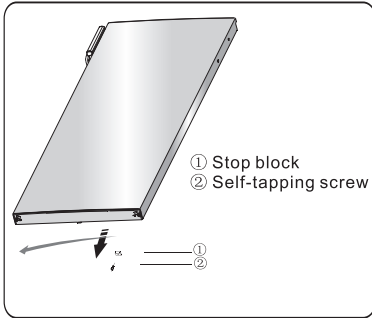


6. Lay the refrigerator on soft foam packaging or similar material. Remove both adjustable bottom feet parts, and the lower hinge part by unscrewing the special flange self-tapping screws.

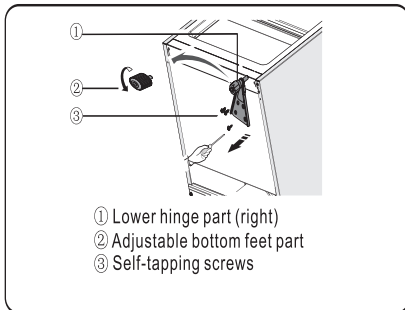


7. Replace the lower hinge part to the left side and fixing it with the special flange self-tapping screws. Replace the adjustable bottom feet parts to another side and fixing it.

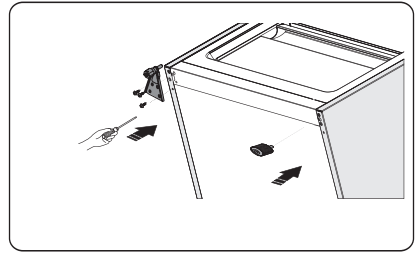


8. Transfer the door to the property position, adjust the lower hinge part, make the hinge axis into the lower hole of the door.

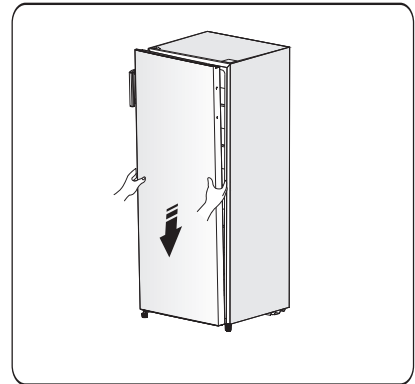


9. Transfer the upper hinge part and make the upper hinge axis into the upper hole of the door, and adjust the position of the door (please support the door with your hand when doing it), fixing the upper hinge part with the special flange self-tapping screws.

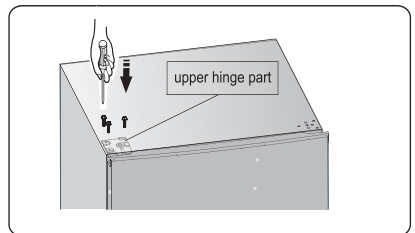

10. Install the screw hole cover on the top right corner of the refrigerator. Install the upper hinge cover (which is in the plastic bag) on the left corner. Put the other upper hinge cover into the plastic bag.

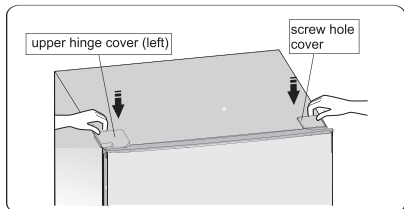

11. Move the handle from the left side of door to the right side .

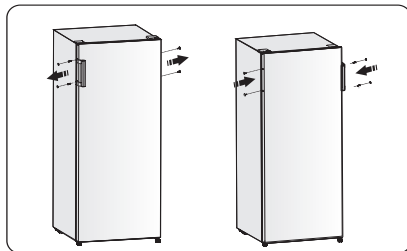

12. Open the upper door and install the door shelves, then close it.

### Warning!

When changing the side at which the door opens, the appliance must not be connected to the mains. Remove plug from the mains beforehand.

## Helpful hints and tips

### Noises during operation

**Clicks-** Whenever the compressor switches on or off, a click can be heard.

**Humming-** As soon as the compressor is in operation, you can hear it humming.

**Bubbling-** When refrigerant flows into thin tubes, you can hear bubbling or splashing noises.

**Splashing-** Even after the compressor has been switched off, this noise can be heard for a short time.

### Energy saving tips

- Do not install the appliance near stoves, radiators or other sources of warmth.
- Keep the time the appliance is open to a minimum.
- Do not set the temperature colder than necessary.
- Make sure the side plates and back plate of the appliance are at some distance from the wall, and follow the instructions relevant to installation.
- If the diagram shows the correct combination for the drawers, crisper and shelves, do not adjust the combination as it would produce an effect on energy consumption.

### Hints for freezing

- When first starting-up or after a period out of use. Before putting the food in the compartment, let the appliance run at least 2 hours on the higher settings.

- Prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible to subsequently thaw only the quantity required.
- Wrap up the food in aluminum foil or polyethylene (plastic) and make sure that the packages are airtight.
- Do not allow fresh, unfrozen food to touch food that is already frozen, thus avoiding a rise in the temperature of the latter.
- Iced products, if consumed immediately after removal from the freezer compartment, can possibly cause skin to become freezer burnt.
- It is recommended to label and date each frozen package in order to keep track of the storage time.

### Hints for the storage of frozen food

- Make sure that commercially frozen food was stored by the retailer.
- Once defrosted, foods deteriorate rapidly and can not be re-frozen.
- Do not exceed the storage period indicated by the food manufacturer.

**Note:** If the appliance contains related accessories and functions.

**To get the best energy efficiency of this product, please place all shelves, drawers on their original position as the illustration above.**

## Cleaning and care

### Cleaning and care

For hygienic reasons, the appliance interior, including interior accessories, should be cleaned regularly.

The appliance should be cleaned and maintained at least every two months.



**Warning!** Danger of electrical shock!

- The appliance should not be connected to the main power supply during cleaning. Before cleaning, switch the appliance off and remove the plug from the main power supply, switch off, or shut off the circuit breaker or fuse.

### Notice!

- Remove the food from the appliance before cleaning. Store them in a cool place and keep well covered.
- Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components.
- Hot vapors can lead to the damage of plastic parts.
- Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from an orange peel, butyric acid, or cleansers that contain acetic acid. Do not allow such substances to come into contact with appliance parts.
- Do not use any abrasive cleansers.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. Commercially available dish washing detergents may also be used.
- After cleaning, wipe with fresh water and a clean dish cloth.
- Accumulation of dust at the condenser increases energy consumption; clean the condenser at the back of the appliance once a year with a soft brush or a vacuum cleaner. (Only for the outside-condenser product)
- Check the water drain hole on the rear wall of the refrigerator compartment.
- Clear a blocked drain hole with the aid of something like soft green peg, an be careful not to create any damage to the cabinet by sharp objects.
- After everything is dry, the appliance back into service.

### Defrosting

#### Defrosting in the frozen food storage compartment

- Defrosting in the freezer chamber is operated manually. Before defrosting, take the food out.
- Take the ice tray and drawers out or put them into the fresh food compartment temporarily.
- Leave the door of the refrigerator open until ice and frost dissolve thoroughly and accumulate at the bottom of the freezer chamber. Wipe out the water with the soft cloth.
- In order to speed up the process of defrosting, you may put a bowl of warm water (about 50°C) into the freezer chamber and scrape away the ice and frost with a defrosting spatula. After doing so, be sure to set the knob of the temperature regulator to the original position.
- It is not advisable to heat the freezer chamber directly with hot water or a hair dryer while defrosting to avoid deformation of the inner case.
- It is also not advisable to scrape off ice and frost or separate foods from the containers which have been congealed together with the food with sharp tools or wooden bars, so as not to damage the inner casing or the surface of the evaporator.

**Notice!** The appliance should be defrosted at least once a month. During its usage, if the door has been opened frequently the appliance has been used in extreme humidity, we advise the user to defrost every two weeks.

#### Taking the appliance out of service

- Empty the appliance.
- Pull out the power plug.
- Clean thoroughly (see section: Cleaning and Care).
- Leave the door open to prevent odours.

## Troubleshooting



**Warning!** Before trouble-shooting, disconnect the power supply. Only a qualified electrician or other personnel must carry out the trouble-shooting that is not in the manual.

### Important!

Repairs to the appliance may only be performed by competent service engineers. Improper repairs can give rise to significant hazards for the user. If your appliance needs repairing, please contact your specialist dealer or your local Customer Service Center.

Problem	Possible cause	Solution
Appliance does not work.	Appliance is not switched on.	Switch on the appliance.
	Main plug is not plugged in or is loose.	Plug the appliance into the electrical socket.
	Fuse has blown or is defective.	Check fuse, replace if necessary.
	Outlet is defective.	Defective parts need to be repaired by an electrician.
Appliance cools too much.	Temperature is set too cold.	Turn the temperature regulator to a warmer setting temporarily.
The food is too warm.	Temperature is not properly adjusted.	Please refer to the "Initial Start Up" section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the Control panel to a colder setting temporarily.
	The appliance is near a heat source.	Please refer to the "Installation Location" section.
Interior lighting does not work.	Light bulb is defective.	Please look in the "Changing the Light Bulb" section.
Heavy build-up of frost, possibly also on the door seal.	Door seal is not air-tight (possibly after reversing the door).	Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time, shape the warmed door seal by hand so that it sits correctly.
Unusual noises.	Appliance is not level.	Readjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.
The compressor does not start immediately after changing the temperature setting.	This is normal, no error has occurred.	The compressor starts after a period of time.
Water on the floor or storage shelves.	Water drain hole is blocked.	Refer to the "Cleaning and Care" section.

## Disposal of the appliance

It is prohibited to dispose of this appliance as household waste.

### Packaging materials


Packaging materials with the recycle symbol are recyclable. Dispose of the packaging into a suitable waste collection container to recycle it.

### Before disposal of the appliance

1. Pull out the mains plug from the mains socket.
2. Cut off the power cord and discard with the mains plug

Warning! Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition.

Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.

	Correct Disposal of this product
	<p>This symbol on the product or in its packing indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.</p>

To avoid contamination of food, please respect the following instructions

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making icecream and making ice cubes.
- One-, two- and three-star compartments are not suitable for the freezing of fresh food.

Order	Compartments TYPE	Target storage temp.[°C]	Appropriate food
1	(***)*-Freezer	≤ -18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), suitable for frozen fresh food.
2	***-Freezer	≤ -18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), are not suitable for frozen fresh food.
3	** -Freezer	≤ -12	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 2 months, the longer the storage time, the worse the taste and nutrition), are not suitable for frozen fresh food.
4	*-Freezer	≤ -6	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 1 months, the longer the storage time, the worse the taste and nutrition), are not suitable for frozen fresh food.
5	0-star	-6 ≤ 0	Fresh pork, beef, fish, chicken, some packaged processed foods, etc. (Recommended to eat within the same day, preferably no more than 3 days). Partially encapsulated processed foods (non-freezable foods)

Note: please store different foods according to the compartments or target storage temperature of your purchased products.

- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

**Water dispenser cleaning (special for water dispenser products):**

- Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days.

# Hisense

life reimagined

## UPUTSTVO ZA UPOTREBU

Pre upotrebe ovog uređaja, molimo vas da temeljno pročitate ovo uputstvo i da ga zadržite za slučaj potrebe.

Srpski

## Sadržaj

Bezbednosne informacije i upozorenja	2	Promena strane vrata	12
Instaliranje vašeg novog uređaja	8	Korisni saveti	13
Opis uređaja	9	Čišćenje i nega	14
Upotreba vašeg uređaja	9	Otklanjanje problema	15
Upravljački panel	10	Odlaganje uređaja	16



## Bezbednosne informacije i upozorenja

U cilju bezbedne i pravilne upotrebe, pre instaliranja i prve upotrebe uređaja, pažljivo pročitati ovo korisničko uputstvo, uključujući savete i upozorenja.

Kako bi se izbegle nepotrebne greške i nezgode, važno je osigurati da su sve osobe koje koriste uređaj dobro upoznate sa njegovom upotrebom i sigurnosnim karakteristikama. Sačuvati ovo uputstvo i postarati se da ono prati uređaj ukoliko se uređaj premesti ili proda, kako bi se sve osobe koje će koristiti uređaj propisno informisale o njegovoj upotrebi i upoznale sa sigurnosnim napomenama. Iz razloga zaštite zdravlja i imovine, primenjivati mere predostrožnosti iz ovog uputstva za upotrebu jer proizvođač neće biti odgovoran za štetu nastalu usled propusta.

### Bezbednost dece i ostalih ugroženih kategorija ljudi

- U skladu sa EN standardom

Ovaj uređaj mogu koristiti deca starija od 8 godina i osobe sa fizičkim, čulnim ili mentalnim invaliditetom kao i neiskusne osobe i osobe koje nisu upoznate sa upotrebom ovog uređaja, ukoliko to čine pod nadzorom ili prema datim smernicama i na bezbedan način i ukoliko su svesne povezanih opasnosti. Deci nije dozvoljeno da se igraju sa uređajem. Čišćenje i korisničko održavanje uređaja ne smeju obavljati deca bez nadzora.

Deca uzrasta od 3 do 8 godina mogu stavljati i uzimati hranu i druge proizvode iz rashladnih uređaja.

- U skladu sa IEC standardom

Ovaj uređaj nije predviđen za upotrebu od strane osoba (uključujući decu) sa smanjenim fizičkim, čulnim ili mentalnim sposobnostima, kao i neiskusnih osoba i osoba koje nisu upoznate sa upotrebom ovog uređaja, osim ukoliko to čine pod nadzorom ili prema smernicama za upotrebu uređaja datim od strane osobe odgovorne za njihovu bezbednost.



Deca bi trebalo da budu pod nadzorom kako bi se sprečilo njihovo igranje sa uređajem.

- Držati svu ambalažu van dohvata dece jer postoji rizik od gušenja.
- Ukoliko više nećete koristiti uređaj, isključiti ga iz struje, iseći strujni kabl (što bliže uređaju) i skinuti vrata, kako bi se sprečio strujni udar ili zatvaranje dece u frižideru tokom igre.
- Ukoliko se ovim uređajem, koji sadrži magnetne zaptivače na vratima, zameniti stariji uređaj koji sadrži ručicu sa oprugom na vratima ili poklopcu, obavezno onesposobiti ručicu sa oprugom pre odlaganja starog uređaja. To će sprečiti zaglavljivanje deteta u starom frižideru.


## Opšta bezbednost



- **UPOZORENJE** — Ovaj uređaj je predviđen za upotrebu u domaćinstvu i sličnim primenama kao što su
  - kuhinja za radno osoblje u prodavnicama, kancelarijama i drugim radnim okruženjima;
  - farmerske kućice i za klijente u hotelima, motelima i drugim postavkama stambenog tipa;
  - objektima koji nude noćenje sa doručkom;
  - ugostiteljske i slične nemaloprodajne primene.
- **UPOZORENJE** — Ne držati eksplozivne supstance kao što su boce sa aerosolima sa zapaljivom sadržinom u ovom uređaju.
- **UPOZORENJE** — Ukoliko je strujni kabl oštećen, mora se zameniti od strane proizvođača, njegovog ovlašćenog servisera ili drugih kvalifikovanih lica kako bi se izbegla opasnost.
- **UPOZORENJE** — Ukloniti sve prepreke sa otvora za ventilaciju u kućištu uređaja ili u objektu u kom se uređaj koristi.
- **UPOZORENJE** — Ne koristiti mehaničke uređaje ili druga sredstva za ubrzavanje procesa odmrzavanja, osim onih koje preporučuje proizvođač.
- **UPOZORENJE** — Čuvati kolo sa rashladnim sredstvom od oštećenja.
- **UPOZORENJE** — Ne koristiti električne uređaje unutar odeljaka za skladištenje hrane u uređaju, osim ukoliko su odobreni od strane proizvođača.

- UPOZORENJE — Rashladno sredstvo i izolacioni gas su zapaljivi. Pri odlaganju uređaja, to učiniti isključivo u ovlašćenom centru za odlaganje otpada. Ne izlagati otvorenom plamenu.
- UPOZORENJE — Pri pozicioniranju uređaja, uveriti se da strujni kabl nije zaglavljen ili oštećen.
- UPOZORENJE — Ne postavljati produžne kablove ili prenosive izvore napajanja sa zadnje strane uređaja.
- UPOZORENJE — Hrana se mora spakovati u kesice pre stavljanja u frižider a tečnosti se moraju staviti u flaše ili posude sa poklopcem kako bi se izbegli problemi jer konstrukcija proizvoda nije laka za čišćenje.



Simbol  predstavlja upozorenje i ukazuje na to da su rashladno sredstvo i izolacioni gas zapaljivi.

### **Upozorenje: Rizik od požara/zapaljivih materijala**

## **Zamena lampica za osvetljenje**

- UPOZORENJE — Lampice za osvetljenje se ne smeju menjati od strane korisnika! Ukoliko dođe do oštećenja lampica za osvetljenje, kontaktirati korisničku službu za pomoć.

Ovo upozorenje važi samo za frižidere koji su opremljeni lampicama za osvetljenje.

## **Rashladno sredstvo**

Rashladni izobutan (R600a) se nalazi u rashladnom kolu uređaja i predstavlja prirodni gas sa visokim nivoom kompatibilnosti sa prirodnom sredinom, ali je zapaljiv. Tokom transporta i instalacije uređaja, sprečiti oštećivanje bilo koje komponente kola sa rashladnim sredstvom.

Rashladno sredstvo (R600a) je zapaljivo.

- UPOZORENJE — Frižideri sadrže rashladno sredstvo i gasove u izolaciji. Rashladno sredstvo i gasovi se moraju odlagati na stručan način jer mogu izazvati povrede očiju ili se mogu zapaliti. Uveriti se da cevi kola sa rashladnim sredstvom nisu oštećene pre pravilnog odlaganja.

Ukoliko dođe do oštećenja kola sa rashladnim sredstvom:

- Izbegavati otvorene plamenove i izvore vatre.
- Dobro provetriti prostoriju u kojoj se nalazi uređaj.

Opasno je menjati specifikacije ili modifikovati ovaj proizvod na bilo koji način.

Bilo koje oštećenje kabla može izazvati kratak spoj, požar i/ili strujni udar.



## **Električna bezbednost**

1. Strujni kabl se ne sme produžavati.
2. Uveriti se da utikač nije prignječen ili oštećen.  
Prignječen ili oštećen utikač se može pregrejati i izazvati požar.
3. Uveriti se da je omogućen pristup glavnom utikaču uređaja.
4. Ne vući glavni strujni kabl.
5. Ukoliko je utičnica labava, ne uključivati strujni utikač. Postoji rizik od strujnog udara ili požara.
6. Ne smete koristiti uređaj ukoliko fali poklopac unutrašnje lampice za osvetljenje.
7. Frižider se može napajati isključivo jednofaznom naizmjeničnom strujom od 220~240V/50Hz. Ukoliko je fluktuacija napona u mestu korisnika toliko velika da napon prelazi gorenavedeni opseg, iz razloga bezbednosti obavezno povezati automatski regulator naizmjeničnog napona, čija je snaga veća od 350W, na frižider. Frižider mora koristiti posebnu utičnicu a ne utičnicu koju deli sa drugim električnim uređajima. Žice za uzemljenje na utikaču frižidera i na utičnici se moraju poklapati.

## **Svakodnevna upotreba**

- Ne držati zapaljive gasove ili tečnosti u uređaju. Postoji rizik od eksplozije.
- Ne koristiti bilo koje električne uređaje u uređaju (npr. električne aparate za sladoled, mikser, itd.).
- Prilikom isključivanja iz struje uvek najpre izvući utikač iz utičnice a ne vući za kabl.
- Ne postavljati vruće predmete blizu plastičnih komponenti ovog uređaja.

- 
- Ne postavljati prehrambene proizvode direktno uz odvod za vazduh na zadnjoj strani.
  - Prethodno upakovane zamrznute namirnice držati u skladu sa smernicama proizvođača za zamrznutu hranu.
  - Preporuke za skladištenje koje je definisano proizvođač uređaja se moraju strogo poštovati. Videti relevantne smernice za skladištenje.
  - Ne stavljati gazirana pića ili sokove u odeljak za zamrzavanje jer se stvara pritisak u boci, koji može izazvati njeno pucanje i oštećenje uređaja.
  - Zamrznuta hrana može izazvati promrzline ukoliko se konzumira direktno iz odeljka za zamrzavanje.
  - Ne izlagati uređaj direktnoj sunčevoj svetlosti.
  - Držati sveće, lampe i ostale predmete sa otvorenim plamenom dalje od uređaja kako se uređaj ne bi zapalio.
  - Uređaj je predviđen za držanje namirnica i/ili pića u normalnom domaćinstvu kao što je opisano u ovom uputstvu. Uređaj je težak. Potrebno je biti oprezan pri premeštanju uređaja.
  - Ne uklanjati niti dodirivati predmete iz odeljka za zamrzavanje ukoliko su vam ruke vlažne/mokre, jer to može izazvati nagrizanje kože ili promrzline.
  - Nikada ne koristiti osnovu, fijke, vrata, itd., za stajanje na njima ili kao oslonac.
  - Zamrznuta hrana se ne sme ponovo zamrzavati nakon otapanja.
  - Ne konzumirati ledene lizalice ili kockice leda direktno iz zamrzivača jer mogu izazvati promrzline u ustima i na usnama.
  - Kako bi se izbeglo ispadanje predmeta i izazivanje fizičke povrede ili oštećenja uređaja, ne preopterećivati police na vratima niti stavljati previše hrane u fijke za održavanje svežine.
  - **Ovaj uređaj za hlađenje nije predviđen za upotrebu kao ugradni uređaj.**

## **Oprez!**

### **Nega i čišćenje**

- Pre održavanja, isključiti uređaj i izvaditi glavni utikač iz utičnice.
- Ne čistiti uređaj metalnim predmetima, paročistačima, eteričnim uljima, organskim razređivačima ili abrazivnim sredstvima za čišćenje.
- Ne koristiti oštre predmete za uklanjanje leda sa uređaja. Koristiti plastični strugač.

### **Važno za instalaciju!**

- U vezi sa električnim povezivanjem pažljivo pratiti smernice iz ovog uputstva.  
Otpakovati uređaj i proveriti da na njemu nema oštećenja.
- Ne povezivati uređaj ukoliko je oštećen. Sve moguće štete odmah prijaviti tamo gde ste kupili uređaj. U ovom slučaju zadržati ambalažu.
- Savetuje se da se sačeka najmanje četiri sata pre povezivanje uređaja kako bi se omogućilo vraćanje ulja u kompresor.
- Potrebno je obezbediti adekvatnu cirkulaciju vazduha oko uređaja, jer u suprotnom može doći do pregrevanja. Kako bi se postigla dovoljna ventilacija, pratiti smernice vezane za instalaciju.
- Gde je to moguće zadnja strana proizvoda ne bi trebalo da bude preblizu zida kako bi se izbeglo dodirivanje ili hvatanje za vruće delove (kompresor, kondenzator) kako bi se sprečio rizik od požara; poštovati smernice vezane za instalaciju.
- Uređaj se ne sme postavljati blizu radijatora ili šporeta.
- Uveriti se da je strujni utikač pristupačan nakon instaliranja uređaja.

### **Servis**


- Sve električne radove koji su potrebni za servisiranje uređaja bi trebalo da obavi kvalifikovani električan ili stručno lice.
- Ovaj proizvod se mora servisirati od strane ovlašćenog servisa i moraju se koristiti isključivo originalni rezervni delovi.
  - 1) Ukoliko je uređaj Frost Free (sprečava formiranje leda).
  - 2) Ukoliko uređaj sadrži odeljak za zamrzavanje.

## Instaliranje vašeg novog uređaja

Pre prve upotrebe uređaja, potrebno je upoznati se sa sledećim savetima.

### Ventilacija uređaja

⚠ Kako bi se unapredila efikasnost rashladnog sistema i uštedela energija, neophodno je održati dobru ventilaciju oko uređaja. Iz ovog razloga je potrebno ostaviti dovoljno slobodnog prostora oko frižidera. Savetuje se ostavljanje prostora od 50-70mm od zadnje strane do zida, najmanje 100mm od gornje strane, najmanje 100mm od bočnih strana do zida i slobodan prostor ispred uređaja kako bi se omogućilo otvaranje vrata do 135°. Molimo pogledajte sledeće dijagrame.

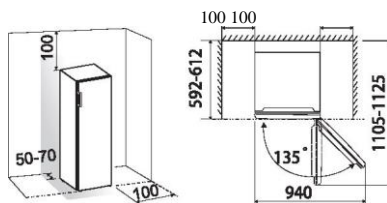

### • Napomena:

Ovaj uređaj dobro radi u klimatskoj klasi od N do ST koje su prikazane u tabeli u nastavku. Možda neće raditi kako treba ukoliko se duže vreme ostavi na temperaturi višoj ili nižoj od prikazanog opsega.

Klimatska klasa	Temperatura sredine
SN	+10°C do +32°C
N	+16°C do +32°C
ST	+16°C do +38°C
T	+16°C do +43°C


- Postaviti vaš uređaj na suvom mestu kako bi se izbeglo oštećenje usled vlage.
- Držati uređaj dalje od direktne sunčeve svetlosti, kiše ili mraza. Postaviti uređaj dalje od izvora toplote kao što su šporeti, kamini ili grejalice.

### Nivelisanje uređaja

• Kako bi se obavilo pravilno nivelisanje i omogućila cirkulacija vazduha u donjem zadnjem delu uređaja, možda će biti neophodno podesiti nožice.

• Mogu se podesiti ručno pomoću odgovarajućeg ključa.


Kako bi se omogućilo samostalno zatvaranje vrata, nagnuti gornji deo unazad za oko 10mm.

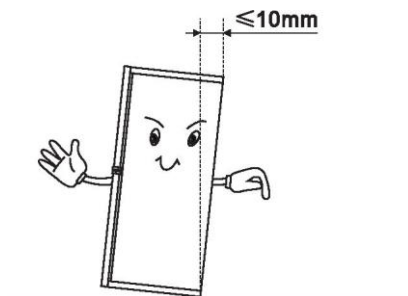

## Opis uređaja

### Izgled uređaja

1. Upravljački panel
2. Polica za posluživanje
3. Srednja fijoka
4. Donja fijoka
5. Podesive nožice
6. Ručica
7. Vrata zamrzivača

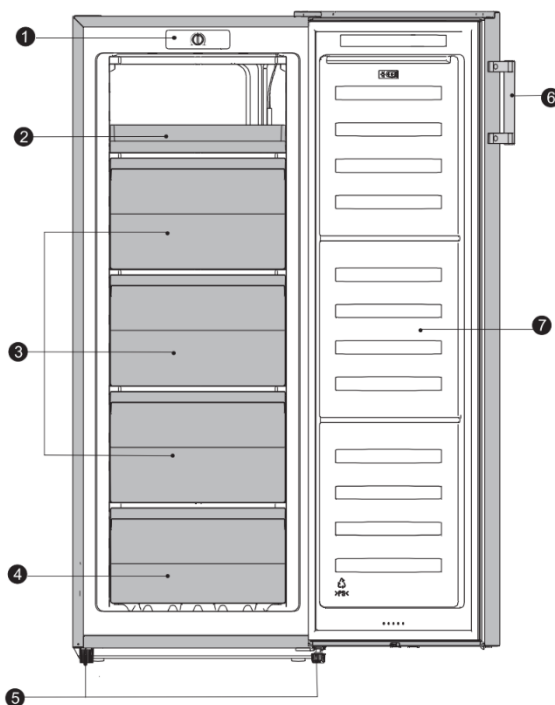

**Napomena:** Usled neprekidnog razvoja naših proizvoda, izgled vašeg frižidera se može donekle razlikovati od primera iz ovog uputstva, ali njegove funkcije i upotreba ostaju isti.

## Upotreba vašeg uređaja

### Prateća oprema 1)

#### Fijoka za zamrzavanje

- Za čuvanje zamrznute hrane.

#### Polica za kockice leda

- Za pravljenje leda i čuvanje kockica leda

#### Odeljak za zamrzavanje hrane 2)

- Za zamrzavanje sveže hrane i čuvanje zamrznutih i duboko zamrznutih namirnica duže vreme.

 
### Otapanje namirnica 2)

- U odeljku za zamrzavanje.
- Na sobnoj temperaturi.
- U mikrotalasnoj pećnici.
- U konvencionalnoj ili konvekcijskoj rerni.
- Namirnice koje su jednom otopljene ne bi trebalo da se ponovo zamrzavaju izuzev u posebnim slučajevima.

1) Ukoliko uređaj sadrži pripadajuću prateću opremu i funkcije.

2) Ukoliko uređaj sadrži odeljak za zamrzavanje.

## Upravljački panel



Termostat koji se nalazi na upravljačkom panelu reguliše temperaturu u odeljku za zamrzavanje.

- Položaj "Cold" - Hladno.
- Položaj "Mid" - Hladnije.

podrazumevana postavka.

- Položaj "Colder" - Najhladnije.
- Na temperaturu će uticati sledeće:

- Sobna temperatura
- Koliko često se vrata otvaraju
- Koliko namirnica se čuva
- Položaj uređaja

Prilikom određivanja tačnih postavki za kontrolu temperature, moraju se uzeti u obzir svi ovi faktori i može biti neophodno dodatno eksperimentisati. Ne dopuštati deci da koriste kontrole ili da se igraju sa proizvodom. Za optimalno čuvanje hrane, srednja postavka je generalno najpodesnija.


### **Važno! - Obično savetujemo da izaberete**

postavku "Mid", a ukoliko želite višu ili nižu temperaturu okrenuti dugme na topliju ili hladniju postavku. Kada okrenete dugme na hladnije to može dovesti do veće energetske efikasnosti. U suprotnom, rezultovaće većom potrošnjom energije.

**Važno! - Visoke** temperature sredine (npr. tokom toplih letnjih dana) i hladna postavka na regulatoru temperature (položaj "Colder") mogu izazvati dugotrajan ili čak neprekidan rad kompresora!

**Razlog:** kada je temperatura sredine visoka, kompresor mora raditi neprekidno kako bi se održala niska temperatura u uređaju.

### **Odeljak za zamrzavanje**

Simbol  znači da će vaš zamrzivač čuvati zamrznutu hranu na -18°C (-0,4F) ili nižoj temperaturi što će omogućiti dugotrajno skladištenje zamrznute hrane i zaleđivanje sveže hrane. Temperatura u zamrzivaču se kontroliše automatski preko termostata koji se nalazi na upravljačkom panelu. Zbog različitih instalacija, metoda upotrebe i vremenskih uslova, mogu biti potrebna usklađivanja temperaturnih postavki. One se najbolje procenjuju uz očitavanje temperature na termometru koji se postavi između zamrznutih namirnica. Očitana vrednost se mora brzo zabeležiti jer će temperatura na termometru brzo porasti nakon vađenja termometra. Postaviti sveže namirnice u gornju fijoku za zamrzavanje. Može biti neophodno promeniti raspored namirnica kako bi se to postiglo. Tokom procesa zamrzavanja

temperatura svežih namirnica bi trebalo da se snizi brzo tako da kristali leda budu što je moguće manji kako bi se izbeglo oštećivanje strukture namirnica. Ukoliko se zamrzavanje dešava polako, formiraju se veliki kristali leda i to će uticati na kvalitet namirnica kada se one odlede. Postojeće zamrznute namirnice bi trebalo da se premeste tako da se ostavi prostor u gornje dve fijeke za zamrzavanje. Pakovanja koja će biti zamrznuta bi trebalo da se postave u fijoku tako da dodiruju što veću površinu fijeke te da se međusobno razdvoje kako bi se omogućila cirkulacija hladnog vazduha između njih. Ne bi trebalo da dodiruju postojeća pakovanja. Ukoliko ima dovoljno prostora, prenesite zamrznute namirnice u korpe ili fijeke kako biste zamrzli preostale namirnice u gornjoj fijoci. Veoma krupne namirnice se mogu čuvati tako što se ukloni fijoka. Zamrznuta hrana se ne sme ponovo zamrzavati nakon otapanja. Ne vadite namirnice iz zamrzivača ukoliko su vam ruke vlažne/mokre, jer to može izazvati nagrizanje kože ili promrzline. Iz bezbednosnih razloga, fijeke za zamrzavanje su opremljene graničnicima ali se lako uklanjaju povlačenjem do graničnika, zatim podizanjem prednjeg dela i izvlačenjem do kraja. Za vraćanje fijeke primeniti obrnuti postupak.

### **Čuvanje zamrznute hrane**

Prehodno upakovana fabrički zamrznuta hrana bi trebalo da se čuva u skladu sa smernicama proizvođača za odeljak za zamrznutu hranu sa 4 zvezdice i potrebno je staviti je u zamrzivač što je pre moguće nakon kupovine. Vaš zamrzivač je predviđen za dugotrajno čuvanje hrane, što u opštem smislu znači do 3 meseca, ali vremensko trajanje može varirati i važno je poštovati preporučene rokove označene na pakovanjima fabričkih zamrznutih namirnica. Ne stavljati hermetički zatvorenu ambalažu ili gazirane tečnosti kao što su osvežavajući napici u zamrzivač jer dolazi do stvaranja pritiska na ambalažu koji može izazvati njeno pucanje i oštećivanje zamrzivača. Kockice leda i ledene lizalice ne bi trebalo da se konzumiraju neposredno nakon vađenja iz zamrzivača jer mogu rezultovati nagrizanjem kože usled niskih temperatura.

**NAPOMENA:** Visoke postavke temperature će ubrzati propadanje hrane.



## Promena strane vrata


Strana na koju se vrata otvaraju se može promeniti, sa desne strane (u isporučenom stanju) na levu stranu, ukoliko je potrebno. Upozorenje! Prilikom promene strane vrata, uređaj ne sme biti uključen u struju. Uveriti se da je utikač izvađen iz utičnice.

**Alati koji su vam potrebni**


Ne dolaze uz uređaj		
		
račna sa nasadnom glavom od 8mm	Odvijač sa ravnim vrhom	Špahtla
		
Odvijač sa krstastim vrhom	Francuski ključ	Ključ od 8mm
Dodatni delovi (u plastičnoj vrećici)		
		
Poklopac leve šarke		

Napomena: Ukoliko je potrebno možete oboriti frižider na zadnju stranu kako biste imali bolji pristup osnovi, trebalo bi da ga naslonite na materijal od meke pene ili sličan materijal kako bi se izbeglo oštećivanje zadnje table frižidera. Za promenu strane vrata, preporučuju se sledeći koraci.


1. Pomoću špahtle ili odvijača sa ravnim vrhom ukloniti poklopac rupe za vijak koji se nalazi u gornjem levom uglu frižidera i poklopac gornje šarke koji se nalazi u gornjem desnom uglu frižidera.

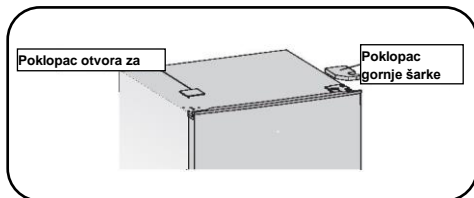

2. **Odšrafiti specijalne samourezne vijke** koji se koriste za fiksiranje desne gornje šarke pomoću račne sa nasadnom glavom od 8mm ili ključa (molimo vas da gornji deo vrata pridržavate rukom tokom ovog koraka).

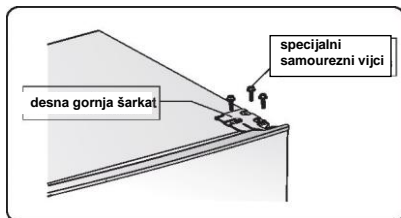


3. Ukloniti osovinicu gornje šarke, preneti je na suprotnu stranu i čvrsto zategnuti, zatim je zaštititi.

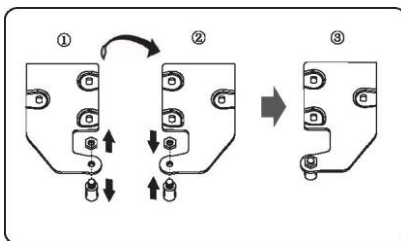


4. Skinuti vrata sa donje šarke.


**NAPOMENA:** Prilikom uklanjanja vrata, voditi računa o podloškama između donje šarke i donjeg dela vrata jer se mogu zalepiti za vrata. Voditi računa da se ne izgube.

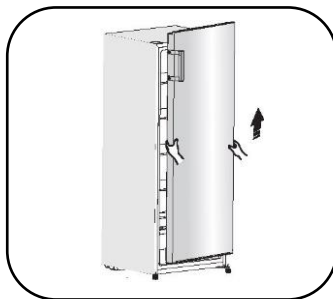


5. Postaviti vrata na ravnu površinu tako da je spoljašnja strana okrenuta nagore. Olabaviti vijak ②, ①.

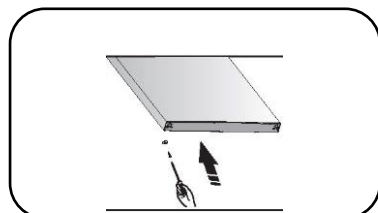


6. Postaviti frižider na materijal od meke pene ili sličan materijal. Ukloniti obe podesive nožice i donju šarku odvijanjem specijalnih samoureznih vijaka.

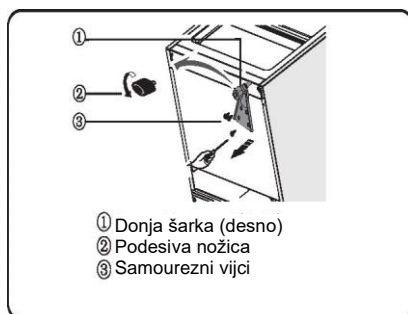


7. Premestiti donju šarku na levu stranu i pričvrstiti je specijalnim samoureznim vijcima. Prebaciti podesive nožice na drugu stranu i pričvrstiti ih.

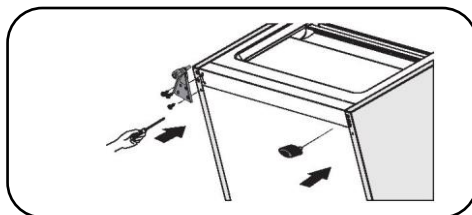


8. Postaviti vrata u odgovarajući položaj, podesiti donju šarku, postaviti osovinicu šarke u donji otvor na vratima.

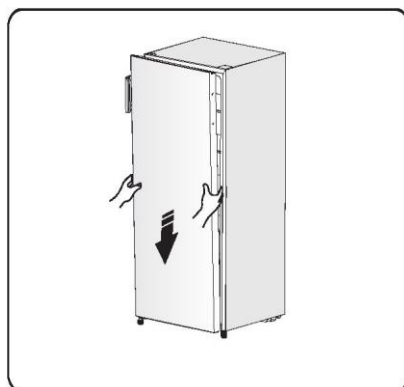


9. Preneti gornju šarku i postaviti osovinicu gornje šarke u gornji otvor na vratima i podesiti položaj vrata (molimo pridržavajte vrata rukom kada to radite), pričvrstiti gornju šarku specijalnim samoureznim vijcima.

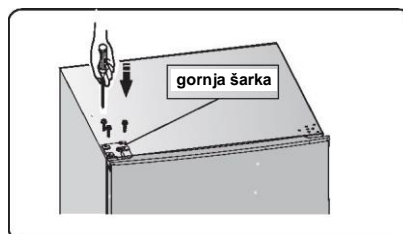

10. Postaviti poklopac rupe za vijke na gornji desni ugao frižidera. Postaviti poklopac gornje šarke (koji je u plastičnoj vrećici) na levi ugao. Staviti drugi poklopac za gornju šarku u plastičnu vrećicu.

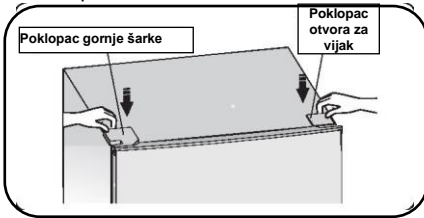

11. Premestiti ručicu sa leve strane vrata na desnu stranu

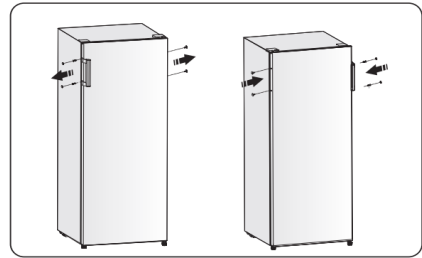

12. Otvoriti gornja vrata i postaviti police za vrata, zatim zatvoriti.

#### Upozorenje!

Prilikom promene strane na koju se vrata otvaraju, uređaj ne sme biti uključen u struju. Prethodno izvaditi utikač iz utičnice.

## Korisni saveti

### Buka tokom rada uređaja

**Klikovi** - Kada god se kompresor uključi ili isključi, čuje se klik.

**Brujanje** - Čim se kompresor uključi, može se čuti brujanje.

**Žuborenje** - Kada rashladna tečnost ulazi u tanke cevi, može se čuti žuborenje ili prskanje.

**Prskanje** - Čak i kada se kompresor isključi, ovaj šum se može nakratko čuti.

### Saveti za uštedu energije

- Ne instalirati uređaj u blizini šporeta, radijatora ili drugih izvora toplote.
- Vreme otvorenosti uređaja svesti na minimum.
- Ne podešavati nižu temperaturu nego što je to potrebno.
- Uveriti se da su bočni paneli i zadnji panel uređaja na određenoj udaljenosti od zida i poštovati smernice vezane za instalaciju.
- Ukoliko dijagram pokaže tačnu kombinaciju za fijke, odeljak za održavanje svežine i police, ne menjati takvu kombinaciju jer bi uticala na potrošnju energije.

### Saveti za zamrzavanje

- Prilikom prvo uključivanja nakon dužeg perioda nekorišćenja. Pre stavljanja namirnica u odeljke, ostaviti uređaj da radi najmanje 2 sata na višim postavkama.
- Namirnice podeliti u male porcije kako bi se omogućilo njihovo brzo i potpuno zamrzavanje i kasnije omogućilo otapanje

samo one količine koja je potrebna.

- Umotati hranu u aluminijumsku ili polietilensku (plastičnu) foliju i uveriti se da su pakovanja potpuno zaptivena.
- Sprečiti da sveža, nezamrznuta hrana dodirne zamrznutu hranu, kako bi se izbegao rast temperature zamrznute hrane.
- Zaleđeni proizvodi, ukoliko se konzumiraju odmah nakon uklanjanja iz odeljka za zamrzavanje, mogu uzrokovati promrzline na koži.
- Preporučuje se da se na svakom zamrznutom pakovanju napiše naziv i datum zamrzavanja kako bi se pratilo vreme držanja.

### Saveti za čuvanje zamrznutih namirnica

- Uveriti se da su fabrički zamrznute namirnice bile propisno držane od strane maloprodavca.
- Kada se odlede, namirnice brzo propadaju i ne mogu se ponovo zalediti.
- Ne prekoračivati period čuvanja koji je naznačen od strane proizvođača.

**Napomena:** Ukoliko uređaj sadrži pripadajuću prateću opremu i funkcije.

Kako bi se postigla najbolja energetska efikasnost ovog proizvoda, molimo vas da sve police i fijke postavite u njihov predviđen položaj kao što je prikazano na ilustraciji iznad.

## Čišćenje i nega

### Čišćenje i nega

Iz higijenskih razloga, unutrašnjost uređaja, uključujući unutrašnje elemente, bi trebalo da se redovno čisti.

Uređaj bi trebalo da se čisti i održava najmanje na svaka dva meseca.



**Upozorenje!** Opasnost od strujnog udara!

- Uređaj ne bi trebalo da bude uključen u struju tokom čišćenja. Pre čišćenja, isključiti uređaj i izvaditi utikač iz utičnice, ili isključiti sklopku ili osigurač.

### Napomena!

- Ukloniti namirnice iz uređaja pre čišćenja. Postaviti ih na hladno mesto i dobro ih pokriti.
- Nikada ne čistiti uređaj paročistačem. Može doći do akumuliranja vlage u električnim komponentama.
- Vrela isparenja mogu oštetiti plastične delove.
- Eterična ulja i organski razređivači mogu oštetiti plastične delove, npr. sok od limuna ili sok iz kore narandže, buterna kiselina ili sredstva za čišćenje koja sadrže sircetnu kiselinu. Sprečiti da te supstance dođe u dodir sa delovima uređaja.
- Ne koristiti abrazivna sredstva za čišćenje.
- Uređaj i unutrašnje elemente čistiti krpom i mlakom vodom. Takođe se mogu koristiti komercijalno dostupni deterdženti za pranje sudova.
- Nakon čišćenja, obrisati svežom vodom i čistom krpom za sudove.
- Taloženje prašine na kondenzatoru povećava potrošnju struje; očistiti kondenzator sa zadnje strane uređaja jednom godišnje mekom četkom ili usisivačem (samo kod proizvođača sa spoljašnjim kondenzatorom).
- Proveriti otvor za pražnjenje vode na zadnjoj strani komore frižidera.
- Očistiti zapušten otvor za pražnjenje pomoću nekog mekog štapića i voditi računa da se komora ne ošteti oštrim predmetima.
- Nakon što se sve potpuno osuši, ponovo uključiti uređaj.

### Otapanje frižidera

#### Otapanje u odeljku za čuvanje zamrznute hrane

- Otapanje u komori za zamrzavanje se kontroliše manuelno. Pre otapanja izvaditi namirnice.
- Izvaditi policu za led i fijke ili ih privremeno smestiti u odeljak za svežu hranu.
- Ostaviti vrata frižidera otvorenim sve dok se led i inje potpuno ne otope i dok se ne akumuliraju na dnu komore za zamrzavanje. Pokupiti vodu mekom krpom.
- Kako bi se ubrzao proces otapanja, možete postaviti posudu sa toplom vodom (oko 50°C) u komoru za zamrzavanje i sastrugati led pomoću strugača za otapanje. Nakon toga, obavezno vratiti dugme regulatora temperature u početni položaj.
- Ne savetuje se direktno zagrevanje komore za zamrzavanje toplotom vodom ili fenom za sušenje kose prilikom otapanja kako bi se izbeglo deformisanje unutrašnjeg kućišta.
- Ne savetuje se struganje leda ili razdvajanje namirnica od ambalaže koja je spleljena sa namirnicama pomoću oštrih alata ili drvenih štapova, kako se ne bi oštetilo unutrašnje kućište ili površina evaporatora.

**Napomena!** Uređaj bi trebalo da se odledi najmanje jednom mesečno. Ukoliko se vrata uređaja često otvaraju tokom njegove upotrebe ili se uređaj koristi u veoma vlažnim uslovima, savetujemo korisniku da postupak otapanja frižidera obavlja svake dve nedelje.

#### Stavljanje uređaja van upotrebe

- Isprazniti uređaj.
- Isključiti ga iz struje.
- Temeljno ga očistiti (videti odeljak: Čišćenje i nega).
- Ostaviti vrata otvorenim kako bi se sprečili neprijatni mirisi.

## Otklanjanje problema



**Upozorenje!** Pre otklanjanja problema, prekinuti napajanje. Isključivo kvalifikovani električar ili drugo radno osoblje moraju obaviti otklanjanje problema koji nisu opisani u uputstvu.

**Važno!**

Popravke na uređaju mogu obavljati isključivo stručni serviseri. Nepropisne popravke mogu izazvati velike opasnosti na strani korisnika. Ukoliko je neophodna popravka vašeg uređaja, molimo kontaktirajte našeg specijalizovanog distributera ili lokalnu Korisničku službu.

Problem	Mogući uzrok	Rešenje
Uređaj ne radi.	Uređaj nije uključen.	Uključiti uređaj.
	Glavni utikač nije uključen u struju ili je labavo postavljen.	Povezati uređaj u električnu utičnicu.
	Osigurač je probijen ili je neispravan.	Proveriti osigurač, zameniti ga ukoliko je potrebno.
	Utičnica je neispravna.	Neispravne delove mora popraviti električar.
Uređaj se previše hladi.	Podešena temperatura je preniska.	Privremeno okrenuti regulator temperature na topliju postavku.
Hrana je pretopla.	Temperatura nije pravilno podešena.	Molimo vas da pogledate odeljak "Prvo uključivanje".
	Vrata su bila otvorena duže vreme.	Vrata otvoriti samo onoliko koliko je potrebno.
	Velika količina tople hrane je stavljena u uređaj u poslednja 24 časa.	Privremeno okrenuti upravljački panel na hladniju postavku.
	Uređaj se nalazi blizu izvora toplote.	Molimo vas da pogledate odeljak "Lokacija za instaliranje".
Unutrašnje osvetljenje ne radi.	Sijalica je neispravna.	Molimo vas da pogledate odeljak "Zamena sijalice".
Velike naslage leda, verovatno i na dihtungu vrata.	Dihtung vrata ne zaptiva dobro (moguće nakon promene strane vrata).	Pažljivo zagrejati delove dihtunga vrata koji propuštaju vazduh pomoću fena za kosu (hladnijim vazduhom). Istovremeno oblikovati zagrejani dihtung vrata rukom tako da dobro nalegne.
Neuobičajeni zvuci.	Uređaj nije nivelisan.	Podesiti nožice.
	Uređaj dodiruje zid ili druge predmete.	Blago pomeriti uređaj.
	Komponenta, npr. cev, sa zadnje strane uređaja dodiruje drugi deo uređaja ili zid.	Ukoliko je potrebno, pažljivo saviti komponentu tako da ne dodiruje ništa.
Kompresor se ne uključuje odmah nakon izmene temperaturnih postavki.	Ovo je normalno, nema greške.	Kompresor će se uključiti nakon nekog vremena.
Voda na podu ili policama za stavljanje	Otvor za pražnjenje vode je zapušten.	Videti odeljak "Čišćenje i nega".

## Odlaganje uređaja

Zabranjeno je odlagati ovaj uređaj zajedno sa kućnim otpadom.


### Ambalažni materijal

Ambalažni materijal sa simbolom za reciklažu se može reciklirati. Ambalažu odlagati u odgovarajući kontejner za otpad kako bi se reciklirala.

### Pre odlaganja uređaja

1. Izvući utikač iz utičnice.
2. Iseći strujni kabl i odložiti ga zajedno sa utikačem

Upozorenje! Frižideri sadrže rashladno sredstvo i gasove u izolaciji. Rashladno sredstvo i gasovi se moraju odlagati na stručan način jer mogu izazvati povrede očiju ili se mogu zapaliti. Uveriti se da cevi kola sa rashladnim sredstvom nisu oštećene pre pravilnog odlaganja.

	Pravilno odlaganje ovog proizvoda
	<p>Ovaj simbol na proizvod ili na njegovoj ambalaži ukazuje na to da se ovaj proizvod ne sme tretirati kao običan otpad iz domaćinstva. Umesto toga, potrebno je odneti ga na odgovarajuće mesto za prikupljanje otpada za reciklažu električne i elektronske opreme. Obezbeđivanjem pravilnog odlaganja ovog proizvoda, pomoći ćete u sprečavanju negativnih posledica po životnu sredinu i zdravlje ljudi, koje bi inače bile izazvane neodgovarajućim odlaganjem ovog proizvoda. Za detaljnije informacije o recikliranju ovog proizvoda, molimo vas da kontaktirate lokalne nadležne organe, službu za odlaganje vašeg kućnog otpada ili prodavnicu u kojoj ste kupili proizvod.</p>

Kako bi se izbegla kontaminacija hrane, molimo pratite sledeće smernice

- Otvaranje vrata na duže vreme može izazvati znatno povećanje temperature u komorama uređaja.
- Redovno čistiti površine koje dolaze u dodir sa hranom i pristupačne sisteme za pražnjenje vode.
- Sveže meso i ribu držati u odgovarajućim posudama u frižideru, tako da ne dođu u dodir ili kako ne bi kapali na druge namirnice.
- Odeljci za zamrznutu hranu sa dve zvezdice su podesni za skladištenje prethodno zamrznute hrane, čuvanje ili pravljenje sladoleda i pravljenje ledenih lizalica.
- Odeljci sa jedno, dve ili tri zvezdice, nisu podesni za zamrzavanje sveže hrane.

Redosled	TIP odeljka	Ciljna temp. čuvanja hrane [°C]	Odgovarajuće namirnice
1	(***)*-Zamrzivač	≤-18	Morska hrana (riba, škampi, školjke), namirnice od slatkovodnih životinja i proizvodi od mesa (preporučeno 3 meseca, što je duže vreme čuvanja, lošiji je ukus i hranljiva vrednost), podesno za zamrznutu svežu hranu.
2	***-Zamrzivač	≤-18	Morska hrana (riba, škampi, školjke), namirnice od slatkovodnih životinja i proizvodi od mesa (preporučeno 3 meseca, što je duže vreme čuvanja, lošiji je ukus i hranljiva vrednost), nije podesno za zamrznutu svežu hranu.
3	** -Zamrzivač	≤-12	Morska hrana (riba, škampi, školjke), namirnice od slatkovodnih životinja i proizvodi od mesa (preporučeno 2 meseca, što je duže vreme čuvanja, lošiji je ukus i hranljiva vrednost), nije podesno za zamrznutu svežu hranu.
4	*-Zamrzivač	≤-6	Morska hrana (riba, škampi, školjke), namirnice od slatkovodnih životinja i proizvodi od mesa (preporučeno 1 meseca, što je duže vreme čuvanja, lošiji je ukus i hranljiva vrednost), nije podesno za zamrznutu svežu hranu.
5	0-zvezdica	-6≤0	Sveža svinjetina, junetina, riba, piletina, određene upakovane prehrambene namirnice, itd. (Preporučeno da se jedne istog dana, uz preporuku da ne prođe više od 3 dana). Delimično upakovane prehrambene namirnice (namirnice koje se ne smeju zamrzavati)

Napomena: molimo vas da različite namirnice čuvate u skladu sa odeljcima, odnosno ciljnim temperaturama čuvanja u vašem uređaju.

- Ukoliko je rashladni uređaj prazan duže vreme, isključiti ga, otopiti, očistiti, osušiti i ostaviti vrata otvorenim kako bi se sprečilo formiranje buđi u uređaju.

**Čišćenje uređaja za točenje vode (važi za proizvode sa uređajem za točenje vode):**

- Očistiti rezervoare za vodu ukoliko nisu korišćeni 48h; isprati sistem za vodu koji je povezan sa dovodom vode ukoliko vode nije točena 5 dana.

**Hisense**

life reimagined



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Hisense, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/hisense-zamrzivac-fv206d4aw1-akcija-cena/>