

Uputstvo za upotrebu

HOOVER usisivač TS2051/1 011



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/hoover-usisivac-ts20511-011-akcija-cena/>



BORN INNOVATIVE


HOOVER



BORN INNOVATIVE






















PRINTED IN P.R.C.
48021888

USER MANUAL (GB)P 01
UPUTSTVO ZA UPOTREBU(SRB).....P 04

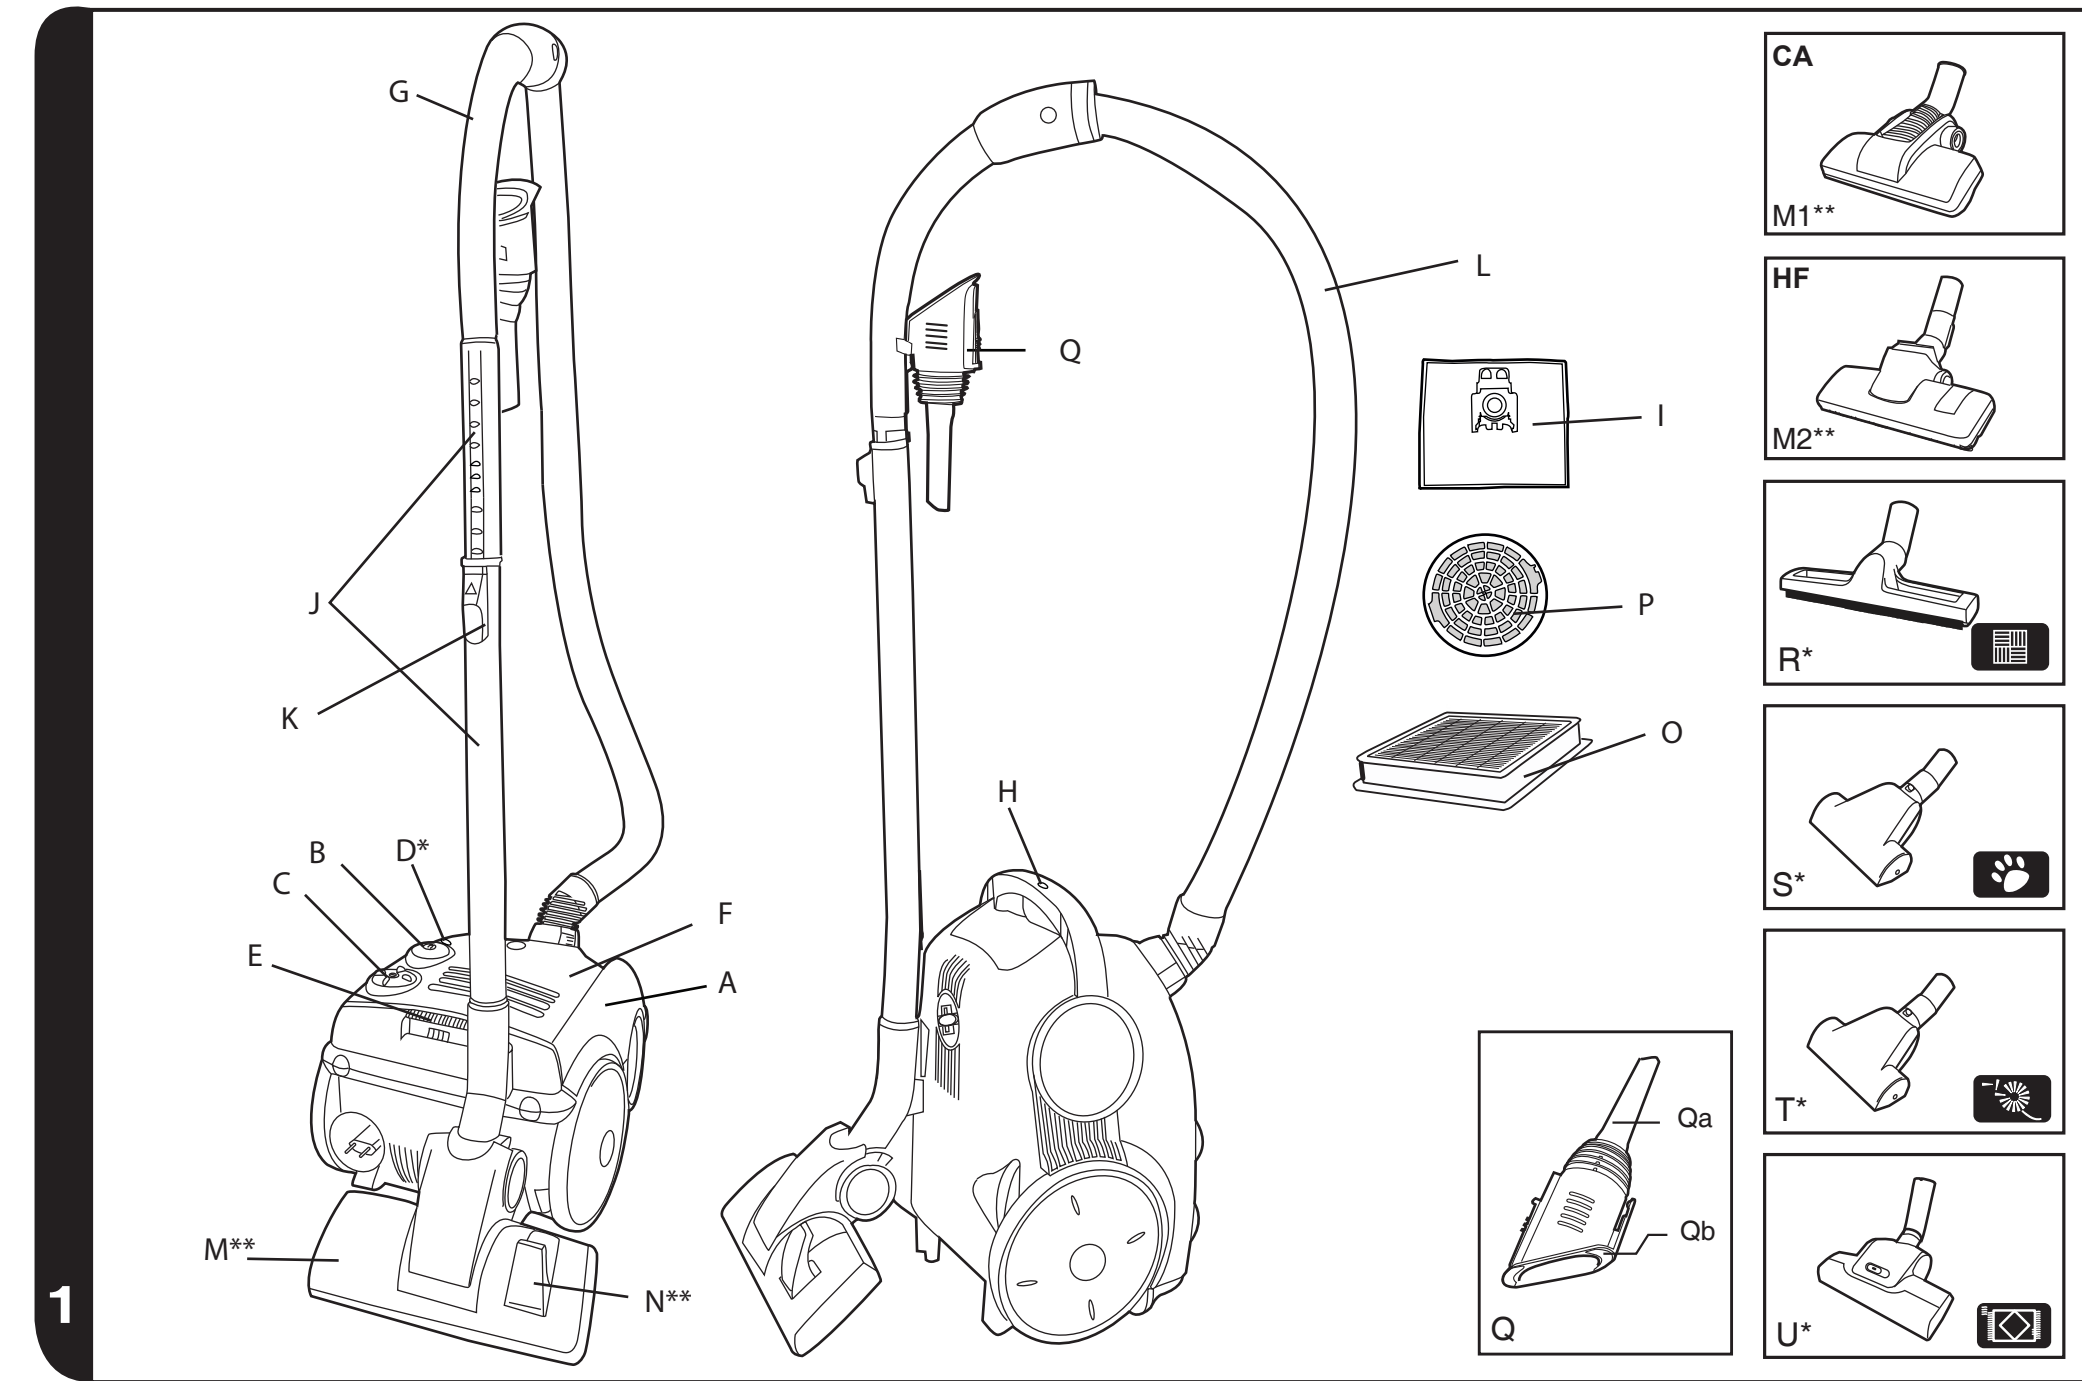

* Certain models only

** Certain models only, nozzles may vary according to model

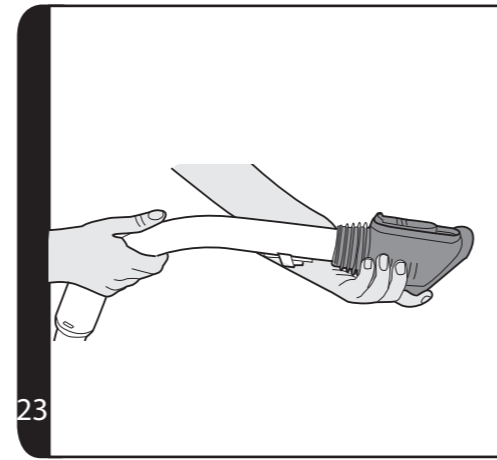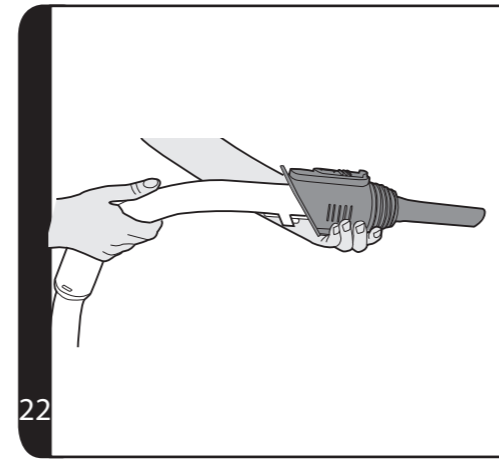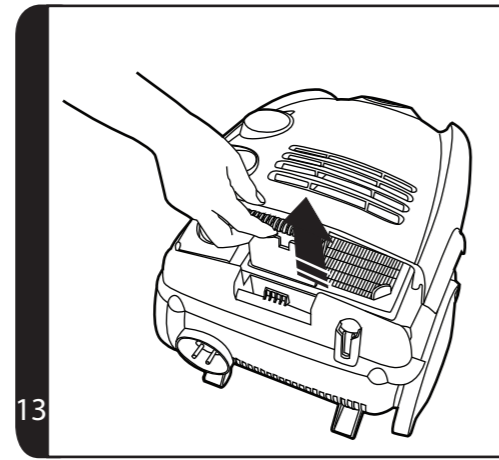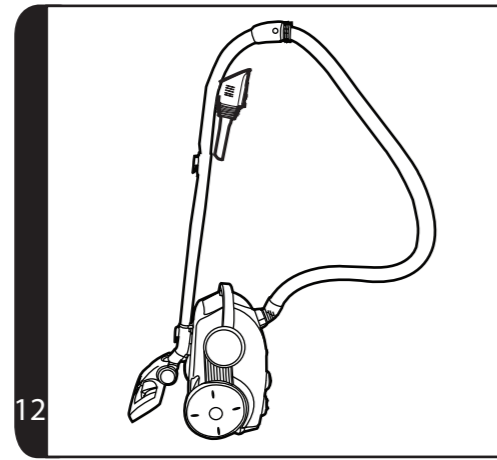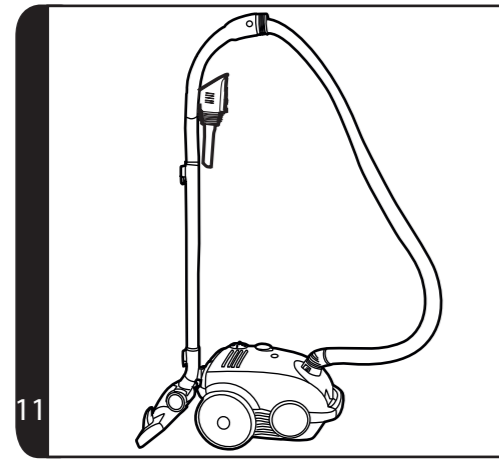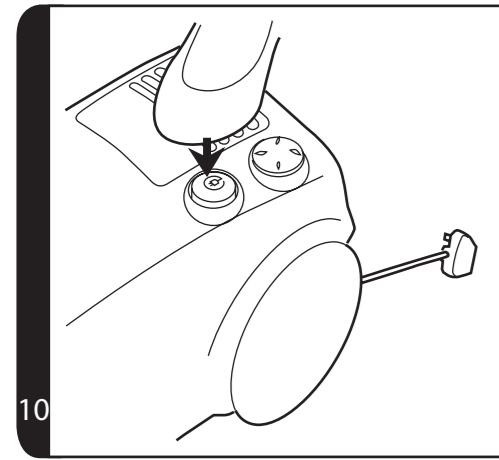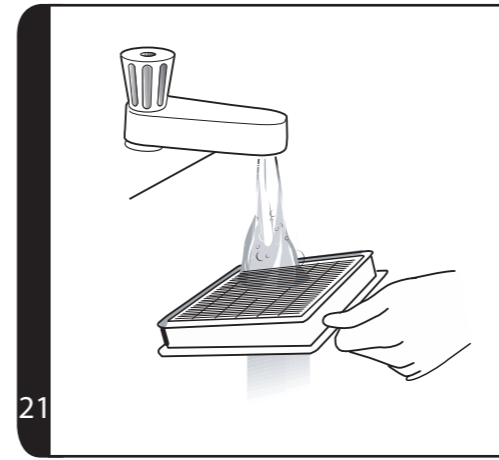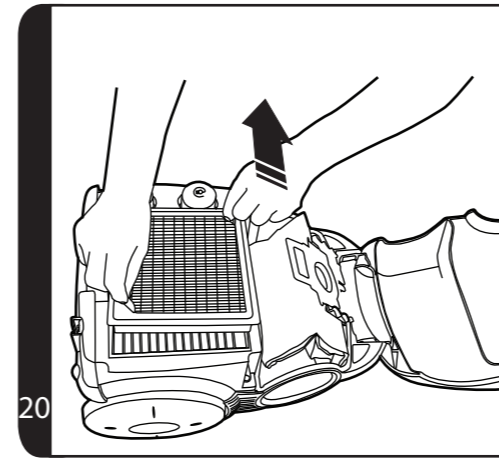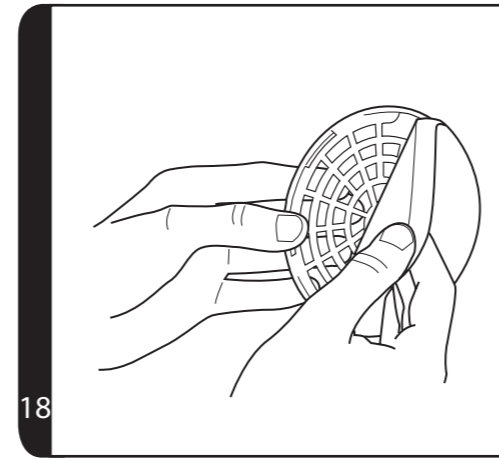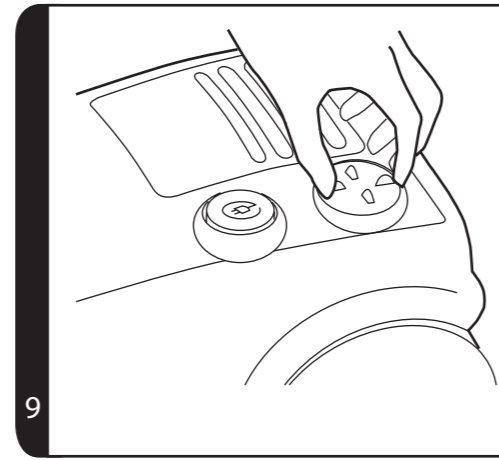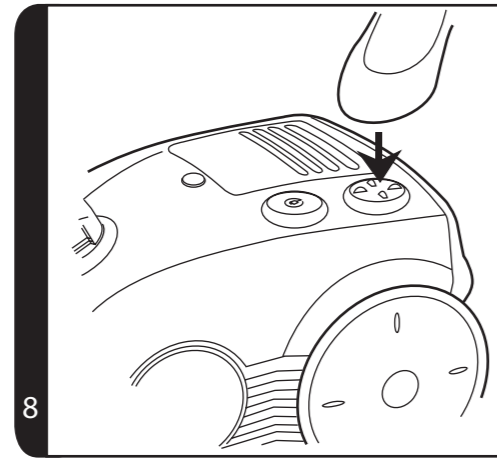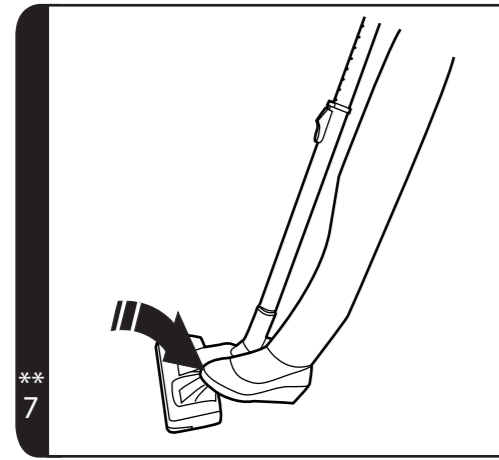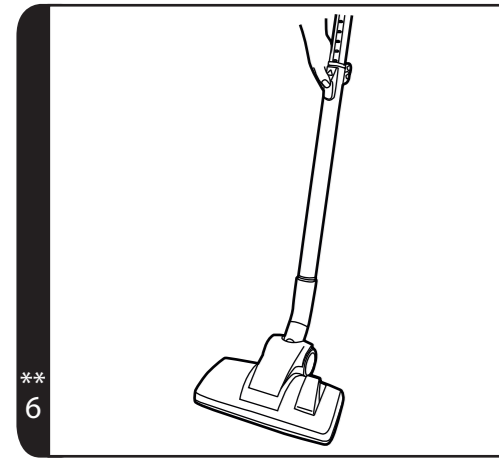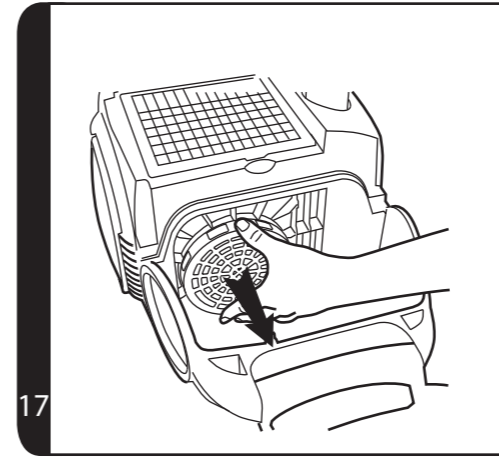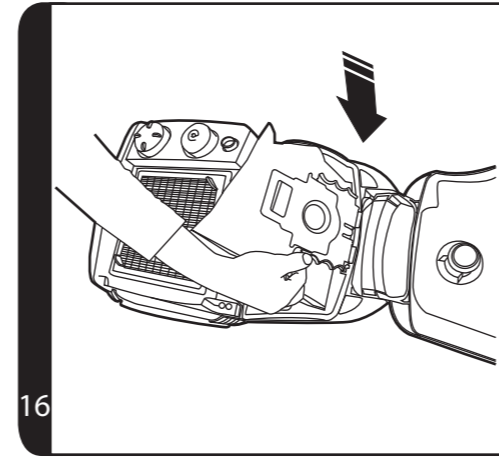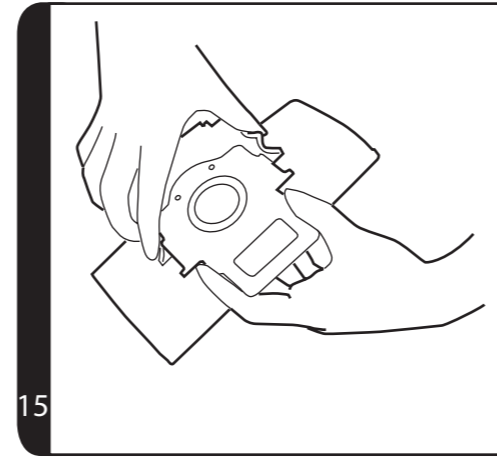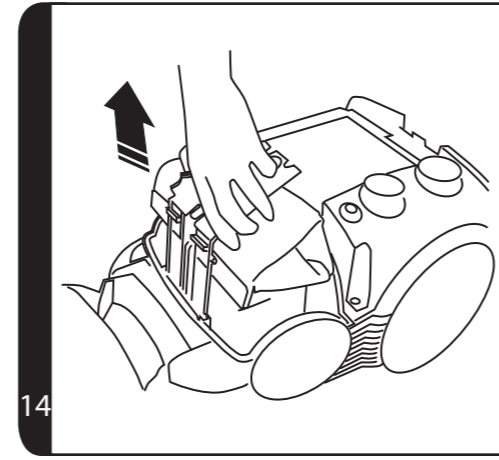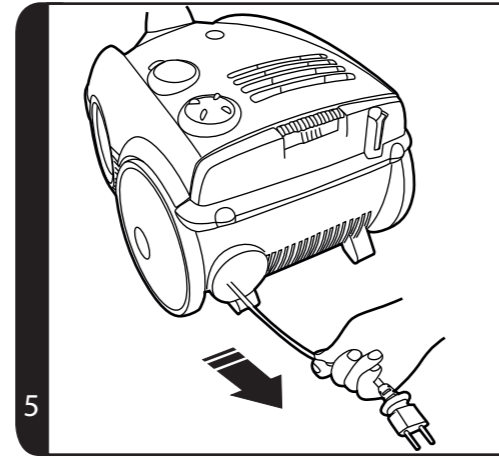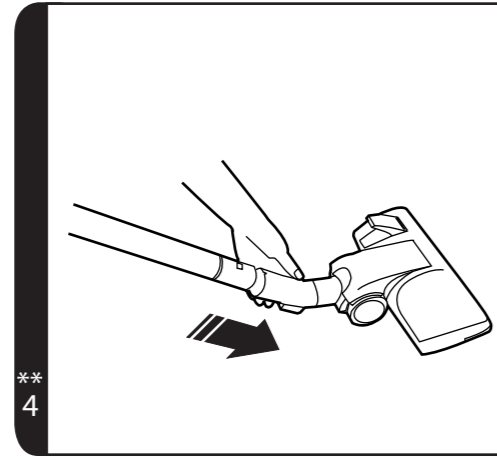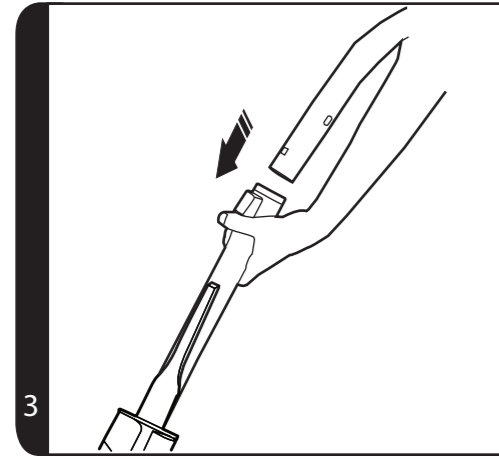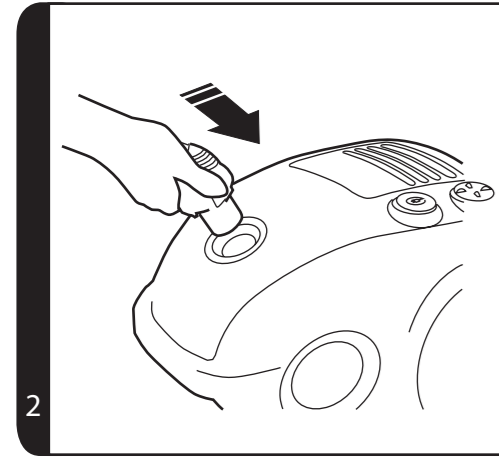

INSTRUCTIONS FOR SAFE USE

This appliance should only be used for domestic cleaning, as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

Do not leave the appliance plugged in. Always switch off and remove the plug from the socket after use, or before cleaning the appliance or any maintenance task.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the power cord is damaged stop using the appliance immediately. To avoid a safety hazard, an authorised HOOVER service engineer must replace the power cord.

Keep hands, feet, loose clothing and hair away from rotating brushes.

Use only attachments, consumables or spares recommended or supplied by HOOVER.

Static electricity: Some carpets can cause a small build up of static electricity. Any static discharge is not hazardous to health.

Do not use your appliance out of doors or on any wet surface or for wet pick up.

Do not pick up hard or sharp objects, matches, hot ashes, cigarette ends or other similar items.

Do not spray with or pick up flammable liquids, cleaning fluids, aerosols or their vapours.

Do not run over the power cord when using your appliance or remove the plug by pulling on the power cord.

Do not continue to use your appliance if it appears faulty.

HOOVER service: To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised HOOVER service engineer.

Do not stand on or wrap the cord around arms or legs when using your appliance.

Do not use the appliance to clean animals or people.

Do not position the appliance above you when cleaning the stairs.

The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.



 This appliance complies with the European Directives 2014/35/EU, 2014/30/EU and 2011/65/EU.

CANDY HOOVER GROUP S.r.l. Via Privata Eden Fumagalli, 20861 Brugherio (MB) Italy

GETTING TO KNOW YOUR CLEANER

- | | |
|------------------------------------|--|
| A. Main Cleaner | M. Carpet and Floor nozzle (GP)** |
| B. On / Off / Power Control Button | M1. Carpet Nozzle (CA)** |
| C. Cord Rewind Button | M2. Hard Floor Nozzle (HF)** |
| D. Bag Check Indicator | N. Surface Selector Pedal** |
| E. Bag Door Release Latch | O. Exhaust Filter |
| F. Bag Door | P. Pre motor filter |
| G. Hose Handle | Q. Accessory Set |
| H. Carry Handle | Qa. Crevice Tool |
| I. Dust Bag | Qb. Furniture Nozzle |
| J. Telescopic Tube | R. Parquet Nozzle* |
| K. Telescopic tube adjuster | S. Pet Hair Remover Mini Turbo Nozzle* |
| L. Hose | T. Allergy Remover Mini Turbo Nozzle* |
| | U. Grand Turbo Nozzle* |

ASSEMBLING YOUR CLEANER

Remove all components from the packaging.

1. Connect the hose to the cleaner bag door, ensuring it clips and locks into position. To release: simply press the two buttons on the hose end and pull. [2]
2. Connect the hose handle to the tube upper end. [3]
3. Connect the tube lower end to the nozzle. [4]

USING YOUR CLEANER

1. Extract power cord and plug it into the power supply. Do not pull the cord beyond the red marker. [5]
2. Adjust the length of the telescopic tube by moving the telescopic release button up and raise or lower the hose handle to the most comfortable cleaning position. [6]
3. Carpet & Floor Nozzle **. Press the pedal on the nozzle [7] to select the ideal cleaning mode for the floor type.
 - Hard Floor:** The brushes are lowered to protect the floor
 - Carpet:** With lifted brushes for the deepest clean
4. Switch the cleaner on by pressing the On/Off button on the cleaner main body. [8]
5. Fixed Power control - The cleaner will operate at a fixed power setting.
6. Variable Power control - Rotate the On/Off button to increase or decrease the suction level. Use low suction for delicate fabrics. [9]
7. Switch off at the end of use by pressing the On/Off button. Unplug and press the cord rewind pedal to wind the power cord back into the cleaner. [10]
8. Parking and Storage - The tube can be parked for temporary storage while in use [11], or in the storage position when not in use [12].

*Certain Models Only

** Certain models only, nozzles may vary according to model

CLEANER MAINTENANCE

Replacing The Dust Bag

If the bag check indicator is red please check and, if necessary, replace the bag.

1. Lift the bag door release latch [13] to open the cover, and pull the bag collar to remove the bag [14].
2. Fold a new bag as shown on the bag [15] and fit by inserting the collar into the bag holder [16].
3. Close the bag door.

WARNING - The bag door will NOT close if the dust bag and/or the bag holder are not assembled to the cleaner. Always ensure the bag and bag holder are present when closing the bag door.

Remember: The bag check indicator may also be red if an obstruction has occurred. In this case refer to 'Removing A Blockage From the System'.

Cleaning the Filters

To maintain optimum performance of your cleaner, please wash the filters after each 5 bag changes.

IMPORTANT - Regularly check and maintain the filters by following the filter maintenance instructions, it is also recommended that you purchase new filters after every 3rd filter wash. This will maintain your cleaners performance.

Cleaning the pre-motor filter:

1. Lift the bag door release latch [13] to open the cover and pull the bag collar to remove the bag [14].
2. Remove the pre-motor filter from the cleaner. [17]
3. Remove the filter from the holder. [18]
4. Wash in hand warm water, [19] and allow it to dry thoroughly before replacing to the cleaner.

Cleaning the exhaust filter:

1. Lift the bag door release latch [13] to open the cover.
2. Remove the exhaust filter. [20]
3. Wash the filter in hand warm water [21] and allow it to dry thoroughly before replacing to the cleaner.

REMEMBER: Do not use hot water or detergents. In the unlikely event of the filters becoming damaged, fit a Genuine Hoover replacement. Do not try and use the product without a dust bag or filter fitted.

Removing a Blockage From The System

If the bag check indicator is illuminated or flashing:

1. Check if the bag is full. If so refer to 'Replacing The Dust Bag'.
2. If it is not full, then;
 - A. Do the filters need cleaning? If so refer to 'Cleaning the Filter'.
 - B. Check if there is any other blockage in the system - Use a rod or a pole to remove any blockage from the Telescopic tube* or flexible hose.

WARNING - The bag check indicator will turn red if the cleaner is used when full, if there is a blockage or if the filters are dirty. If the cleaner is used for a significant period of time with the bag check indicator is red, a thermal cut out will switch the cleaner off to prevent overheating. The bag check indicator turn green once the cleaner has switched off to signal that the thermal cut out has been activated. If this should happen, switch the cleaner off, unplug and correct the fault. It will take about 30 minutes for the cut out to automatically reset.

ACCESSORIES AND NOZZLES

All accessories can be fitted to the end of the hose handle or the end of the telescopic tube.

Crevice Tool – For corners and hard to reach areas. [22]

Furniture Nozzle – For soft furniture and fabrics. [23]

Hard Floor Nozzle* – For wooden floors and other delicate floors. [R]

Pet Hair Remover Mini Turbo Nozzle* - Use the mini turbo nozzle on stairs or for deep cleaning on textile surfaces and other hard to clean areas. Particularly suitable for pet hairs removal. [S]

Allergen Remover Mini Turbo Nozzle* – Use the mini turbo nozzle on stairs or for deep cleaning on textile surfaces and other hard to clean areas. Particularly suitable for allergen removal. [T]

Grand Turbo Nozzle* - Use the turbo nozzle for deep cleaning on carpets. [U]

IMPORTANT: Do not use the mini turbo nozzle on rugs with long fringes, animal hides and carpet pile deeper than 15mm. **Do not keep the nozzle stationary while the brush is rotating.**

USER CHECKLIST

Should you have a problem with the product, complete this simple user checklist before calling your local Hoover service.

- Is there a working electricity supply to the cleaner? Please check with another electrical appliance.
- Is the dust bag over-filled? Please refer to 'Cleaner Maintenance'.
- Is the Filter blocked? Please refer to 'Cleaning the filter'.
- Is the hose or nozzle blocked? Please refer to 'Removing a blockage from the system'.
- Has the cleaner overheated? If so, it will take approximately 30 minutes to automatically reset.

*Certain Models Only

** Certain models only, nozzles may vary according to model

IMPORTANT INFORMATION

Hoover spares and Consumables

Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering parts always quote your model number.

Hoover Service

Should you require service at any time, please contact your local Hoover Service Office.

Quality

BSI ISO 9001

Hoover's factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001.

Your Guarantee

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Subject to change without notice.

UPUTSTVO ZA BEZBEDNU UPOTREBU

Ovaj aparat bi trebalo koristiti isključivo za upotrebu u domaćinstvima. Molimo Vas da detaljno proučite uputstvo pre korišćenja aparata.

Ne ostavljajte aparat uključenim u struju dok se ne koristi. Aparat uvek isključite i izvadite utikač iz utičnice nakon korišćenja, kao i pre čišćenja i održavanja.

Ovaj aparat mogu koristiti deca starija od 8 godina i ljudi sa redukovanim fizičkim, osećajnim ili mentalnim mogućnostima, ili nedostatkom poznavanja aparata isključivo pod nadzorom, ili ako su upućeni o bezbednom načinu korišćenja aparata. Deci nebi trebalo dati da se igraju sa aparatom. Čišćenje i održavanje usisivača nebi trebalo da rade deca bez nadzora.

Ukoliko dođe do oštećenja kabla, momentalno prestanite sa korišćenjem aparata. Kako biste izbegli bezbednosni hazard, pozovite isključivo ovlašćenog HOOVER serviseru da popravi usisivač.

Držite ruke, noge, odeću i kosu podalje od rotirajućih četki.

Koristite isključivo originalne HOOVER dodatke, kese i filtere.

Statički elektricitet: Neki tepisi mogu prouzrokovati stvaranje statičkog elektriciteta - to nije opasno po zdravlje.

Ne koristite vaš aparat za usisavanje spoljašnjih sredina i usisavanje tečnosti/mokrih površina.

Ne usisavajte oštre ili vruće objekte kao što su šibice, pepeo, i sl.

Ne prskajte usisivač i ne usisavajte zapaljive materije i njihova isparenja.

Nemojte gaziti po kablu dok koristite aparat. Nemojte vaditi utikač iz utičnice vučenjem kabla.

Ukoliko Vam se čini da nešto nije u redu sa aparatom, momentalno prestanite da ga koristite.

HOOVER servis: Kako biste obezbedili bezbedan i efikasan rad aparata, preporučujemo Vam da sve popravke i održavanje izvrši isključivo ovlašćeni HOOVER serviser.

Nemojte uvijati kabal oko ruku ili nogu dok koristite aparat.

Ne koristite aparat za čišćenje ljudi ili životinja.

Pri čišćenju stepenica, **UVEK** stavite aparat ispod, a ne iznad Vas.

Zaštita životne sredine

Ovaj simbol na aparatu indikuje da aparat ne sme biti tretiran kao običan komunalni otpad. Mora biti odnesen na adekvatno mesto za reciklažu/otpad elektronskog otpada. Odstranjivanje mora biti izvršeno u skladu sa lokalnim zakonima za odlaganje elektronskog otpada. Za detaljnije informacije o odlaganju ili recikliranju ovog aparata, molimo Vas da kontaktirate nadležne ljude u vašem gradu, servisu ili prodavnici tehnike.



This appliance complies with the European Directives 2014/35/EU, 2014/30/EU and 2011/65/EU.

CANDY HOOVER GROUP S.r.l. Via Privata Eden Fumagalli, 20861 Brugherio (MB) Italy

UPOZNAJTE VAŠ USISIVAČ

- | | |
|-------------------------------------|--|
| A. Telo usisivača | M. Nastavak za tepihe i podove (GP)** |
| B. Uključ-Isključ/Dugme za kontrolu | M1. Nastavak za tepihe (CA)** |
| C. Dugme za uvlačenje kabla | M2. Nastavak za tvrde povr (HF)** |
| D. Indikator napunjenosti kese | N. Pedala za izbor površine** |
| E. Bravica za otvaranje usisivača | O. Izduvni filter |
| F. Poklopac usisivača | P. Filter ispred motora |
| G. Drška creva | Q. Komplet dodataka |
| H. Drška za nošenje | Qa. Uski nastavak |
| I. Posuda za prašinu | Qb. Četka za nameštaj |
| J. Teleskopska cev | R. Četka za parket* |
| K. Dugme za podešavanje visine cevi | S. Turbo četka za uklanjanje dlaka* |
| L. Crevo | T. Turbo četka za uklanjanje alergena* |
| | U. Grand Turbo četka* |

SKLAPANJE USISIVAČA

Izvadite sve komponente iz pakovanja.

1. Povežite crevo sa vratima usisivača, tako da se ono pričvrsti u poziciji. Kako bioslobodili: Jednostavno pritisnite dva dugmeta sa strane i povucite. [2]
2. Povežite dršku creva sa gornjim delom cevi [3]
3. Povežite donji deo cevi sa odgovarajućim nastavkom. [4]

KORIŠĆENJE APARATA

1. Izvucite kabal i uključite usisivač u struju. Nemojte izvlačiti kabal preko crvene oznake na žici. [5]
2. Prilagodite dužinu teleskopske cevi pomeranjem dugmeta na gore, i pomeranjem cevi na gore ili dole, sve do najudobnije pozicije za čišćenje. [6]
3. Nastavak za tepihe i podove**. Pritisnite pedalu na nastavku [7] kako bi izabrali idealnu vrstu čišćenja prema površini.
 - Tvrde površine:** Četke su spuštene kako bi štatile pod.
 - Tepisi:** Četke su podignute, za dubinsko čišćenje.
4. Uključite usisivač pritiskom na odgovarajuće dugme. [8]
5. Modeli sa fiksnom kontrolom će uvek raditi na istoj snazi.
6. Modeli sa varijabilnom kontrolom - Okrenite dugme za uključ/isključ kako bi povećali/smanjili snagu. Koristite nisku snagu za delikatne površine. [9]
7. Isključite aparat pritiskom na odgovarajuće dugme. Isključite aparat iz struje ipritiskom na dugme za uvlačenje kabla pustite da se kabal uvuče.[10]
8. Parkiranje i odlaganje - Cev može biti privremeno parkirana pri korišćenju na mestu[11], ili u poziciji za odlaganje dok se usisivač ne koristi [12].

ODRŽAVANJE USISIVAČA

Zamena kese za prašinu

U slučaju da je indikator napunjenosti kese postao crven, molimo proverite i ako je potrebno zamentie kesu.

1. Podignite bravicu za otvaranje vrata usisivača [13] otvorite poklopac i povucite kragnu kese kako bi je izvukli [14].
2. Složite novu kesu kao što je prikazano [15] i stavite tako što ćete kragnu kese prema prikazu staviti u ležište [16].
3. Zatvorite poklopac usisivača.

UPOZORENJE - Poklopac usisivača se neće zatvoriti ako kesa nije pravilno stavljena u odgovarajuće ležište. Molimo da uvek proverite da su kesa i držač kese uvek na svom mestu kada zatvarate usisivač.

VAŽNO: Indikator napunjenosti kese može postati crven i kada postoji blokada u sistemu, ili filteri nisu čisti. Molimo referišite 'uklanjanje blokade iz sistema'.

Čišćenje filtera

Kako bi zadržali optimalne performanse rada Vašeg usisivača, molimo Vas da očistite filtere na svakih 5 promena kesa.

VAŽNO - Redovno proveravajte i čistite filtere prema ovim uputstvima.

Preporučljivo je potpuno menjati filtere na svaka 3 pranja. Na taj način će Vašusisivač uvek raditi na najbolji način.

Čišćenje filtera ispred motora:

1. Podignite bravicu za otvaranje vrata usisivača [13] otvorite poklopac i povucite kragnu kese kako bi je izvukli.[14]
2. Izvadite filter ispred motora sa držačem iz usisivača. [17]
3. Izvadite filter iz držača. [18]
4. Operite u mlakoj vodi,[19] i ostavite ga da se temeljno osuši pre vraćanja u usisivač, najmanje 24h.

Čišćenje filtera iza motora:

1. Podignite bravicu za otvaranje vrata usisivača [13] i otvorite poklopac.
2. Izvadite filter iza motora iz svog ležišta. [20]
3. Operite u mlakoj vodi,[21] i ostavite ga da se temeljno osuši pre vraćanja u usisivač, najmanje 24h.

VAŽNO: Ne koristite vruću vodu i deterdžente. U slučaju oštećenja filtera, zameniti ih isključivo originalnom Hoover zamenom. Nikada nemojte koristiti aparat bez kese i filtera na svojim pravilnim pozicijama.

Uklanjanje začepljenja iz sistema

U slučaju da je indikator kese crven:

1. Proverite da li je kesa puna. Ako jeste, referišite poglavlje 'Menjanje kese'.
2. U slučaju da kesa nije puna:
 - A. Da li je filterima potrebno čišćenje? Ako jeste, referišite glavu 'Čišćenje filtera'.
 - B. Proverite za bilo kakve blokade u sistemu - Koristite šipku ili neki sličan predmet kako bi uklonili začepljenje iz teleskopskog ili fleksibilnog creva.

UPOZORENJE - Indikator napunjenosti kese će postati crven u slučaju da je kesa puna, filteri prljavi ili postoji neko začepljenje. U slučaju da se usisivač koristi duže vreme sa crvenim indikatorom napunjenosti kese, termalna zaštita će ugaziti usisivač kako se ne bi pregrejao. Indikator će postati zelen kada se termalna zaštita uključi, kao indikator da je usisivač isključen. U slučaju da se ovo desi isključite usisivač na dugme, isključite ga iz struje i ostavite damiruje. Trebaće mu oko 30 minuta da se automatski resetuje.

DODACI I NASTAVCI

Svi nastavci mogu biti prikačeni na kraj drške ili teleskopskog creva.

Uski nastavak – Za uglove i teško dostupna mesta. [22]

Četka za prašinu – Za police sa knjigama, ramove za slike, tastature i sl. [23]

Četka za parket* – Za nežno usisavanje parketa bez grebanja. [R]

Mini Turbo četka za uklanjanje dlaka kućnih ljubimaca* -Ovaj nastavak možete koristiti za čišćenje stepenica, kao i dubinsko čišćenje tekstila. Ovo je idealna četka za uklanjanje dlaka kućnih ljubimaca sa nameštaja. [S]

Mini Turbo četka za uklanjanje alergena* – Ovaj nastavak možete koristiti za čišćenje stepenica, kao i dubinsko čišćenje tekstila. Ova četka je posebno pogodna za uklanjanje alergena. [T]

Grand Turbo Četka* - Idealna za temeljnije čišćenje tepiha. [U]

VAŽNO: Ne koristite Mini Turbo četku na tepisima dubljim od 15mm. Nikada ne zadržavajte četku na jednom mestu dok se okreće, već je stalno pomerajte .

CHECK LISTA

U slučaju da imate problem sa aparatom, proverite ova pitanja pre zvanja Hoover servisa:

- Da li je utikač na koji je priključen ispravan? Testirajte utikač sa drugim aparatom.
- Da li je kesa puna ili prepuna? Pročitajte poglavlje 'Održavanje usisivača'
- Da li je filter blokiran? Pročitajte poglavlje 'Održavanje usisivača'.
- Da li je su crevo ili papučica blokirani? Pročitajte poglavlje 'Otklanjanje blokade iz sistema'.
- Da li se usisivač pregrejao? u slučaju da jeste, trebaće mu oko 30 minuta da se resetuje i ponovo uključi..

*Samo pojedini modeli **Samo pojedini modeli, nastavci variraju u zavisnosti od modela

VAŽNE INFORMACIJE

Hoover delovi i potrošna roba

Uvek koristite originalne Hoover rezervne delove. Oni su dostupni kod Vašeg lokalnog Hoover prodavca ili direktno od Hoovera. Pri naručivanju uvek recite broj modela aparata.

Hoover Servis

U slučaju da Vam je potreban servis, uvek zovite ovlašćeni Hoover servis u vašem gradu.

Kvalitet

Sve Hoover fabrike su nezavisno testirane na kvalitet. Svi Hoover aparati su napravljeni u skladu sa zahtevima i procedurama ISO 9001.

Garancija

Uslovi garancije su navedeni od strane uvoznika. Detalje o uslovima garancije možete potražiti u prodavnici gde ste kupili usisivač. Garancija važi isključivo uz račun.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Hoover, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/hoover-usisivac-ts20511-011-akcija-cena/>