

Uputstvo za upotrebu

SENCOR mikser sa posudom SHM 5330 EUE3

SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-mikser-sa-posudom-shm-5330-eue3-akcija-cena/>

Hand and Stand Mixer with a Rotating Bowl

User's manual

EN



SENCOR®

SHM 5330

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user manual. Keep the user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original shipping cardboard box, packaging material, receipt and warranty card for the duration of warranty. In the case of transportation, pack the appliance using the original packaging materials only.

EN-1

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	3
DESCRIPTION OF THE APPLIANCE	6
BEFORE FIRST USE	7
ASSEMBLING THE APPLIANCE	7
OPERATING THE APPLIANCE	7
SELECTING ATTACHMENTS AND SPEEDS	8
QUICK GUIDE TO MIXING	9
CLEANING AND MAINTENANCE	9
STORAGE	9
TECHNICAL INFORMATION	10
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS	10
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES	10


IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND STORE IT FOR FUTURE USE.

- This appliance must not be used by persons (including children) with physical or mental impairments or by inexperienced persons, unless properly trained or schooled in the safe use of the appliance, or unless they have been properly supervised by a qualified person who will be responsible for their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- Before connecting this appliance to the socket outlet, make sure the voltage stated on the label of the product corresponds to the voltage in your wall socket.
- Never use accessories, which have not been supplied with this appliance or which have not been explicitly recommended by the manufacturer for this appliance.
- The appliance is intended and designed for processing a standard amount of food in the household.
- Do not use the appliance for any other purposes than those intended.
- Do not use the appliance in an industrial environment or outdoors!
- Do not use sprays in the vicinity of the appliance.
- Do not place the appliance on window sills or on unstable surfaces. Only place the appliance on an even, dry surface.
- Ensure that the power plug contacts do not come into contact with water or moisture.
- Do not spray the motor unit with water or any other liquid. Never wash it under running water or submerge it in water or another liquid.

- Before first use it is necessary to thoroughly wash the accessories (beater/kneading attachments and the rotating bowl) in hot water using kitchen detergent. Then rinse them with drinking water and dry thoroughly with a fine wiping cloth.
- Before attaching attachments to the appliance, removing or replacing them, ensure that the appliance is turned off and disconnected from the power socket.
- Before putting the appliance into operation, check that it is correctly assembled and that the stand arm is in the horizontal position.
- Allow hot liquids or food to cool down before mixing them.
- Do not tilt out the stand arm while mixing. Do not touch the rotating attachments and ensure that foreign items such as clothing or hair are kept at a safe distance. Do not put your hands or items, such as kitchen knives, forks or wooden spoons into the bowl. An injury could occur or the appliance could be damaged.
- If food is sticking to the attachments or the inside of the bowl, turn off the appliance and disconnect it from the power socket. Use a spatula to clean the attachments and the sides of the bowl.
- Do not turn the appliance on when empty. The incorrect use of the appliance may negatively affect its lifetime.
- Always turn off the appliance and disconnect it from the power socket if you will not be using it and if you are leaving it without supervision, before assembly, disassembly or cleaning.

- Do not allow children to use the appliance without supervision. If you are not using the appliance store it out of reach of children. If children get hold of the appliance without adult supervision, a child could be injured or the appliance could be damaged.
- Before storing the appliance, check that the stand arm is tilted to the horizontal position.
- Do not place the appliance on an electric or gas stove or in its vicinity, do not place it in the vicinity of an open fire or an appliance that is a source of heat.
- If the power cord is damaged, have it replaced at a technical service centre. It is forbidden to use the appliance if it has a damaged power cord or plug.
- To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty policy.
- Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table, or that it does not touch a hot surface.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.

DESCRIPTION OF THE APPLIANCE

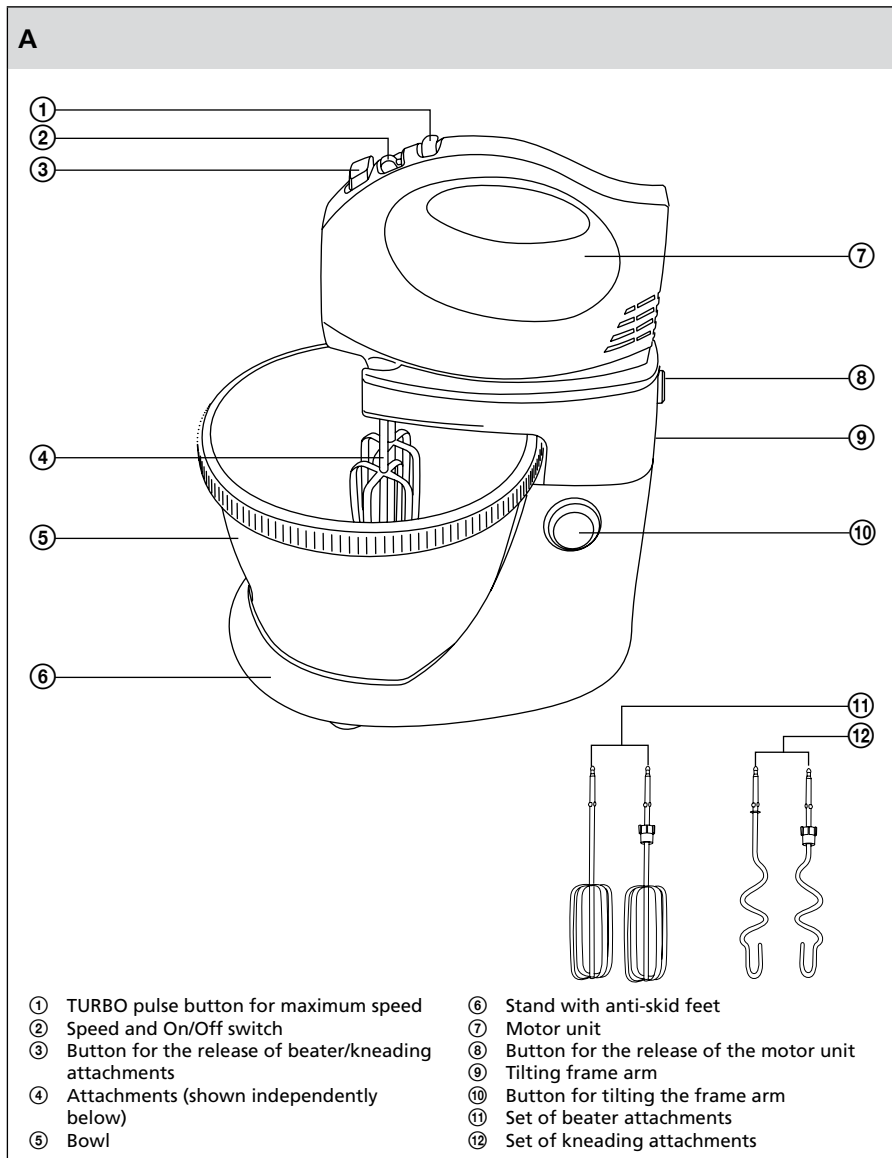

Hand and Stand Mixer with a Rotating Bowl

SHM 5330

EN

BEFORE FIRST USE

1. Take the appliance and its accessories out of the packaging materials.
2. Thoroughly clean all parts (beater, kneading attachments and the rotating bowl) that come into contact with food in hot water using kitchen detergent. Then rinse them with drinking water and dry thoroughly with a fine wiping cloth.

ASSEMBLING THE APPLIANCE

1. Select the type of attachment you wish to use. Insert the attachment with the cog wheel into the right opening on the underside of the motor unit. Press it into the motor unit until it clicks into the safe position. In the same way insert the second attachment into the left opening.



Caution:

Do not combine the beaters and the kneading attachments. Only use the same type of attachments at the same time.

2. Press the button ⑩ to release the lock on the arm and using the other hand tilt out the arm ⑨.
3. Insert the bowl ⑤ into the stand ⑥.
4. Press the button ⑩ and tilt down the arm ⑨ into the horizontal position.
5. Insert the motor unit ⑦ with the inserted attachments on to the tilting arm ⑨ and lightly push towards the arm until you hear a click. The motor unit is securely attached to the arm when it is not possible to lift it independently.



Note:

The beater can be used independently without the stand. In such a case setup the appliance according to the instructions in point 1 and continue to chapter Operating the Appliance. It will be necessary to hold the motor unit in your hand during operation.

OPERATING THE APPLIANCE

1. Place ingredients into the bowl ⑤.
2. Connect the power cord of the motor unit ⑦ to an electrical power socket. Using the switch ② set the desired speed in the range of 1–5. The TURBO pulse button ① is used for a short increase to maximum speed. The bowl on the stand rotates during operation. This ensures that ingredients are evenly mixed.



Note:


To prevent ingredients from splattering out of the bowl, select an initial speed level of 1 or 2. The TURBO button will not work if the switch ② is set to position 0.



Caution:

Do not hold down the TURBO pulse button for longer than a minute. The appliance must be stopped for several minutes after it has been running continuously for 5 minutes.

3. After you have finished mixing, turn off the motor unit ⑦ by sliding switch ② to position 0. Disconnect the power cord from the el. power socket. Press button ⑩ and tilt out the arm ⑨.

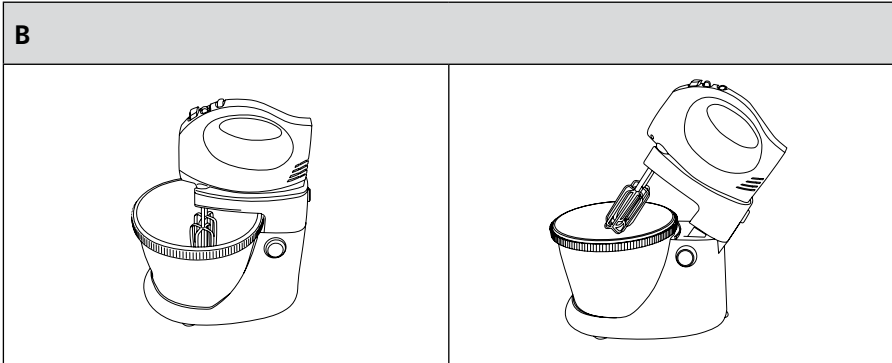

Press button ⑩ to release the lock of the motor unit ⑦ and with the other hand remove the motor unit ⑦. To release the attachments press button ③ and remove the attachments.



Note:

If switch ② is in position 1-5, the button ③ is blocked for safety reasons and the attachments cannot be released.

SELECTING ATTACHMENTS AND SPEEDS

Beater attachments

- These are used to prepare batter dough, mashed potatoes, whipped cream, whipped egg whites and creams. Do not use the beater attachments to mix yeast dough.

Kneading attachments

- These are used for kneading yeast dough and dough for noodles, for mixing minced meat, spreads and puff dough.

Selecting a speed

Level 1

- suitable as the starting speed for mixing a larger amount of ingredients or dry ingredients.

Level 2

- suitable for processing liquid ingredients and for mixing salad dressings.

Level 3

- suitable for mixing ingredient when preparing cakes, biscuits and bread.

Level 4

- suitable for whipping up butter or sugar when preparing sweets, desserts, etc.

Level 5

- suitable for whipping eggs, sauces, creams, etc.

TURBO pulse button

- The TURBO pulse button is equivalent to speed level 5 and is used for a short increase to maximum speed.

Hand and Stand Mixer with a Rotating Bowl

SHM 5330

EN

QUICK GUIDE TO MIXING

Beater attachments

Ingredients	Amount	Processing time	Selecting a speed
Egg whites	max. 5 egg whites	4 minutes	level 5
Mashed potatoes	max. 750 g	4 minutes	level 4
Creams	approx. 750 ml	4 minutes	level 5
Mayonnaise	max. 3 egg yolks	3 minutes	level 5
Whipped cream	max. 500 g	5 minutes	level 5
Cake dough	approx. 750 g	4 minutes	level 3

Kneading attachments

Ingredients	Amount	Processing time	Selecting a speed
Yeast dough	max. 500 g of flour	5 minutes	level 3



Note:

The above processing times are only a reference. To prevent ingredients from splattering out of the bowl, select an initial speed level of 1 or 2. Later set a higher speed based on requirements. For easier mixing of dough we recommended soft margarine or butter.

CLEANING AND MAINTENANCE

- Always turn off the appliance before cleaning it by sliding the switch to position 0 and disconnecting it from the power socket.
- It is necessary to thoroughly clean the beaters or kneading attachments after every use in hot water and kitchen detergent. Then rinse them with drinking water and dry thoroughly with a fine wiping cloth. The beaters and kneading attachments are intended for short term contact with food (including beverages), i.e. max. 4 hours.
- Clean the bowl using hot water and kitchen detergent. Then rinse it with drinking water and dry with a fine wiping cloth.
- To clean the motor unit use a cloth dipped in a weak detergent solution. Never submerge the motor unit in water or in any other liquid!
- For cleaning do not use thinners or solvents, or cleaning agents causing abrasion. Otherwise the surface treatment of the appliance could be damaged.

STORAGE

- If you will not be using the appliance, store it in a dry place out of children's reach. Before storing the appliance, check that the stand arm is tilted to the horizontal position.
- You can use the cardboard box of the appliance for storing the appliance (after first disassembling it).

TECHNICAL SPECIFICATIONS

Nominal voltage range	220–240 V
Nominal frequency	50 Hz
Rated power input	500 W
Safety class (for electric shock protection)	III
Noise level	79 dB(A)

The declared noise emission level for this appliance is 79 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

Glossary of technical terms

Safety class for electric shock protection:

Class III - Electric shock protection is provided by double or heavy-duty insulation.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product.

The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-mikser-sa-posudom-shm-5330-eue3-akcija-cena/>