

Uputstvo za upotrebu

SENCOR toster STS 2607BK

SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-toster-sts-2607bk-akcija-cena/>

SENCOR®

STS 2606WH

STS 2607BK



EN ■ Toaster

Translation of the original manual

READ CAREFULLY AND STORE FOR FUTURE USE

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in safe manner and understand the potential dangers. Children must not play with the appliance. Cleaning and user maintenance must not be performed by children unless they are older than 8 years of age and under supervision.
- Keep this appliance and the power cord out of reach of children that are younger than 8 years of age.
- If the power cord is damaged, it must be replaced by a manufacturer, authorised service centre or by another similarly qualified person to prevent the creation of a dangerous situation.
- The appliance is designed for household use only. It is not intended for use in locations such as:
 - staff kitchens in stores, offices and other workplaces;
 - hotel or motel rooms and other living areas;
 - agricultural farms;
 - bed and breakfast establishments
- Do not use the appliance in an industrial environment or outdoors or for purposes other than those for which it is intended.
- This appliance is designed for toasting bread products such as sandwich bread, standard bread, bread rolls, buns, bagel, etc.
- Do not use the appliance for toasting sweet bread products that are sprinkled with sugar or contain canned fruit, marmalade or jam such as cakes, buns, etc. Otherwise, this could result in a fire.
- Do not place the appliance on an electric or gas stove or in its vicinity, on a kitchen sink drainboard, on the edge of a table or on an unstable surface. The appliance must be located on a stable and even surface.
- Before connecting the appliance to a power socket, check that the technical details on its rating label match the voltage in the socket. Connect the appliance only to a grounded power socket.
- Make sure the power cord does not hang over the edge of a table or that it is not touching a hot surface.

**Warning:**

This appliance is not designed to be controlled using a programmed device, external timer switch or remote control.

Do not use the appliance without the crumb tray inserted.

**Attention:**

Bread may catch on fire, so do not use the appliance near flammable materials such as curtains, kitchen towels, etc., nor place them underneath it. Increased CAUTION should be given where heat can cause problems – we recommend using a thermal insulating pad.

- From the safety standpoint, this appliance conforms to the norms valid in the European Union. According to these norms these appliances may be operated on a table or a similar surface under the condition that in the direction of the main heat radiation a safe distance of 50 cm must be maintained from the flammable materials and at least 10 cm in other directions.
- Before first use, to remove any potential odours, the appliance must be turned on empty at least three times with the maximum toasting intensity set.
- The temperature of accessible surfaces may be higher during operation and after operation as a result of residual heat. Take care not to touch the hot surface. Pay special attention when removing smaller pieces of bread products out of the appliance.
- Do not leave the appliance without supervision when it is in operation.
- Never cover the appliance when it is in operation or hot.
- Always turn off the appliance and disconnect it from the power socket when leaving it without supervision or when not using it and before cleaning and moving it. Allow the appliance to fully cool down before moving, cleaning and storing it.
- Do not insert excessively large pieces of bread products into the toasting slots or insert bread products wrapped in aluminium foil or metal items. Otherwise there is a risk of fire or injury by electric shock.
- Never toast bread products by placing them horizontally directly on the toasting slots. This would interrupt air circulation and could result in a fire.

**Attention:**


Never attempt to take out a jammed piece of bread or any other bread product using a knife or another metal object. This could lead to injury by electric shock or damage the appliance. If bread products become jammed inside the toasting slots, turn off the appliance, disconnect it from the power socket and allow it to cool down. Then carefully remove the bread products that are jammed inside the appliance.

- The removable crumb tray must be regularly cleaned out so that crumbs do not accumulate inside it. When cleaning, follow the instruction in chapter Cleaning

and maintenance. To prevent potential injury by electric shock, do not submerge this appliance or its power cord in water or any other liquid.

- Disconnect the appliance from the power socket by pulling on the plug, never pulling on the power cord. Otherwise, this could damage the power cord or the socket.
- It is forbidden to use the appliance if it has a damaged power cord.
- Do not use the appliance if it is damaged, not working correctly, if it has been dropped on the floor or submerged in water. In order to prevent a hazardous situation arising, do not repair the appliance yourself or modify it in any way. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

A

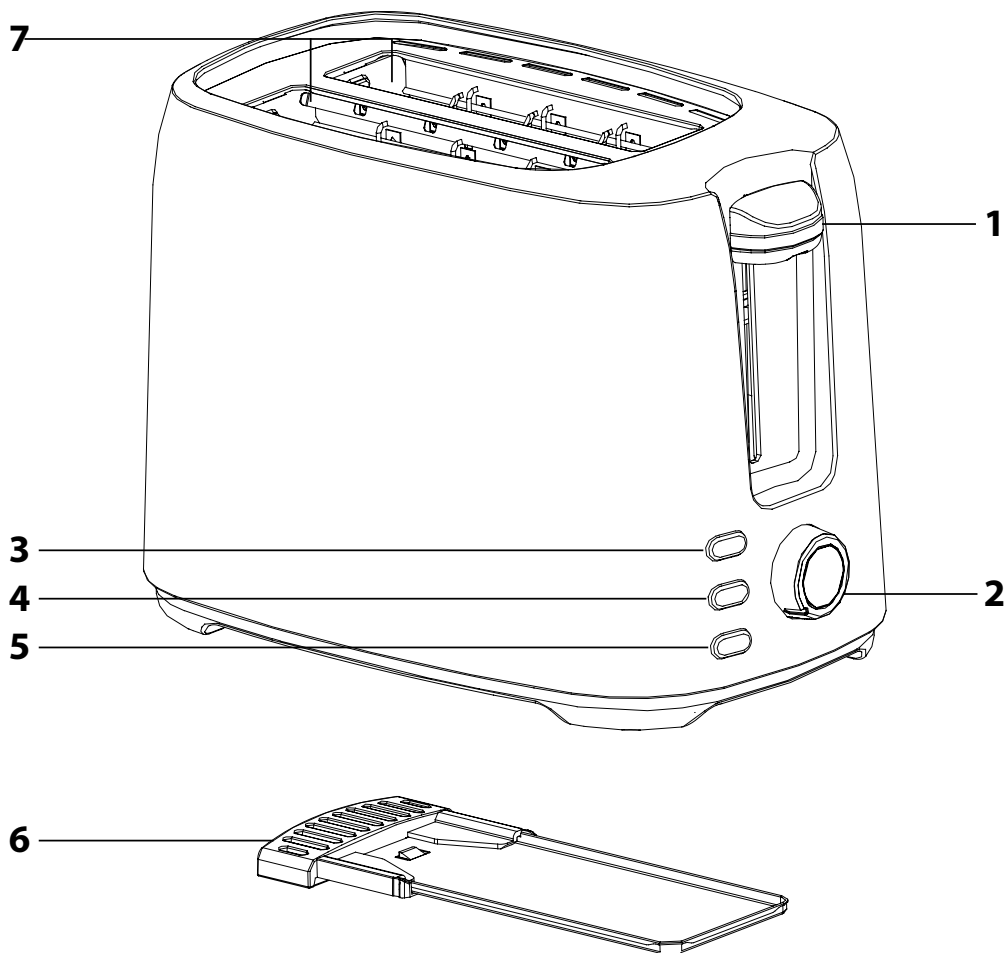

EN Toaster

User's manual

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future reference.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability of unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE

- A1** Control lever
- A2** Electronic control knob of toasting intensity
- A3** Defrost button for toasting frozen bread products
- A4** Reheat button for reheating bread products

- A5** Cancel button for immediate process cancelling
- A6** Removable crumb tray
- A7** Toast slots

BEFORE FIRST USE

Before first use take the appliance and its accessories out of the packaging material and remove all promotional labels and stickers from it. Before first use, to remove any potential odours, the toaster must be started empty at least three times with the maximum toasting intensity set.

OPERATING THE APPLIANCE

Place the toaster on an even, dry and stable surface at a sufficient distance from surfaces of flammable materials as described in chapter Safety instructions. Fully unwind the power cord and connect the toaster to a power socket.

Ensure the removable crumb tray is correctly installed.

Insert one piece of sandwich bread, slice of standard bread, half a bun or bagel, etc. into each slot **A7**. The bread slices must not be too thick so as not to jam in the slots **A7** and must not extend out of the toaster when the control lever **A1** is locked in the lower position.



Attention:

Do not place bread products that have butter, margarine, etc. spread on them in the toaster.

Use the electronic control knob **A2** to set the toasting intensity in the range from 1 to 7 where the setting 1 means the lightest toasting intensity and the setting 7 means the darkest toasting intensity. Upon first use, it is recommended to set the toasting intensity to level 4. You can then choose a different toasting intensity level depending on your preferences. Start the toaster by pushing down the control lever **A1**. The toasting process will automatically start when the control lever **A1** is locked in the lower position. The cancel button **A5** will be lit.



Note:

Unless the toaster is connected to a power socket, the control lever **A1** will not lock in the lower position, and the toaster will not start.

The toaster will turn off automatically and raise the inserted bread product as soon as the toasting process is completed. Remove the toasts from the toaster and repeat the above described procedure.



Attention:

Never attempt to take out a jammed piece of bread or any other bread product using a knife or another metal object. This could lead to injury by electrical shock or damage the appliance. If bread products become jammed inside the toaster, turn it off, disconnect it from the power socket and allow it to cool down. Then carefully remove the bread products.

After using the toaster, disconnect it from the power socket and allow it to cool down.

Reheat toast function

This function makes it possible to heat up a toast without further toasting.

Insert toasts in the slots **A7** and push the control lever **A2** down until it is locked in the lower position. Press the Reheat button **A4**. The button **A4** will be lit.

The toaster will automatically raise the inserted bread products at the end of the toast heating process. Remove the toasts from the toaster and repeat the above described procedure to reheat another bread products.



Note:

The reheat time is pre-set from the factory and it cannot be adjusted. The reheating process can be interrupted at any time by pressing the Cancel button **A5**.

Defrost function

Insert frozen bread products into the slots **A7** and push the control lever **A2** down until it is locked in the lower position. Press the Defrost button **A3**. Button **A3** will be lit.

The toaster will automatically raise the inserted bread products at the end of the toast heating process. Remove the toasts from the toaster and repeat the above described procedure to defrost another frozen bread products.



Note:

The defrosting process can be interrupted at any time by pressing the Cancel button **A5**.



Attention:

The reheat function and defrost function cannot be set simultaneously.

Tips and advice for setting toasting intensity

- The toasting process occurs in two phases. In the first phase, moisture is evaporated from the bread product followed by toasting in the second phase.
- The toasting level depends on the type, size and freshness of the bread product.
- Fresh bread will toast for longer because first the moisture contained in it needs to be evaporated and only then can actual toasting begin. Therefore, it requires a higher toasting intensity to be set. Wholegrain bread, thicker bread slices, halved buns and bagels, likewise require a higher toasting intensity to be set.
- Older bread that does not contain as much moisture as fresh bread will toast for a shorter period and will, therefore, require a lower toasting intensity than usual.
- Smaller a thinner bread slices will toast faster than larger and thicker bread slices.
- When toasting only a single bread slice, set a lower toasting intensity level than when toasting two bread slices at the same time.

CLEANING AND MAINTENANCE

- Clean the toaster after each use. Before cleaning, make sure that it is disconnected from the power socket and it has cooled down.
- Pull the removable crumb tray **A6** out of the toaster, tip out the crumbs, wipe it with a clean, dry cloth and put it back in its place. Clean the removable crumb tray **A6** after each use. Ensure that crumbs do not accumulate inside. Otherwise they could catch on fire.
- To remove crumbs from the inside the toaster, turn the toaster upside down and carefully shake out the crumbs over a rubbish bin.
- Wipe the outer surface of the toaster with a dry or lightly damp cloth and then thoroughly wipe dry. Ensure that no water or moisture enters the internal area of the toaster.
- Do not use cleaning products causing abrasion, petrol, solvents, etc. to clean the toaster.
- To prevent potential injury by electrical shock, do not submerge this appliance or its power cord in water or in any other liquid.

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220 – 240 V ~
Rated frequency.....	50 – 60 Hz
Rated power input.....	750 W

We reserve the right to change the text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-toster-sts-2607bk-akcija-cena/>