

## Uputstvo za upotrebu

SENCOR toster STS 2652RD

**SENCOR**



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-toster-sts-2652rd-akcija-cena/>

# Electric Toaster

Instruction Manual

EN



**SENCOR®**

STS 2651 / STS 2652RD

Please retain these instructions for future reference

## **IMPORTANT SAFETY INSTRUCTIONS**

This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.

## Important instructions

When using electrical appliance, basic safety precautions should be followed including the following:

**Please read these instructions before using the appliance and retain them for future reference.**

- To protect against electrical hazard, do not immerse any part of the appliance, or cord in water or any other liquid.
- Close supervision is necessary when the appliance is used near children. Always keep the appliance away from children.
- Do not leave the appliance unattended when in use. Unplug after each use.
- Always use the appliance on a dry, level surface.
- Do not use this appliance outdoors.
- Always unplug the appliance from the wall socket when not in use and before cleaning.
- Do not use this appliance with any foodstus containing sugar or with damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. To avoid the risk of electrical shock, do not disassemble; send the toaster to the nearest service facility.
- In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged in the slightest degree, the entire appliance should be send to the service facility.
- Do not let the cord hang over the edge of a table, or counter. Do not touch hot surfaces. Allow unit to cool before wrapping cord around base for storage, or before cleaning.
- Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
- Do not place this appliance on or near a hot gas or electric burner, in or where it could touch a heated oven, or a microwave oven.
- Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
- When using this appliance, allow adequate air space above and on all sides for air circulation. Bread may burn. Therefore this appliance must not be used near or below curtains and other combustible materials. It must be watched. CAUTION is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
- THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY. DO NOT USE THE APPLIANCE FOR ANY OTHER PURPOSES THAN INTENDED USE.
- Bread may burn. Therefore this appliance must not be used near or below curtains and other combustible materials. It must be watched.
- This toaster is intended to be used for bread only. Other ingredients may cause re, electrical shock or injury. Do not use this appliance with any foodstus containing sugar or with products containing jam or preserves. Immediately unplug the toaster if re or smoke is observed.
- Check if the voltage indicated on the rating label of the appliance corresponds to the voltage in your home before connecting the appliance.
- Connect the appliance to an earthed wall socket.

# Electric Toaster

STS 2651 / STS 2652RD

## Warning!!

Never attempt to extract jammed toast, muns, bagels or any other item with a knife or any other object, as contact with live elements may cause electrocution. Allow the appliance to cool down, unplug and carefully remove the bread.

## Features of toaster

1. Extra long variable width toasting slots
2. Frozen button
3. Reheat button
4. Cancel button
5. Electronic variable browning control
6. Electronic control button
7. Full length crumb tray



## Operating toaster

- Insert the plug into a suitable mains supply socket.
- Place up to two slices of bread, muffins or bagels into bread slots.
- **Warning!** Do not cover the toasting slots with bread. If there is not enough space for air circulation above the toasting slots and it can cause damage of the appliance.
- Select the desired browning setting, from No. 1 to No. 7 on the browning control knob. (No. 1 – lightest, No. 7 – darkest).
- Before using the toaster for the first time, we suggest you to plug the appliance in, to select number 7 on browning control knob, to switch the appliance on without toasting any bread. This procedure should be repeated for six times to remove possible smell from production.
- When using the toaster for the first time we suggest you to toast on number 3. Varying types of bread and personal preference may require a different browning setting.
- Press the carriage control lever down until it clicks into place. Toasting cycle will automatically commence. Please note: if the toaster is not plugged in and switched on at the power point the carriage control lever will not click into place.
- The toaster turns off when the desired toast colour is achieved and automatically pops up the toast. The toasting process can be stopped at any time by pressing the cancel button.

**Toasting frozen bread:** To toast frozen bread, place the bread into the bread slots and select the desired Browning Setting. Press the carriage control lever down until it clicks into place then press the Frozen Button. The LED next to this button lights up during the roasting process. The roasting process begins.

**Reheating toast:** The toaster allows you to reheat toast without additional toasting. To reheat, place toast into bread slots, lower the carriage control lever until it clicks into place and press the reheat button. The LED next to this button lights up during the roasting process. The roasting process begins.

In the unlikely event that the bread or crumpet becomes jammed, switch the toaster off at the power outlet, remove the plug from the supply socket and carefully take the bread out of the toaster, ensuring that you do not damage the element.

# Electric Toaster

STS 2651 / STS 2652RD

EN

## Care and cleaning

Always turn the power off, remove the plug and allow the toaster to cool before cleaning.

To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty and replace in the toaster before using it again.

The crumb tray should be cleaned regularly. Do not allow breadcrumbs to accumulate in the bottom of the toaster. Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth.

Do not use any abrasive cleaners. Do not immerse the unit in water.

**Warning!** Do not hold the appliance upside down and do not shake it to remove the crumbs.

## Technical features

230 V ~ 50 Hz, 850 W

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-toster-sts-2652rd-akcija-cena/>