


Uputstvo za upotrebu

TESLA mašine za sušenje veša WT8C90M

TESLA

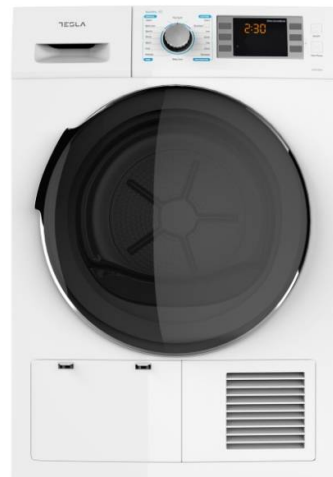

Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/tesla-masine-za-susenje-vesa-wt8c90m-akcija-cena/>

TESLA

TUMBLE DRYER

WT8C90M

User Manual



Product images are for illustrative purposes only and may differ from the actual product.

SAFETY INSTRUCTIONS

WARNING!

To prevent any damages to your and others' life or property, you have to follow the safety notes.

- This product belongs to Category I electrical appliances, and only for drying textiles which have been washed with water in the household. Please pay attention to the safety of power use during the operation!
- The power source with reliable grounding must be used. Its earth wire must be buried under the ground and should not be connected with public utilities such as city water pipe or gas pipe etc. The earth wire and null wire should be distinguished and should not be connected together.
- The power wire should be met IEC and must be able to withstand the current above 16A. To ensure your and your family's safety, please make improvements immediately if any power capabilities at your home does not meet the above-mentioned requirements.
- Do not put more load than recommended. Obey the maximum load volume. See the related chapter in the user manual.
- That the tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps,
- waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried
- in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items
- will not be damaged.
- The lint trap has to be cleaned frequently.
- The lint must not to be allowed to accumulate around the tumble dryer.
- Adequate ventilation has to be provided to avoid the
- back flow of gases into the room from appliance burning other fuels, including open fires.
- The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliance burning gas or other fuels.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer in such a way that a full opening of the tumble dryer door is restricted.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer, they should first be washed in
- hot water with extra detergent-this will reduce, but not eliminate, the hazard.
- The appliance should not be overturned during normal use or maintenance.
- Remove all objects from pockets such as lighters and matches.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge
- if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. (This warning
- is only for EUROPEAN market)
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is for indoor use only.
- The openings must not be obstructed by a carpet. Children of less than 3 years should be kept away unless continuously supervised.
- If the appliance appears to be reaching a high temperature abnormally, please draw the mail plug immediately.

- The appliance is not intended for use by persons
- (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. (This warning is not for EUROPEAN market)

⚠ WARNING!

Never stop a tumble dryer before the end of the drying cycle otherwise too much heat will diffuse and may cause harm.

Correct Disposal of this product:

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Electric shock hazard

- Do not draw the power cord forcefully to pull out the mains plug.
- Please do not plug/draw the mains plug with wet hands.
- Do not damage the power cord and the power plug.

Injury danger

- Do not disassemble and install the dryer under no instruction or supervision.
- Do not stack this dryer on washing machine without stacking kits. (if want stacking on washing machine, please purchase the independent parts and it must be installed by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.)
- Do not lean on the opened door of the dryer.
- Do not put any pyrotoxin on the dryer, such as the candle, electric cooker.

Damage danger


- Do not dry over the rated capacity.
- Do not operate the dryer without the filter door and filter base.
- Do not dry the clothes before being spun.
- Do not expose the dryer directly under the sun, and indoor use only.
- Do not install the dryer in a humid or drenching environment.
- While cleaning and maintenance, please remember to pull out the power plug and do not directly wash the dryer with water.

Explosion danger

- Please do not dry the clothes with some flammable substances such as coal oil, alcohol or there will be explosion.

INSTALLATION

Product Description

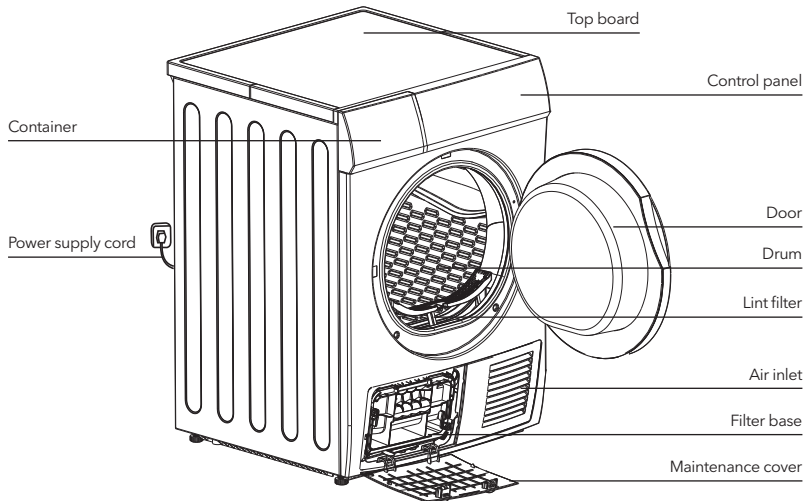


NOTE

- Please see the products you purchased for reference.


Accessories

The following parts are optional for specific models.


If your dryer has following parts, please wear gloves and install them following the instruction below

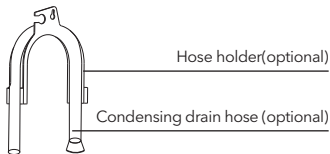


Installation

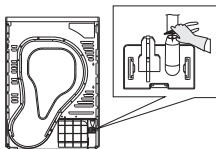


Use pliers to remove the drain hose from the hose connector

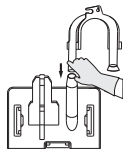

Insert the external drainage hose

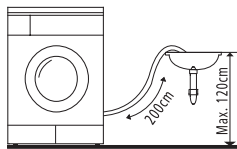

 Put the hose holder on the washing basin or any other sink






Transport

Move cautiously. Do not grasp any salient parts of machine. The machine door cannot be used as the handle for delivery. If the dryer cannot be transported erectly, the dryer could be slant to right less than 30°.


Installation Position

1. It is recommended that, for your convenience, the machine is positioned close to your washing machine.
2. The tumble dryer must be installed in a clean place, where dirt does not build up. Air must be able to circulate freely all-round the appliance. Do not obstruct the front air inlet or the air intake grilles at the back of the machine.
3. To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm and level surface.
4. The feet must never be removed. Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance.

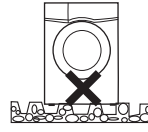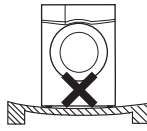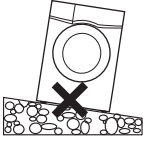

Level Adjusting

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, adjust the feet with a tool.

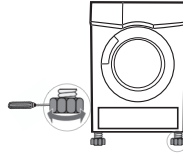

Power Supply Connection


1. Make sure that the voltage of the power supply is the same as the electric specification of the dryer.
2. Do not connect the dryer with the power connection board, just a universal plug or socket..

OPERATIONS

Quick start


NOTE

Before using, please make sure it's installed properly.

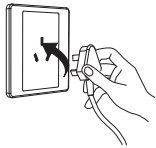


Plug in

1

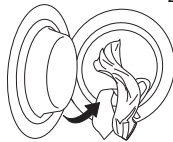

Load

2

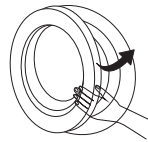

Close door

3

Drying



On



Select program




Select function
or default



Start

After Drying

Buzzer beep or "0:00" on display.

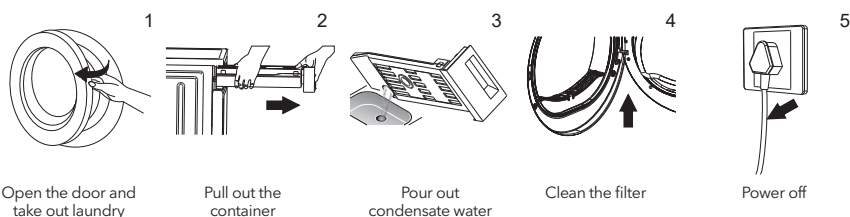**NOTE**


- If use the socket with a switch, please press the switch to turn off the power directly.

Before Each Drying**! ATTENTION!**

Before the first cycle, the dust and grease may remain in this dryer during the period of manufacture and transportation, to avoid contaminating your clothes, please follow these steps:

- Put some clean rags into the drum.
 - Plug the power.
 - Select the "Quick" Program, press "Start/Pause" button.
 - After finishing this program, please follow the "Cleaning and Care" to clean the lint filter and air condenser on page 19.
1. Before drying, thoroughly spin the laundry in washing machine. High spin speed can reduce the drying time and save energy consumption.
 2. For uniform drying result, sort the laundry according to fabric type and drying program.
 3. Before drying, please close zips, hooks and eyelets, button up, tie fabric belts, etc.
 4. Do not over dry the clothes, because over dried clothes can easily get creases.
 5. Do not dry the articles containing rubber or similar elastic materials.
 6. The door can be opened only after the program of the drying machine finishes to prevent human skin from being scalded by hot steam or over heated drying machine.
 7. Clean the lint filter and empty container after each use to avoid extension of drying time and energy consumption.
 8. Do not dry these clothes after dry-clean process.


The reference weight of dry clothes (each).

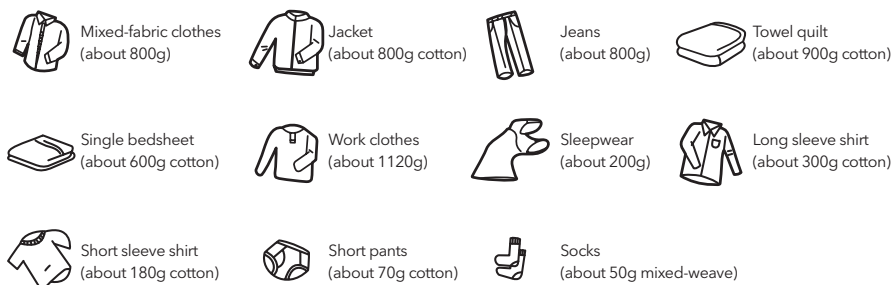


NOTE

- Never overload.
- Not for textile with dropping water. The dryer could be damaged, even fire.
- Not suitable for silk or woolen textiles.

Please pay attention to use the drying machine if the materials of your clothes can not be dried by it or contain the symbols as follows:

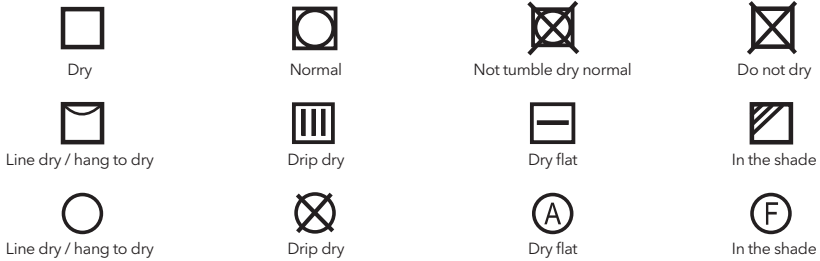

Control Panel

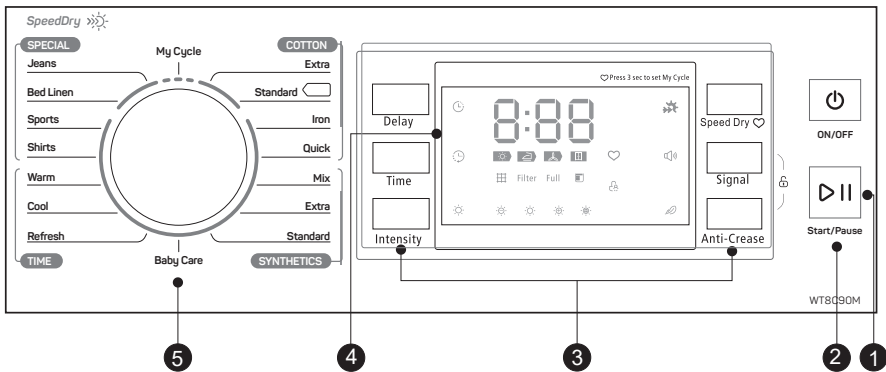

1 On/Off

Product is switched on or off.

2 Start/Pause

Press the button to start or pause the drying cycle.

3 Specialty function

These buttons are used for setting additional functions.

4 Display

This display shows the setting, estimated remaining time and status messages of your dryer.

5 Programs

Different Dryer cycle can be selected according to the user's needs to make the clothes have more effective drying results.



 
Filter

Please clean the filter when the  is lighting, after the dryer stops.



Tank

Please empty the container when the  is lighting, after the dryer stops.

**Delay start****Time****Child lock****Remaining Time indicator/Error message****Cycle phase status****Clean filters (warning)****Empty water container (warning)****Dryness level (four grades)****Speed dry indicator****Signal indicator****Anti-crease mode****My cycle****Program selector**

1. Press the [On/Off] button, when the LED display screen brightens up, rotate the program knob to select the desired program.
2. Select the [Delay], [Time], [Intensity],[Speed Dry],[Signal] or [Anti-Crease] functions for additional option.
3. Press the [Start/Pause] button.

Program start

The drum will keep rotating after the program starts, the state light in the display area will flash in sequence, the remaining time displayed will change automatically.

Program end

1. The drum will stop running after the program ends, the buzzer will beep the display will show **0:00**, the last cycle phase status light will flash. The dryer will start [Anti-crease] function if user doesn't remove the load in 1 minute (refer to page 15). Please press On/Off-key to cut off power and pull the plug out.
2. Deal with the problem according to "Malfunction display and solutions", if there is a unexpected stop during the drying procedure and the dryer show information (refer to page 12).

Other Functions

Instructions of the [Delay] function

This function is used for delaying clothes drying time within 24 hours. The delay time means the program will start after x hours. When the delay program starts, the time starts to decrease on the display and the delay icon blinks.

Steps in details:

1. Load your laundry and make sure the machine door is closed.
2. Press the [On/Off] button, then to turn the program selector knob and select a desired program.
3. You can select the [Anti-Crease] or [Signal] functions according to your need.
4. To press the [Delay] key.
5. Continue to press the [Delay] to select the delay time.
6. After the [Start/Pause] key is pushed, the Dryer is at the run condition. The drying procedure will be automatically performed when the delay time is over.
7. If you push the [Start/Pause] button again, the delay function will be paused.
8. If you want to cancel the "Delay" function, please press the [On/Off] button.

Instructions of the [Time] function

When the warm or cool or refresh program is selected, the [Time] button can be used to adjust the drying time in 10 min. steps.

Instructions of the [Intensity] function

Used to adjust the dryness level of the laundry. The level has four grades. The drying time increases 3 minutes in every grade.

1. The intensity function can be activated only before the program start.
2. Press the [Intensity] button repeatedly to select the drying time.
3. Except the [Cotton Iron] [Quick] [Synthetic Iron] [Baby Care] [Warm] [Cool] [Refresh], all the other programs can be the [Intensity] function.

Instructions of the [Speed dry]

Use to curtail shorten the drying time, the [Cotton Extra] [Cotton Standard] [Bed linen] [Jean] program can be set the function.

Instructions of the [Signal] function

Set up the buzzer on or off. In the general condition, the buzzer is on. Please press it if needed. When the buzzer on:

1. The dryer will give the leading sound if press the extra function buttons.
2. If the dryer is running, rotate the function choosing knob, the dryer will remind the operator it is an invalid choice.
3. When the drying program is end, the buzzer will also remind the user

Instructions of the [Anti-Crease] function

At the end of the drying cycle, the anti-crease operation time is 30 minutes (default) or 120 minutes (selected).

The [Anti-Crease] light should illuminate when the anti-crease function is selected. This function prevents the laundry from creases. The laundry can be removed during the anti-crease phase. Except [Cool], [Refresh] and [Baby Care], all the other programs have this function.

Instructions of the [My Cycle] function

Used to define and save your favorite programs that are used frequently.

1. Use the program selector to select the required program and other drying functions.
2. Press and hold the [Speed dry] button for 3 seconds until the beep and the required program has been saved.
3. Turn the program selector to the [My Cycle] position, you can start your favorite programs. If you want to change the [My Cycle] settings, repeat the steps 1 and 2.

Instructions of the [Child Lock] feature

1. This machine incorporates a special child safety lock, which can prevent children from carelessly pressing keys or making the faulty operation.
2. When the dryer is at the operation state except standby state, press the [Anti-Crease] and [Signal] buttons at the same time for over 3 seconds to start child lock function. When child lock function is set, the display will show child lock icon and no key can effect to the dryer except [On/Off] button.

Under the start state of the child lock, the [Anti-Crease] and [Signal] buttons should be pressed at the same time for over 3 seconds to release the child lock.

Drying Programs Table

Program		Weight (max)	Application/Properties	Delay	Time
		8.0 kg			
Cotton	For cottons and colours made of cotton or linen.			Y	N
	Extra	8.0 kg	To dry cotton pieces of clothing. Drying level: extra dry.		
	Standard		To dry cotton pieces of clothing. Drying level: cupboard dry.		
	Iron		To dry cotton pieces of clothing. Drying level: applicable to iron.		
Quick	3.0 kg	For washing which is to be dried quickly, eg, made of acrylic fibres or for individual small items. Also for subsequent drying.			
Synthetics	For non-iron washing made of synthetic and blended fabrics, cotton.			Y	N
	Extra	3.5 kg	To dry thick or multi-layered synthetic fabrics. Drying level: extra dry.		
Standard	To dry thin synthetic fabrics which are not ironed, such as easy care shirts, table linen, baby clothes, socks.				
Baby care	Baby care	1.0 kg	To dry the clothes of the baby at lower temperature.	Y	
Special	Jean	5.0 kg	To dry jeans or leisure clothes that are spun at high speeds in the washing machine.	Y	N
	Bed linen	5.0 kg	To dry bed linen and similar large clothes.		
	Mix	3.5 kg	If you can not determine what the clothing's material is, please choose Mix.		
	Sports	3.0 kg	To dry sportswear, thin fabrics, polyester, which are not ironed.		
	Shirts	1.0 kg	For easy care clothes such shirts and blouses with anti-crease mechanism for minimum ironing effort. Place clothes loosely in the dryer. Once dried, hang it on a clothes hange.		
My Cycle	My Cycle	–	Define and save your favorite programme.	Y	–
Time	Warm	–	To warm clothes from minimum 10 min. to maximum 120 min. (in 10 min. steps).	Y	Y
	Cool	–	To cool clothes without blowing hot air from minimum 10 min. to maximum 30 min. (in 10 min. steps).		
	Refresh	–	To refresh the clothes that have been kept at closed environments for a long time from minimum 20 min. to maximum 150 min. (in 10 min. steps).		

NOTE

- □ This symbol means the energy efficiency test program “standard cotton program”, which is accordance with the applicable EN 61121 standard and most suitable to dry normal cotton load at rated load capacity.
- Thick or multi-layered fabrics, e.g. bedlinen, jeans, jackets etc, are not easy to dry. You’d better choose Cotton Extra program.
- As the uneven material, thick and multi-layered clothes are not easy to dry, it is better to choose the appropriate time drying program to dry them if some parts of the clothes still damp after program finished.


MAINTENANCE

Cleaning and Care

Clean the lint filter

Leave the dryer to cool down.

1. Open the machine door.
2. Take out the lint filter, pull upward to take it out.
3. Clean the lint filter; wipe off the scrap threads accumulated on the lint filter, with your hand or rinse with water and dry thoroughly.
4. Reinstall the lint filter.

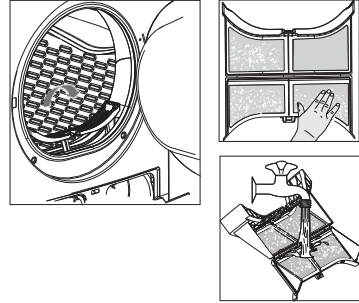

NOTE

- The lint filter accumulated on the filter will block the air circulation, which will cause the extension of drying time and energy use; therefore, the scrap thread filter shall be cleaned after each use.
- Do disconnect the power cord before cleaning!
- Do not operate the dryer without the lint filter!
- Clean the lint filter after each use to prevent lint accumulation inside the dryer.

Wash air condenser

Leave the dryer to cool down.


Residual water may escape, place an absorbent cloth under the maintenance cover.

1. Unlock the maintenance cover.
2. Completely open maintenance cover.
3. Screw both locking levers towards each other.
4. Pool out the air condenser.
5. Clean the air condenser completely, drain thoroughly.
6. Clean the seals.
7. Re-insert the air condenser, handle at the button!
8. Unscrew both locking levers.
9. Cloth the maintenance cover until it locks into position.

Please clean the air condenser approx, once every 3 months if frequently used.
Do not damage the air condenser!



WARNING!


- Clean with water only; do not use hard/sharp-edged objects! Do not operate the dryer without the air condenser!
- During drying, water may collect between the window and the seal, but this does not affect the function of your dryer!

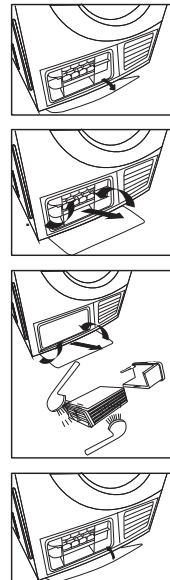

Empty the water container

1. Hold and pull out the water container with two hands.
2. Tilt the water container, pour out the condensate water.
3. Insert the water container.

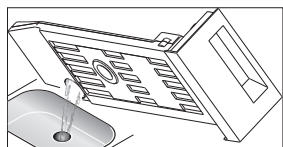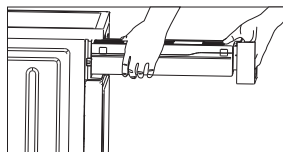**WARNING!**



- Empty the water container after each use, the program will be paused and the  icon will light if the water container is full during the drying process. After the container is emptied, the dryer can be restarted by pressing [Start/Pause] button.
- Do not drink the condensate water.
- Do not use the dryer without the water container.

Troubleshooting

Alarm Problem	Alarm Reason	Release
E30	Heating problem	Please contact your local service center if the problem persists.
E32	Humidity sensor error	
E33	Temperature sensor error	

WARNING!

- Only authorized technicians can carry out repairs.
- Before you call service, please check if you have dealt with the fault yourself or if you have followed the user instructions.
- A technician will charge you for advice, even during the warranty period.

Problem	Solution
Display does not on	Check if the power supply works. Check if the mains plug is inserted. Check the selected programme . Press the [On/Off] button.
 is lighting	Empty water container. If the light is still on, please call the service.
 is lighting	Clean heat exchanger. Clear lint filter.
Dryer does not start	Check the the door has closed. Check the programme has set. Check the start button has selected. Clean lint filter and heat exchanger. Empty container. Check drain hose.
Degree of dryness was not reached or drying time too long	Dryer installation place is too restricted. Clean the moisture sensors. Keep the Air inlet clean. Use higher drying intensity level programme or Time program.

WARNING!

If you cannot deal with the fault by yourself and need help:

- Press the [On/Off] button.
- Pull out the mains plug and call the service.

Technical Specifications

Dimension (L*W*H)	615*595*845 mm
Ambient temperature	+5 °C ~ +35 °C
Rated input power	2700 W
Rated voltage	220-240 V~
Rated frequency	50 Hz
Weight of product	41 kg
Rated capacity	8 kg

NOTE

- The rated capacity is the maximum capacity, make sure that the dry clothes which are loaded to the appliance do not exceed the rated capacity each time.
- Do not install the tumble dryer in a room when there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.
- There is a risk of damage if the condensate water is allowed to freeze in the pump, hoses and/or condensate water container.

Product Fiches

Rated Capacity		8 kg
Dryer Type		Condenser
Energy efficiency class	1	B
Weighted annual energy consumption (AE _c)		561.0 kWh/year
Automatic or non-automatic		Automatic
EU Ecolabel		N/A
Energy consumption of the standard cotton program		
Energy consumption of the standard cotton program at full load		4.74 kWh
Energy consumption of the standard cotton program at partial load		2.56 kWh
Power consumption of the off-mode (Po)		0.28 W
Power consumption of the left-on mode (PI)		0.8 W
Duration of the left-on mode		10 min
Program time of the 'standard cotton program ¹		
Weighted program time of the standard cotton program at full and partial load		112 min
Program time of the standard cotton program at full load		140 min
Program time of the standard cotton program at partial load		90 min
Condensation efficiency class A (most efficient) to G (least efficient)		B
Average condensation efficiency of the standard cotton program at full load		80.1%
Average condensation efficiency of the standard cotton program at partial load		80.1%
Weighted condensation efficiency for the standard cotton program at full and load		80.1%
Sound power level for the standard cotton program at full load		69 dB

Remarks

- ① Energy consumption per year, based on 160 drying cycles of the standard cotton program at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used. The 'standard cotton program' used at full and partial load is the standard drying program to which the information in the label and the fiche relates, that this program is suitable for drying normal wet cotton laundry and that it is the most efficient program in terms of energy consumption for cotton.

BEZBEDNOSNA UPUTSTVA

UPOZORENJE!

Kako biste sprečili svaku pojavu rizika po svoj i život drugih osoba ili štete po svoju i imovinu drugih osoba, morate se pridržavati napomena o bezbednosti.

- Ovaj proizvod pripada Kategoriji I električnih uređaja i može se koristiti isključivo za sušenje vodom opranog veša u domaćinstvu. Tokom rada, povedite računa o bezbednosti prilikom upotrebe električne energije!
- Ne koristiti izvor napajanja sa proverenim uzemljenjem. Vod za uzemljenje mora biti ukopan u zemlju i nikako ne sme biti povezan na mrežu javnih instalacija, poput gradskih vodovodnih ili gasovodnih cevi itd. Zemlja i nula treba da budu jasno označene i ne smeju se povezivati.
- Napojni kabl mora da ispunjava zahteve Međunarodne elektrotehničke komisije (IEC, International Electrotechnical Commission) i mora da izdržava struju jaču od 16A. Kako biste bili sigurni da ste Vi i Vaša porodica bezbedni, odmah ispravite svaki slučaj napajanja koje ne ispunjava gorepomenute zahteve, a koji se javlja u Vašem domu.
- Ne stavljajte u mašinu veću količinu veša od preporučene. Poštujte uputstva o maksimalnoj težini veša. Pogledajte povezani odeljak u ovom korisničkom uputstvu.
- Ne koristite mašinu za sušenje veša ukoliko ste već prethodno čistili industrijskim hemikalijama.
- Veš koji nije prethodno opran nemojte sušiti u mašini za sušenje veša.
- Pre sušenjama poput jestivog ulja, acetona, alkohola, benzina, kerozina, sredstava za uklanjanje fleka, terpentina, voska i sredstava za skidanje voska, trebalo bi oprati u vreloj vodi sa više deterdženta.
- Predmete poput sundera (sundera od lateksa), kapa za tuširanje, vodootpornih materijala, gumiranih predmeta i garderobe ili jastuka koji sadrže sunderaste elemente ne bi trebalo sušiti u mašini.
- Omekšivače za veš i slične proizvode treba upotrebljavati na način naveden u uputstvu na ambalaži.
- Poslednja faza ciklusa sušenja veša se obavlja bez toplote (ciklus hlađenja) kako visoka temperatura ne bi oštetila veš.
- Hvatač finih vlakana se mora često čistiti.
- Ne sme se dozvoliti nagomilavanje finih vlakana na mašini za sušenje veša.
- Neophodno je obezbediti odgovarajuću ventilaciju u prostoriji kako bi se izbeglo vraćanje gasova koje proizvode uređaji za sagorevanje goriva, uključujući i one sa otvorenim plamenom.
- Izduvni vazduh se ne sme ispuštati kroz kanal koji služi za sprovođenje izduvnih gasova iz uređaja koji sagorevaju gas ili druge vrste goriva.
- Uređaj se ne sme postavljati iza vrata koja se mogu zaključavati, kliznih vrata ili vrata sa šarkama na suprotnoj strani u odnosu na mašinu za sušenje veša, čime se onemogućava potpuno otvaranje vrata na mašini za sušenje.
- Predmeti koji su bili u kontaktu sa uljem se mogu spontano zapaliti, naročito ukoliko su izloženi izvorima toplote, kao što je to slučaj sa mašinom za sušenje veša.
- Veš se zagreva, što kod ulja izaziva oksidacionu reakciju. Oksidacija stvara toplotu. Ukoliko se toplota zadržava, veš može postići dovoljno visoku temperaturu da se zapali. Grupisanjem, slaganjem ili gomilanjem veša koji je bio u kontaktu sa uljem toplota se može zadržati, što stvara opasnost od požara.
- Ukoliko tkanine koje su zaprljane biljnim ili jestivim uljem ili proizvodima za održavanje kose morate staviti u mašinu za sušenje veša, najpre bi ih trebalo oprati u vreloj vodi sa više deterdženta, čime će se opasnost umanjiti, mada ne i potpuno eliminisati.
- Tokom uobičajene upotrebe ili održavanja, uređaj se ne sme prevrtati.
- Iz džepova izvadite sve predmete poput upaljača i šibica.
- Uređaj mogu da upotrebljavaju deca starija od 8 godina, kao i osobe sa umanjnim fizičkim, čulnim ili mentalnim sposobnostima ili osobe bez iskustva i znanja, ukoliko su pod nadzorom ili ukoliko su dobili uputstva o bezbednoj upotrebi uređaja i shvataju opasnosti koje upotreba istog nosi. Deca ne treba da se igraju uređajem. Deca ne treba da obavljaju čišćenje i održavanje uređaja bez nadzora. (Ovo upozorenje se odnosi isključivo na EVROPSKO tržište)
- Ukoliko je priključni kabl oštećen, njegovu zamenu mora da obavi proizvođač, servis koji je proizvođač angažovao ili lica sa sličnim kvalifikacijama, kako bi se izbegla opasnost.
- Ovaj uređaj je namenjen isključivo za upotrebu u zatvorenom prostoru.
- Otvori uređaja ne smeju biti blokirani tepihom.
- Decu mlađu od 3 godine treba držati dalje od uređaja, osim ukoliko su pod stalnim nadzorom.

- Ukoliko uređaj razvija neuobičajeno visoku temperaturu, odmah izvucite utikač iz utičnice.
- Nije predviđeno da uređaj upotrebljavaju osobe (uključujući decu) sa umanjenim fizičkim, čulnim ili mentalnim sposobnostima ili osobe bez iskustva i znanja, osim ukoliko su pod nadzorom ili ukoliko su dobile uputstva o upotrebi uređaja od osobe odgovorne za njihovu bezbednost. Decu je potrebno nadgledati kako bi se sprečilo njihovo igranje uređajem. (Ovo upozorenje se ne odnosi na EVROPSKO tržište)



UPOZORENJE!

Nikada ne zaustavljajte mašinu za sušenje veša pre nego što se ciklus sušenja završi. U suprotnom, ispustićete preveliku količinu toplote, što može dovesti do povređivanja.

Ispravno odlaganje ovog proizvoda:



Ova oznaka ukazuje da ovaj proizvod u EU ne treba odlagati zajedno sa drugim otpadom iz domaćinstva. Da biste sprečili potencijalnu štetu po životnu sredinu ili zdravlje ljudi koja nastaje nekontrolisanim odlaganjem otpada, odgovorno reciklirajte proizvod kako biste promovisali održivu ponovnu upotrebu materijalnih resursa. Za odlaganje upotrebljenog uređaja koristite sisteme za vraćanje i sabiranje otpada ili kontaktirajte maloprodajni objekat u kome ste proizvod kupili. Oni Vaš proizvod mogu reciklirati na način bezbedan po životnu okolinu.

Opasnost of strujnog udara

- Ne izvlačite utikač iz utičnice snažnim povlačenjem priključnog kabla.
- Utikač ne priključujte u/isključujte iz utičnice vlažnim rukama.
- Ne oštećujte priključni kabl i utikač.

Opasnost od povređivanja

- Ne rasklapajte i ne postavljajte mašinu za sušenje veša bez uputstva ili nadzora.
- Ne postavljajte ovu mašinu za sušenje na mašinu za pranje veša bez opreme za postavljanje jedne na drugu mašinu. (Ukoliko želite da je postavite na mašinu za pranje veša, najpre nabavite potrebne delove koji se zasebno prodaju. Njihovo postavljanje mora da obavi proizvođač, servis koji je proizvođač angažovao ili lica sa sličnim kvalifikacijama, kako bi se izbegla opasnost).
- Ne naslanjajte se na otvorena vrata mašine za sušenje veša.
- Ne stavljajte na mašinu nikakve izvore toplote, poput sveća, električnih ringli.

Opasnost od oštećenja


- Ne sušite veću količinu veša od nominalne.
- Ne uključujte mašinu za sušenje veša ukoliko nisu postavljeni filter koji se nalazi u vratima i filter koji se nalazi na dnu mašine.
- Ne sušite veš koji nije prethodno centrifugiran.
- Ne izlažite mašinu za sušenje veša direktnim zracima sunca i upotrebljavajte je isključivo u zatvorenom prostoru.
- Ne postavljajte mašinu za sušenje veša u vlažne i mokre prostorije.
- Prilikom čišćenja i održavanja, ne zaboravite da izvučete priključni kabl iz utičnice i nemojte mašinu za sušenje prati vodom.

Opasnost od eksplozije

- Nemojte sušiti veš koji je prethodno bio u kontaktu sa nekom od zapaljivih supstanci, poput kerozina i alkohola, ili će doći do eksplozije.

POSTAVLJANJE

Opis proizvoda

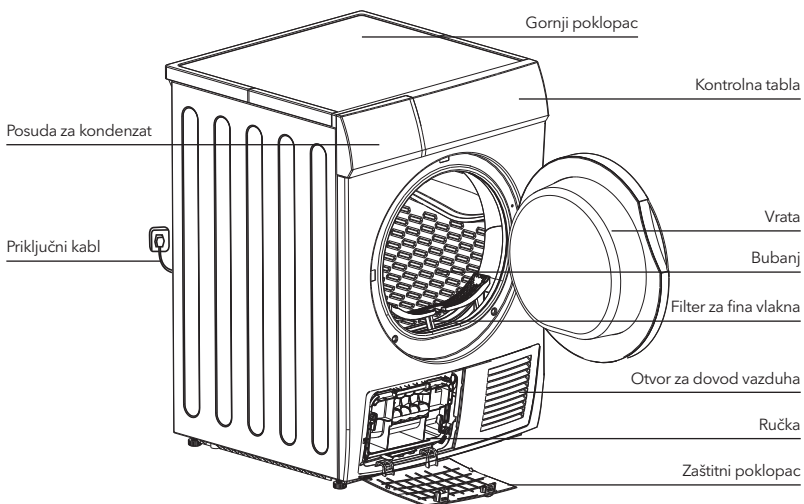


NAPOMENA!

- Pogledajte proizvod koje ste kupili.


Dodatna oprema

Sledeći delovi su opcionalni za određene modele.


Ukoliko je Vaša mašina za sušenje veša dostavljena sa sledećim delovima, stavite rukavice i postavite ih prateći dole navedena uputstva.

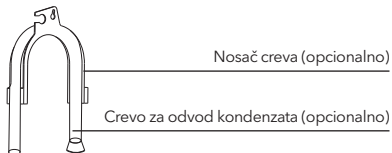


Postavljanje

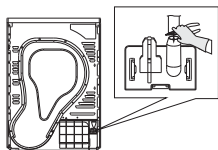


Upotrebite klješta da skinete odvodno crevo sa konektora.

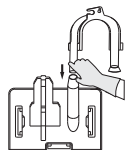

Ubacite spoljašnje odvodno crevo.

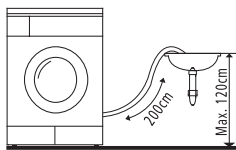

 Stavite nosač creva na lavabo ili bilo koji drugi slivnik.




Transport

Pažljivo premeštajte uređaj. Uređaj ne pridržavajte za isturene delove. Vrata mašine se ne smeju upotrebljavati za držanje prilikom nošenja.


Mesto postavljanja

1. Preporučuje se da, zarad Vaše ugodnosti, mašinu za sušenje veša postavite u blizini Vaše mašine za pranje veša.
2. Mašinu za sušenje veša postavite na čisto mesto gde se ne akumulira prljavština. Vazduh mora da slobodno cirkuliše oko čitavog uređaja. Ne blokirajte prednji otvor za dovod vazduha niti rešetke za dovod vazduha na zadnjoj strani mašine.
3. Kako bi se vibracije i buka prilikom upotrebe svele na najmanji mogući nivo, mašinu za sušenje veša treba postaviti na čvrstu i ravnu površinu.
4. Nikada ne skidajte nožice. Ne blokirajte protok vazduha na donjem delu mašine debelim tepisima, daskama i slično. U suprotnom, mašina će početi da se zagreva, što može da utiče na njen rad.

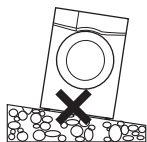

Nivelisanje

Kada je postavite na za nju predviđeno mesto, pomoću libele proverite da li je mašina za sušenje veša potpuno iznivelisana. Ukoliko to nije slučaj, podesite nožice pomoću alata.

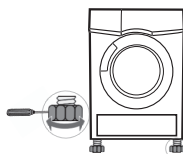

Povezivanje sa napajanjem


1. Uverite se da napajanje ima napon koji odgovara vrednostima navedenim u specifikaciji za mašinu za sušenje veša.
2. Ne priključujte mašinu za sušenje veša preko napojne ploče, već preko univerzalnog utikača i utičnice.

RAD UREĐAJA

Brzi početak

☰ NAPOMENA!

Pre upotrebe, uverite se da je uređaj dobro postavljen.

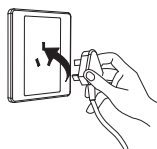


Uključite

1



Napunite vešom

2

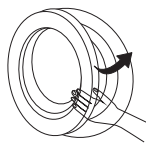

Zatvorite vrata

3

Sušenje



Uključite



Izaberite program




Izaberite opciju ili
ostavite podrazumevane
vrednosti




Počnite

Nakon sušenja


Oglasice se zvučni signal ili će se na displeju pojaviti „0:00“.

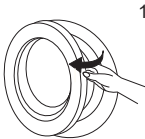


1
Otvorite vrata i
izvadite veš

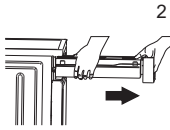


2
Izvadite posudu za
kondenzat

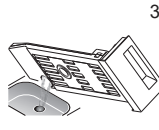

3
Prospite vodu koja
se kondenzovala

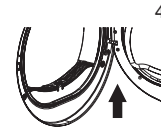

4
Očistite filter

 

5
Isključite

NAPOMENA!

- Ukoliko upotrebljavate utičnicu sa prekidačem, pritisnite prekidač kako biste direktno isključili napajanje.

Pre svakog sušenja

NAPOMENA!

 


Nakon proizvodnje i transporta, u mašini za sušenje veša mogu se zadržati prašina i ulje. Da ne biste zaprljali svoj veš, pre prvog ciklusa obavite sledeće:

- Stavite čiste krpe u bubanj.
- Priključite uređaj na napajanje.
- Izaberite program Quick (Brzi program) i pritisnite taster "Start/Pause" (Početak/Pauziranje).
- Po završetku ciklusa ovog programa, očistite filter za fina vlakna i hladnjak vazduha prateći uputstva data u odeljku "Čišćenje i održavanje" na strani 19.
 1. Pre sušenja, dobro iscentrifugirajte veš u mašini za pranje veša. Centrifugiranje pri velikom broju obrtaja može da umanj period sušenja i uštedi energiju.
 2. Da bi sušenje bilo ujednačeno, sortirajte veš prema tipu tkanine i programu sušenja.
 3. Pre sušenja, zakopčajte rajsfešluse, prilepите čičak trake, zakopčajte dugmad, privežite kaiševe od tkanine i slično.
 4. Ne presušujte veš, jer se presušena garderoba lakše gužva.
 5. Ne sušite predmete koji sadrže gumu ili slične elastične materijale.
 6. Vrata mašine za sušenje veša se mogu otvoriti tek po završetku ciklusa kako bi se sprečilo izlaganje kože ljudi vreloj pari ili pregrejanim delovima mašine za sušenje veša i zadobijanje opekotina.
 7. Nakon svake upotrebe mašine, očistite filter za fina vlakna i ispraznite posudu za kondenzat kako biste sprečili produžavanje perioda sušenja i povećanje potrošnje energije.
 8. Ne sušite garderobu koja je bila na hemijskom čišćenju.

NAPOMENA!

- Nikada ne prepunjujte mašinu.
- Ne stavljajte veš natopljen vodom. Može doći do oštećenja mašine za sušenje, pa čak i požara.
- Nije predviđeno za tkanine od svile ili vune

Referentna težina suve garderobe (pojedinačni komadi)

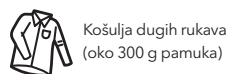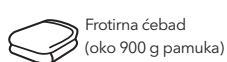

Ne upotrebljavajte mašinu da biste sušili garderobu koja se ne sme sušiti u njoj ili koja na etiketi ima neki od sledećih simbola



Sušiti



Normalno



Normalno ne sušiti u mašini za sušenje



Ne sušiti



Sušiti na žici



Ispraviti tokom sušenja



Ispraviti tokom sušenja zracima sunca



Ne izlagati direktnim zracima sunca



Hemijski čistiti



Ne nositi na hemijsko čišćenje




Hemijski čistiti normalnim ciklusom uz bilo koji rastvarač



Hemijski čistiti normalnim ciklusom isključivo rastvaračem na bazi nafte

Komandna tabla

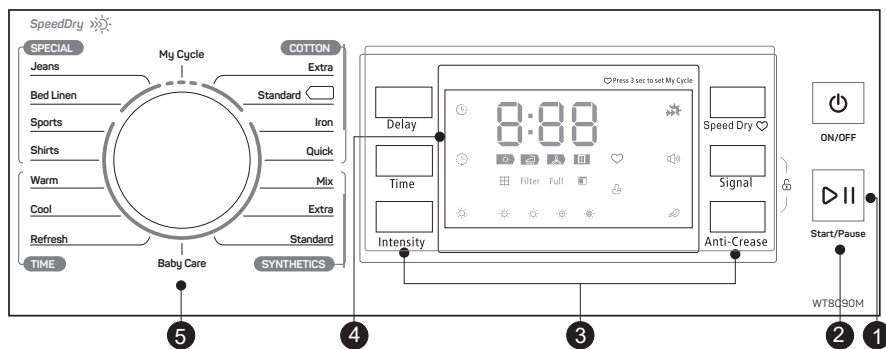

1 On/Off (Uključeno/Isključeno)

Za uključivanje ili isključivanje proizvoda.

2 Start/Pause (Početak/Pauziranje)

Pritisnite ovaj taster kako biste započeli ciklus sušenja ili ga pauzirali.

3 Posebne opcije

Ovi tasteri se koriste za podešavanje dodatnih opcija.


4 Displej

Na displeju su prikazana podešavanja, procena vremena preostalog za završetak ciklusa i poruke o statusu Vaše mašine.


5 Programi


Zavisno od potreba korisnika, mašina nudi veći izbor različitih ciklusa koji će povećati učinak sušenja veša.

**Filter**

 Ukoliko je ikonica  osvetljena kada mašina za sušenje veša prestane sa radom, očistite filter.

**Posuda**

Ukoliko je ikonica  osvetljena kada mašina za sušenje veša prestane sa radom, ispraznite posudu za kondenzat.


**Delay (Odloženi početak)****Time (Vreme)****Zaključavanje zbog bezbednosti dece****Indikator preostalog vremena/Poruka o grešci****Status faze ciklusa****Očistite filtere (upozorenje)****Ispraznite posudu za kondenzat (upozorenje)****Nivo prosušenosti veša (četiri stepena)****Indikator ubrzanog sušenja****Indikator zvučnog signala****Anti-Crease (Režim protiv gužvanja)****Moj ciklus****Izbor programa**

1. Pritisnite taster [On/Off] (Uključeno/Isključeno). Kada LED displej zasvetli, zarotirajte dugme za izbor programa kako biste izabrali željeni program.
2. Izaberite opcije [Delay] (Odloženi početak), [Time] (Vreme), [Intensity] (Intenzitet), [Speed Dry] (Ubrzano sušenje), [Signal] (Zvučni signal) ili [Anti-Crease] (Protiv gužvanja) kako biste aktivirali dodatne funkcije.
3. Pritisnite taster [Start/Pause] (Početak/Pauziranje).

Pokretanje programa

Po započinjanju rada programa, bubanj će se konstantno okretati, lampica statusa na displeju će treperiti, a prikazano preostalo vreme trajanja ciklusa će se automatski ažurirati.

Kraj programa

1. Bubljanje će, po završetku programa, prestati da se okreće, zvučni signal će se oglašiti, na displeju će se prikazati , a svetlo statusa poslednje faze ciklusa će treperiti. Ukoliko korisnik ne izvadi veš u roku od 1 minuta, mašina za sušenje veša će aktivirati opciju [Anti-crease] (Protiv gužvanja). Pritisnite taster [On/Off] (Uključeno/Isključeno) kako biste prekinuli napajanje i izvucite utikač iz utičnice.
2. Ukoliko u toku procesa sušenja dođe do neočekivanog prekida rada, pri čemu je na mašini za sušenje veša prikazano obaveštenje, probleme rešavajte u skladu sa podacima navedenim u odeljku "Obaveštenja o nepravilnosti u radu i rešenja".

Ostale opcije

Uputstvo za upotrebu opcije [Delay] (Odloženi početak)

Ova opcija se koristi za odlaganje početka sušenja veša za bilo koji period unutar 24 sata. Vremenski period odlaganja početka podrazumeva započinjanje ciklusa datog programa nakon X sati. Kada aktivirate odlaganje početka rada programa, vreme preostalo do početka ciklusa, prikazano na displeju, počće da se smanjuje, a ikonica opcije „Odloženi početak“ će treperiti.

Detaljni koraci:

1. Stavite veš u mašinu i uverite da su vrata mašine zatvorena.
2. Pritisnite taster [On/Off] (Uključeno/Isključeno), a zatim okrenite dugme za izbor programa i izaberite željeni program.
3. Zavisno od potrebe, možete izabrati opciju [Anti-Crease] (Protiv gužvanja) or [Signal] ili (Zvučni signal).
4. Pritisnite taster [Delay] (Odloženi početak).
5. Uzastopno pritisnite taster [Delay] (Odloženi početak) kako biste izabrali period odlaganja početka ciklusa.
6. Nakon što uključite taster [Start/Pause] (Početak/Pauziranje), mašina za sušenje veša započinje odbrojavanje. Ciklus sušenja će se automatski aktivirati po isteku perioda za odlaganje početka.
7. Ako ponovo pritisnete taster [Start/Pause] (Početak/Pauziranje), pauzirćete opciju odlaganja početka.
8. Ukoliko želite da otkazete opciju [Delay] (Odloženi početak), pritisnite taster [On/Off] (Uključeno/Isključeno).

Uputstvo za upotrebu opcije [Time] (Vreme)

Prilikom izbora programa „Zagrevanje“, „Hlađenje“ ili „Osvežavanje“, pomoću tastera [Time] (Vreme) možete podesiti vreme trajanja sušenja, tako što ćete ga svakim pritiskom povećati za 10 minuta.

Uputstvo za upotrebu opcije [Intensity] (Intenzitet)

Upotrebljava se za podešavanje nivoa prosušenosti veša. Svaki nivo se sastoji od četiri stepena. Vreme trajanja sušenja se sa svakim narednim stepenom povećava za 3 minuta.

1. Opciju "Intenzitet" možete aktivirati isključivo pre početka rada programa..
2. Uzastopno pritisnite taster [Intensity] (Intenzitet) kako biste izabrali vreme trajanja sušenja.
3. Opciju [Intensity] (Intenzitet) možete koristiti u okviru svih programa, osim [Cotton Iron] (Sušenje pamučnog veša za peglu), [Quick] (Brzi program), [Synthetic Iron] (Sušenje sintetičkog veša za peglu), [Baby Care] (Održavanje bebi veša), [Warm] (Zagrevanje), [Cool] (Hlađenje) i [Refresh] (Osvežavanje).

Uputstvo za upotrebu opcije [Speed dry] (Ubrzano sušenje)

Koristite ovu opciju kako biste skratili vreme sušenja. Ova opcija se može koristiti u okviru programa [Cotton Extra] (Izuzetno snažno sušenje pamučnog veša), [Cotton Standard] (Standardno sušenje pamučnog veša), [Bed linen] (Posteljno rublje) i [Jean] (Teksas).

Uputstvo za upotrebu opcije [Signal] (Zvučni signal)

Podesite zvučni signal na uključeno ili isključeno. Zvučni signal je normalno uključen. Po potrebi, pritisnite taster. Ukoliko je zvučni signal uključen:

1. Mašina za sušenje veša će se oglašiti ukoliko pritisnete tastere dodatnih opcija.
2. Ukoliko u toku rada mašine za sušenje veša zarotirate dugme za izbor programa, mašina će osobu koja rukuje uređajem podsetiti da vrši nevažeci izbor programa.
3. Zvučni signal će oglašiti i kako bi korisnika obavestio o završenom ciklusu sušenja.

Uputstvo za upotrebu opcije [Anti-Crease] (Protiv gužvanja)

Trajanje faze protiv gužvanja na kraju ciklusa sušenja iznosi 30 minuta (podrazumevano) ili 120 minuta (izabrana opcija).

Opcija [Anti-Crease] (Protiv gužvanja) bi trebalo da bude osvetljena nakon što je izaberete. Ovom opcijom

se sprečava gužvanje veša. Veš se može izvaditi iz mašine u toku faze protiv gužvanja. Ovu opciju imaju svi programi, sem [Cool] (Hlađenje), [Refresh] (Osvežavanje) i [Baby Care] (Održavanje bebi veša).

Uputstvo za upotrebu opcije [My Cycle] (Moj ciklus)

Upotrebljava se za određivanje i memorisanje omiljenih programa koje često upotrebljavate.

1. Izaberite željeni program i druge opcije za sušenje pomoću dugmeta za biranje programa.
2. Pritisnite i zadržite taster [Speed dry] (Ubrzano sušenje) u trajanju od 3 sekundi dok se ne začuje zvučni signal i ne memorišete željeni program.
3. Okrenite selektor programa na poziciju [My Cycle] (Moj ciklus), kako biste pokrenuli omiljeni program. Ako želite da promenite [My Cycle] (Moj ciklus) podešeni program, ponovite programe 1 i 2.

Uputstvo za upotrebu opcije [Child Lock] (Zaključavanje zbog bezbednosti dece)

1. Ova mašina ima posebnu opciju zaključavanja zbog bezbednosti dece, kojom se sprečava da deca nepromišljeno pritisakju tastere ili pogrešno aktiviraju mašinu.
2. Kada je mašina za sušenje veša uključena, sa izuzetkom stanja pripravnosti, istovremeno pritisnite tastere [Anti-Crease] (Protiv gužvanja) i [Signal] (Zvučni signal) i zadržite pritisak u trajanju od preko 3 sekunde kako biste aktivirali opciju zaključavanja zbog bezbednosti dece. Nakon aktiviranja opcije zaključavanja zbog bezbednosti dece, na displeju će biti prikazana ikonica opcije Zaključavanje zbog bezbednosti dece, a na mašini za sušenje veša će biti aktivan jedino taster [On/Off] (Uključeno/Isključeno).

Prilikom aktivirane opcije zaključavanja zbog bezbednosti dece, istovremeno pritisnite tastere [Anti-Crease] (Protiv gužvanja) i [Signal] (Zvučni signal) i zadržite pritisak u trajanju od preko 3 sekunde kako biste isključili opciju zaključavanja zbog bezbednosti dece.

Tabela programa za sušenje

Program	Težina (maks.)		Primena/Svojstva	Odloženi početak	Vreme
	8.0 kg				
Cotton (Pamuk)	Za pamučan i raznobojni veš od pamuka ili lana.			D	N
	Extra (Izuzetno snažno sušenje)	8.0 kg	Za sušenje pamučne garderobe. Stepensušenja: izuzetno snažno sušenje.		
	Standard (Standardno sušenje)		Za sušenje pamučne garderobe. Stepensušenja: sušenje za pakovanje u orman.		
	Iron (Sušenje za peglu)		Za sušenje pamučne garderobe. Stepensušenja: sušenje za peglu.		
Quick (Brzi program)	3.0 kg	Za opran veš koji je potrebno što pre osušiti, npr. za veš od akrila ili za pojedinačne manje komade garderobe. Takođe, može se koristiti i za naknadno sušenje.			
Synthetics (Sintetika)	Za veš od sintetike, kombinovanih materijala i pamuka, koji se ne pegla.			D	N
	Extra (Izuzetno snažno sušenje)	3.5 kg	Za sušenje debelih ili višeslojnih sintetičkih tkanina. Stepensušenja: izuzetno snažno sušenje.		
Standard (Standardno sušenje)	Za sušenje tankih sintetičkih tkanina koje se ne peglaju, poput majica koje se lako održavaju, stolnjaka, bebi odeće, čarapa.				
Baby Care (Održavanje bebi veša)	Baby Care (Održavanje bebi veša)	1.0 kg	Za sušenje garderobe za bebe pri nižim temperaturama.	D	

Program		Težina (maks.)	Primena/Svojstva	Odloženi početak	Vreme
		8.0 kg			
Special (Specijalne vrste veša)	Jeans (Teksas)	5.0 kg	Za sušenje garderobe od teksasa i garderobe za slobodno vreme koja se u mašini za pranje veša može centrifugirati pri velikom broju obrtaja.	D	N
	Bed linen (Posteljina)	5.0 kg	Za sušenje postelnog rublja i sličnog veša velikih dimenzija.		
	Mix (Kombinovani veš)	3.5 kg	Ukoliko ne možete da odredite od kog materijala je garderoba napravljena, izaberite program Mix (Kombinovani veš).		
	Sports (Sportski veš)	3.0 kg	Za sušenje sportskog veša, tankih tkanina i poliester, koji se ne peglaju.		
	Shirts (Majice)	1.0 kg	Za garderobu koja se lako održava, poput majica i bluza, uz opciju protiv gužvanja koja ubrzava postupak peglanja. Stavite garderobu u mašinu za sušenje veša tako da ne bude sabijena. Po završetku ciklusa sušenja, stavite garderobu na ofinger.		
My Cycle (Moj ciklus)	My Cycle (Moj ciklus)	–	Definišite i memorišite svoj omiljeni program.	D	–
Time (Vreme)	Warm (Zagrevanje)	–	Za zagrevanje veša u trajanju od najmanje 10 min. do najviše 120 min. (svaki sledeći korak traje 10 min. duže)	D	D
	Cool (Hlađenje)	–	Za hlađenje veša bez uduvavanja vrelog vazduha u trajanju od najmanje 10 min. do najviše 30 min. (svaki sledeći korak traje 10 min. duže)		
	Refresh (Osvežavanje)	–	Za osvežavanje veša koji je dugo bio u zatvorenom u trajanju od najmanje 20 min. do najviše 150 min. (svaki sledeći korak traje 10 min. duže)		

☰ NAPOMENA!

- ☐ Ovaj simbol označava program za testiranje energetske efikasnosti "standardni program za pamuk", koji je u skladu sa važećim standardom EN 61121 i najpogodniji je za sušenje normalne težine pamučnog veša prema nominalnoj težini.
- Debele ili višeslojne tkanine, npr. posteljina, teksas, jakne itd. se teže suše. Najbolje je da izaberete program Cotton Extra (Izuzetno snažno sušenje pamuka).
- Pošto se radi o neujednačenim tkaninama, debela i višeslojna garderoba se teže suši. Ukoliko su neki delovi garderobe nakon programa i dalje vlažni, izaberite odgovarajući vremenski program sušenja.



ODRŽAVANJE

Čišćenje i održavanje

Čišćenje filtera za fina vlakna

Sačekajte da se mašina za sušenje veša ohladi.

- Otvorite vrata mašine.
- Izucite filter za fina vlakna tako što ćete ga povući naviše.
- Očistite filter za fina vlakna; pokupite vlakna koja su se prikupila na filteru za fina vlakna. Vlakna možete pokupiti bilo rukom ili tako što ćete filter isprati vodom i temeljno osušiti.
- Ponovo postavite filter za fina vlakna.

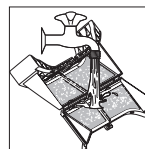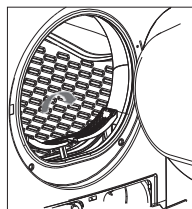

☰ NAPOMENA!

- Naslage finih vlakana na filteru mogu onemogućiti protok vazduha, što može produžiti period sušenja i povećati potrošnju energije; zbog toga je nakon svake upotrebe potrebno uklanjati vlakna sa filtera.
- Pre čišćenja izvucite priključni kabl iz utičnice!
- Ne uključujte mašinu za sušenje veša ukoliko je bez filtera za fina vlakna!
- Kako biste sprečili stvaranje naslaga finih vlakana u mašini za sušenje veša, nakon svake upotrebe očistite filter za fina vlakna.

Pranje hladnjaka vazduha

Sačekajte da se mašina za sušenje veša ohladi.

 


 
Može doći do curenja vode koja se zadržala. Stavite krpu ispod zaštitnog poklopca.

1. Otključajte zaštitni poklopac.
2. Potpuno otvorite zaštitni poklopac.
3. Zašrafite obe poluge za pričvršćivanje tako da budu okrenute jedna prema drugoj.
4. Izvucite hladnjak vazduha.
5. Potpuno očistite hladnjak vazduha, temeljno ocedite.
6. Očistite zaptivke.
7. Ponovo postavite hladnjak vazduha, pridržavajte za taster!
8. Odšrafite obe poluge za pričvršćivanje.
9. Zatvorite zaštitni poklopac tako da se zaključa

Ukoliko često upotrebljavate uređaj, čistite hladnjak vazduha otprilike na svaka 3 meseca. Ne oštećujte hladnjak vazduha!



⚠ UPOZORENJE!

- Čistite isključivo vodom; ne upotrebljavajte čvrste predmete ili predmete oštih ivica! Ne uključujte mašinu za sušenje veša ukoliko je bez hladnjaka vazduha!
- Tokom sušenja, između prozora i zaptivke se može nakupiti voda, ali to neće uticati na rad Vaše mašine za sušenje veša!

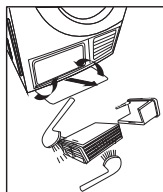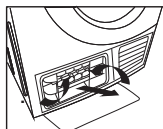

Praženje posude za kondenzat

1. Uхватite i izvucite posudu za kondenzat obema rukama.
2. Okrenite posudu za kondenzat i prospite kondenzovanu vodu u slivnik.
3. Postavite posudu za kondenzat u mašinu.

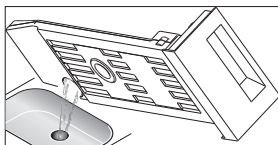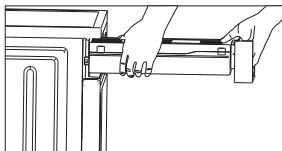

⚠ UPOZORENJE!



- Posudu za kondenzat ispraznite nakon svake upotrebe mašine. Ukoliko se posuda za kondenzat napuni u toku ciklusa sušenja, program će biti pauziran, a ikonica [E] će zasvetleti. Nakon što ispraznite posudu za kondenzat, mašinu za sušenje veša možete ponovo pokrenuti pritiskom na taster [Start/Pause] (Početak/Pauziranje).
- Nemojte piti vodu koja se kondenzovala u mašini.
- Ne upotrebljavajte mašinu za sušenje veša ukoliko nije postavljena posuda za kondenzat.

Otklanjanje kvarova

Oznaka greške	Značenje oznake	Rešenje
E30	Problem sa zagrevanjem	Ukoliko problem nastavi da se javlja, kontaktirajte lokalni servisni centar
E32	Greška senzora za vlagu	
E33	Greška senzora za temperaturu	

UPOZORENJE!

- Popravke mogu obavljati samo ovlašćena tehnička lica.
- Pre nego što pozovete servis, pokušajte da sami rešite problem i proverite da li ste pratili uputstva za korisnike.
- Tehničko lice će Vam naplatiti pružanje saveta, bez obzira na to što je uređaj u garanciji.

Problem	Rešenje
Displej nije uključen	Proverite da li napajanje radi. Proverite da li je utikač priključen u utičnicu. Proverite izabrani program. Pritisnite taster [On/Off] (Uključeno/Isključeno).
Ikonica  je osvetljena	Ispraznite posudu za kondenzat. Ukoliko je ikonica i dalje osvetljena, pozovite servis.
ikonica  je osvetljena	Očistite razmenjivač toplote. Očistite filter za fina vlakna.
Mašina za sušenje veša ne počinje da radi	Proverite da li su vrata zatvorena. Proverite da li ste izabrali program. Proverite da li ste pritisnuli taster za početak rada.
Nije postignut zadati stepen sušenja ili je vreme sušenja predugo	Očistite filter za fina vlakna i operite razmenjivač toplote. Ispraznite posudu za kondenzat. Proverite odvodno crevo. Mašina za sušenje veša je u skučenom okruženju. Očistite senzore za vlagu. Održavajte čistoću otvora za dovod vazduha. Aktivirajte program koji je po jačini sušenja za stepen iznad već aktiviranog programa ili aktivirajte program Time (Vreme).

UPOZORENJE!

Ukoliko problem ne možete da rešite sami ili ako Vam je potrebna pomoć:

- Pritisnite taster [On/Off] (Uključeno/Isključeno).
- Izvucite utikač iz utičnice i pozovite servis.

Tehničke specifikacije

Dimenzije (D*Š*V)	615*595*845 mm
Sobna temperatura	+5°C ~ +35°C
Nominalna ulazna snaga	2700W
Nominalni napon	220-240V~
Nominalna frekvencija	50Hz
Težina proizvoda	41 kg
Nominalni kapacitet	8,0 kg

 NAPOMENA!

- Nominalni kapacitet predstavlja maksimalni kapacitet. Uvek se uverite da količina suvog veša u uređaju ne prekorači nominalni kapacitet.
- Ne postavljajte mašinu za sušenje veša u prostoriju u kojoj postoji rizik od smrzavanja. Pri temperaturama oko tačke mržnjenja mašina za sušenje veša možda neće raditi na odgovarajući način.
- Rizik od oštećenja mašine se javlja ukoliko dozvolite da se voda nastala kondenzovanjem zamrzne u pumpi, crevima i/ili posudi za kondenzat.

Karakteristike proizvoda

Nominalni kapacitet		8kg
Tip mašine za sušenje veša		Kondenzaciona
Klasa energetske efikasnosti		B
Izmerena godišnja potrošnja energije (AEC)		561,0 kWh/godišnje
Automatska ili neautomatska		Automatska
Evropska eko-oznaka (EU Ecolabel)		Ne primenjuje se
Potrošnja energije tokom standardnog programa za pamuk		
Potrošnja energije tokom standardnog programa za pamuk sa potpuno opterećenim bubnjem		4,74 kWh
Potrošnja energije tokom standardnog programa za pamuk sa delimično opterećenim bubnjem		2,56 kWh
Potrošnja energije u režimu isključeno (off) (Po)		0,28 W
Potrošnja energije u režimu Ostavljeno uključeno (Left-on) (PI)		0,8 W
Trajanje režima Ostavljeno uključeno (Left-on)		10 min
Trajanje standardnog programa za pamuk		
Izmereno trajanje standardnog programa za pamuk sa potpuno i delimično opterećenim bubnjem		112 min
Trajanje standardnog programa za pamuk sa potpuno opterećenim bubnjem		140 min
Trajanje standardnog programa za pamuk sa delimično opterećenim bubnjem		90 min
Klasa efikasnosti kondenzovanja od A (najefikasnije) do G (najmanje efikasno)		B
Prosečna efikasnost kondenzovanja tokom standardnog programa za pamuk sa potpuno opterećenim bubnjem		80,1%
Prosečna efikasnost kondenzovanja tokom standardnog programa za pamuk sa delimično opterećenim bubnjem		80,1%
Izmerena efikasnost kondenzovanja tokom standardnog programa za pamuk sa potpuno i delimično opterećenim bubnjem		80,1%
Nivo jačine zvuka tokom standardnog programa za pamuk sa potpuno opterećenim bubnjem		69 dB

Napomene:

- Potrošnja energije na godišnjem nivou, na osnovu 160 ciklusa sušenja u standardnom programu za pamuk sa potpuno i delimično opterećenim bubnjem, i potrošnja u režimima sa malom snagom. Realna potrošnja energije po ciklusu zavisiće od načina upotrebe uređaja. Standardni program za pamuk sa potpuno i delimično opterećenim bubnjem predstavlja standardni program sušenja na koji se odnose podaci navedeni na etiketi i u karakteristikama. Ovaj program je pogodan sušenje uobičajeno mokrog pamučnog veša i predstavlja najefikasniji program u smislu utroška energije pri pranju pamučnog veša.

TESLA

tesla.info

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Tesla, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/tesla-masine-za-susenje-vesa-wt8c90m-akcija-cena/>