

Uputstvo za upotrebu (EN)

REMINGTON aparat za brijanje F3000

REMINGTON®
EST. NEW YORK 1937



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/remington-apat-za-brijanje-f3000-akcija-cena/>

REMINGTON®

Style Series Foil Shaver





F3

 www.remington.co.uk


Register online for an EXTRA year guarantee

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

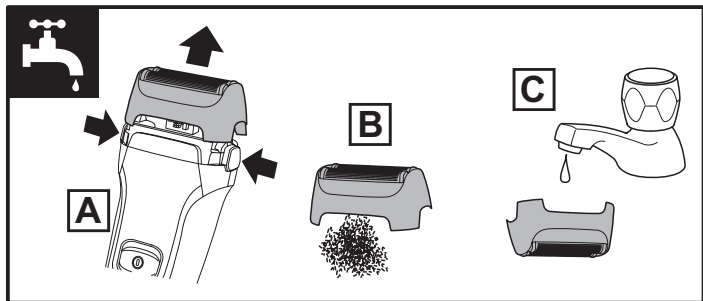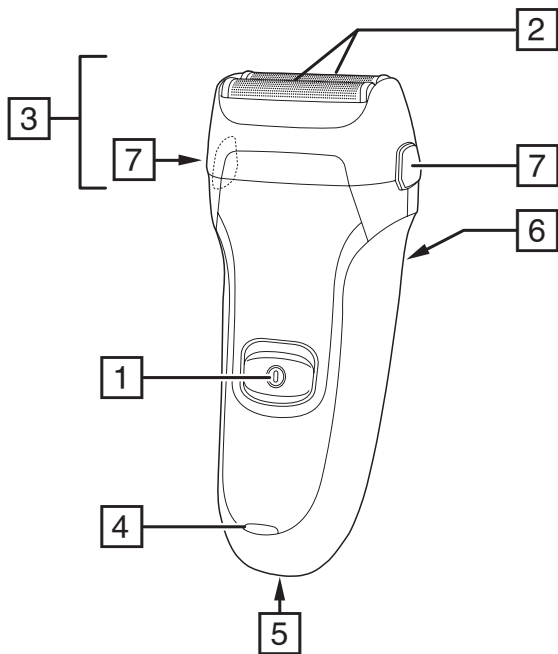

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
-  The device is suitable for cleaning under an open water tap.
- The body of this appliance is not washable or water resistant. Do not put the appliance in liquid.
- **WARNING:** Detach the device from the charging adapter before cleaning it in water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance - type reference PA-0505K (UK).
- Always replace a damaged adaptor with one of the original type.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.

- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

KEY FEATURES

- | | |
|-----------------------|-------------------------|
| 1. On/off switch | 7. Head release buttons |
| 2. Foil screens | <i>Not shown:</i> |
| 3. Cutter assembly | 8. Head guard |
| 4. Charging indicator | 9. Adaptor |
| 5. Power port | 10. Cleaning brush |
| 6. Pop-up trimmer | |

GETTING STARTED

- It is recommended to fully charge your appliance before using it for the first time.
- Ensure the product is switched off.
- The adaptor automatically adjusts to a main voltage between 100V and 240V.
- Connect the shaver to the adaptor and then to the mains.

CHARGE LEVEL INDICATORS

Charge Level	Indicator
Charging	LED will come on
Fully Charged	LED will go out

- Run time from fully charged is up to 40 minutes.
- Charge time from empty is 4 hours.
- Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

INSTRUCTIONS FOR USE

- Make sure your shaver is properly charged.
- Switch the shaver on by sliding up the on/off switch.

SHAVING

- Stretch the skin with your free hand so the hairs stand upright.
- Hold the shaving head so that the foils touch your face.
- Use short linear strokes.

TRIMMING

- Slide up the trimmer release button to activate the trimmer.
- Hold the trimmer at a right angle to your skin.
- To retract the trimmer, push the top rear of the trimmer down until it locks under the trimmer release button.

TIPS FOR BEST RESULTS

- Always hold the shaver at right angles to the skin so that all foils are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short linear motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid irritation and damage to the foil heads.

CLEANING AND MAINTENANCE

To ensure long lasting performance clean after each use.

1. Ensure the shaver is switched off.
2. Press the head release buttons and pull the head upwards (FIG A).
3. Tap out any excess hair shavings (FIG B).
4. Rinse the cutters (underneath the shaving head) and the shaving head itself under warm running water (FIG C).
5. Refit the shaving head once it is dry.

REPLACING THE FOILS AND CUTTERS

- To ensure continued high quality performance from your shaver, we recommend the foils and cutters are replaced regularly.

Signs that your foil/s and cutter/s need replacing

- Irritation: as foils get worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutter pulling your hair.
- Wear through: you may notice that the cutters have worn through the foils.

TO REPLACE THE FOIL

- Press the head release buttons and pull the head upwards.
- Fit the new foil assembly over the hair pocket and press down to click into place.

REPLACING THE CUTTERS

- Grasp the cutter between your thumb and forefinger and pull upwards.
- Snap the new cutter into the oscillator tip.
- Note: DO NOT press on the cutter ends as this may cause damage.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
 - The appliance must be disconnected from the supply mains when removing the battery.
1. Turn the shaver on and discharge all remaining power.
 2. Open the pop-up trimmer.
 3. Use a screw driver to remove the 2 screws under the trimmer.
 4. Unscrew the single screw on the back of the shaver.
 5. Using a flat screw driver, carefully pry off the side decorative panel.
 6. Pry apart the front and rear parts of the shaver body.
 7. Take out the battery and printed circuit board assembly.
 8. Disconnect the battery from the circuit board.
 9. Dispose of the battery safely.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: www.remington.co.uk/productregister

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 Tel 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

IRELAND

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

www.ie.remington-europe.com

REGISTER ONLINE

Register online for an EXTRA year guarantee*.

Visit www.remington.co.uk/productregister

*You must register within 28 days of purchase.

Ref. No. F3000

Type No. F08A

18/UK/ F3000 T22-7000438 Version 10 /18

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2018 Spectrum Brands, Inc.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Remington, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/remington-apat-za-brijanje-f3000-akcija-cena/>