

## Uputstvo za upotrebu

PHILIPS stajler za kosu HP8663/00

# PHILIPS



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/philips-stajler-za-kosu-hp866300-akcija-cena/>

Register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome)



HP8660  
HP8661  
HP8662  
HP8663  
HP8667

EN	User manual	LV	Lietuvaiš rodojumiņs
BG	Руководство за ползване	LT	Naudojimo instrukcija
CS	Průběžná pro údržavu	RO	Manual de utilizare
ET	Käsitlusjuhend	RU	Руководство по эксплуатации
HR	Korisnički priručnik	SK	Priručník uživateľa
HU	Felhasználói kézikönyv	SL	Uporabniški priročnik
KK	Колдонуучунун чечмеси	SR	Korisnički priročnik
LT	Vartotojų vadovas	UK	Посібник користувача

## PHILIPS



Specifications are subject to change without notice.  
© 2015 Koninklijke Philips N.V.  
All rights reserved.

3140 035 3912

### English

1 **Important**  
Read this user manual carefully before you use the appliance and keep it for future reference.

**WARNING:** Do not use this appliance near water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Always unplug the appliance after use. When the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.

If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.

Do not insert metal objects into the air grilles to avoid electric shock.

Never block the air grilles.

Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

Do not use the appliance for any other purpose than described in this manual.

Do not use the appliance in artificial hair.

When the appliance is connected to the power, never leave it unattended.

Never use any accessories or parts that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

Do not wind the mains cord round the appliance.

Wait until the appliance has cooled down before you store it.

Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

Note: Line Lc = B148 [A]

**Electromagnetic fields (EMF)**  
The Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

**Environment**  
This symbol on a product means that the product is covered by European Directive 2012/19/EU, which informs you about the local appliance collection system for electrical and electronic products. Follow local laws and never dispose of the product with normal household waste. Correct disposal of old products helps prevent hazardous materials for the environment and human health.

**2. Before styling your hair**  
2.1 Always use the appliance and attachments cool down before you connect or disconnect the attachments.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Do not use your hair with a clean towel first as the appliance is most effective on towel-dry hair.

2.2 Snap a suitable attachment onto the handle (1) in fig. 1 with the grooves aligned (2) in fig. 3.

**2.3. Style your hair**  
1 Connect the plug to a power supply socket.  
2 Slide the airflow switch (3) in fig. 1) to strong and warm airflow for fast drying and styling. Thermostat setting 9 for fastest airflow to prevent your hair from overheating.  
3 Only for HP8661, HP8662, HP8663, HP8667: You can also select cool airflow for styling your hair.  
4 Only for HP8662, HP8663, HP8667: ions are automatically and continuously produced to provide additional shine and reducing frizz when the appliance is powered on.

**2.4 Dry your hair (HP8661, HP8662, HP8663 only)**  
1 Select the nozzle (2) in fig. 1) and attach it to the handle (3) in fig. 1).

2 Dry your hair with suitable airflow settings (3) in fig. 1).

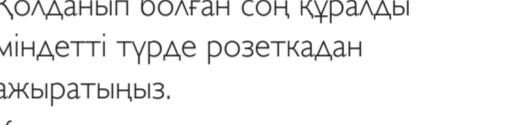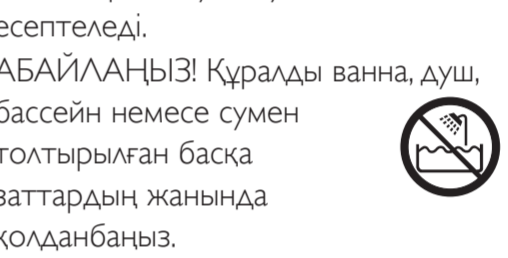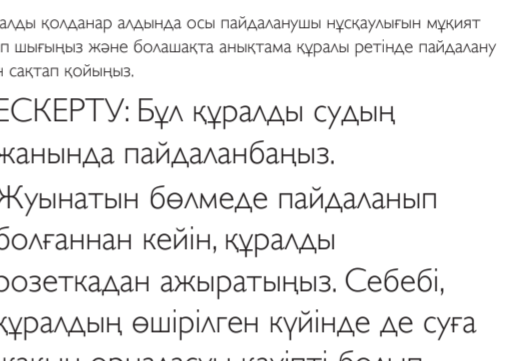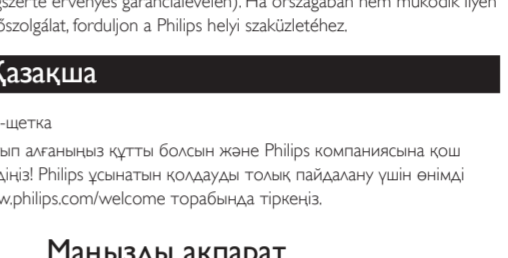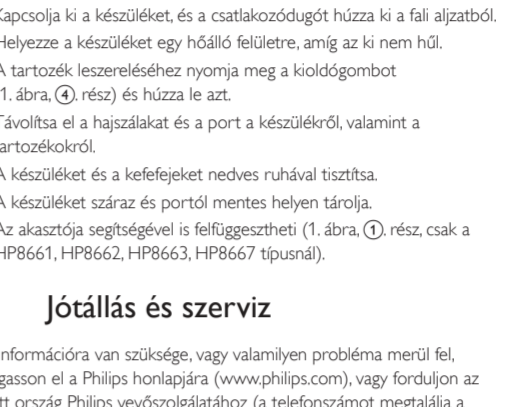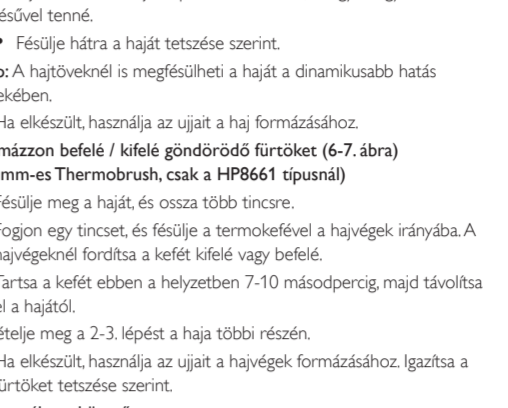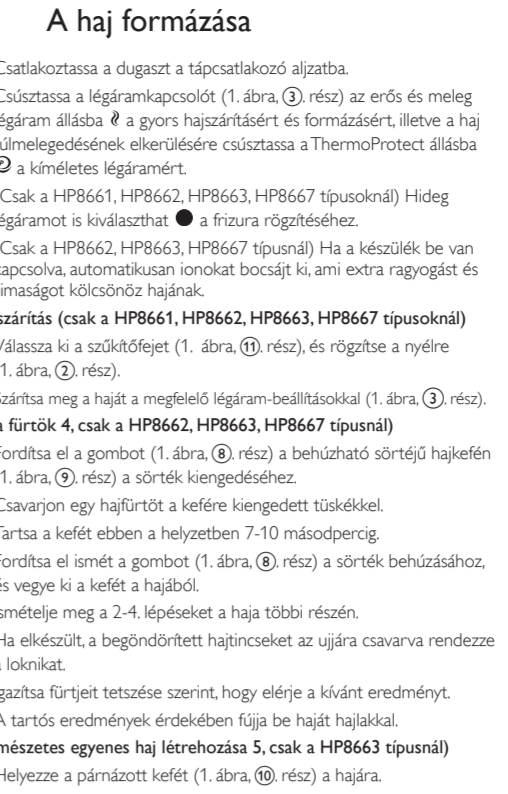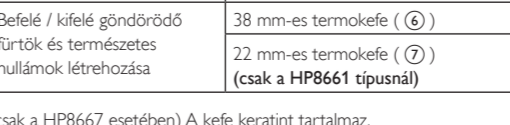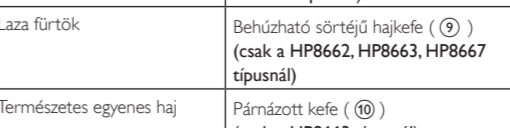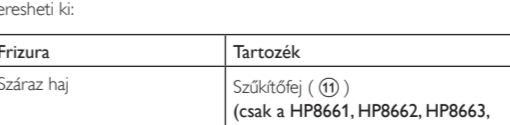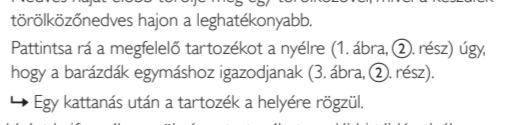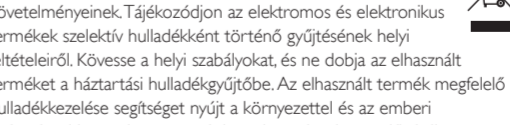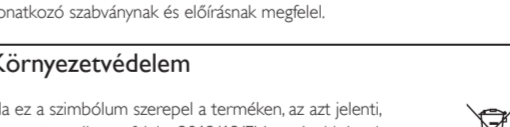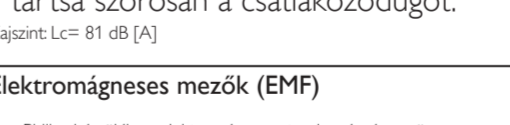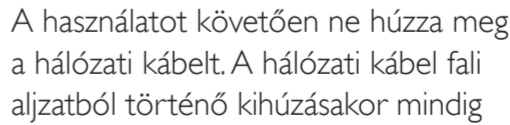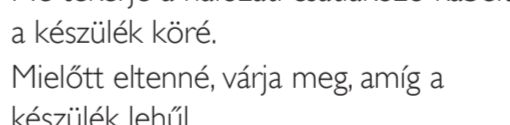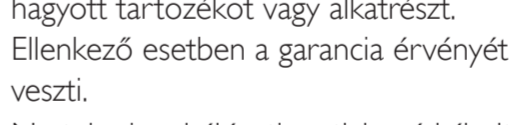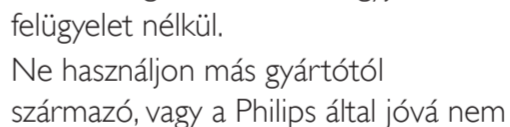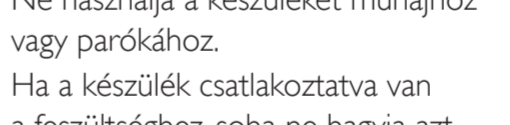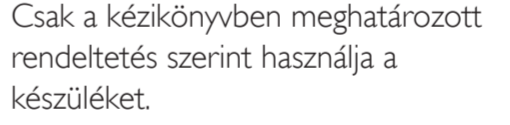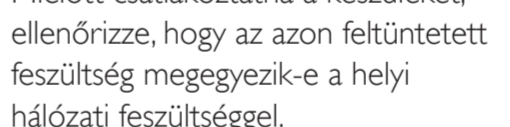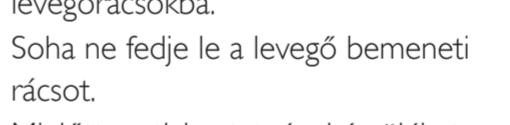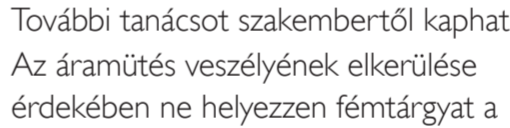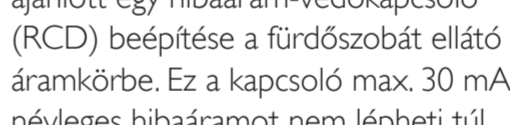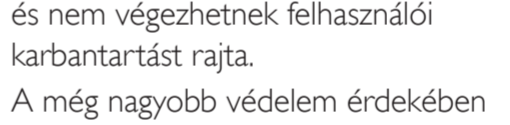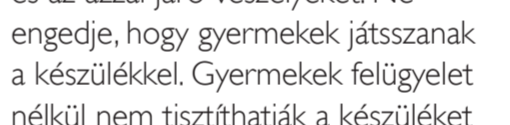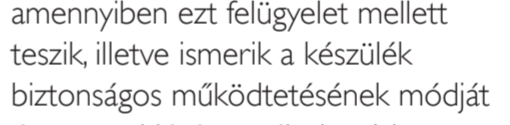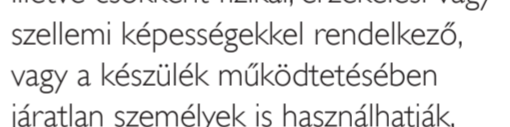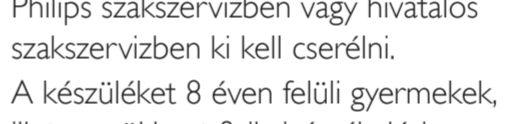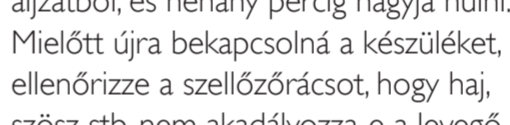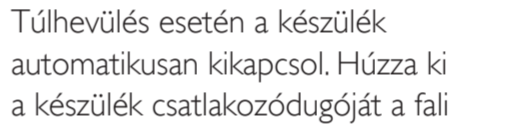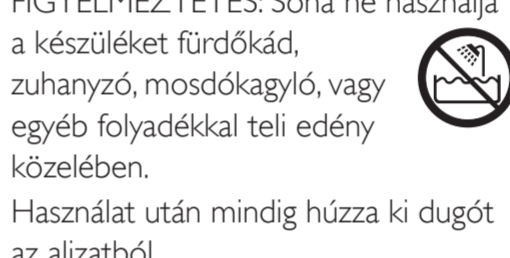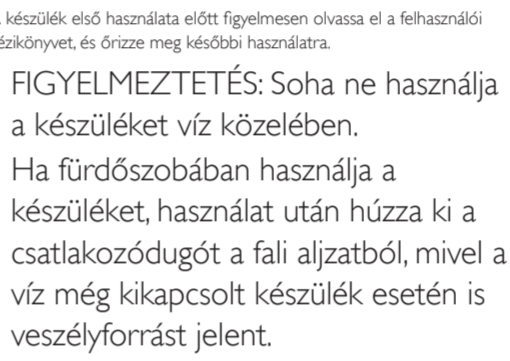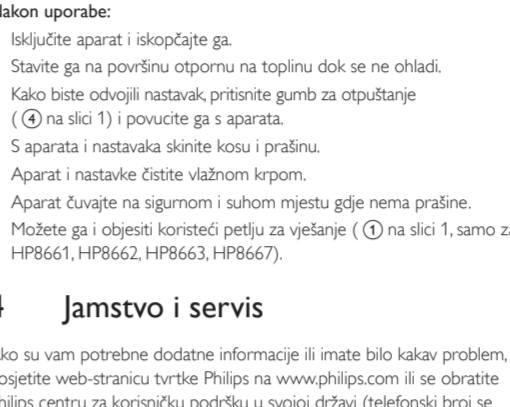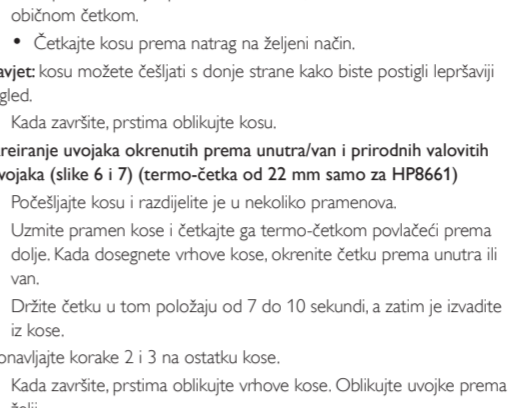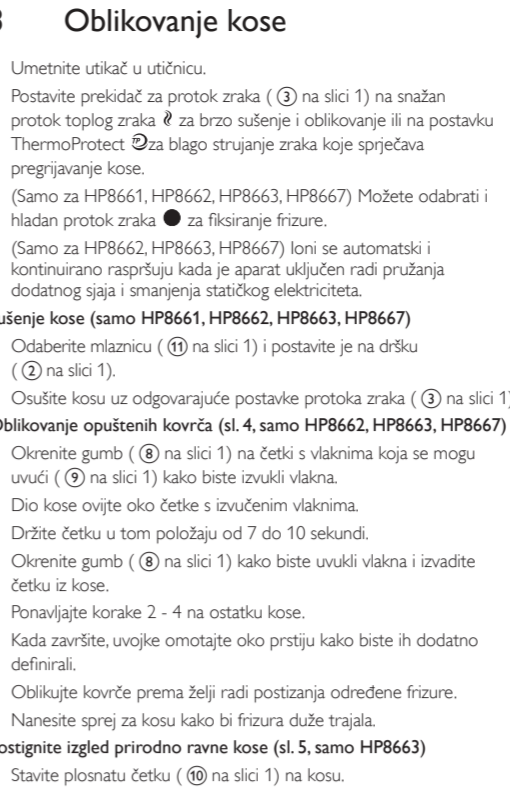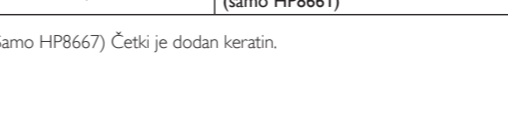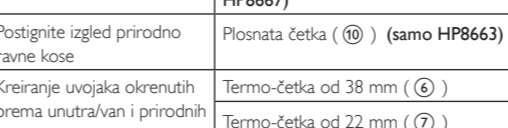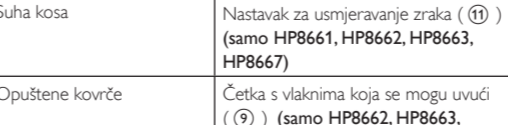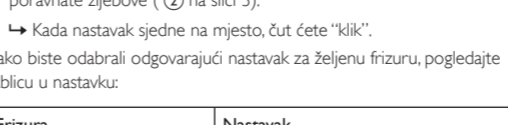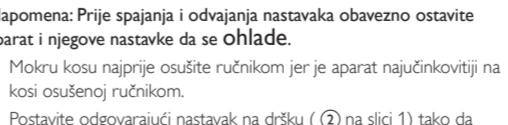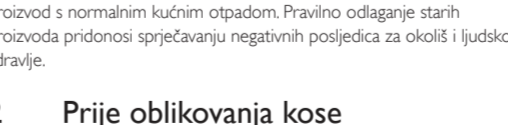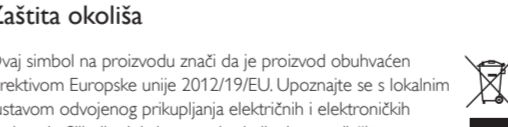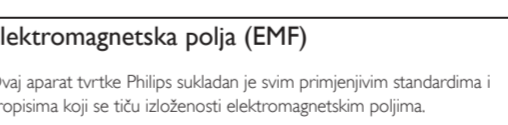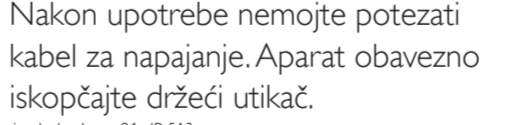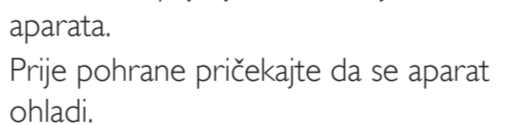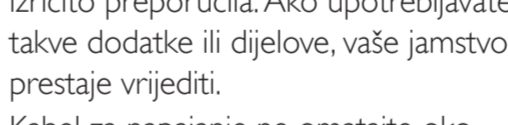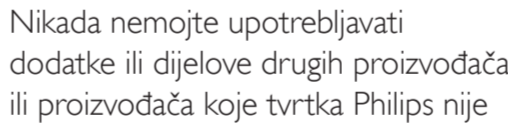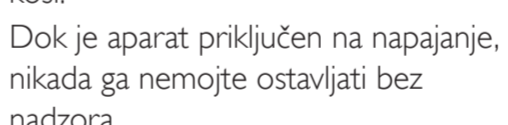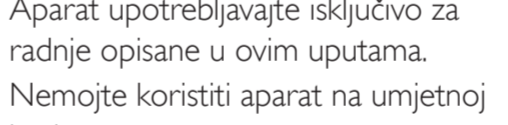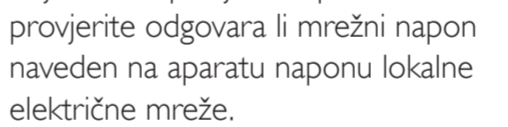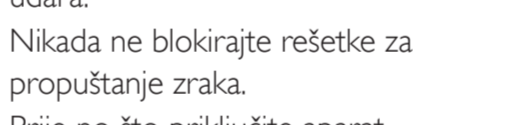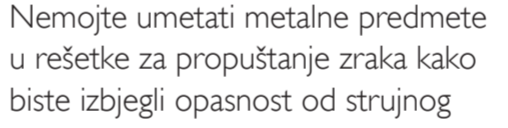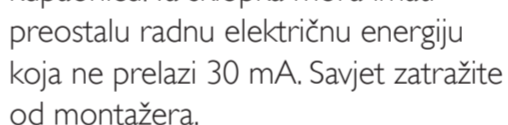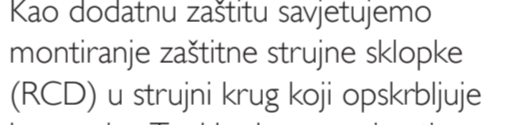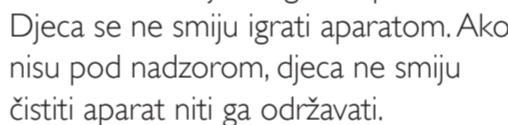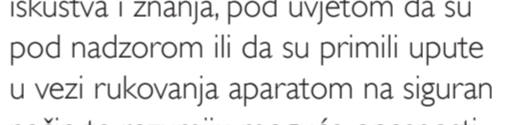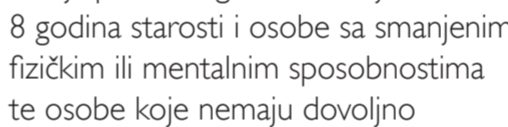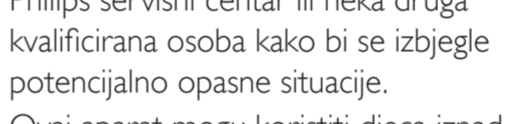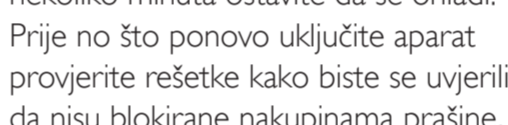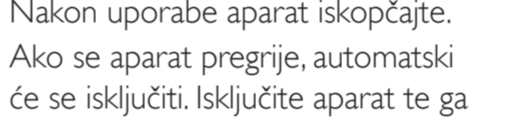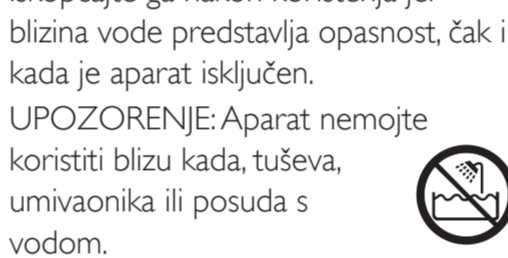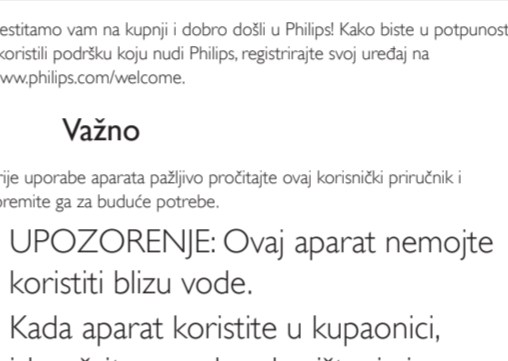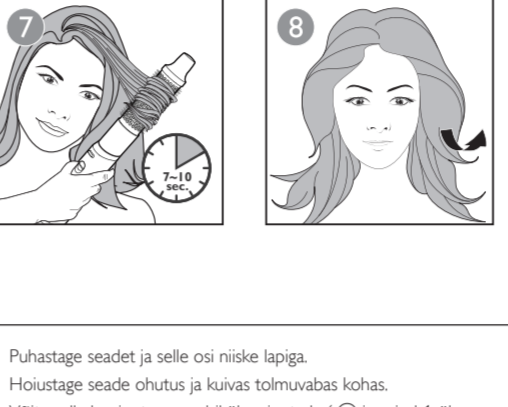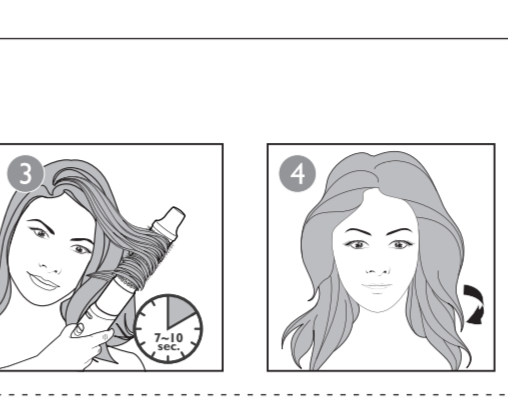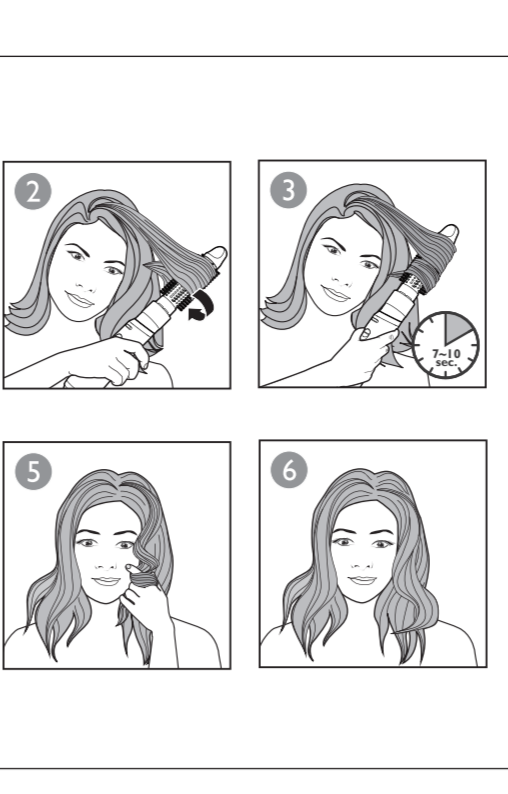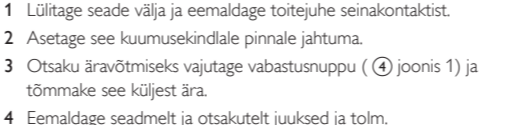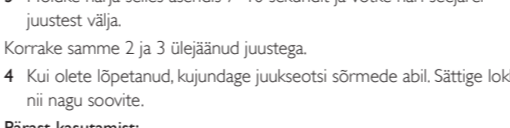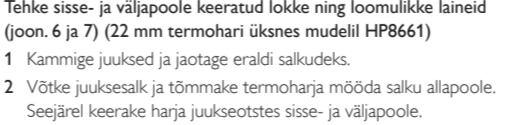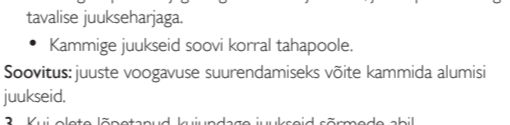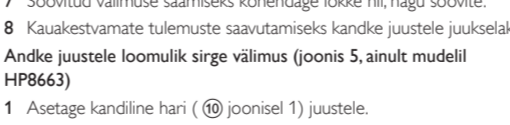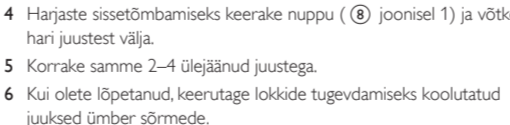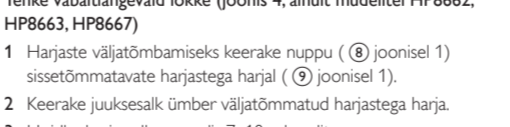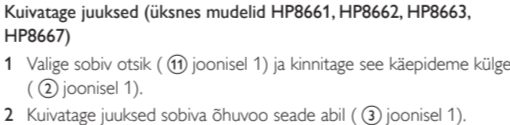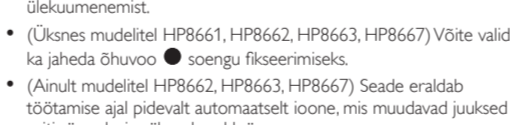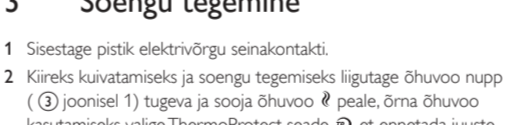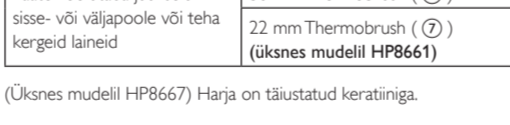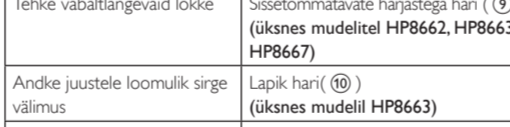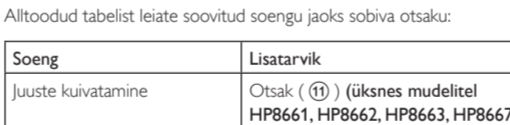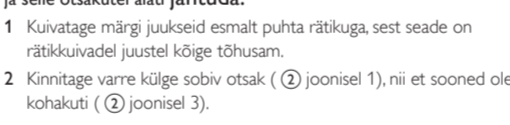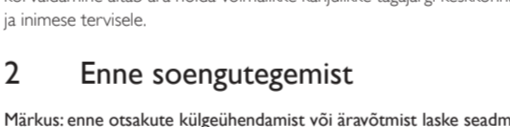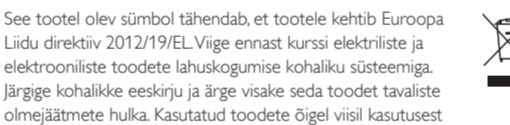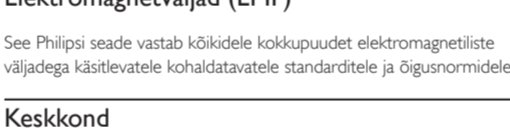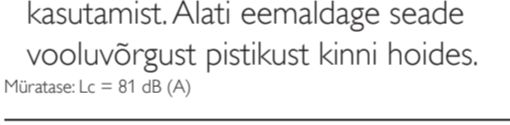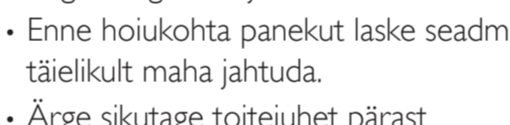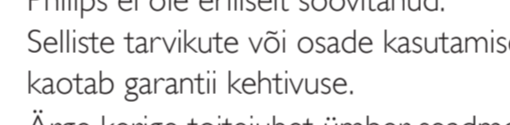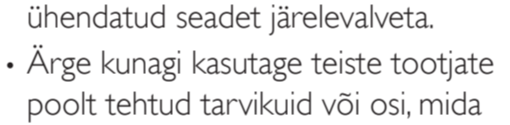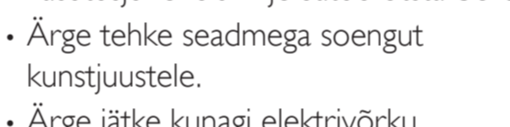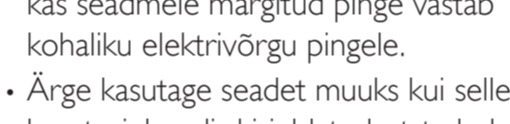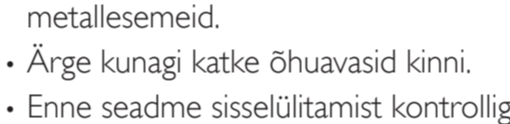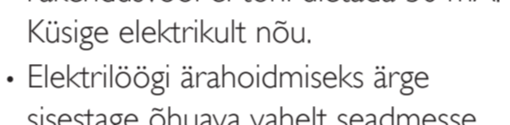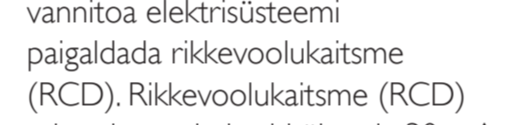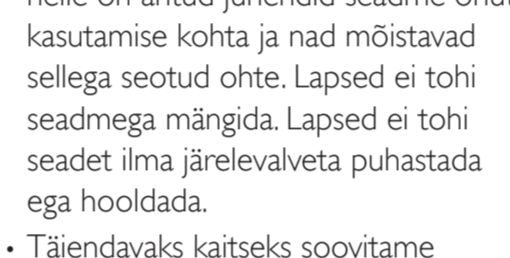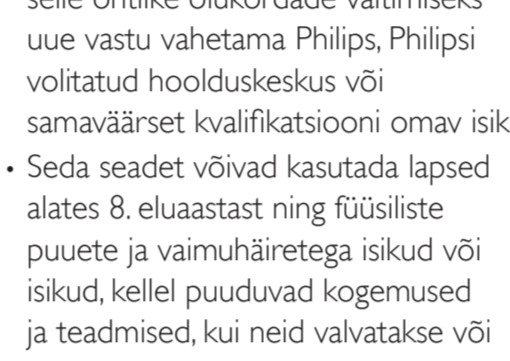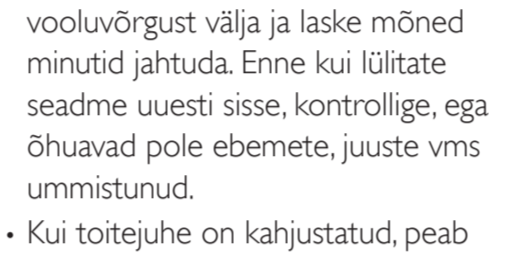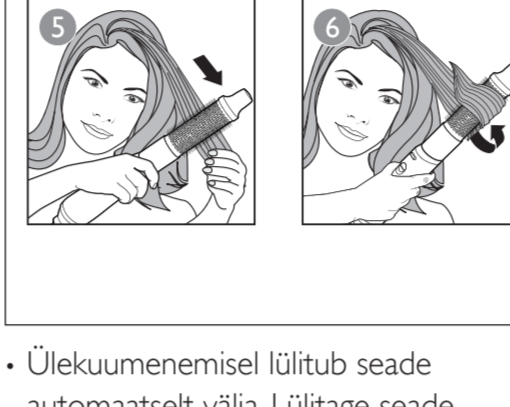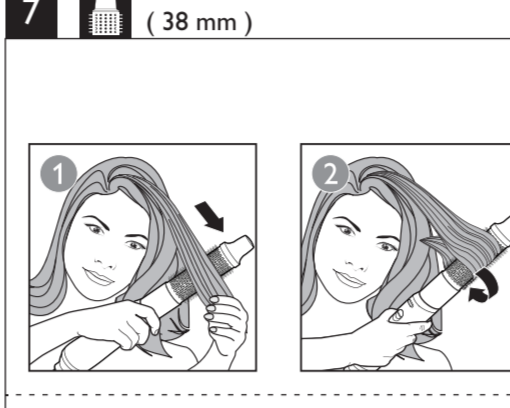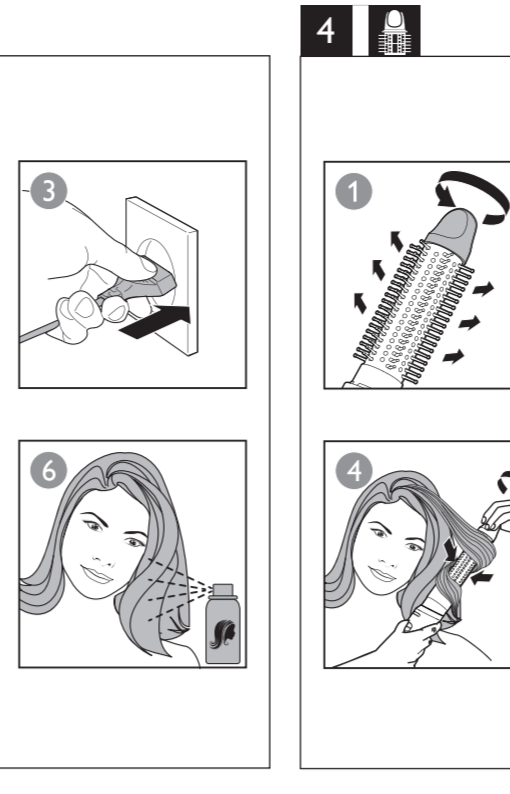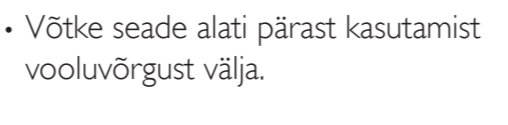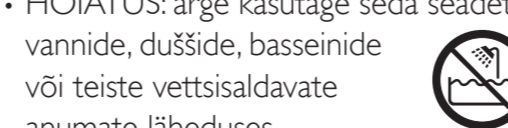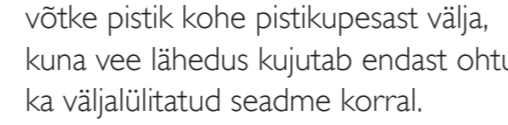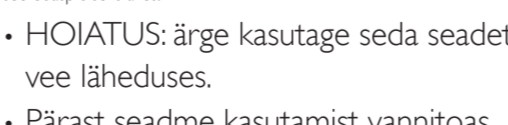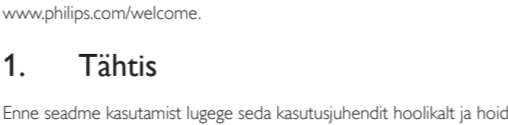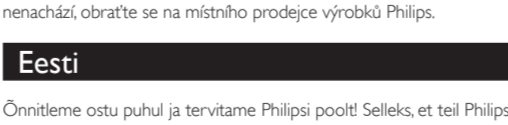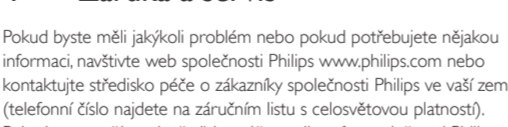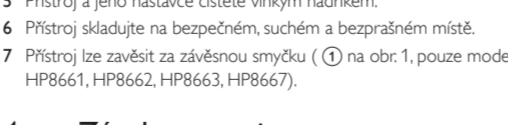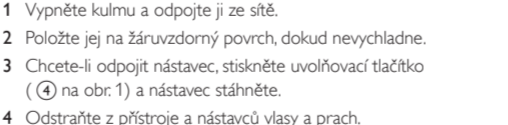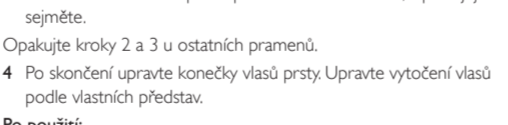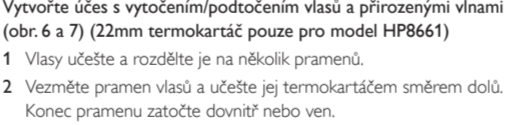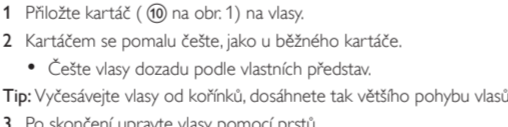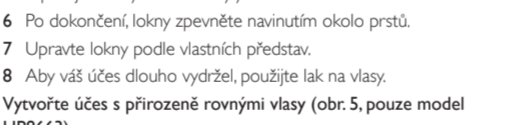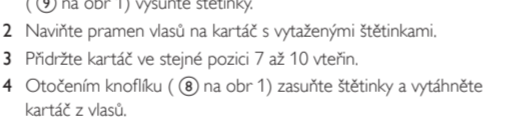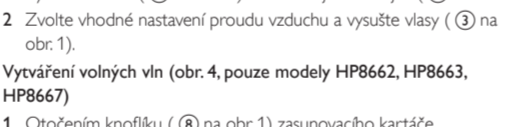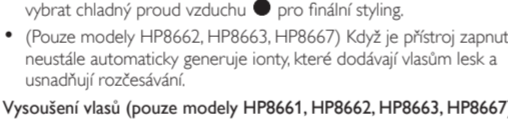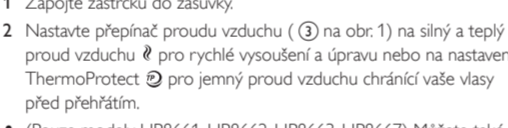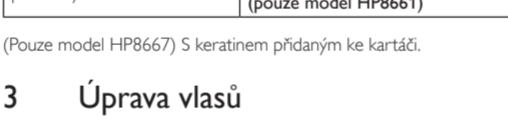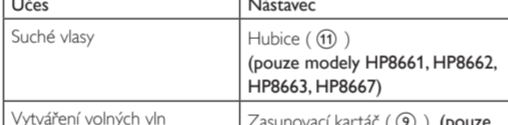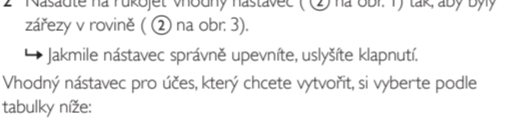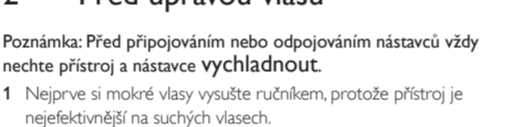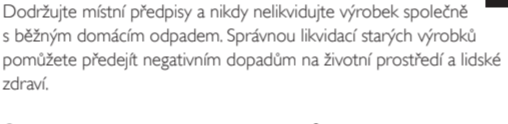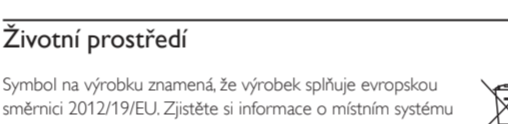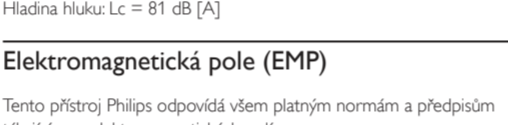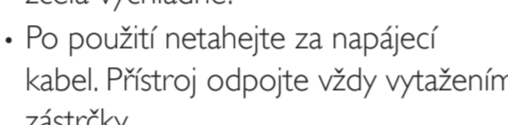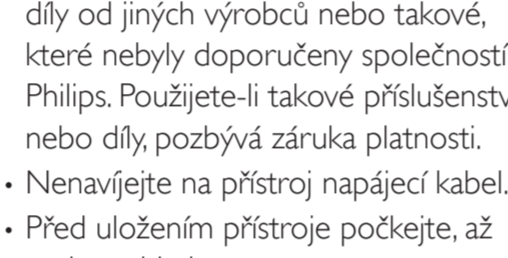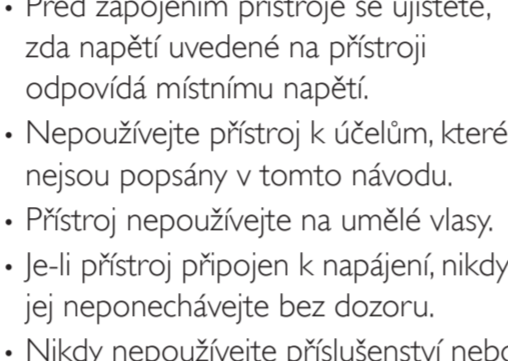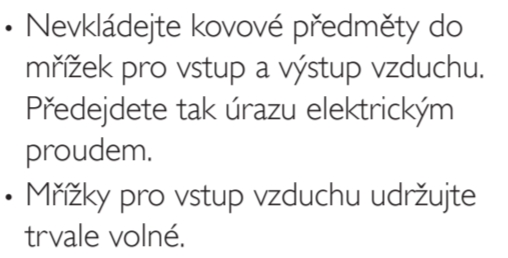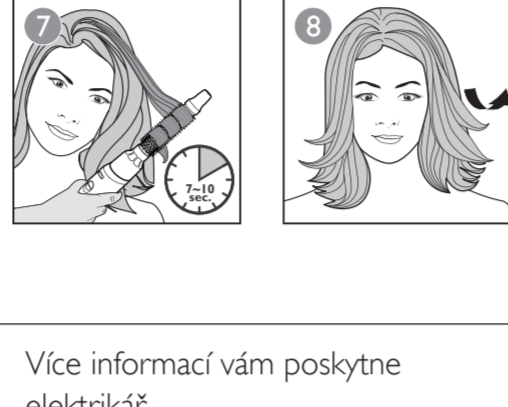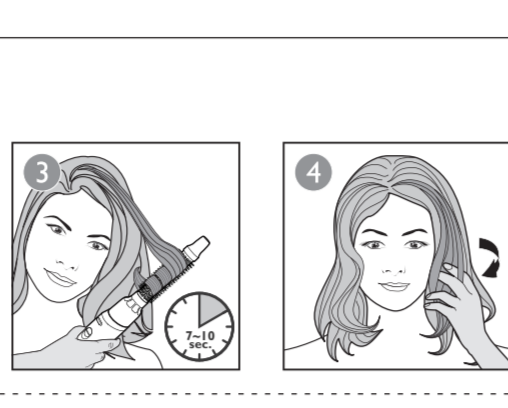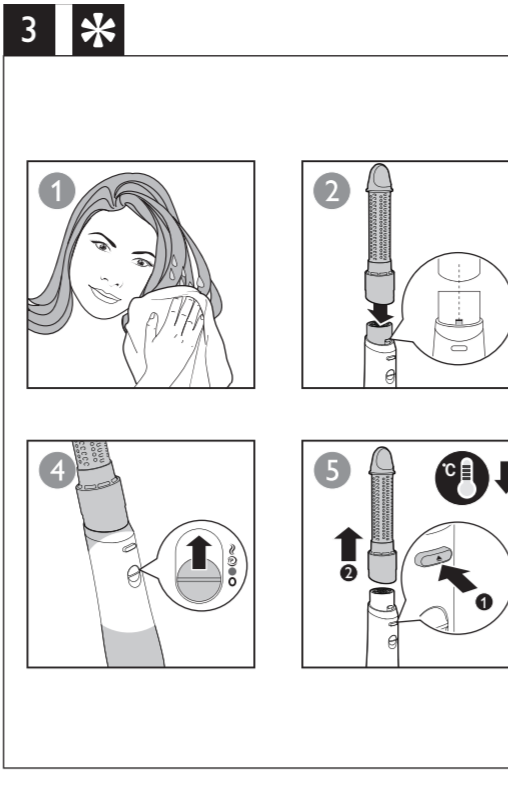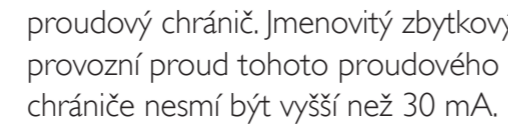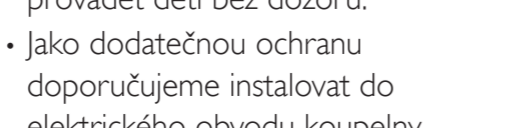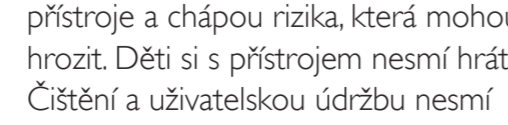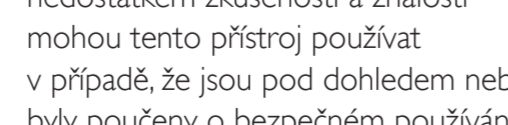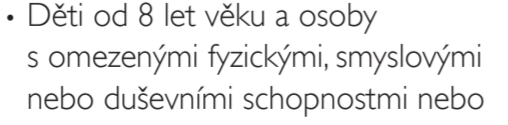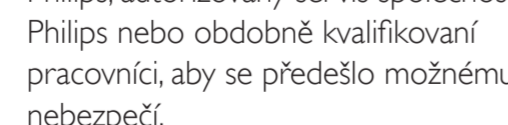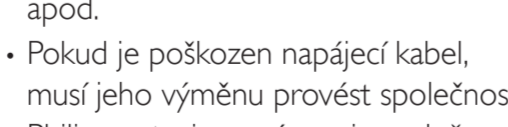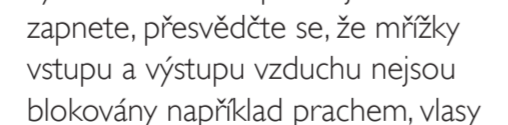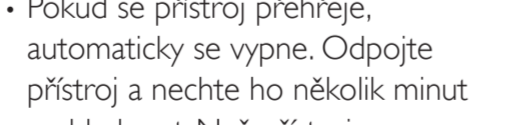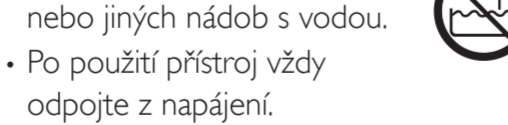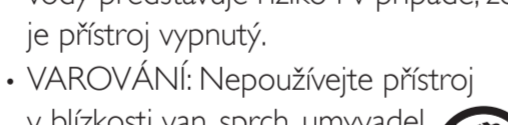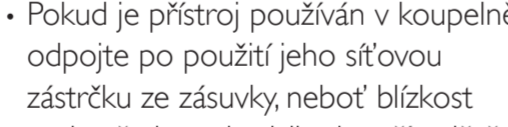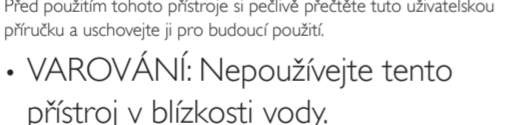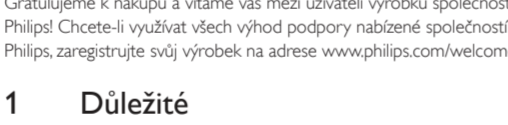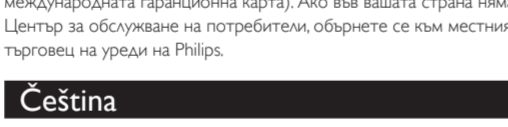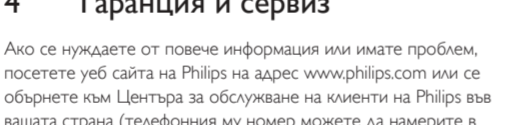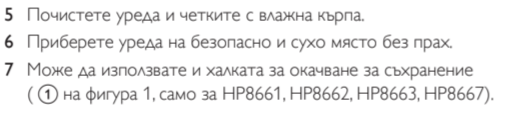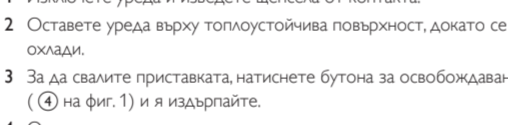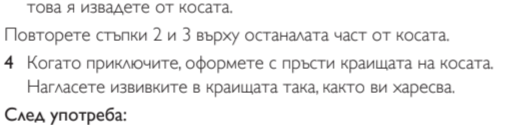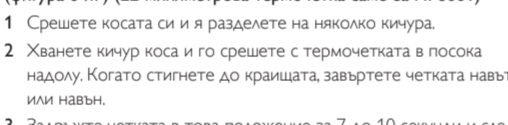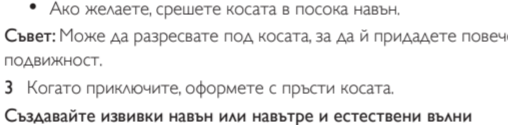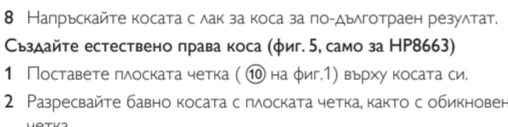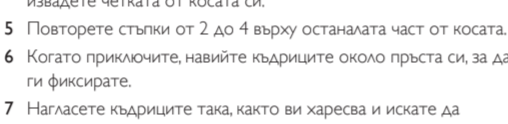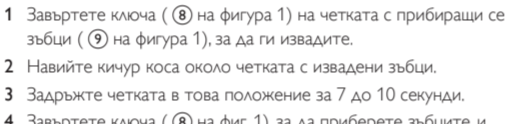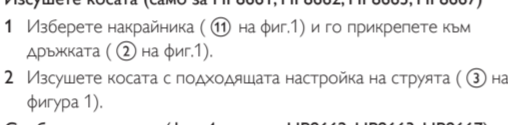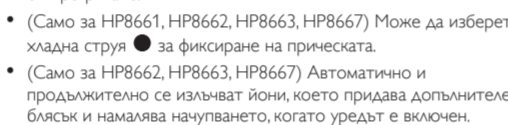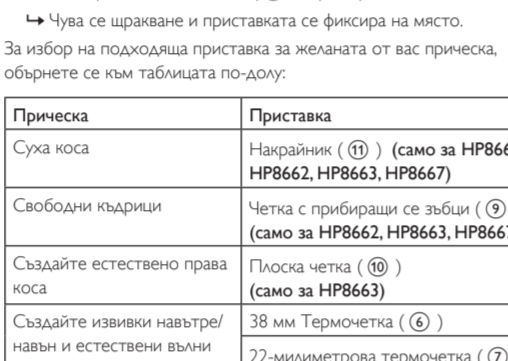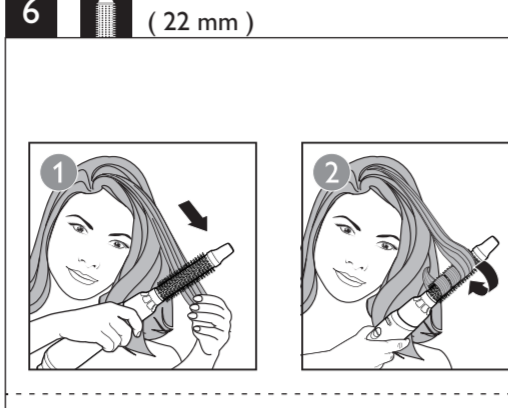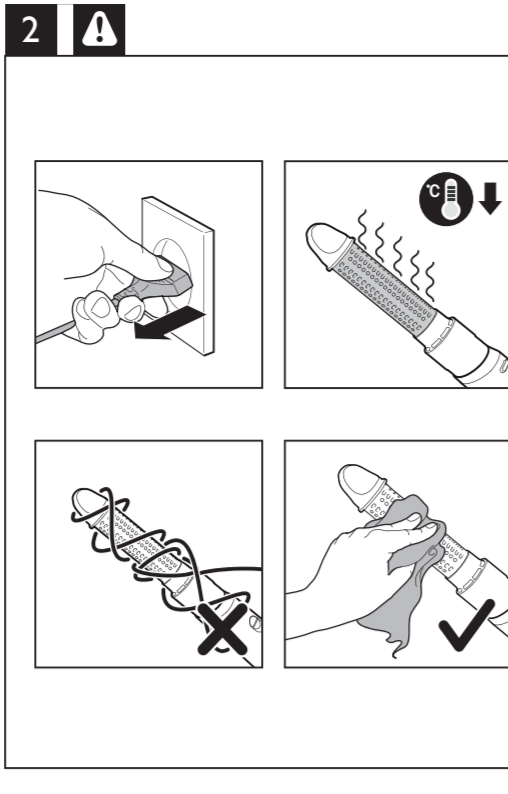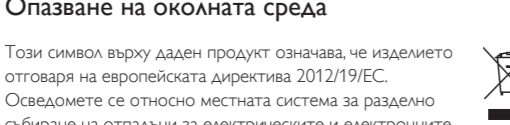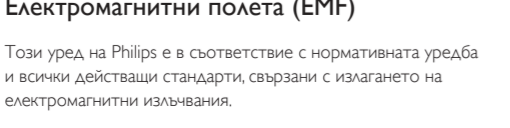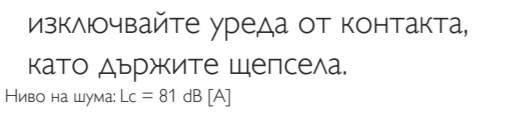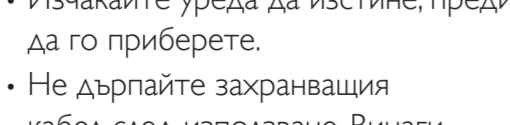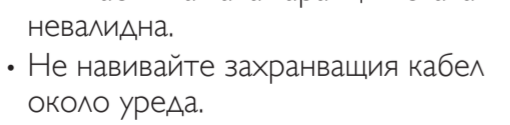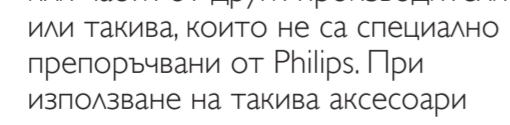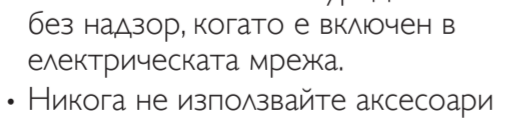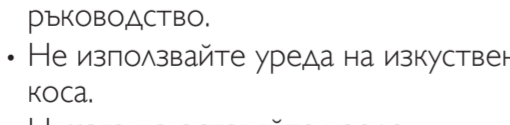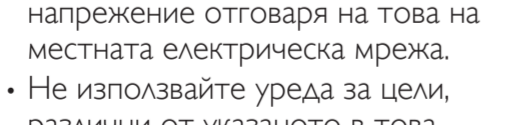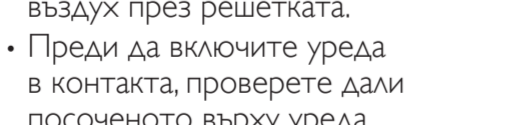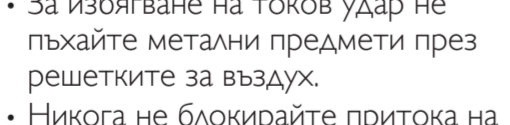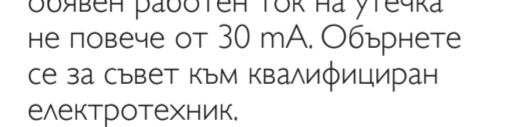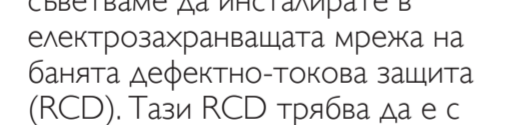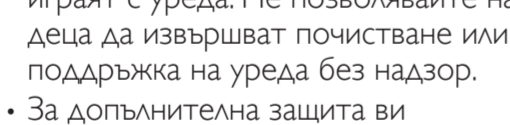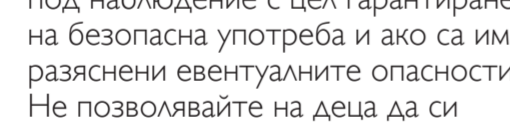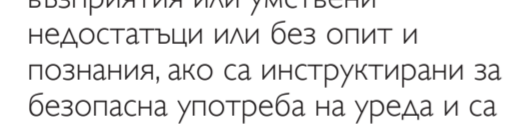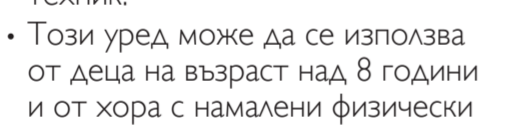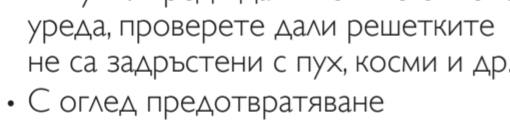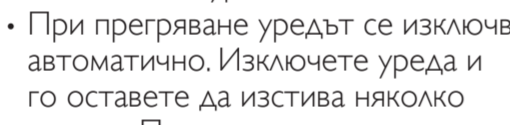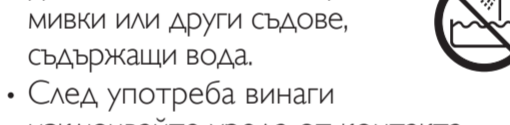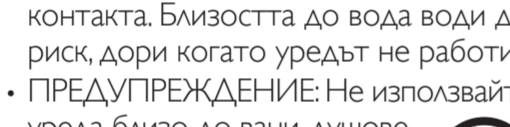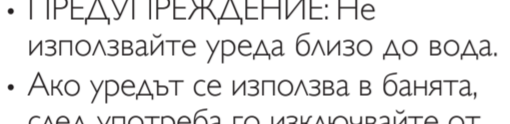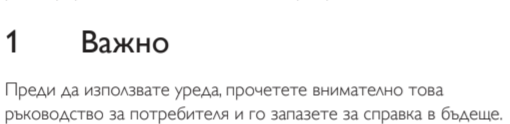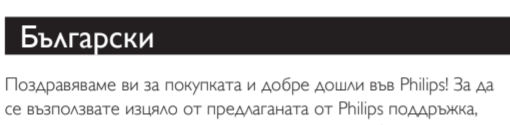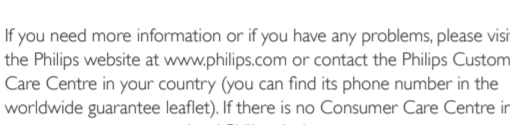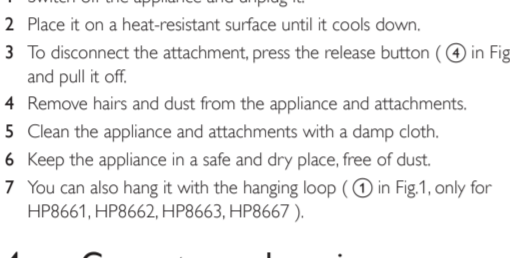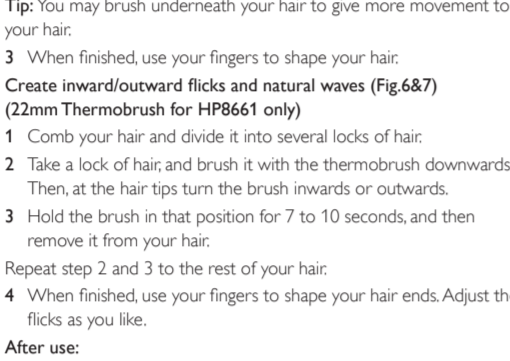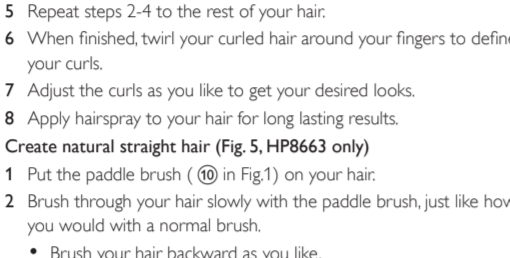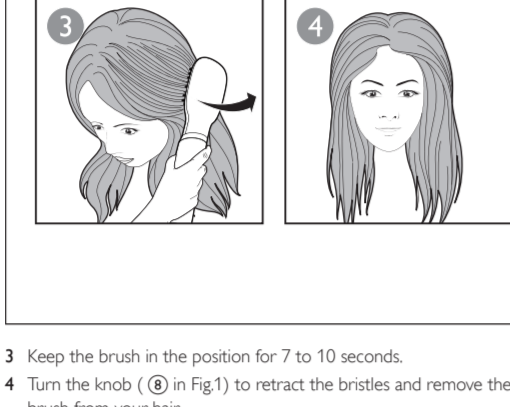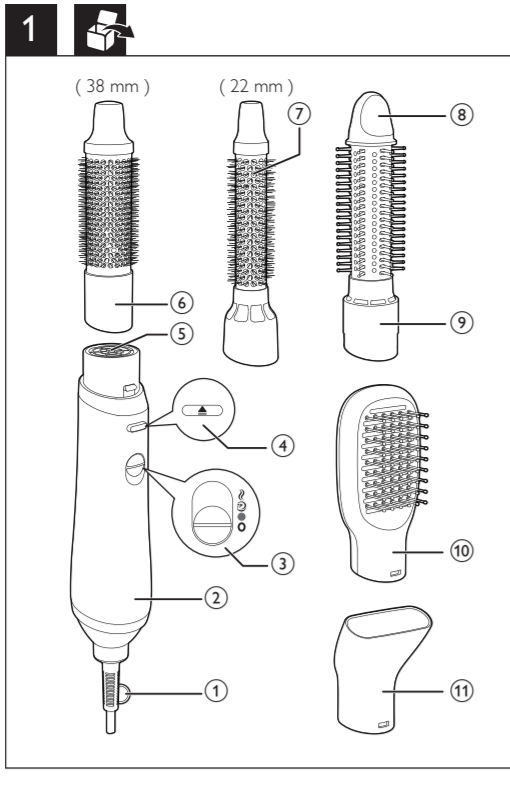



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Philips, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/philips-stajler-za-kosu-hp866300-akcija-cena/>