

## Uputstvo za upotrebu

SENCOR mlin za kafu SCG 2050RD

**SENCOR**



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-mlin-za-kafu-scg-2050rd-akcija-cena/>

# Electric Coffee Grinder

User's manual

EN



**SENCOR®**

SCG 2050RD  
SCG 2051BK  
SCG 2052WH

Prior to using this appliance, please read the user's manual thoroughly, even in cases where you have previously familiarised yourself with the operation of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future reference.

We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

# Electric Coffee Grinder

SCG 2050RD / SCG 2051BK / SCG 2052WH

## TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND STORE FOR FUTURE USE.....	3
DESCRIPTION OF THE COFFEE GRINDER .....	7
BEFORE FIRST USE .....	8
USING THE COFFEE GRINDER.....	8
CLEANING AND MAINTENANCE.....	9
STORAGE.....	9
TECHNICAL SPECIFICATIONS .....	9
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS ...	10
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT .....	10

## **IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND STORE FOR FUTURE USE.**

- This appliance may be used by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not use this appliance or play with it. Keep this appliance and the power cord out of reach of children.
- The appliance is designed for grinding coffee beans, nuts without shells, herbs, poppy seeds and certain types of spices. Do not use it to grind excessively hard foodstuffs such as nutmeg, etc. or use it for purposes for which it is not intended.
- The appliance is designed for use in the household and similar types of areas. Do not use it for commercial purposes, in industrial surroundings or outdoors.

# Electric Coffee Grinder

SCG 2050RD / SCG 2051BK / SCG 2052WH

- Do not place the appliance on an electric or gas stove or in its vicinity, on the edge of a table or on an unstable surface. Only place the appliance on an even, dry and stable surface.
- Before connecting this appliance to a power socket, make sure the voltage stated on its rating label corresponds to the voltage in your power socket.
- Do not wash the appliance (except for the lid) under running water and do not submerge it in water or any other liquid.
- The appliance is equipped with a safety mechanism that prevents it from being started when the lid is not properly attached.
- Do not use the appliance when empty, otherwise its service lifetime could be negatively impacted.
- The maximum continuous operating time of the appliance is 30 seconds. After approximately 30 seconds of operation, allow it to cool down for approximately 2 minutes.
- Always turn off the appliance and disconnect from the power socket, if you will not be

using it and if you are leaving it without supervision, before filling or emptying the hopper, before mounting or removing the lid and before cleaning. Do not remove the lid of the hopper while the grinding blade is moving. Always wait until the blade comes to a stop.



## **Attention:**

Improper use can lead to injury.

- Be especially careful when emptying the hopper and when cleaning to prevent injury on the grinding blade.
- Ensure that the power plug contacts do not come into contact with water or moisture.
- Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table or that it is not touching a hot surface.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling on the plug of the power cord.

## Electric Coffee Grinder

SCG 2050RD / SCG 2051BK / SCG 2052WH


- If the power cord is damaged, have it replaced at a professional service centre. It is forbidden to use the appliance if it has a damaged power cord or plug.
- Do not use the appliance when it is not functioning properly or showing signs of damage.
- In order to prevent a hazardous situation arising, do not repair the appliance yourself or modify it in any way. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

# Electric Coffee Grinder

SCG 2050RD / SCG 2051BK / SCG 2052WH

EN

## DESCRIPTION OF THE COFFEE GRINDER

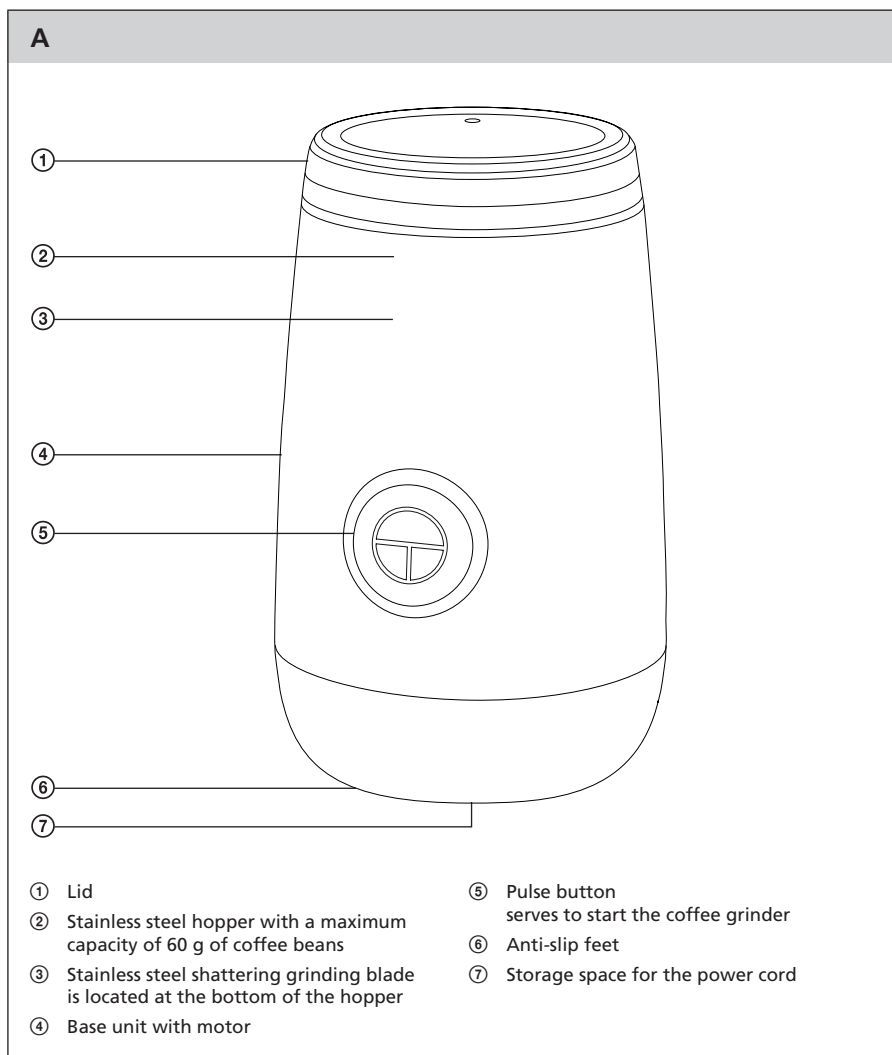

EN-7



# Electric Coffee Grinder

SCG 2050RD / SCG 2051BK / SCG 2052WH

## BEFORE FIRST USE

1. Remove the coffee grinder from the packing material.
2. Turn the lid A① anticlockwise to release it, then take it off. Wash it under warm running water using kitchen detergent. Then rinse it with clean water and thoroughly wipe dry.
3. Wipe the hopper A② and the grinding blade A③ with a clean lightly dampened wiping cloth and then wipe it until it is thoroughly dry.

**Attention:**

When cleaning the grinding blade A③, be very careful not to injure yourself on the sharp edge.

## USING THE COFFEE GRINDER

1. Wind the power cord out of the storage area A⑦.
2. Turn the lid A① anticlockwise to release it, then take it off. Pour coffee beans into the hopper A②. The hopper A② has a maximum capacity of 60 g of coffee beans. Do not fill the hopper A② past the edge.

**Tip:**

You may also use the coffee grinder for grinding nuts, herbs, poppy seeds and certain types of spices. Shells must be removed from nuts before grinding.

**Attention:**

Do not use the coffee grinder to grind excessively hard foodstuffs such as nutmeg, etc.

3. Place the lid A① on to the hopper A② and turn it clockwise until the symbols marked on the lid A① and the coffee grinder base unit A④ line up. This will lock the lid A① in place. When locked in place, the lid A① cannot be lifted off. The coffee grinder is equipped with a safety mechanism that prevents it from being started when the lid A① is not properly attached.
4. Connect the coffee grinder to a power socket and press the pulse button A⑤ to start it. The coffee grinder will continue to run while the button A⑤ is pressed. The coarseness of the ground coffee depends on the grinding time. The longer you grind it, the finer it will be.

**Attention:**

The maximum continuous operating time is 30 seconds. After 30 seconds of continuous operation, allow the coffee grinder to rest for 2 minutes.

**Tip:**

Always prepare your coffee beverage from freshly ground coffee. Coffee that is ground in advance loses its flavour and aroma.

5. To stop the coffee grinder, release the pulse button A⑤. Disconnect the coffee grinder from the power socket. Make sure that the grinding blade A③ has stopped rotating. Turn the lid A① anticlockwise to release it, then take it off. Tip the ground coffee into a suitable container.
6. Clean out the coffee grinder after each use according to the instructions in chapter Cleaning and maintenance.

# Electric Coffee Grinder

SCG 2050RD / SCG 2051BK / SCG 2052WH

EN

## CLEANING AND MAINTENANCE

- Before cleaning it, make sure that the coffee grinder is turned off, disconnected from the power socket and that the grinding blade A③ is not moving.
- Wash the lid A① using warm water with kitchen detergent. Then rinse it with clean water and dry thoroughly with a fine wiping cloth.
- Remove any remaining ground coffee or remains of other foodstuffs that you processed from the hopper A②. Thoroughly clean the hopper A② and the grinding blade A③ with a clean lightly dampened wiping cloth and then wipe dry.



### Attention:

When cleaning the grinding blade A③, be very careful not to injure yourself on the sharp edge.

- Use a dry or lightly dampened wiping cloth for cleaning the base unit A④. Do not rinse it under running water or submerge it in water or another liquid.
- Do not use thinners, solvents or cleaning agents that cause abrasion, etc. to clean the product.

## STORAGE

- When not using the appliance, store it in a dry place out of children's reach. Wind up the power cord into the storage area A⑦ and close the lid A① so that dust does not accumulate inside the hopper A②.

## TECHNICAL SPECIFICATIONS

Rated voltage range .....	220–240 V
Rated frequency .....	50/60 Hz
Rated power input .....	150 W
Safety class (for electric shock protection) .....	II
Noise level .....	85 dB(A)

The declared noise emission level of the appliance is 85 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

### Explanation of technical terminology

#### Safety class for electrical shock protection:

Class II – Electrical shock protection is provided by double or heavy-duty insulation.

Changes to text and technical parameters are reserved.

# Electric Coffee Grinder

SCG 2050RD / SCG 2051BK / SCG 2052WH

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

### For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

### Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This appliance meets all the basic requirements of EU directives related to it.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-mlin-za-kafu-scg-2050rd-akcija-cena/>