

Uputstvo za upotrebu (EN)

REDRAGON tastatura Kumara K552-2 RGB crna



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/redragon-tastatura-kumara-k552-2-rgb-crna-akcija-cena/>



REDRAGON KUMARA

Wired Mechanical Gaming Keyboard

Wired Mechanical Gaming Keyboard (Single Light) Operating Instructions

Dear user

Thank you for choosing REDRAGON brand. To protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

OS Support

Windows XP/Vista/Win7/Win8/Win10

Product feature

1. Plug and play, no driver or software needed.
2. Multi-level backlight brightness.
 - 2-1 Press and hold the [FN] key, and then press the arrow key [↑] to increase the backlight brightness of the keyboard.
 - 2-2 Press and hold the [FN] key, and then press the arrow key [↓] key to decrease the backlight brightness of the keyboard.
3. Breathing or showing speed
 - 3-1 Press and hold the [FN] key, and then press the arrow key [←] to slow down.
 - 3-2 Press and hold the [FN] key, and then press the arrow key [→] keys to speed up.
4. Selectable backlight modes
 - 4-1 Press and hold the [FN] key, and then press the [INS] (M) key to switch among the following 9 modes:
 - 4-1-1 Snake
 - 4-1-2 Left-To-Right
 - 4-1-3 Water Drop
 - 4-1-4 Steady On
 - 4-1-5 Tracking
 - 4-1-6 Breathing
 - 4-1-7 Zone-Defined
 - 4-1-8 Wave
 - 4-1-9 Minimizing

5. [FN] function key for backlight gaming modes:

- 5-1 [FN]+[1] (L1): First Person Shooter (FPS) Mode
 - ESC, W, A, S, D, ↑, ←, ↓, →.
- 5-2 [FN]+[2] (L2): Cross Fire (CF) Mode
 - Q, W, E, R, A, S, D, G, B, 1, 2, 3, 4, 5, Space, L -Ctrl, L-Shift, L-Alt, Tab, F1, F2, F3, Home, End, PgUp, PgDn, PrtSc, ScrLk.
- 5-3 [FN]+[3] (L3): Call of Duty (COD) Mode
 - Q, W, E, R, T, A, S, D, F, G, C, V, 1, 2, 3, 4, 5, 6, 7, L-Ctrl, L-Shift.
- 5-4 [FN]+[4] (L4): Real Time Strategy (RTS) Mode
 - Q, W, E, R, T, Y, U, P, A, S, D, F, G, H, K, L, Z, X, N, M, Space, L-Ctrl, L-Shift, L-Alt 1, 2, 3, 4, 5, 6, 7, 8, 9, 0.
- 5-5 [FN]+[5] (L5): LOL/DOTA Mode
 - Q, W, E, R, D, F, G, V, B, L-Ctrl, L-Alt, Tab, Space, ~, 1, 2, 3, 4, 5, 6, Esc.
- 5-6 [FN]+[6] (L6): Racing Mode
 - W, A, S, D, R, ↑, ↓, ←, →, L-Ctrl, L-Shift, L-Alt.
- 5-7 [FN]+[7] (L7): NBA Mode
 - W, E, R, A, S, F, Z, X, C, V, Space, ↑, ↓, ←, →, 1, 2, 3, 4, L-Shift, L-Ctrl, L-Alt.
- 5-8 [FN]+[8] (L8): LOL/DOTA Simple Mode
 - Q, W, E, R, D, F, B, 1, 2, 3, 4, 5, 6.
- 5-9 [FN]+[9] (LR1), [FN]+[0] (LR2): Custom Game Modes.
 - With these game modes, you can create your own lighting schemes for your own needs and preferences.
 - 5-9-1 Press [FN]+[9] (LR1) or [FN]+[0] (LR2) to choose which game mode to customize.
 - 5-9-2 Press [FN]+[Home] (LR) to start recording your custom scheme.
 - 5-9-3 Press any key to turn on the backlight on the pressed key. Press again to disable backlight on the pressed key.
 - 5-9-4 Press [FN]+[End] (S) to save your scheme.
 - If you want to clear any custom game mode, press [FN]+[PageUp].

6. Swap functions of [W][A][S][D] and arrow keys

- 6-1 Press and hold the [FN] key, and then press the [W] key to interchange the function of the four letter keys [W][A][S][D] and the four arrow keys [↑][↓][←][→].
- 6-2 Repeat the above operation to resume the previous setting.
7. Disable the [WIN] (Windows) key
 - 7-1 To disable the [WIN] key: Press and hold the [FN] key, and then press [WIN] key to turn off [WIN] key in order to avoid going to desktop while gaming if user presses [WIN] key by mistake.
 - 7-2 Repeat the above operation to resume the function.
8. Multimedia function: 12 multimedia keys. Access by pressing the [FN] key and one of the [F1]~[F12] keys at the same time.

FN+F1	My Computer
FN+F2	Search
FN+F3	Calculator
FN+F4	Media Player
FN+F5	Previous Track
FN+F6	Next Track
FN+F7	Play/Pause
FN+F8	Stop
FN+F9	Mute
FN+F10	Volume Down
FN+F11	Volume Up
FN+F12	Lock/Unlock Keyboard

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboards USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Redragon, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/redragon-tastatura-kumara-k552-2-rgb-crna-akcija-cena/>