

Uputstvo za upotrebu (EN)

SENCOR pegla SSI 5421TQ

SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-pegla-ssi-5421tq-akcija-cena/>

Steam Iron

User's manual

EN



SENCOR®

SSI 5420RD
SSI 5421TQ

Translation of the original manual

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor and warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

TABLE OF CONTENTS

IMPORTANT SAFETY NOTICE	3
DESCRIPTION OF THE STEAM IRON	5
PREPARATION BEFORE IRONING	6
USING THE STEAM IRON	6
TIPS FOR QUALITY IRONING	8
MAINTENANCE AND CLEANING	8
STORAGE	9
TECHNICAL SPECIFICATIONS	9
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS . . .	9
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT	9

IMPORTANT SAFETY NOTICE

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- The iron may be used only on a stable, even surface. This also applies for putting down the iron. When putting the iron down on to the stand, check that the surface on which the stand is located is stable.
- The water tank lid must not be open when ironing.
- The iron must not be used if it has fallen on the floor, exhibits visible signs of damage or if it is leaking.
- The iron must not be left within the reach of children younger than 8 years of age, when it is connected to mains electricity or while it is cooling down.
- The iron must not be left without supervision when connected to a power socket.
- Always disconnect the iron from the power socket when leaving it without supervision, when filling up or emptying the water tank and when you have finished using it. Turn off the steam function before disconnecting the iron from the power socket.
- This iron is designed for home use.
- Do not use the iron in an industrial environment or outdoors.
- Before connecting the iron to a power socket check that the

nominal voltage stated on the rating label matches the electrical voltage in the socket.


- The iron must not be left without supervision if it is connected to an electrical power socket.
- The iron may be used only on a stable surface. This also applies for putting down the iron. When putting the iron down on to the stand, check that the surface on which the stand is located is stable.
- Never iron clothing on a body.
- Do not touch the hot ironing surfaces. Otherwise, this could cause burns.
- Always disconnect the iron from the power socket before filling or emptying the water tank, before putting it away for a short time or after finishing using it. Turn off the steam function before disconnecting the iron from the el. power socket.
- Prior to cleaning or any other handling of the iron that you have disconnected from the power socket, allow the soleplate to cool down.
- To avoid potential injury by electrical shock, do not clean the iron under running water, do not spray it with water and do not submerge it in water or any other liquid.
- The iron must not be used if it has fallen on the floor, exhibits visible signs of damage or if it is leaking.
- Ensure that the power cord does not come into contact with water or a heated surface.
- Do not disconnect the iron from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.
- To avoid the danger of injury by electrical shock, do not repair the iron yourself or make any adjustments to it. Have all repairs or adjustments performed at an authorised service centre. By tampering with the product you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

Steam Iron

SSI 5420RD / SSI 5421TQ

EN

DESCRIPTION OF THE STEAM IRON

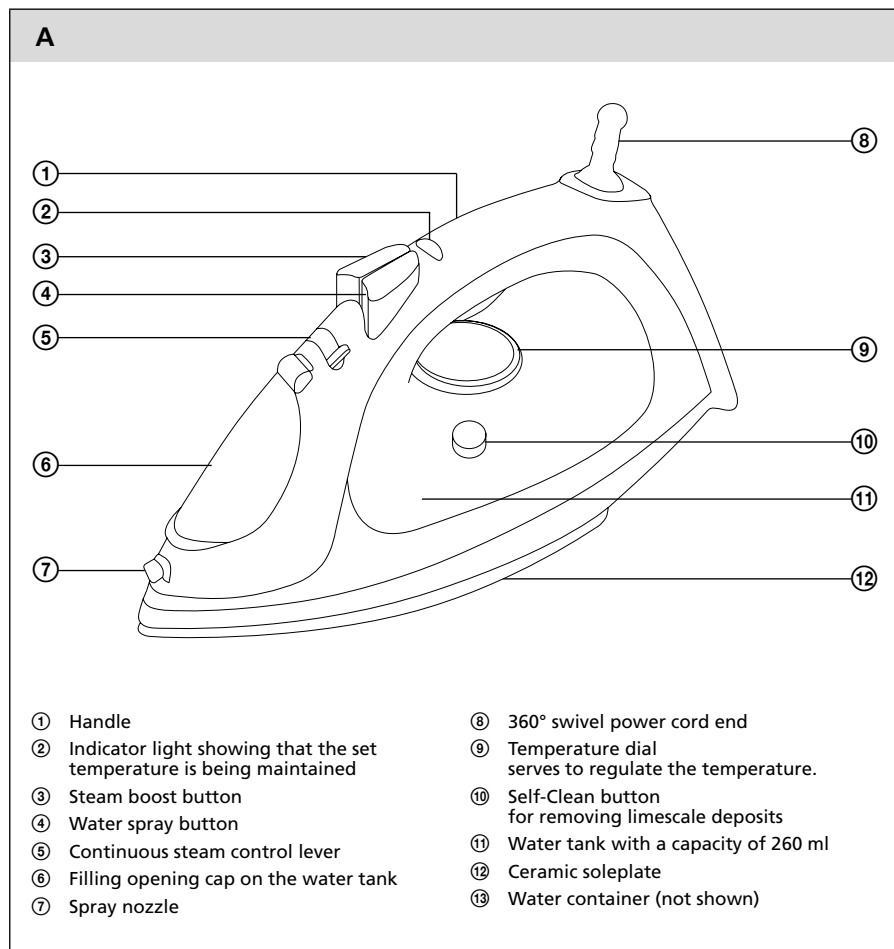


 


Steam Iron

SSI 5420RD / SSI 5421TQ

PREPARATION BEFORE IRONING


Sort the laundry according to international symbols shown on the textiles or according to the fabric types.

SYMBOL	FABRIC TYPE	SETTING THE TEMPERATURE DIAL
	Synthetics (nylon, polyamide, polyester, etc.)	● low temperature
	Silk – wool	●● medium temperature
	Cotton – linen	●●● to MAX high temperature
	Fabric, that should not be ironed	

USING THE STEAM IRON

- Check that the iron is disconnected from the power socket.
- Wipe the soleplate A⑫ with a lightly damp cloth before first use and then wipe dry.

1. FILLING THE WATER TANK

- 1.1 Prior to filling the water tank A⑩, check that the iron is disconnected from the power socket and that the temperature dial A⑨ is set to the MIN position.
- 1.2 Set the continuous steam control lever A⑤ to the position marked by the symbol .
- 1.3 Fill the included container A⑬ with water. Use distilled water or tap water (soft to medium water hardness). If water in your area is hard or very hard (more than 14 °dH / 2,5 mmol/l), we recommend that you use 1 part of distilled water and 1 part of tap water.
- 1.4 Place the iron in the upright position. Flip open the filling opening cap on the water tank A⑥. Use one hand to hold the handle A① and tilt the iron so that the soleplate A⑫ is at an angle of about 45° relative to the surface on which the iron is located. Then slowly pour the water from the container A⑬ through the filling opening into the water tank A⑩ while making sure that the water level does not exceed the maximum mark on the water tank A⑩.
- 1.5 Put the iron back into the upright position and close the water tank filling opening cap A⑥.

2. SETTING THE TEMPERATURE DIAL

- 2.1 Place the iron upright on an even and stable surface.
- 2.2 Insert the power cord into an electric power socket.
- 2.3 Set the temperature dial A⑨ according to the type of fabric that you wish to iron, see chapter Preparation before ironing. The indicator light A② will be lit. This signals that the soleplate A⑫ is heating up. When the soleplate A⑫ heats up to the set temperature, the indicator light A② will turn off. The iron is now ready for ironing.



Note:

During first use, a weak cracking sound caused by the expanding plastic may be heard. This is an entirely normal event, which will disappear in a short time.

While ironing, the indicator light A② will intermittently turn on and off. This indicates that the set temperature is being maintained.

First iron the laundry that requires the lowest temperature. This will save you time because the soleplate A② heats up faster than it cools down.

If you are ironing at a high temperature and then set a lower temperature, wait until the soleplate cools down.

3. CONTINUOUS STEAM FUNCTION

- 3.1 Set or turn off the continuous steam output using the continuous steam lever A⑤.
- 3.2 If you wish to iron with steam, the water tank A⑩ must be filled with water and the temperature dial A⑨ must be set in the range from ●●● to MAX, which is suitable only for certain types of textile materials, see chapter Preparation before ironing. Use the continuous steam lever A⑤ to select weaker ●● or stronger ●●● steam output.
- 3.3 If the continuous steam function is set at the same time as the temperature dial A⑨ is set to low ● or medium temperature ●●, then water may drip from the soleplate A②. For this reason, the iron is equipped with the **Drip-Stop** system, which automatically stops the steam process when the temperature dial A⑨ is not set to a high enough temperature and so prevents potential dripping from the steam outlets.



Note:

The iron continuously emits steam only if you hold it in a horizontal position. You can stop the release of steam by standing the iron upright.

- 3.4 If you wish to iron without the continuous steam function, set the lever A⑤ to the position marked by the symbol



Attention:

Do not use the steam function for silk and synthetics so as not to damage the surface of the fabric.

4. STEAM BOOST FUNCTION

- 4.1 Press the steam boost button A③ to generate a strong flow of steam which can even out even very crumpled up textiles.
- 4.2 Only use the steam boost function when the temperature dial A⑨ is set in the range ●●● to MAX. In order to use this function, the water tank A⑩ must be filled with water. If the indicator light A② is lit, wait until it turns off and only then press the steam boost button A③. Wait at least 5 seconds before pressing the button A③ again.
- 4.3 The steam boost function can also be used when vertical ironing textiles (e.g. curtains, garments hanging on coat hangers, etc.).



Attention:

Do not use the steam boost function for silk and synthetics so as not to damage the surface of the fabric.

5. WATER SPRAY FUNCTION

- The water spray function can be used at any ironing temperature. Make sure that there is water in the water tank A⑩ and to spray textiles using the spray nozzle A⑦ press the spray button A④.

Steam Iron

SSI 5420RD / SSI 5421TQ



Note:

We do not recommend using the spraying function on silk and synthetics.

6. TURNING OFF

- When you have finished using it, set the continuous steam control lever A⑤ to the position marked with the symbol and turn the temperature dial A⑨ to the MIN position. Disconnect the power cord from the power socket and allow the soleplate A⑫ to cool down. When the soleplate A⑫ has cooled down, pour out the water from the water tank A⑪ into a sink.

TIPS FOR QUALITY IRONING

- Do not fill the washing machine drum with too much laundry, otherwise it will be overly crumpled up. You can also avoid overly crumpled laundry by setting a lower spin drying speed.
- If you are ironing fabrics from blended materials (e.g. 40% wool and 60% synthetic material), set the temperature dial according to the material which is ironed at a lower temperature.
- If you do not know the composition of the fabric, identify the suitable temperature dial setting by ironing a piece of the fabric from the underside. Start by setting the temperature dial at a low temperature and gradually increase it until the ideal temperature is achieved.
- Never iron over places that have sweat marks or other stains. The high temperature fixes the stain, making it difficult to remove.
- To avoid silk, wool and synthetic fabrics from being shiny after ironing, iron them from the underside.
- Some materials are easier to iron when they are lightly damp.
- Spray fine fabrics with the spray before ironing them or iron them under a lightly damp wiping cloth.

MAINTENANCE AND CLEANING

Cleaning the exterior parts of the iron

- Before cleaning, make sure that the continuous steam control lever A⑤ is set to position the temperature dial A⑨ is turned to the MIN position and the power cord is disconnected from the power socket. Allow the soleplate A⑫ to cool down. Flip open the cap A⑥ and then empty out the water tank A⑪ into a sink. Close the cap A⑥ again.
- Wipe the soleplate A⑫ and the outer surface of the iron with a lightly dampened cloth. Then wipe everything dry.
- Do not use metal items, petrol, solvents or abrasive cleaning products, etc. for cleaning to avoid damaging the surface. Do not submerge the iron in water.

Removing limescale deposits

- For the removal of limescale deposits from the inner part of the soleplate A⑫, the iron is equipped with a Self-Clean function. Use the Self-Clean function regularly at least once every 14 days.
- Make sure that the continuous steam control lever A⑤ is set to position and that the iron is disconnected from the power socket. Fill the tank A⑪ with water up to approximately half its capacity. Do not add vinegar or other limescale removers into the water. Connect the iron to a power socket. Set the temperature dial A⑨ to maximum and wait until the indicator light A② turns off. Disconnect the iron from the el. power socket and hold it in a horizontal position above the sink. Press the Self-Clean button A⑩ and hold it down. Steam and hot water will start to be emitted from the soleplate A⑫. At the same time also limescale deposits from the inner parts of the soleplate A⑫ will be removed. Gently move the iron from side to side until the water tank A⑪ is completely empty. After emptying it out, release the button A⑩. If the soleplate A⑫ is very soiled, you can repeat this process once more.
- After completing the Self-Clean process, reconnect the iron to the power socket and allow it to heat up to maximum temperature in order to dry out the soleplate A⑫. Iron over a piece of unneeded fabric to remove water stains that formed on the soleplate A⑫ during the cleaning process. Then set the temperature dial A⑨ to the MIN position, disconnect the iron from the power socket and allow it to cool down. Finally, wipe the soleplate A⑫ using a clean cloth.

Steam Iron

SSI 5420RD / SSI 5421TQ

EN

STORAGE

- Store the iron in the upright position in a clean and dry place out of reach of children.

TECHNICAL SPECIFICATIONS

Rated voltage	220–240 V
Rated frequency	50/60 Hz
Rated power input	2200 W

Changes to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This appliance meets all the basic requirements of EU directives related to it.

Steam Iron

SSI 5420RD / SSI 5421TQ

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-pegla-ssi-5421tq-akcija-cena/>