

Uputstvo za upotrebu (EN)

COOLER MASTER slušalice MH650



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/cooler-master-slusalice-mh650-akcija-cena/>



Make It Yours.



MH650

Gaming Headset with RGB Illumination and Virtual 7.1 Surround Sound

MAKE YOUR GAMING EXPERIENCE.

Overview

Package Contents

MH650

- MH650 Gaming Headset
- Quick Start Guide
- Detachable Flexible Microphone
- Pouch Bag
- Type C to USB Type A Plug



EN

- 1 Detachable flexible Mic
- 2 Mute Mic
- 3 Volume Up / Down
- 4 RGB Mode button
- 5 Power Indicator
- 6 Virtual 7.1 On / Off

ES

- 1 Detachable flexible Mic
- 2 Mute Mic
- 3 Volume Up / Down
- 4 RGB Mode button
- 5 Power Indicator
- 6 Virtual 7.1 On / Off

IT

- 1 Detachable flexible Mic
- 2 Mute Mic
- 3 Volume Up / Down
- 4 RGB Mode button
- 5 Power Indicator
- 6 Virtual 7.1 On / Off

FR

- 1 Detachable flexible Mic
- 2 Mute Mic
- 3 Volume Up / Down
- 4 RGB Mode button
- 5 Power Indicator
- 6 Virtual 7.1 On / Off

PT

- 1 Detachable flexible Mic
- 2 Mute Mic
- 3 Volume Up / Down
- 4 RGB Mode button
- 5 Power Indicator
- 6 Virtual 7.1 On / Off

DE

- 1 Detachable flexible Mic
- 2 Mute Mic
- 3 Volume Up / Down
- 4 RGB Mode button
- 5 Power Indicator
- 6 Virtual 7.1 On / Off

RU

- 1 Detachable flexible Mic
- 2 Mute Mic
- 3 Volume Up / Down
- 4 RGB Mode button
- 5 Power Indicator
- 6 Virtual 7.1 On / Off

JP

- 1 Detachable flexible Mic
- 2 Mute Mic
- 3 Volume Up / Down
- 4 RGB Mode button
- 5 Power Indicator
- 6 Virtual 7.1 On / Off

ID

- 1 Detachable flexible Mic
- 2 Mute Mic
- 3 Volume Up / Down
- 4 RGB Mode button
- 5 Power Indicator
- 6 Virtual 7.1 On / Off

CHT

- 1 Detachable flexible Mic
- 2 Mute Mic
- 3 Volume Up / Down
- 4 RGB Mode button
- 5 Power Indicator
- 6 Virtual 7.1 On / Off

CHS

- 1 Detachable flexible Mic
- 2 Mute Mic
- 3 Volume Up / Down
- 4 RGB Mode button
- 5 Power Indicator
- 6 Virtual 7.1 On / Off

PC Installation

*Windows 7 Installation

EN

- 1 Right Click the Speaker/Headset Icon at the bottom right of the desktop
 - 2 Select "Playback Devices"
- or
- 3 Open Control Panel and select "Hardware and Sound" and then select "Sound"
- If MH650 is not the default audio device, right click around the device picture and select "Set as Default Device"
- 4 Repeat the same steps above under "Recording" tag. Set MH650 as the default recording device.

ES

- 1 Haga clic con el botón derecho en el icono del altavoz o de los auriculares que se encuentra en la parte inferior del escritorio
 - 2 Seleccione "Dispositivo de reproducción"
- o
- 3 Abra el panel de control y seleccione "Hardware y sonido" y, a continuación, seleccione "Sonido"
- Si su MH650 no es el dispositivo de audio predeterminado, haga clic con el botón derecho en la imagen del dispositivo y seleccione "Establecer como dispositivo predeterminado"
- Repita los mismos pasos anteriores bajo la etiqueta "Grabación". Establezca su MH650 como el dispositivo de grabación predeterminado.
- 4

IT

- 1 Fare clic con il tasto destro sull'icona altoparlanti/cuffie in basso a destra sul desktop
 - 2 Selezionare "Dispositivo di riproduzione"
- o
- 3 Aprire Pannello di controllo e selezionare "Hardware e suoni", quindi selezionare "Suono"
- Se MH650 non è il dispositivo audio predefinito, fare clic con il tasto destro sull'immagine del dispositivo e selezionare "Imposta come dispositivo predefinito"
- 4 Ripetere le stesse procedure nella scheda "Registrazione". Impostare MH650 come dispositivo di registrazione predefinito.

FR

- 1 Faites un clic droit sur l'icône Haut-parleur/Casque dans le coin inférieur droit du bureau
 - 2 Sélectionnez "Périphérique de lecture"
- ou
- 3 Ouvrez le panneau de configuration et sélectionnez "Matériel et son" puis sélectionnez "Son"
- Se MH650 non è il dispositivo audio predefinito, fare clic con il tasto destro sull'immagine del dispositivo e selezionare "Imposta come dispositivo predefinito"
- 4 Ripetere le stesse procedure nella scheda "Registrazione". Impostare MH650 come dispositivo di registrazione predefinito.

PT

- 1 Clique com o botão direito no ícone de altifalante/auscultadores no canto inferior direito do ambiente de trabalho
 - 2 Selecione "Dispositivo de reprodução"
- o
- 3 Aprire Pannello di controllo e selezionare "Hardware e suoni", quindi selezionare "Suono"
- Se MH650 non è il dispositivo audio predefinito, fare clic con il tasto destro sull'immagine del dispositivo e selezionare "Imposta come dispositivo predefinito"
- 4 Ripetere le stesse procedure nella scheda "Registrazione". Impostare MH650 come dispositivo di registrazione predefinito.

DE

- 1 Lautsprecher/Headset-Symbol unten rechts am Desktop mit rechter Maustaste anklicken
 - 2 „Wiedergabegerät“ wählen
- oder
- 3 Systemsteuerung öffnen, „Hardware und Sound“ und dann „Sound“ wählen
- Falls MH650 nicht das Standardaudiogerät ist: Gerätebild mit rechter Maustaste anklicken und „Als Standardgerät festlegen“ wählen
- 4 Die obigen Schritte im Register „Aufnahme“ wiederholen. MH650 als Standardaufnahmeggerät festlegen.

PC Installation

*Windows 7 Installation

(Continued...)

RU

1 Щелкните правой кнопкой мыши значок динамика (гарнитуры) в правом нижнем углу Рабочего стола.

2 Выберите команду «Устройство воспроизведения»

Или

3 Откройте Панель управления и выберите пункт «Оборудование из звука», а затем — «Звук»

Если устройство MH650 не является аудиоустройством по умолчанию, щелкните его значок правой кнопкой мыши и выберите пункт «Использовать по умолчанию»

Повторите вышеуказанные

4 действия на вкладке «Запись».

Установите MH650 в качестве устройства записи по умолчанию.

JP

1 デスクトップの右下に表示されているスピーカー/ヘッドセットアイコンを右クリックします

2 [再生デバイス] を選択します

あるいは

3 コントロールパネルを開き、[ハードウェアとサウンド] を選択し、[サウンド] を選択します

MH650 が既定のオーディオデバイスになっていない場合、デバイスの画像を右クリックし、[既定のデバイスとして設定] を選択します

4 [録音] タブでも上と同じ手順を行います。MH650 を既定の録音デバイスとして設定してください。

ID

1 Klik Kanan Ikon Speaker/Headset pada sisi kanan bawah desktop

2 pilih "Playback Device"

Atau

3 Buka "Control Panel" dan pilih "Hardware and Sound" Lalu pilih "Sound"

Jika MH650 bukan "Default Audio Device", klik kanan disekitar gambar perangkat dan pilih "Set As Default Device"

4 Ulangi langkah diatas pada bagian "Recording". Atur MH650 sebagai "Default Recording Device"

CHT

1 在桌面右下角右鍵點擊「喇叭/耳機」圖示

2 左鍵點擊「播放裝置」

或

3 打開控制台，選擇「硬體和音效」，選擇「聲音」

若MH650不是預設裝置，右鍵點擊「耳麥式耳機」圖示旁的空白處，並選擇「設定成預設裝置」

4 在「錄製」選項卡下重覆以上動作，將麥克風設定成預設的錄音裝置

CHS

1 在桌面右下角右键点击「喇叭/耳机」图示

2 左键点击「播放装置」

或

3 打开控制台，选择「硬件和声音」，选择「声音」

若MH650不是默认音频设备，右键单击「耳麦式耳机」图示旁的空白处，并选择「设置为预设设备」

4 在「录制」选项卡下重复以上动作，将麦克风设定成默认的录音设备

Mac Installation

EN

1 Open the Apple Menu and select "System Preferences"

2 Select "Sound" icon

3 Under the Input tab, select "MH650" for default sound input.

4 Under the Output tab, select "MH650" for default sound output.

ES

1 Abra el menú Apple y seleccione "Preferencia del sistema"

2 Seleccione el icono "Sonido"

3 En la pestaña Entrada, seleccione "MH650" para la entrada de sonido predeterminada.

4 En la pestaña Salida, seleccione "MH650" para la salida de sonido predeterminada.

IT

1 Aprire il menu Apple e selezionare "Preferenze di Sistema"

2 Selezionare l'icona "Suono"

3 Nella scheda Ingresso, selezionare "MH650" come ingresso audio predefinito.

4 Nella scheda Uscita, selezionare "MH650" come uscita audio predefinita.

Mac Installation

(Continued...)

FR

- Ouvrez le menu Apple et sélectionnez "Préférences système"
- Sélectionnez l'icône "Son"
- Dans l'onglet Entrée, sélectionnez "MH650" pour l'entrée sonore par défaut.
- Dans l'onglet Sortie, sélectionnez "MH650" pour la sortie sonore par défaut.

RU

- Вызовите меню Apple и выберите пункт «Системные настройки».
- Выберите значок «Звук»
- На вкладке «Вход» выберите MH650 в качестве устройства записи звука по умолчанию.
- На вкладке «Выход» выберите MH650 в качестве устройства воспроизведения звука по умолчанию.

CHT

- 打開蘋果系統選單，選擇「系統偏好設定」
- 點選「聲音」圖示
- 在「輸入」索引標籤下，選取MH650作為預設聲音輸入裝置
- 在「輸出」索引標籤下，選取MH650作為預設聲音輸出裝置

PT

- Abra o Menu Apple e selecione "Preferências do Sistema"
- Selecione o ícone "Som"
- No separador Entrada, selecione "MH650" como entrada de som predefinida.
- No separador Saída, selecione "MH650" como saída de som predefinida.

JP

- Apple メニューを開き、[システム環境設定]を選択します
- [サウンド]アイコンを選択します
- [入力]タブで、[MH650]を音の入力の既定デバイスとして選択します。
- [出力]タブで、[MH650]を音の出力の既定デバイスとして選択します。

CHS

- 打开苹果系统选单，选择「系统偏好设定」
- 点击「声音」图标
- 在「输入」选项卡下，选取MH650作为预设音频输入设备
- 在「输出」选项卡下，选取MH650作为默认声音输出设备

DE

- Apple-Menü öffnen, „Systemeinstellungen“ wählen
- „Ton“-Symbol wählen
- Im Eingabe-Register „MH650“ als Standardeingabegerät wählen.
- Im Ausgabe-Register „MH650“ als Standardausgabegerät wählen.

ID

- Buka "Apple Menu" dan pilih "System Preferences"
- Pilih Ikon "Sound"
- Dalam tab Input, Pilih "MH650" sebagai "Default Sound Input"
- Dalam tab Output, Pilih "MH650" sebagai "Default Sound Output"

有毒有害物质或元素

部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
结构壳体	X	○	○	○	○	○
开关组件 PCB, USB	X	○	○	○	○	○
线材	X	○	○	○	○	○
螺丝	X	○	○	○	○	○

○：表示该有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006标准规定的限量要求以下。
X：表示该有害物质在该部件的任何均质材料中的含量均超过SJ/T11363-2006标准规定的限量要求。
注：本产品95%的部件均采用无毒无害的环保材料制造。含有有毒有害物质或元素的部件均通过安全罗浮水平限制方法实现有毒有害物质或元素的替代。

Asia Pacific - Cooler Master Technology Inc.
8F., No. 788-1, Zhongzheng Rd., Zhonghe Dist.,
New Taipei City 23586, Taiwan (R.O.C.)
Jinshan Dist., Shanghai City, China
Tel: +886-2-2225-3517

China - Cooler Master China
Room 2062, Floor 6, No. 421, Weiqing Rd.,
Jinshan Dist., Shanghai City, China
Tel: +86-21-51872177

Europe - Cooler Master Europe B.V.
Lodewijkstraat 1b, 5652AC Eindhoven,
The Netherlands
Tel: +31-(0)40-702-0900

North America - Cooler Master North America
2929 E Imperial Highway, Ste 110
Brea, CA 92821, USA
Tel: +1-888-624-5099

設備名稱：電競耳機 型號 (型式)：

單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ^{VI})	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
外殼	○	○	○	○	○	○
電路板	—	○	○	○	○	○
連接線	○	○	○	○	○	○

備考1. "超出0.1 wt%"及"超出0.01 wt%"係指限用物質之百分比含量超出百分比含量基準值
備考2. "○"係指該項限用物質之百分比含量未超出百分比含量基準值。
備考3. "—"係指該項限用物質為排除項目。

© 2019 Cooler Master Technology Inc. All Rights Reserved.
All trademarks are registered by their respective owners.

Ver 1.0: 2019/07 MH650



Cooler Master Products : LIMITED WARRANTY

This document describes the warranty terms for all Cooler Master peripheral products

WHO THE WARRANTY PROTECTS:

This Warranty is valid to the original purchaser only.

WHAT THE WARRANTY PROTECTS:

This warranty is valid only for the Cooler Master Products distributed by authorized dealer(s).

Please contact Cooler Master for warranty information, services and questions: <http://account.cooler-master.com>

WHAT IS AND IS NOT COVERED

It is important to note that our warranty is not an unconditional guarantee for the duration of the Program. Any replaced parts become the property of Cooler Master. The Program does not apply to the software component of a product or a product which has been damaged due to accident, misuse, abuse, improper installation, usage not in accordance with product specifications and instructions, natural or personal disaster, or unauthorized alterations, repairs or modifications.

The Program does also not cover any events such as below:

- Any damages unrelated to manufacturing defects.
- Any unsuitable environment or use of the product in Cooler Master Opinion.
- Any product which has been modified without official permission from Cooler Master, or on which the serial number or warranty sticker has been defaced, modified, or removed.

Damage, deterioration or malfunction resulting from:

- Accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, commercial or industrial use, unauthorized product modification or failure to follow instructions included with the product.
- Third party products using Cooler Master Components will not be covered by warranty. See your vendor or the manufacturer for information about servicing.
- Repair or attempted repair by anyone not authorized by Cooler Master, Inc.
- Any shipment damages (claims must be made with the carrier).
- Unauthorized repairs to a Cooler Master product will void the warranty offered by the Program.
- Cooler Master reserves the right to refuse to service any product which has been altered, modified or repaired by non-Cooler Master Service personnel.
- Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.
- Removal or installation charges.
- You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to You (applies only if product is directly purchased from Cooler Master).
- Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.
- Product malfunction or damage resulting from liquids or moisture.
- All accessories that malfunction due to physical damage such as: USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

LIMITATION OF IMPLIED WARRANTIES:

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

For the most updated information please visit our official website: www.cooler-master.com

Cooler Master Support: <https://account.cooler-master.com>

EXCLUSION OF DAMAGES

COOLER MASTER'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. COOLER MASTER SHALL NOT BE LIABLE FOR:

- DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
- ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE
- ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY

WARRANTY INFORMATION:

If the product is found with reasonable defect within the period of (refer to Table A.,) starting on the first day of purchase (with proof of invoice), this is what you must do, to claim warranty.

PROCEDURES:

1. Consumers should return to the shop where he/she has bought the goods, After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.
2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods)
3. All faulty goods must return to the distributor, expenses for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:

1. Within the valid warranty date, starting from the first day of issuing invoice, Retail shops will assist in confirmation with distributor for the consumer for the following:

- A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.
 - B. Product defect caused under natural use, expenses will be covered by the distributor.
2. Faulty products with expired warranty dates, we would suggest consumer to purchase a new products, without undergoing for repairs.

Table A:

Cooler Master Products

Please check your user manual for the exact warranty period terms for products that are not shown below.

For more warranty information, please visit our official website: <http://www.cooler-master.com/service/warranty.html>

Cooler Master Gaming Peripherals products warranty

Product Name	Warranty Term
MH650	2 years

FOR AUSTRALIA ONLY:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Cooler Master, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/cooler-master-slusalice-mh650-akcija-cena/>