

Uputstvo za upotrebu (EN)

COOLER MASTER tastatura CK-530-GKTL1



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/cooler-master-tastatura-ck-530-gktl1-akcija-cena/>

Package Contents

- CK530 V2
- Keycap Puller
- Wrist Rest
- Quick Start Guide



設備名稱：電競鍵盤 型號（型式）： CK-530-GKTR1-TC / CK-530-GKTM1-TC / CK-530-GKTL1-TC

單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ^{VI})	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
外殼	○	○	○	○	○	○
電路板	—	○	○	○	○	○
連接線	○	○	○	○	○	○

備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量標準值
備考2. “○”係指該限用物質之百分比含量未超出百分比含量標準值
備考3. “—”係指該項限用物質為排除項目。

部件名稱 有毒有害物質或元素

部件名稱	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ^{VI})	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
結構壳体	X	○	○	○	○	○
开关组件 PCB、USB	X	○	○	○	○	○
线材	X	○	○	○	○	○
螺丝	X	○	○	○	○	○

○：表示該項有害物質或元素均無該項材料或含量由RoHS/T11903-2006所規定的標準要求以下。
X：表示該項有害物質或元素在該項材料或含量由RoHS/T11903-2006所規定的標準要求以上。
註：本產品符合RoHS指令及REACH指令之限制材料，如有發現有害物質或元素均符合RoHS指令及REACH指令之限制材料，如有發現有害物質或元素均符合RoHS指令及REACH指令之限制材料。

Asia Pacific • Cooler Master Technology Inc.
8F, No. 788-1, Zhongzheng Rd., Zhonghe Dist., New Taipei City 23886, Taiwan (R.O.C.)
Tel: +886-2-2225-3517

China • Cooler Master China
7th Floor, Building C, Wujiaochang R&D Center, No. 7, 955 Lane, Shaozhong Road, Maoyang District, Shanghai City 200501, China
Hot: +86 21 974177

North America • Cooler Master North America
2909 East Imperial Highway, Ste. 110
Brea, CA 92821, USA
Tel: +1-888-624-6509

Europe • Cooler Master Europe B.V.
Leliedaalsesteeg 16, 5652AC Eindhoven, The Netherlands
Tel: +31-40-46702-6900

© 2020 Cooler Master Technology Inc. All Rights Reserved.
All trademarks are registered to their respective owners.
Ver 2.0 | 2021.04 | 3/20/2021 CDP

EN



FN + E = Reset all to default
FN + R = Reset Profile to Default



FN + F1 = Quick Pick/Cycle 8 Colors and Modes
FN + F2 = Red Color Levels (0-9)
FN + F3 = Green Color Levels (0-9)
FN + F4 = Blue Color Levels (0-9)



FN + F5 = Cycle LED Lighting Mode
FN + F6 = Lighting Foreground effect
FN + F7 = Lighting Background effect
FN + F8 = Cycle LED Lighting Brightness (0-4)



FN + F9 = Windows Lock / Full keyboard lock
FN + F10 = Record LED Backlight
FN + F11 = Record Macro
FN + F12 = Delete Macro



FN + PRT SC = Single Loop Macro
FN + SCR LK = Infinite Macro Loop
FN + PAUSE = Repeat Macro



FN + 1 = Profile 1
FN + 2 = Profile 2
FN + 3 = Profile 3
FN + 4 = Profile 4



FN + Ins = Play / Pause
FN + Home = Previous Track
FN + Page Up = Next Track



FN + Del = Mute
FN + End = Volume Down
FN + Page Down = Volume Up



FN + Up / Down Arrow keys:
Speed up / Slow Down LED Lighting Effect
FN + Left / Right Arrow keys:
Switch Lighting Effect Direction

Cooler Master Products

LIMITED WARRANTY

This document describes the warranty terms for all Cooler Master peripheral products

WHO THE WARRANTY PROTECTS:

This Warranty is valid to the original purchaser only.

WHAT THE WARRANTY PROTECTS:

This warranty is valid only for the Cooler Master Products distributed by authorized dealer(s). Please contact Cooler Master for warranty information, services and questions.
<http://account.coolermaster.com>

WHAT IS AND IS NOT COVERED

It is important to note that our warranty is not an unconditional guarantee for the duration of the Program. Any replaced parts become the property of Cooler Master. The Program does not apply to the software component of a product or a product which has been damaged due to accident, misuse, abuse, improper installation, usage not in accordance with product specifications and instructions, natural or personal disaster, or unauthorized alterations, repairs or modifications. The Program does also not cover any events such as below:
• Any damages unrelated to manufacturing defects.
• Any unsuitable environment or use of the product in Cooler Master Option.
• Any product which has been modified without official permission from Cooler Master, or on which the serial number or warranty sticker has been defaced, modified, or removed.
• Damage, deterioration or malfunction resulting from:
• Accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, commercial or industrial use, unauthorized product modification or failure to follow instructions included with the product.
• Third party products using Cooler Master Components will not be covered by warranty. See your vendor or the manufacturer for information about servicing.
• Repair or attempted repair by anyone not authorized by Cooler Master, Inc.
• Any shipment damages (claims must be made with the carrier).
• Unauthorized repairs to a Cooler Master product will void the warranty offered by the Program. Cooler Master reserves the right to refuse to service any product which has been altered, modified or repaired by non-Cooler Master Service personnel.
• Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.
• Removal or installation charges.
• You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to You (applies only if product is directly purchased from Cooler Master).
• Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.
• Product malfunction or damage resulting from liquids or moisture.
• All accessories that malfunction due to physical damage such as USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

LIMITATION OF IMPLIED WARRANTIES:

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

For the most updated information please visit our official website: www.coolermaster.com

Cooler Master Support: https://account.coolermaster.com

EXCLUSION OF DAMAGES

COOLER MASTER'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. COOLER MASTER SHALL NOT BE LIABLE FOR:
• DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
• ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE
• ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY

WARRANTY INFORMATION:

If the product is found with reasonable defect within the period of (refer to Table A.) starting on the first day of purchase (with proof of invoice), this is how you must do, to claim warranty.

PROCEDURES:

1. Consumers should return to the shop where he/she has bought the goods. After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.
2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods)
3. All faulty goods must return to the distributor, expenses for transporting the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the returning of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:

A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.
B. Product defect caused under natural use, expenses will be covered by the distributor.

2. Faulty products with expired warranty dates, we would suggest consumer to purchase a new products, without undergoing for repair.

Table A:

Cooler Master Products

Please check your user manual for the exact warranty period terms for products that are not shown below.

For more warranty information, please visit our official website:

<http://www.coolermaster.com/service/warranty.html>

Product Name	Warranty Term
CK530 V2	2 years

FOR AUSTRALIA ONLY:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. (Cooler Master Technology Inc., 8F, No. 788-1, Zhongzheng Rd., Zhonghe Dist., New Taipei City 23886, Taiwan (R.O.C.)
Telephone: +886-2-2225-3517 (standard international call charges apply)



Make It Yours.



CK530 V2 Tenkeyless Gaming Mechanical Keyboard

MAKE YOUR GAMING EXPERIENCE.

AR

إعادة ضبط الكل للوضع الافتراضي = FN + E
إعادة ضبط الوضع الافتراضي = FN + R

اختيار سريع/دور كل من 8 ألوان وموتارت = FN + F1
برجات اللون الأحمر (0-9) = FN + F2
برجات اللون الأخضر (0-9) = FN + F3
برجات اللون الأزرق (0-9) = FN + F4

وضع دورة لإضاءة خلفية = FN + F5
موتارت إضاءة أمامية = FN + F6
موتارت إضاءة خلفية (4-0) سطوع = FN + F7
سطوع LED إضاءة (4-0) = FN + F8

قبل ويندوز / قبل لوحة المفاتيح بالكامل = FN + F9
تسجيل إضاءة خلفية = FN + F10
Macro تسجيل = FN + F11
Macro تسجيل = FN + F12

تدقة Macro واحد = FN + PRT SC
تدقة Macro نهائية = FN + SCR LK
Macro تكرار = FN + PAUSE

ملف تسجيلي رقم 1 = FN + 1
ملف تسجيلي رقم 2 = FN + 2
ملف تسجيلي رقم 3 = FN + 3
ملف تسجيلي رقم 4 = FN + 4

إيقاف / تشغيل = FN + INS
الأغنية التالية = FN + HOME
الأغنية التالية = FN + PGUP
تدقة الصوت = FN + DEL
تدقة الصوت = FN + END
رفع الصوت = FN + PGDN

تدقة / مفتح إعداد أعطر / اسفل : تدقة / مفتح إعداد سرعة التدقة / مفتح إعداد سرعة التدقة / مفتح إعداد سرعة التدقة

CHS

FN + E = 全部重置为默认值
FN + R = 将配置文件重置为默认值

FN + F1 = 快速挑选/循环 8 种颜色及模式
FN + F2 = 红色水平 (0-9)
FN + F3 = 绿色水平 (0-9)
FN + F4 = 蓝色水平 (0-9)

FN + F5 = 循环 LED 照明模式
FN + F6 = 前方照明效果
FN + F7 = 后方照明效果
FN + F8 = 循环切换 LED 灯光亮度 (0-4)

FN + F9 = Windows 锁定/完全键盘锁定
FN + F10 = 录制 LED 背光
FN + F11 = 录制宏
FN + F12 = 删除宏

FN + PRT SC = 单循环宏
FN + SCR LK = 无限宏循环
FN + PAUSE = 重复宏

FN + 1 = 配置文件 1
FN + 2 = 配置文件 2
FN + 3 = 配置文件 3
FN + 4 = 配置文件 4

FN + INS = 播放/暂停
FN + HOME = 上一个曲目
FN + PGUP = 下一个曲目
FN + DEL = 静音
FN + END = 音量降低
FN + PGDN = 音量升高

FN + 方向上/下: 增加/减小灯光流动速度
FN + 向左/向右箭头: 切换照明效果方向

CHT

FN + E = 全部恢復為預設值
FN + R = 將設定檔恢復為預設值

FN + F1 = 快速選擇/循環切換 8 種顏色及模式
FN + F2 = 紅色水平 (0-9)
FN + F3 = 綠色水平 (0-9)
FN + F4 = 藍色水平 (0-9)

FN + F5 = 循環切換 LED 照明模式
FN + F6 = 前方照明效果
FN + F7 = 後方照明效果
FN + F8 = 循環切換 LED 燈光亮度 (0-4)

FN + F9 = Windows 鎖定 / 全鍵盤鎖定
FN + F10 = 錄製 LED 背光
FN + F11 = 錄製宏
FN + F12 = 刪除宏

FN + PRT SC = 單循環巨集
FN + SCR LK = 無限宏循環
FN + PAUSE = 重複宏

FN + 1 = 設定檔 1
FN + 2 = 設定檔 2
FN + 3 = 設定檔 3
FN + 4 = 設定檔 4

FN + INS = 播放/暫停
FN + HOME = 上一個曲目
FN + PGUP = 下一個曲目
FN + DEL = 靜音
FN + END = 音量降低
FN + PGDN = 音量升高

FN + 方向上 / 下: 增加/減少小燈光流動速度
FN + 向左 / 向右方向鍵: 切換照明效果方向

DE

FN + E = alles auf Standardeinstellungen zurücksetzen
FN + R = Profile auf Standardeinstellungen zurücksetzen

FN + F1 = zufällige Auswahl aus 8 Profilen
FN + F2 (Rot *) = Farbstufen rot (0-9)
FN + F3 (Green *) = Farbstufen grün (0-9)
FN + F4 (Blue *) = Farbstufen blau (0-9)

FN + F5 = LED Modus
FN + F6 = Beleuchtungseffekt vorne
FN + F7 = Beleuchtungseffekt hinten
FN + F8 = LED-Lichtelligkeit umschalten (0-4)

FN + F9 = Windows-Sperre / vollständige Tastatursperre
FN + F10 = LED Beleuchtung aufzeichnen
FN + F11 = Grabar Macro
FN + F12 = Macro löschen

FN + PRT SC = einfache Macro-Schleife
FN + SCR LK = unendliche Macro-Schleife
FN + PAUSE = Macro wiederholen

FN + 1 = zu Profil 1 wechseln
FN + 2 = zu Profil 2 wechseln
FN + 3 = zu Profil 3 wechseln
FN + 4 = zu Profil 4 wechseln

FN + INS = Abspielen/Pause
FN + HOME = Vorheriger Titel
FN + BILD OBEN = Nächster Titel
FN + DEL = Stumm
FN + END = Lautstärke-
FN + PGDN UNTEN = Lautstärke +

FN + obere/untere Pfeiltaste: Schnelligkeit des Lichteffekts erhöhen/verringern
FN + linke/rechte Pfeiltaste: Licht Effekt Richtungswechsel

ES

FN + E = Restablecer todo a los valores predeterminados
FN + R = Restablecer Perfil a los valores predeterminados

FN + F1 = Selección rápida / ciclo 8 colores y modos
FN + F2 (Rot *) = Niveaux de couleur rouge (0-9)
FN + F3 (Green *) = Niveaux de couleur verte (0-9)
FN + F4 (Blue *) = Niveaux de couleur bleue (0-9)

FN + F5 = Modo Iluminación LED
FN + F6 = Efecto frontal de iluminación
FN + F7 = Efecto trasero de iluminación
FN + F8 = Ciclo de brillo de iluminación de LED (0-4)

FN + F9 = Bloqueo de Windows / Bloqueo total del teclado
FN + F10 = Grabación Retroiluminación LED
FN + F11 = Grabar Macro
FN + F12 = Borrar Macro

FN + PRT SC = Única Macro Loop
FN + SCR LK = Infinito Macro Loop
FN + PAUSE = Macro repetir Macro

FN + 1 = Cambiar al Perfil 1
FN + 2 = Cambiar al Perfil 2
FN + 3 = Cambiar al Perfil 3
FN + 4 = Cambiar al Perfil 4

FN + INS = Play/Pausa
FN + HOME = Pista Previa
FN + BILD OBEN = Pista Siguiente
FN + DEL = Silencio
FN + END = Bajar Volumen
FN + Page Down = Subir Volumen

FN + Tecla de dirección arriba / abajo: acelerar / ralentizar los efectos de iluminación LED
FN + Tecla Flecha hacia la Izquierda / Derecha: Cambiar la dirección del efecto de iluminación

FR

FN + E = Remettre tous les réglages par défaut
FN + R = Réinitialiser le profil par défaut

FN + F1 = Sélection rapide / Cycle 8 couleurs et modes
FN + F2 (Rouge *) = Niveaux de couleur rouge (0-9)
FN + F3 (Vert *) = Niveaux de couleur verte (0-9)
FN + F4 (Bleu *) = Niveaux de couleur bleue (0-9)

FN + F5 = Mode d'éclairage LED
FN + F6 = Efect frontal de illumination
FN + F7 = Efect lumineux arrière
FN + F8 = Faire défiler les niveaux de luminosité LED (0-4)

FN + F9 = Verrouillage Windows / Verrouillage du clavier complet
FN + F10 = Enregistrer le rétro-éclairage LED
FN + F11 = Rekam Makro
FN + F12 = Effacer le Macro

FN + PRT SC = Satu Perputaran Makro
FN + SCR LK = Perputaran Makro Tanpa Batas
FN + PAUSE = Pengulangan Makro

FN + 1 = Passare al Profilo 1
FN + 2 = Passare al Profilo 2
FN + 3 = Passare al Profilo 3
FN + 4 = Passare al Profilo 4

FN + INS = Lecture/Pause
FN + HOME = Lagu Sebelumnya
FN + PGUP = Lagu Berikutnya
FN + DEL = Bisu
FN + END = Volume Turun
FN + PGDN = Volume Naik

FN + Panah Atas / Bawah = Percepat / Perlamat Efek Cahaya LED
FN + Panah Kiri/Kanan = Mengganti Arah Cahaya LED

INS

FN + E = Reset Semua ke Awal
FN + R = Reset Profil ke Awal

FN + F1 = Pilihan Cepat / Perputaran 8 warna dan mode
FN + F2 = Tingkat Warna Merah (0-9)
FN + F3 = Tingkat Warna Hijau (0-9)
FN + F4 = Tingkat Warna Biru (0-9)

FN + F5 = Mode Perputaran Cahaya LED
FN + F6 = Efek Cahaya Latar Depan
FN + F7 = Efek Cahaya Latar Belakang
FN + F8 = Kecearaan Lampu LED Siklus (0-4)

FN + F9 = Kunci Windows / Kunci Keyboard penuh
FN + F10 = Rekam LED Latar Belakang
FN + F11 = Rekam Makro
FN + F12 = Hapus Makro

FN + PRT SC = Satu Perputaran Makro
FN + SCR LK = Perputaran Makro Tanpa Batas
FN + PAUSE = Pengulangan Makro

FN + 1 = Profil 1
FN + 2 = Profil 2
FN + 3 = Profil 3
FN + 4 = Profil 4

FN + INS = Mulai / Pause
FN + HOME = Lagu Sebelumnya
FN + PGUP = Lagu Berikutnya
FN + DEL = Bisu
FN + END = Volume Turun
FN + PGDN = Volume Naik

FN + Panah Atas / Bawah = Percepat / Perlamat Efek Cahaya LED
FN + Panah Kiri/Kanan = Mengganti Arah Cahaya LED

IT

FN + E = Ripristina tutto al default
FN + R = Ripristina profilo al default

FN + F1 = Presa rapida/Ciclo a 8 Colori e modalità
FN + F2 (Rosso *) = Livelli colore Rosso (0-9)
FN + F3 (Verde *) = Livelli colore Verde (0-9)
FN + F4 (Azzul *) = Livelli Colore Blue (0-9)

FN + F5 = Mode Perputaran Cahaya LED
FN + F6 = Efecto anterior Iluminazione
FN + F7 = Efecto posterior Iluminazione
FN + F8 = Ciclo de brillo da Iluminazione LED (0-4)

FN + F9 = Blocco finestra / Blocco tastiera completo
FN + F10 = Registra retroiluminazione LED
FN + F11 = Registra Makro
FN + F12 = Cancella Macro

FN + PRT SC = Singolo Macro Loop
FN + SCR LK = Macro Loop Infinita
FN + PAUSE = Ripeti Macro

FN + 1 = Passare al Profilo 1
FN + 2 = Passare al Profilo 2
FN + 3 = Passare al Profilo 3
FN + 4 = Passare al Profilo 4

FN + INS = Play/Pausa
FN + HOME = Traccia precedente
FN + Page Up = Proxima faixa
FN + DEL = Mute
FN + END = Volume Giu
FN + Page Down = Volume Su

FN + Tasti freccia verso il basso / verso l'alto: accelerare / rallentare gli effetti di illuminazione LED
FN + Tasti Freccia a Sinistra / Freccia a Destra: Cambiare effetto di illuminazione

JP

FN + E = すべて初期値に戻す
FN + R = プロファイルを初期値に戻す

FN + F1 = 8つの色とモードを順番選択 / 循環
FN + F2 (Rosso *) = 赤の色レベル (0-9)
FN + F3 (Verde *) = 緑の色レベル (0-9)
FN + F4 (Azzul *) = 青の色レベル (0-9)

FN + F5 = LED照明モードの循環
FN + F6 = フロントの照明効果
FN + F7 = リアの照明効果
FN + F8 = LED照明の輝度 (0-4) を循環する

FN + F9 = Windowsロック/フルキーボードロック
FN + F10 = LEDバックライトを記録
FN + F11 = マクロを記録
FN + F12 = マクロを削除

FN + PRT SC = シングルマクロループ
FN + SCR LK = マクロの無限ループ
FN + PAUSE = マクロの繰り返し

FN + 1 = プロファイル1
FN + 2 = プロファイル2
FN + 3 = プロファイル3
FN + 4 = プロファイル4

FN + INS = 再生一時停止
FN + HOME = 前のトラック
FN + PGUP = 次のトラック
FN + DEL = ミュート
FN + END = 音量を下げる
FN + Page Down = 音量を上げる

FN + 上向き矢印/下向き矢印キー: LED照明効果の速度を上げる/下げる
FN + 左向き矢印/右向き矢印キー: 照明効果の方向を切り替える

PT

FN + E = Redefine tudo para o defeito
FN + R = Redefine o perfil para o defeito

FN + F1 = Pick Rápido / Ciclo 8 / Cores e Modos
FN + F2 (Vermelho *) = Níveis da Cor Vermelha (0-9)
FN + F3 (Verde *) = Níveis da Cor Verde (0-9)
FN + F4 (Azul *) = Níveis da Cor Azul (0-9)

FN + F5 = Modos de Iluminação LED
FN + F6 = Efeito de Iluminação frontal
FN + F7 = Efeito de Iluminação traseira
FN + F8 = Ciclo de brilho da Iluminação LED (0-4)

FN + F9 = Bloqueio do Windows / Bloqueio total do teclado
FN + F10 = Grava a retro-iluminação LED
FN + F11 = Grava Macro
FN + F12 = Elimina Macro

FN + PRT SC = Único Macro Loop singular
FN + SCR LK = Macro Loop Infinita
FN + PAUSE = Repetição da Macro

FN + 1 = Muda para o perfil 1
FN + 2 = Muda para o perfil 2
FN + 3 = Muda para o perfil 3
FN + 4 = Muda para o perfil 4

FN + INS = Play/Pausa
FN + HOME = Faixa anterior
FN + Page Up = Próxima faixa
FN + DEL = Sem som
FN + END = Baixar Volume
FN + Page Down = Aumento do Volume

FN + tecla da seta para cima/baixo: acelera/desacelera os efeitos da iluminação LED
FN + Tecla para a direita/esquerda: Teclas: Muda a direção dos efeitos luminosos

RU

FN + E = сбросить все
FN + R = сброс настроек профиля к настройкам по умолчанию

FN + F1 = Быстрый выбор/Цикл из 8 цветов и режимов
FN + F2 (красный *) = уровни красного цвета (0-9)
FN + F3 (зеленый *) = уровни зеленого цвета (0-9)
FN + F4 (синий *) = уровни синего цвета (0-9)

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Cooler Master, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/cooler-master-tastatura-ck-530-gk11-akcija-cena/>