

Uputstvo za upotrebu (EN)

COOLER MASTER tastatura CK-550-GKTM1




Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/cooler-master-tastatura-ck-550-gktm1-akcija-cena/>

Package Contents

- CK550 V2 Gaming Keyboard
- Keycap Puller
- Wrist Rest
- Quick Start Guide

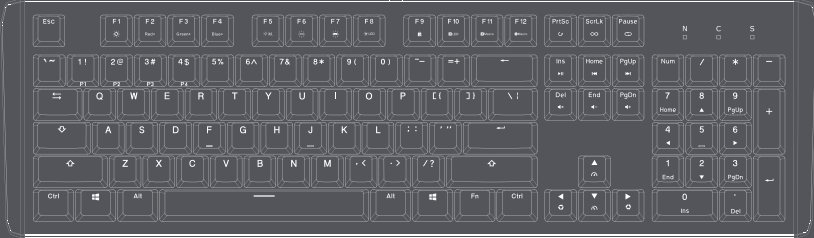

設備名稱：電競鍵盤		型號（型式）：		CK-550-GKTR1-TC / CK-550-GKTL1-TC / CK-550-GKTM1-TC / CK-550-PWTR1-US / CK-550-PWTL1-US / CK-550-PWTR1-US / CK-550-PWTR2-US / CK-550-PWTR2-US / CK-550-PWTR2-US			
單元	限用物質及其化學符號						
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ^{VI})	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)	
金屬部件	—	○	○	○	○	○	
外殼	○	○	○	○	○	○	
電路板	—	○	○	○	○	○	
連接線	○	○	○	○	○	○	
備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。							
備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。							
備考3. “—”係指該項限用物質未列出。							

Asia Pacific - Cooler Master Technology Inc.
8F, No. 788, Zhongzheng Rd., Zhongzheng Dist.,
New Taipei City 23560, Taiwan (R.O.C.)
Tel: +886-2-2252-3317

China - Cooler Master China
7th Floor, Building C, Hongqiao R&F Center,
No. 7, 958 Lane, Shenhong Road,
Mishang District, Shanghai City 200051, China
+86-21-51872177

有毒有害物質或元素						
部件名稱	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ^{VI})	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
結構壳体	X	○	○	○	○	○
開關组件 PCB, USB	X	○	○	○	○	○
線材	X	○	○	○	○	○
螺絲	X	○	○	○	○	○
○：表示該項物質在該產品所有材料中的含量均符合RoHS 2002/95/EC之限制要求 X：表示該項物質在該產品所有材料中的含量均超過RoHS 2002/95/EC之限制要求 注：本產品符合RoHS 2002/95/EC之限制要求，且所有材料均符合RoHS 2002/95/EC之限制要求						

North America - Cooler Master North America
2323 East Imperial Highway, Ste. 115
Brea, CA 92621, USA
Tel: 1-888-625-5099

Europe - Cooler Master Europe B.V.
Lindendreef 16, 5504AC Eindhoven,
The Netherlands
Tel: +31-40-262-0900

© 2020 Cooler Master Technology Inc. All Rights Reserved.
All trademarks are registered to their respective owners.
Ver 3.0: 2024.04 S12004042-GP

EN



FN + E = Reset all to default
FN + R = Reset Profile to Default



FN + F9 = Windows Lock / Full keyboard lock
FN + F10 = Record LED Backlight
FN + F11 = Record Macro
FN + F12 = Delete Macro



FN + Ins = Play / Pause
FN + Home = Previous Track
FN + Page Up = Next Track



FN + F1 = Quick Pick/Cycle 8 Colors and Modes
FN + F2 = Red Color Levels (0-9)
FN + F3 = Green Color Levels (0-9)
FN + F4 = Blue Color Levels (0-9)



FN + PRT SC = Single Loop Macro
FN + SCR LK = Infinite Macro Loop
FN + PAUSE = Repeat Macro



FN + Del = Mute
FN + End = Volume Down
FN + Page Down = Volume Up



FN + F5 = Cycle LED Lighting Mode
FN + F6 = Lighting Foreground effect
FN + F7 = Lighting Background effect
FN + F8 = Cycle LED Lighting Brightness (0-4)



FN + 1 = Profile 1
FN + 2 = Profile 2
FN + 3 = Profile 3
FN + 4 = Profile 4



FN + Up / Down Arrow Keys:
Speed up / Slow Down LED Lighting Effect
FN + Left / Right Arrow Keys:
Switch Lighting Effect Direction

Cooler Master Products

LIMITED WARRANTY

This document describes the warranty terms for all Cooler Master peripheral products

WHO THE WARRANTY PROTECTS:

This Warranty is valid to the original purchaser only.

WHAT THE WARRANTY PROTECTS:

This warranty is valid only for the Cooler Master Products distributed by authorized dealer(s). Please contact Cooler Master for warranty information, services and questions: <http://account.coolermaster.com>

WHAT IS AND IS NOT COVERED

It is important to note that our warranty is not an unconditional guarantee for the duration of the Program.

Any replaced parts become the property of Cooler Master. The Program does not apply to the software component of a product or a product which has been damaged due to accident, misuse, abuse, improper installation, usage not in accordance with product specifications and instructions, natural or personal disaster, or unauthorized alterations, repairs or modifications.

The Program does also not cover any events such as below:

- Any damages unrelated to manufacturing defects.
- Any unsuitable environment or use of the product in Cooler Master Opinion.
- Any product which has been modified without official permission from Cooler Master, or on which the serial number or warranty sticker has been defaced, modified, or removed.
- Damage, deterioration or malfunction resulting from:
 - Accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, commercial or industrial use, unauthorized product modification or failure to follow instructions included with the product.
 - Third party products using Cooler Master Components will not be covered by warranty. See your vendor or the manufacturer for information about servicing.
 - Repair or attempted repair by anyone not authorized by Cooler Master, Inc.
 - Any shipment damages (damages must be made with the carrier).
 - Unauthorized repairs to a Cooler Master product will void the warranty offered by the Program.

Cooler Master reserves the right to refuse to service any product which has been altered, modified or repaired by non-Cooler Master Service personnel.

Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.

- Removal or installation charges.
- You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to you (applies only if product is directly purchased from Cooler Master).
- Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.
- Product malfunction or damage resulting from liquids or moisture.
- All accessories that malfunction due to physical damage such as USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

LIMITATION OF IMPLIED WARRANTIES:

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

For the most updated information please visit our official website: www.coolermaster.com
Cooler Master Support: <https://account.coolermaster.com>

EXCLUSION OF DAMAGES

COOLER MASTER'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT.

COOLER MASTER SHALL NOT BE LIABLE FOR:

- DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
- ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE
- ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY

WARRANTY INFORMATION:

If the product is found with reasonable defect within the period of (refer to Table A.), starting on the first day of purchase (with proof of invoice), this is what you must do, to claim warranty.

PROCEDURES:

1. Consumers should return to the shop where he/she has bought the goods. After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.
2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods).
3. All faulty goods must return to the distributor, expenses for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:

1. Within the valid warranty date, starting from the first day of issuing invoice, Retail shops will assist in confirmation with distributor for the consumer for the following:

A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.

B. Product defect caused under natural use, expenses will be covered by the distributor.

2. Faulty products with expired warranty dates, we would suggest consumer to purchase a new products, without undergoing for repairs.

Table A:

Cooler Master Products

Please check your user manual for the exact warranty period terms for products that are not shown below. For more warranty information, please visit our official website: <http://www.coolermaster.com/service/warranty.html>

Cooler Master Gaming Peripherals products warranty	
Product Name	Warranty Term
CK550 V2	2 years

FOR AUSTRALIA ONLY:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. (Cooler Master Technology Inc., 8F, No. 788-1, Zhongzheng Rd., Zhongzheng Dist., New Taipei City 23586, Taiwan (R.O.C.))
Telephone: +886-2-2222-3317 (standard international call charges apply.)



Make It Yours.

CK550 SERIES

Full RGB Mechanical Gaming Keyboard

QUICK START GUIDE

MAKE YOUR GAMING EXPERIENCE.

AR

FN + E = إعادة ضبط للوضع الافتراضي
FN + R = إعادة ضبط الحساب الافتراضي

CHS

FN + E = 全部重置为默认值
FN + R = 将配置文件重置为默认值

CHT

FN + E = 全部恢復為預設值
FN + R = 將設定檔恢復為預設值

DE

FN + E = alles auf Standardeinstellungen zurücksetzen
FN + R = Profile auf Standardeinstellungen zurücksetzen

ES

FN + E = Restablecer todo a los valores predeterminados
FN + R = Restablecer Perfil a los valores predeterminados

FR

FN + E = Remettre tous les réglages par défaut
FN + R = Réinitialiser le profil par défaut

INS

FN + E = Reset Semua ke Awal
FN + R = Reset Profil ke Awal

IT

FN + E = Ripristina tutto al default
FN + R = Ripristina profilo al default

JP

FN + E = すべて初期値に戻す
FN + R = プロファイルを初期値に戻す

PT

FN + E = Redefine tudo para o defeito
FN + R = Redefine o perfil para o defeito

RU

FN + E = сбросить все
FN + R = сброс настроек профиля к настройкам по умолчанию

TR

FN + E = Fabrika Ayarlarına Dön
FN + R = Profil Başlangıç Ayarlarına Dön

FN + F1 = اختيار سريع/ دور كائنة من 8 لوان وموثرات (9-4)
FN + F2 = درجات اللون الأحمر (0-9)
FN + F3 = درجات اللون الأخضر (0-9)
FN + F4 = درجات اللون الأزرق (0-9)

FN + F1 = 快速挑選/循環 8 种顏色和模式
FN + F2 = 紅色水平 (0-9)
FN + F3 = 綠色水平 (0-9)
FN + F4 = 藍色水平 (0-9)

FN + F5 = وضع دورة إضاءة كائنة
FN + F6 = موثرات إضاءة كائنة
FN + F7 = تمثيل إضاءة خلفية (4-0)
FN + F8 = سطوع وإعادة إضاءة سطوع (0-4)

FN + F5 = 循環 LED 照明模式
FN + F6 = 前方照明效果
FN + F7 = 前置照明效果
FN + F8 = 循環 LED 照明亮度 (0-4)

FN + F9 = قبل التعتير / قبل لوحة المفاتيح بالكامل
FN + F10 = تمثيل إضاءة خلفية
FN + F11 = تسجيل
FN + F12 = مسج Macro

FN + F9 = Windows 鎖定 / 全鍵盤鎖定
FN + F10 = 录制 LED 背光
FN + F11 = 錄製巨集
FN + F12 = 刪除巨集

FN + PRT SC = Macro 單次
FN + SCR LK = Macro 無限
FN + PAUSE = Macro 重複

FN + PRT SC = 單循環巨集
FN + SCR LK = 無限巨集循環
FN + PAUSE = 重複巨集

FN + 1 = ملف شخصي رقم 1
FN + 2 = ملف شخصي رقم 2
FN + 3 = ملف شخصي رقم 3
FN + 4 = ملف شخصي رقم 4

FN + 1 = 配置文件 1
FN + 2 = 配置文件 2
FN + 3 = 配置文件 3
FN + 4 = 配置文件 4

FN + INS = تشغيل / إيقاف
FN + HOME = الأغنية السابقة
FN + PGUP = الأغنية التالية
FN + DEL = الصوت
FN + END = خفض الصوت
FN + PGDN = رفع الصوت

FN + INS = 播放/暫停
FN + HOME = 上一首曲目
FN + PGUP = 下一首曲目
FN + DEL = 靜音
FN + END = 音量降低
FN + PGDN = 音量增加

FN = مقلع اتجاه اعلى / اقل : تدرج / اتجاه مؤثرات الإضاءة خلفية
FN = مقلع اتجاه يمين / يسار : تغيير اتجاه مؤثرات الإضاءة

FN + 方向上 / 下 : 增加/减小 灯光流动速度
FN + 方向 / 向左/向右头键 : 切换照明效果方向

FN + F1 = 快速選擇/循環切換 8 種顏色及模式
FN + F2 (Rot +) = Farbstufen rot (0-9)
FN + F3 = 綠色色階 (0-9)
FN + F4 = 藍色色階 (0-9)

FN + F5 = 循環切換 LED 照明模式
FN + F6 = 前方照明效果
FN + F7 = 後方照明效果
FN + F8 = 循環 LED 照明亮度 (0-4)

FN + F9 = Windows 鎖定 / 全鍵盤鎖定
FN + F10 = 錄製 LED 背光
FN + F11 = 錄製巨集
FN + F12 = 刪除巨集

FN + PRT SC = 單次循環巨集
FN + SCR LK = 無限巨集循環
FN + PAUSE = 重複巨集

FN + 1 = 設定檔 1
FN + 2 = 設定檔 2
FN + 3 = 設定檔 3
FN + 4 = 設定檔 4

FN + INS = 播放/暫停
FN + HOME = 上一首
FN + PGUP = 下一首
FN + DEL = 靜音
FN + END = 音量降低
FN + PGDN = 音量增加

FN + 方向上 / 下 : 增加/减小 燈光流動速度
FN + 方向 / 向左/向右頭鍵 : 切換照明效果方向

FN + F1 = zufällige Auswahl aus 8 Profilen
FN + F2 (Rot +) = Farbstufen rot (0-9)
FN + F3 (Green +) = Farbstufen grün (0-9)
FN + F4 (Blue +) = Farbstufen blau (0-9)

FN + F5 = LED Modus
FN + F6 = Beleuchtungseffekt vorne
FN + F7 = Beleuchtungseffekt hinten
FN + F8 = LED-Lichtelligkeit umschalten (0-4)

FN + F9 = Bloqueo de Windows / Bloqueo total del teclado
FN + F10 = Grabación Retroiluminación LED
FN + F11 = Grabar Macro
FN + F12 = Borrar Macro

FN + PRT SC = Única Macro Loop
FN + SCR LK = Infinito Macro Loop
FN + PAUSE = Repetir Macro

FN + 1 = zu Profil 1 wechseln
FN + 2 = zu Profil 2 wechseln
FN + 3 = zu Profil 3 wechseln
FN + 4 = zu Profil 4 wechseln

FN + INS = Abspielen/Pause
FN + HOME = Vorheriger Titel
FN + BILD OBEN = Nächster Titel
FN + DEL = Stumm
FN + END = Lautstärke-
FN + BILD UNTEN = Subir Volumen

FN + obere/untere Pfeiltaste:
acelerar / ralentizar los efectos de iluminación LED
FN + linke/rechte Pfeiltaste:
Cambiar la dirección del efecto de iluminación

FN + F1 = Selección rápida / ciclo 8 colores y modos
FN + F2 (Rouge+) = Niveles de couleur rouge (0-9)
FN + F3 (Green +) = Niveles de couleur verte (0-9)
FN + F4 (Blue +) = Niveles de couleur bleue (0-9)

FN + F5 = Modo Iluminación LED
FN + F6 = Efecto frontal de iluminación
FN + F7 = Efecto trasero de iluminación
FN + F8 = Ciclo de brillo de iluminación de LED (0-4)

FN + F9 = Bloqueo de Windows / Bloqueo total del teclado
FN + F10 = Grabación Retroiluminación LED
FN + F11 = Grabar Macro
FN + F12 = Borrar Macro

FN + PRT SC = Única Macro Loop
FN + SCR LK = Infinito Macro Loop
FN + PAUSE = Repetir Macro

FN + 1 = Cambiar al Perfil 1
FN + 2 = Cambiar al Perfil 2
FN + 3 = Cambiar al Perfil 3
FN + 4 = Cambiar al Perfil 4

FN + INS = Play/Pause
FN + HOME = Pista Previa
FN + Page Up = Siguiente Pista
FN + DEL = Silencio
FN + END = Bajar Volumen
FN + Page Down = Subir Volumen

FN + Tecla de dirección arriba / abajo:
acelerar / ralentizar los efectos de iluminación LED
FN + Tecla Flecha hacia la Izquierda / Derecha:
Cambiar la dirección del efecto de iluminación

FN + F1 = Sélection rapide / Cycle 8 couleurs et modes
FN + F2 (Rouge+) = Niveaux de couleur rouge (0-9)
FN + F3 (Vert+) = Niveaux de couleur verte (0-9)
FN + F4 (Bleu+) = Niveaux de couleur bleue (0-9)

FN + F5 = Mode d'éclairage LED
FN + F6 = Effet lumineux avant
FN + F7 = Effet lumineux arrière
FN + F8 = Faire défiler les niveaux de luminosités LED (0-4)

FN + F9 = Bloqueo de Windows / Verrouillage du clavier complet
FN + F10 = Enregistrement le rétro-éclairage LED
FN + F11 = Rekam Makro
FN + F12 = Effacer la Macro

FN + PRT SC = Boucle de Macro simple
FN + SCR LK = Boucle de Macro infinie
FN + PAUSE = Répétition de la Macro

FN + 1 = Basculer vers le Profil 1
FN + 2 = Basculer vers le Profil 2
FN + 3 = Basculer vers le Profil 3
FN + 4 = Basculer vers le Profil 4

FN + INS = Lecture/Pause
FN + HOME = Lagu Sebelumnya
FN + PGUP = Lagu Berikutnya
FN + DEL = Bisu
FN + END = Volume Turun
FN + PGDN = Volume Naik

FN + Flèches de direction haut / bas :
Accélérer / ralentir les effets d'éclairage LED
FN + Flèche gauche / Flèche droite :
Changement de direction de l'effet d'éclairage

FN + F1 = Pilihan Cepat / Perputaran 8 warna dan mode
FN + F2 = Tinklat Warna Merah (0-9)
FN + F3 = Tinklat Warna Hijau (0-9)
FN + F4 = Tinklat Warna Biru (0-9)

FN + F5 = Mode Perputaran Cahaya LED
FN + F6 = Efek Cahaya Latar Depan
FN + F7 = Efek Cahaya Latar Belakang
FN + F8 = Kecerahan Lampu LED Siklus (0-4)

FN + F9 = Kunci Windows / Kunci Keyboard penuh
FN + F10 = Rekam LED Latar Belakang
FN + F11 = Rekam Makro
FN + F12 = Hapus Makro

FN + PRT SC = Satu Perputaran Makro
FN + SCR LK = Perputaran Makro Tanpa Batas
FN + PAUSE = Pengulangan Makro

FN + 1 = Profil 1
FN + 2 = Profil 2
FN + 3 = Profil 3
FN + 4 = Profil 4

FN + INS = Mulai / Pause
FN + HOME = Lagu Sebelumnya
FN + PGUP = Lagu Berikutnya
FN + DEL = Bisu
FN + END = Volume Turun
FN + PGDN = Volume Naik

FN + Panah Atas / Bawah = Percepat / Perlamat Efek Cahaya LED
FN + Panah Kiri/Kanan = Mengganti Arah Cahaya LED

FN + F1 = Presa rapida/Ciclo a 8 Colores e modalità
FN + F2 (Rosso +) = Livelli colore Rosso (0-9)
FN + F3 (Verde +) = Livelli colore Verde (0-9)
FN + F4 (Blue +) = Livelli Colore Blue (0-9)

FN + F5 = Modalità Illuminazione a LED
FN + F6 = Effetto anteriore illuminazione
FN + F7 = Effetto posteriore illuminazione
FN + F8 = Cycle luminosità di illuminazione a LED (0-4)

FN + F9 = Blocco finestra / Blocco tastiera completo
FN + F10 = Registra retroilluminazione LED
FN + F11 = Registra Macro
FN + F12 = Cancella Macro

FN + PRT SC = Singolo Macro loop
FN + SCR LK = Macro Loop Infinita
FN + PAUSE = Ripeti Macro

FN + 1 = Passare al Profilo 1
FN + 2 = Passare al Profilo 2
FN + 3 = Passare al Profilo 3
FN + 4 = Passare al Profilo 4

FN + INS = Play/Pausa
FN + HOME = Traccia precedente
FN + Page Up = Proxima faixa
FN + DEL = Mute
FN + END = Volume Giù
FN + Page Down = Volume Su

FN + Tasti freccia verso il basso / verso l'alto:
accelerare / rallentare gli effetti di illuminazione a LED

FN + Tasti Freccia a Sinistra / Freccia a Destra:
Cambiare effetto d'illuminazione

FN + F1 = 8つの色とモードを簡単選択/循環
FN + F2 = 赤のレベル (0-9)
FN + F3 = 緑のレベル (0-9)
FN + F4 = 青のレベル (0-9)

FN + F5 = LED照明モードの循環
FN + F6 = フロントの照明効果
FN + F7 = リアの照明効果
FN + F8 = LED 照明の輝度 (0-4) を循環する

FN + F9 = Windows/フルキーボードロック
FN + F10 = LED/バックライトを記録
FN + F11 = マクロを記録
FN + F12 = マクロを削除

FN + PRT SC = マクロのシングルループ
FN + SCR LK = マクロの無限ループ

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Cooler Master, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/cooler-master-tastatura-ck-550-gktm1-akcija-cena/>