


Uputstvo za upotrebu (EN)

DELL bežični miš WM126

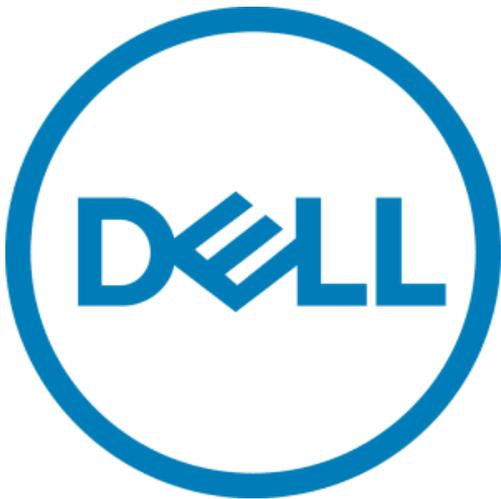

Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/dell-bezicni-mis-wm126-akcija-cena/>

Dell WM126
Wireless Mouse
User's Guide



Notes, Cautions, and Warnings

-  **NOTE:** A NOTE indicates important information that helps you make better use of your Dell Wireless mouse.
-  **CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.
-  **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.


Copyright © 2015 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws.

Dell™ and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

Contents

What's in the box	4
Features	5
Top View	5
Bottom View	6
Setting up your wireless mouse	7
Dell Universal Receiver feature for Windows	10
Dell Universal Receiver Control Panel	10
Installing Dell Universal Receiver Control Panel	10
Using Dell Universal Receiver Control Panel.	10
Troubleshooting	11
Specifications	15
General	15
Electrical	15
Physical Characteristics	15
Environmental.	15
2.4 GHz wireless.	15
Statutory information	16
Warranty	16
Limited Warranty and Return Policies	16
For U.S. customers:	16
For European, Middle Eastern and African customers:	16
For non-U.S. customers:	16

What's in the box

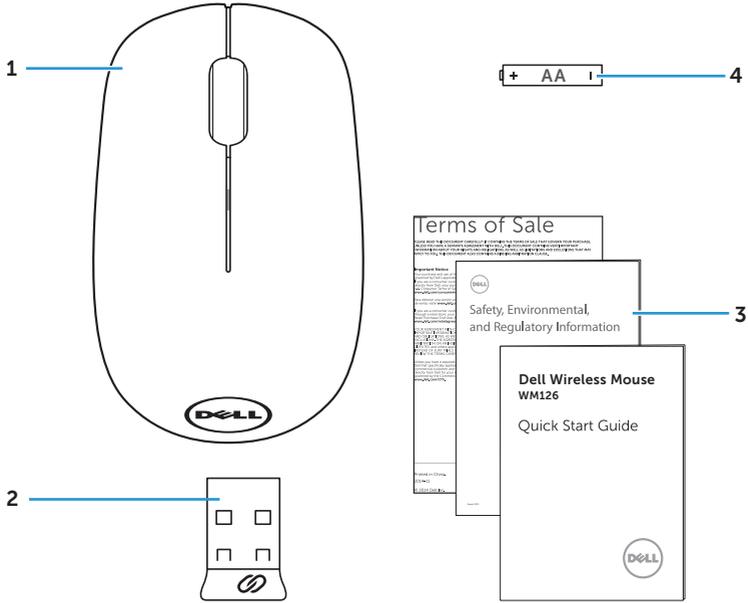

1 wireless mouse


3 manuals

2 USB receiver

4 AA-type battery

Features


Top View

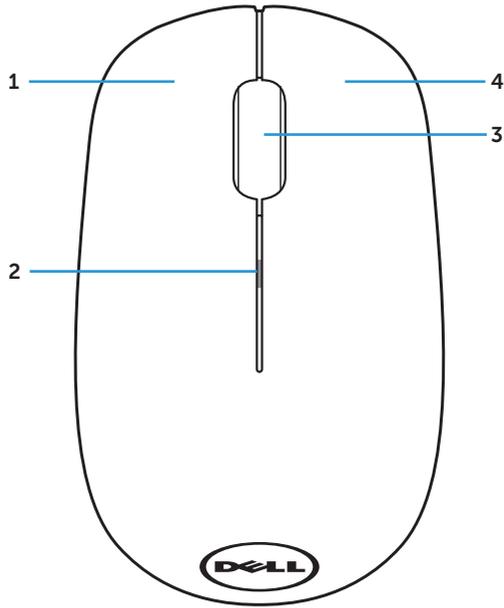

- | | | | |
|---|------------------------|---|----------------------|
| 1 | left button | 2 | battery status light |
| 3 | scroll / middle button | 4 | right button |

NOTE: When the mouse is powered on, the battery status light will be flashing amber 10 times if the battery power is low.

Bottom View

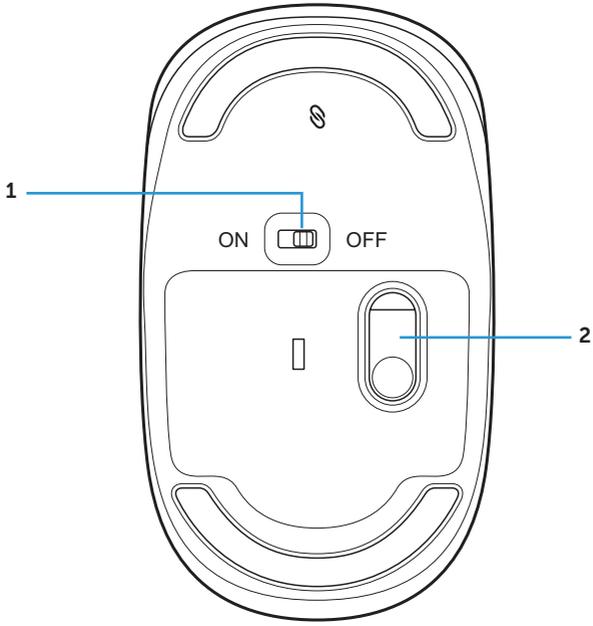


1 power button


2 optical sensor

Setting up your wireless mouse


1. Remove the mouse cover.

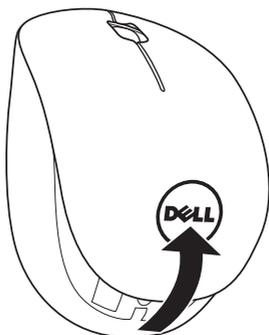


2. Install the AA battery into the battery compartment.

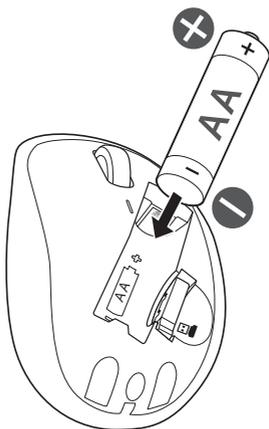

3. Remove the USB receiver.

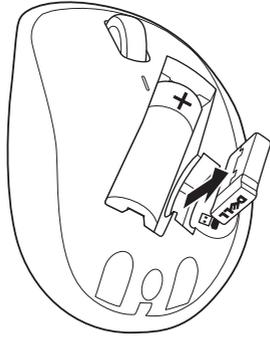


4. Replace the mouse cover.

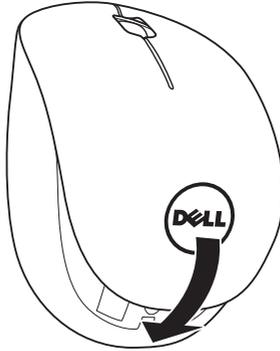

5. Insert the USB receiver into the USB port on your computer.



6. Turn on your mouse.

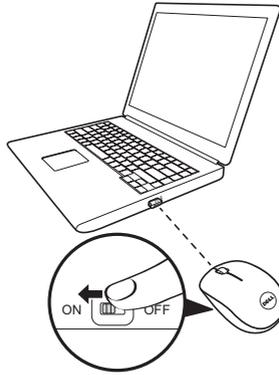

 **NOTE:** Make sure the distance between your computer and mouse is within 10 meters.

Dell Universal Receiver feature for Windows



The Dell Universal Receiver allows up to six Dell Universal compatible wireless devices to be added to the receiver.

Dell Universal Receiver Control Panel

You can add Dell Universal compatible wireless devices to the receiver using Dell Universal Receiver Control Panel.

Installing Dell Universal Receiver Control Panel

To install Dell Universal Control Panel:

1. Turn on the computer.
2. Open the web browser and navigate to **www.dell.com/support**.
3. Type in the Search bar "dell universal receiver". Then click **Search**.



4. Download and install the Dell Universal Receiver software in your system.

Using Dell Universal Receiver Control Panel

The receiver and mouse shipped with your system are paired at the factory. Use the Dell Universal Receiver Control Panel to view the connection status of your wireless mouse or pair the mouse with another receiver.

Follow the instructions on the screen to add a device or to remove pairing.

Troubleshooting

Problems	Possible causes	Possible solutions
Unable to use the mouse	The sensor on the bottom of the mouse does not light up (solid red) when the mouse is turned on	<ol style="list-style-type: none">1. Check if the battery is inserted in the correct orientation.<ul style="list-style-type: none">• Battery "+" and "-" ends should follow those indicated on the battery compartment label.2. Check the battery level.<ul style="list-style-type: none">• If the mouse uses a rechargeable battery, make sure the battery is fully charged.• If the battery is exhausted, replace it with a new one.3. Turn the mouse off then on.<ul style="list-style-type: none">• Check if the battery status light is flashing amber 10 times, indicating the battery power is low. If the battery is fully depleted, the battery status light will not turn on.4. Make sure the USB dongle is directly connected to your computer.<ul style="list-style-type: none">• Avoid using the port replicators, USB hubs, etc.5. Change the USB port.<ul style="list-style-type: none">• Insert the USB dongle into another USB port of your computer.

Problems	Possible causes	Possible solutions
Mouse pointer does not move	The mouse pointer freezes	<ol style="list-style-type: none"> 1. Check the battery level. <ul style="list-style-type: none"> • If the mouse uses a rechargeable battery, make sure the battery is fully charged. • If the battery is exhausted, replace it with a new one. 2. Turn the mouse off then on. <ul style="list-style-type: none"> • Check if the battery status light is flashing amber 10 times, indicating the battery power is low. If the battery is fully depleted, the battery status light will not turn on. 3. Restart your computer.
Left/right buttons don't work	No response when the left or right mouse button is pressed	<ol style="list-style-type: none"> 1. Check the battery level. <ul style="list-style-type: none"> • If the mouse uses a rechargeable battery, make sure the battery is fully charged. • If the battery is exhausted, replace it with a new one. 2. Turn the mouse off then on. <ul style="list-style-type: none"> • Check if the battery status light is flashing amber 10 times, indicating the battery power is low. If the battery is fully depleted, the battery status light will not turn on. 3. Restart your computer.

Problems	Possible causes	Possible solutions
Unable to pair the mouse with the computer	Wireless pairing error message is received while pairing the mouse with the computer	<ol style="list-style-type: none">1. Check the battery level.<ul style="list-style-type: none">• If the mouse uses a rechargeable battery, make sure the battery is fully charged.• If the battery is exhausted, replace it with a new one.2. Turn the mouse off then on.<ul style="list-style-type: none">• Check if the battery status light is flashing amber 10 times, indicating the battery power is low. If the battery is fully depleted, the battery status light will not turn on.3. Restart your computer.4. Make sure the USB dongle is connected directly to your computer.<ul style="list-style-type: none">• Avoid using the port replicators, USB hubs, etc.5. Change the USB port.<ul style="list-style-type: none">• Insert the USB dongle into another USB port of your computer.

Problems	Possible causes	Possible solutions
Wireless connection is lost	Previously paired mouse no longer works on the computer	<ol style="list-style-type: none">1. Check the battery level.<ul style="list-style-type: none">• If the mouse uses a rechargeable battery, make sure the battery is fully charged.• If the battery is exhausted, replace it with a new one.2. Turn the mouse off then on.<ul style="list-style-type: none">• Check if the battery status light is flashing amber 10 times, indicating the battery power is low. If the battery is fully depleted, the battery status light will not turn on.3. Restart your computer.

Specifications

General

Model number	WM126
Connection type	2.4 GHz wireless technology
System requirement	<ul style="list-style-type: none">• Windows 10/Windows 8.1/Windows 7/Windows XP/Windows Vista• Server 2003/Server 2008/Server 2012• Linux 6.x, Ubuntu, Neokylin, Free DOS, Chrome, Android

Electrical

Operating voltage	1.0 V - 1.5 V
Battery required	One AA alkaline

Physical Characteristics

Weight (without battery)	56.95 g
Dimensions	
Length:	94.8 mm
Width:	57.3 mm
Height:	35.6 mm

Environmental

Temperature	
Operating:	0°C to 40°C
Storage:	-40°C to 60°C
Storage Humidity	95% maximum relative humidity; non-condensing

2.4 GHz wireless

Radio transmission	Bi-directional communication (Transceiver)
Range	Up to 10 m

Statutory information

Warranty

Limited Warranty and Return Policies

Dell-branded products carry a 1-year limited hardware warranty.

For U.S. customers:

This purchase and your use of this product are subject to Dell's end user agreement, which you can find at **www.dell.com/terms**. This document contains a binding arbitration clause.

For European, Middle Eastern and African customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's end user contract terms.

Dell may also provide an additional hardware warranty – full details of the Dell end user contract and warranty terms can be found by going to **www.dell.com**, selecting your country from the list at the bottom of the "home" page and then clicking the "terms and conditions" link for the end user terms or the "support" link for the warranty terms.

For non-U.S. customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's warranty terms. Dell may also provide an additional hardware warranty – full details of Dell's warranty terms can be found by going to **www.dell.com**, selecting your country from the list at the bottom of the "home" page and then clicking the "terms and conditions" link or the "support" link for the warranty terms.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Dell, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/dell-bezicni-mis-wm126-akcija-cena/>