

## Uputstvo za upotrebu (EN)

LOGITECH bežični miš MX Master 2S grafitni

**logitech**



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/logitech-bezicni-mis-mx-master-2s-grafitni-akcija-cena/>

# Logitech® MX Master 2S User Guide



## Step One

Download Logitech Options to use all the possibilities this mouse has to offer. To download and learn more about the possibilities go to [logitech.com/options](https://logitech.com/options).



## Step Two

Turn your mouse on.



## Step Three

This mouse allows you to use it with up to three different computers. Just use the Easy-Switch™ button to change the channel. Select the channel you want and go to the next step.



## Step Four

To connect your mouse to your computer press the Easy-Switch™ button for 3 seconds. When it blinks fast it means it's in discoverable mode.



## Step Five

Choose if you want to pair with [Bluetooth](#) or with the provided [Unifying](#) receiver.

## Product Overview

### MX MASTER 2S AT A GLANCE

# Logitech® MX Master 2S User Guide



1 – Speed-adaptive scroll wheel

2 – Manual shift button

3 – Gesture button

4 – Micro USB port

5 – On/Off button

6 – Darkfield high precision sensor

7 – Easy-Switch & connect button

8 – Battery status LED

9 – Thumb wheel

10 – Back/forward buttons

## **Features:**

### **Speed adaptive scroll-wheel**

If SmartShift™ is enabled, the speed-adaptive scroll wheel shifts between two scrolling modes automatically, in response to your touch.


# Logitech® MX Master 2S User Guide

- Click-to-click (ratchet) mode — ideal for precise navigation of items and lists.
- Hyper-fast (freespun) mode — near-frictionless spinning, letting you fly through long documents and web pages.



## Enable SmartShift

Select **Enable** from the SmartShift pull-down menu on the Point and scroll tab.

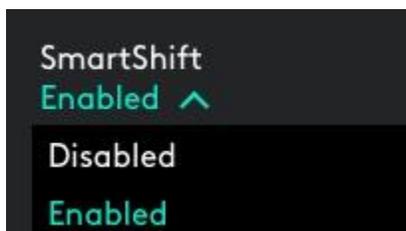

Turn off SmartShift by selecting Disable from the SmartShift pull-down menu.

When SmartShift is disabled, spinning or braking the scroll wheel has no effect on the current scrolling mode.

## Switch modes manually

Whether SmartShift is enabled or disabled, you can manually switch between modes by pressing the mode shift button.

# Logitech® MX Master 2S User Guide


By default, mode shift is assigned to the button on top of the mouse. (Check current button assignments on the Mouse tab.)



## Set a fixed scroll wheel mode

If you prefer to use just one mode, you can fix the scroll wheel to either click-to-click (ratchet) or hyper-fast (freespun) mode.

On the Point and scroll tab, select Ratchet or Freespun from the Fixed scroll wheel mode pull-down menu.

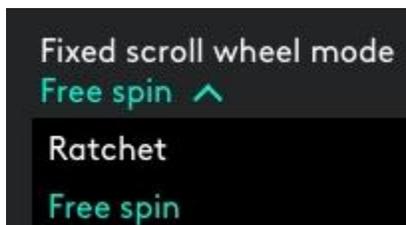

## IMPORTANT!

You can fix the scroll wheel mode only if SmartShift is disabled and mode shift is not assigned to any MX Master button.

To activate fixed scroll wheel mode:


# Logitech® MX Master 2S User Guide

- Select **Disable** from the SmartShift pull-down menu.
- On the Mouse tab, click the highlighted mode shift button and select an action other than mode shift.

[For more help, see the MX Master 2S FAQ page](#)

## Thumb wheel

Scroll side to side effortlessly with a stroke of your thumb.

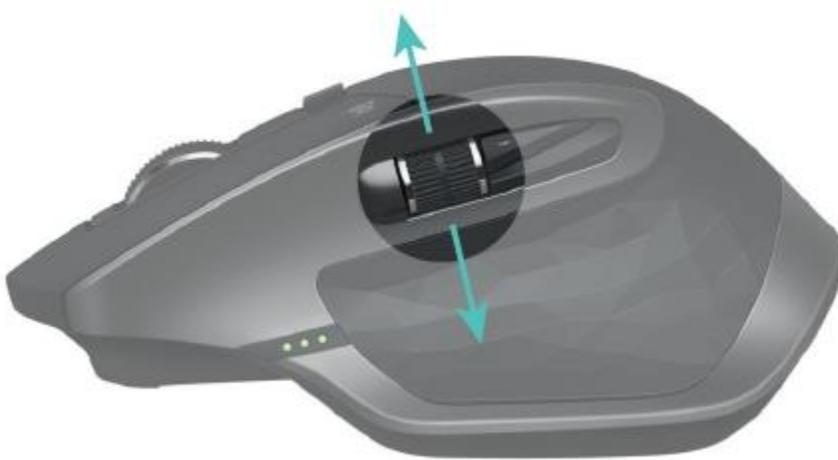

To scroll horizontally:

- Spin the thumb wheel up (to scroll right) or down (to scroll left)

Install Logitech Options software to extend thumb wheel capabilities:

- Invert scrolling direction
- Reproduce touch-based gestures
- Adjust scrolling speed and resolution
- Navigate tabbed content
- Switch apps
- Swipe between full-screen apps (Mac only)
- Switch between full-screen apps (Windows 8 only)
- Zoom in and out
- Adjust volume
- Control screen brightness
- Display notifications (Mac only)

# Logitech® MX Master 2S User Guide

## Gesture button

### GESTURES STREAMLINE NAVIGATION AND DESKTOP MANAGEMENT

Install Logitech Options software to enable gestures for managing media, panning, zoom, and rotation, plus custom tasks.

Assign up to five different actions to the Gesture button. Or map gestures to other MX Master buttons, including the middle button or manual shift button.



To perform a gesture:

- Hold down the Gesture button while moving the mouse left, right, up, or down.

The figure below shows the gestures for managing windows in Windows 8 and in Mac OS X.

# Logitech® MX Master 2S User Guide



## Back/Forward buttons

Conveniently located at your thumb, the back and forward buttons enhance navigation and simplify tasks.



To move back and forward:

- Press the back or forward button to navigate web or document pages, depending on the location of the mouse pointer.

# Logitech® MX Master 2S User Guide

**NOTE:** On the Mac, enabling of the back/forward buttons requires installation of Logitech Options software.

Install Logitech Options software to unlock new capabilities for the back/forward buttons

In addition to enabling the buttons for use with Macs, Logitech Options software lets you map other useful functions to the buttons, including OS navigation, zoom, dictionary lookup, and more.

## Battery



1 – Charging cable

## RECHARGE MX MASTER 2S

- Connect one end of the provided charging cable to the Micro-USB port on the mouse and the other end to a USB power source.

# Logitech® MX Master 2S User Guide

A minimum of 3 minutes charging gives you enough power for a full day of use. Depending on how you use the mouse, a full charge can last up to 70 days\*.

\* Based on eight hours of daily use. Battery life may vary depending on user and operating conditions.

## CHECK BATTERY STATUS

Three LED lights on the side of the mouse indicate battery status.



Install Logitech Options software to receive battery status notifications, including low-charge warnings.

LEDs Lit	Color	Indications
3	Green	100% Charge
2	Green	66% Charge
1	Green	33% Charge
1	Red	10% Charge Recharge now!

---

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Logitech, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/logitech-bezicni-mis-mx-master-2s-grafitni-akcija-cena/>