

## Uputstvo za upotrebu

FOX televizor 32AOS411C



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/fox-televizor-32aos411c-akcija-cena/>



**HDMI**  
HIGH DEFINITION MULTIMEDIA INTERFACE

## UPUTSTVO ZA UPOTREBU

### LED TELEVIZORI Model: 10AOS41/ C

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.



Android™OSP





# Table Of Contents

<b>Safety Information</b> .....	2
<b>Important Safety Precautions</b> .....	3
<b>TV Bracket assemble</b> .....	4
<b>TV Buttons And Terminal Interface</b> .....	5
<b>External Device Connection Diagram</b> .....	6
<b>Install And Connect TV</b> .....	7
<b>TV Stand Installation Instructions</b> .....	7
<b>TV MENU</b> .....	8
<b>Setup Wizard</b> .....	8
<b>Home page</b> .....	11
<b>Media</b> .....	16
<b>Input</b> .....	19
<b>TV Setting</b> .....	20
<b>Help</b> .....	45
<b>Specifications</b> .....	46
<b>Remote Controller</b> .....	47



# Safety Information

## CAUTION

 
**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

High voltages are used in the operation of this product. to reduce the risk of electric shock, do not remove cover of the cabinet, refer servicing to qualified service personal

If the TV any changes or coarse adjustment, electric shocks to be hurt, do not attempt to open a machine-maintenance, customer contact centres needed overhaul.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating in the literature accompanying the appliance.

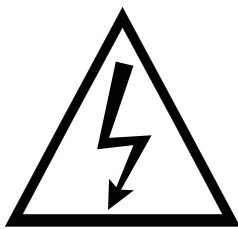

**Warning**  
The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.


# Important Safety Precautions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety, If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments /accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.

Caution:

- 14) To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 15) The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 16) The socket-out shall be installed near the equipment and shall be easily accessible.
- 17) This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacture's instructions have been adhered to.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
- 19) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 20) Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 21)  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
- 22) The USB terminal should be loaded with 0.5 A under normal operation.

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions.

 
unless you are qualified to do so.

- 23) The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- 24)  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth
- 25) The maximum using environment temperature is 45 degrees.  
The Maximum using altitude is 2000 meters


# TV Bracket assemble

## Fix the TV on the wall


1. First, put the TV on the table smoothly and put some soft cloth on the table to avoid scratching the screen.
2. Use the screw driver to take off the screws which are fixed on the bottom stand (the direction of the arrow, refer to the photo 1). And take off the bottom stand (please take off the screws and bottom stand carefully).
3. Make one bracket which can fix on the wall according to the size of arrow direction of photo 2 and photo 3.
4. Drill four holes properly on the wall (the size only for reference) and put into four screws. (optional parts) Drill four holes properly on the wall (the size only for reference) and put into four screws. (optional parts)
5. according to the step 4, use the screwdriver to lock the screw on the back of the TV. then hang the TV on the wall.

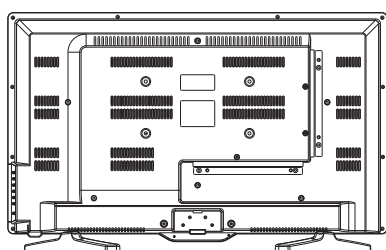


1

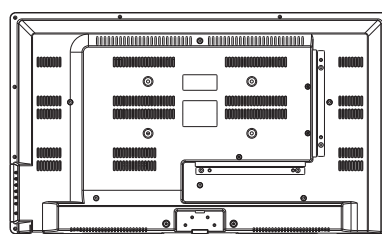 

2

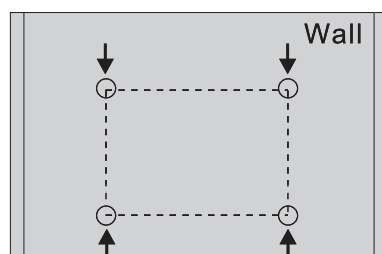 

3

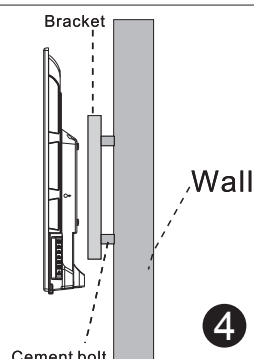 

4

## Note:

1. The bracket fixed on the wall is optional part.
2. when you assemble the TV, there should be no other articles on the around and front and please keep the distance from other articles.
3. When assemble the TV, please ask the career man to fix in order to avoid the danger.
4. The fixing picture is only for reference.
5. Please follow the use manual about bracket assemble to fix the TV.
6. Attach the mounting bracket from the VESA compatible wall mounting kit.

## NOTE:

IF YOUR PROGRAM ON TV WILL BE INCLUDED BY CABLE TELEVISIONS,  
PLEASE CHECK YOUR EARNING AND POTENTIAL EVALUATION ON THE CABLE OF YOUR  
CABLE OPERATOR.  
FOR THESE INFORMATION CONTACT YOUR CABLE OPERATOR.

# TV Buttons And Terminal Interface

## TV Buttons

**Note:** The key instructions are subject to below.










**Display \ Hide key icon:** When there is no button icon popping up, press the key, the key icon will pop up like the picture shows above, the key icon will automatically turn off after 5 seconds of inactivity.

**Icon selection:** Short press the button, move the loop to the right, select the icon.

 






**Icon function selection:** Long press the key to achieve the function of the selected icon.

### Icon Descriptio:n







-  : **Power off Icon:** Corresponding to the "POWER" button of remote .
-  : **Menu Icon:** Corresponding to the "MENU" button of remote.
-  : **Source Icon:** Corresponding to the "SOURCE" button of remote.
-  : **CH+ Icon:** Corresponding to the "CH+" button of remote.
-  : **CH- Icon:** Corresponding to the "CH-" button of remote.
-  : **Volume+ Icon:** Corresponding to the "VOL+" button of remote.
-  : **Volume- Icon:** Corresponding to the "VOL-" button of remote.

## Terminal Interface

      
**Note:** The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

	<b>AV input</b> External AV Signal Input and Right/Left Audio Inputs.		<b>CI SLOT</b> The card reader input CI(common interface) this requires CAM (conditional access module) used for pay TV.
	<b>HDMI Input(HDMI1,2,3)</b> Connect to a HDMI output connection on your external device.		<b>USB Input</b> Connect to your USB device.
	<b>ANT 75/RF Connection</b> Connect to the antenna/cable TV output of your device or wall plate.		<b>OPTICAL</b> Digital Audio Output.
	<b>RJ45</b> Connect to the Internet.		

# External device connection diagram

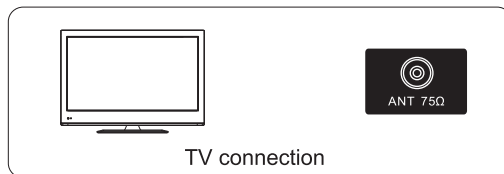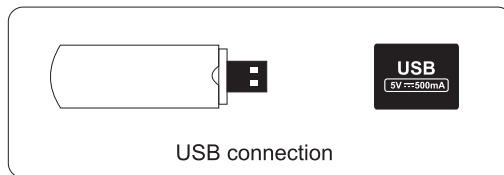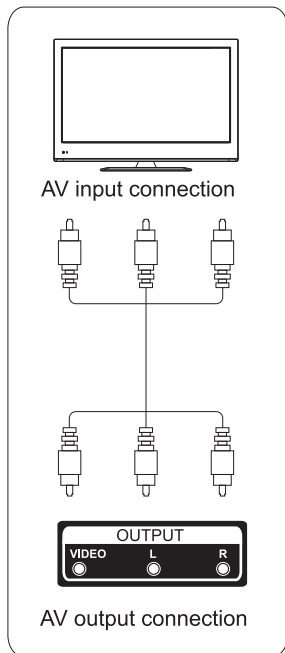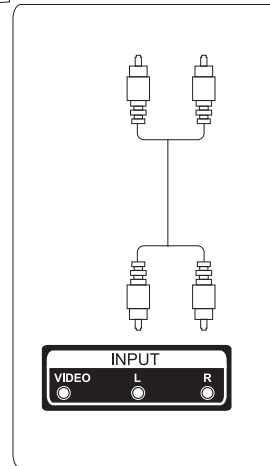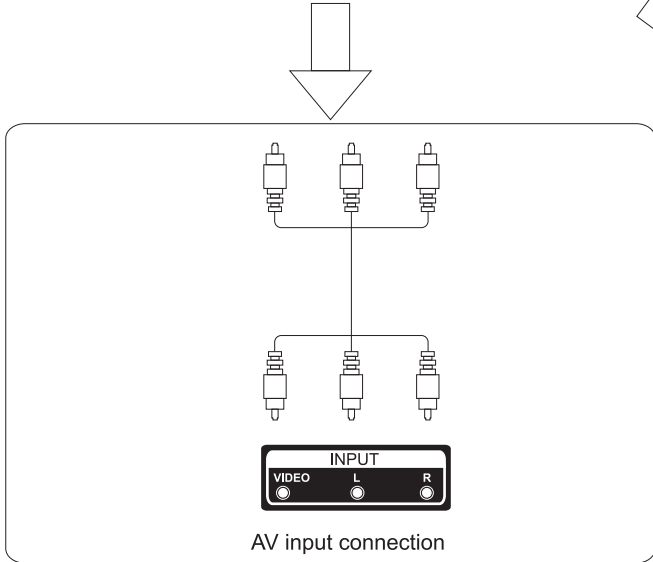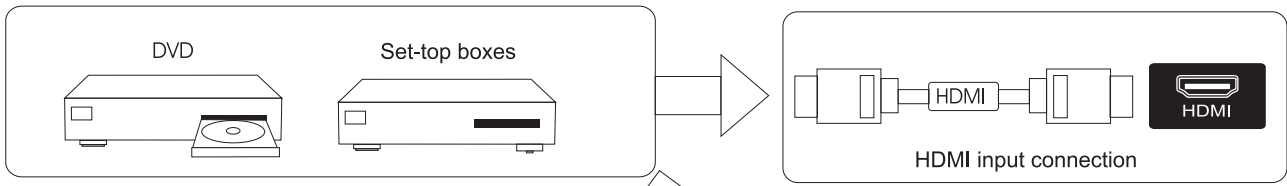

# Install And Connect TV

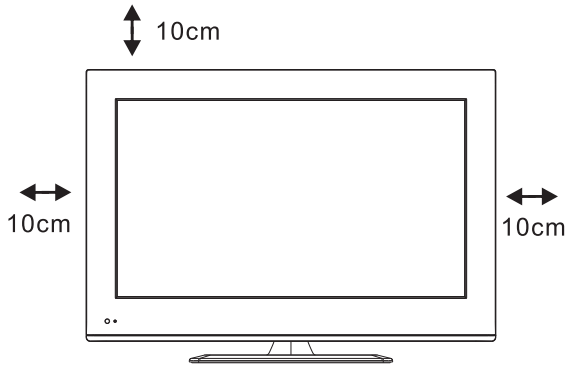 


## Set your TV

To put your TV in a firm place which can bear the weight of the TV.

To avoid danger, please don't expose the TV near water or heating place (such as light, candle, heating machine), do not block the ventilation at the back of TV.

## Connect antenna and power

 1. Connect the antenna cable to the antenna socket on the back of the TV.
2. To plug the power cord of TV.

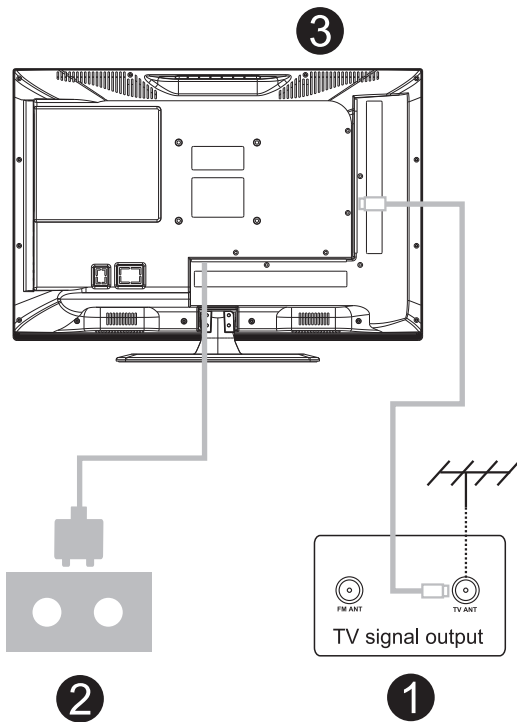

## Turn on TV

3. Press the power button of the TV the indication light will turn to green. if it is on standby mode (the light is red), press the power button on the remote control to turn on the TV.

## Note:

Picture for reference purposes only.

 
# TV Stand Installation Instructions

1. Open the carton and remove the TV and scattered accessories and base (some models without base).
2. To avoid the injury of the TV, covered with a soft mattress, put it on the table, face down on a soft mattress, the base of the neck is fixed on the TV with screws.
3. screw the base and connected to the TV.
4. the installation is complete.

## Note:


Picture for reference purposes only.

Please prevail in kind

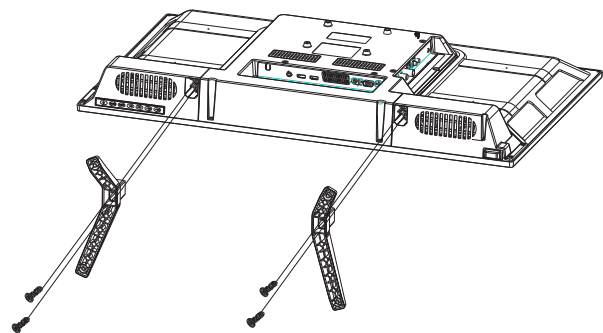


# Setup Wizard

 
The system setting will appear when you open the TV on the first time. Please set according to the on-screen guide. Press **OK** button to start the setup.

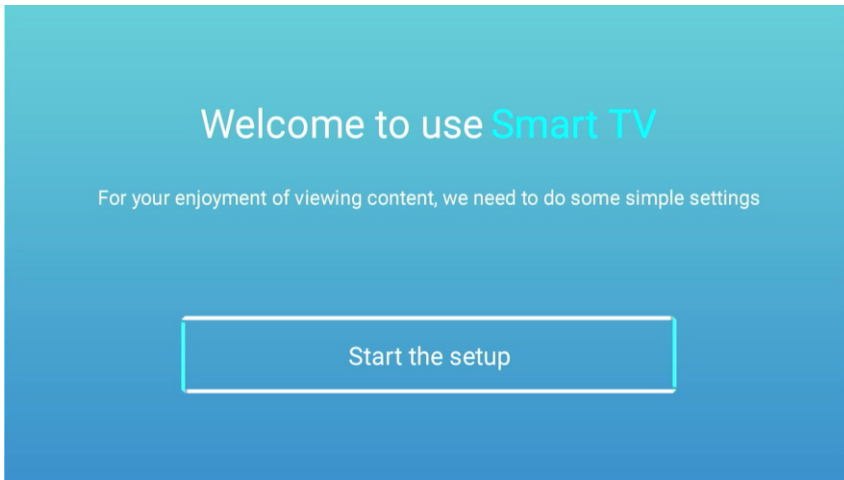

 
Press ▼ / ▲ button to select the language.

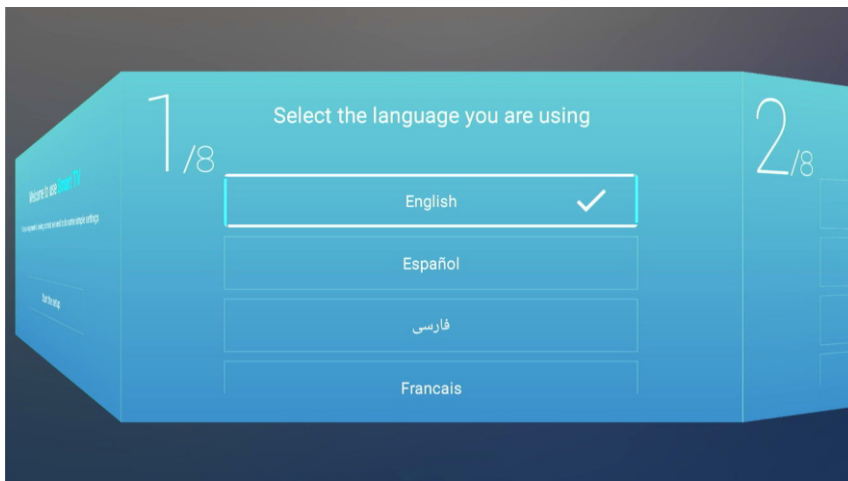

 
Press ◀ / ▶ button to choose the country.

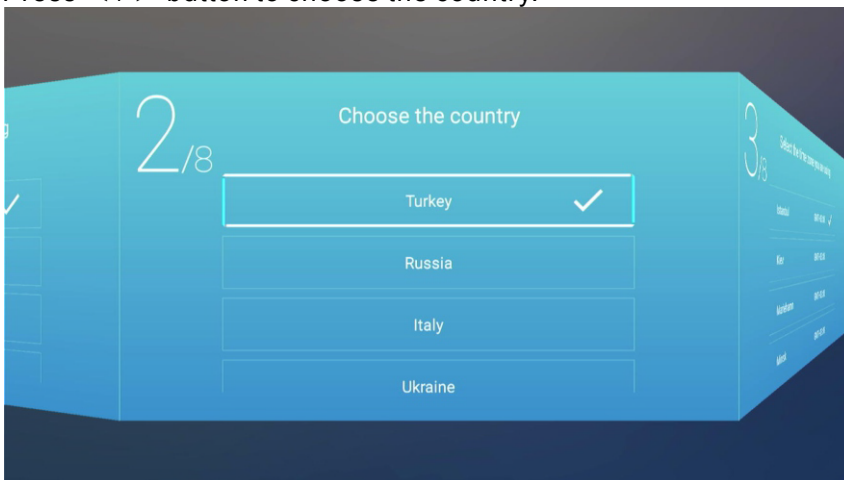


Press ◀ / ▶ button to select Time zone.

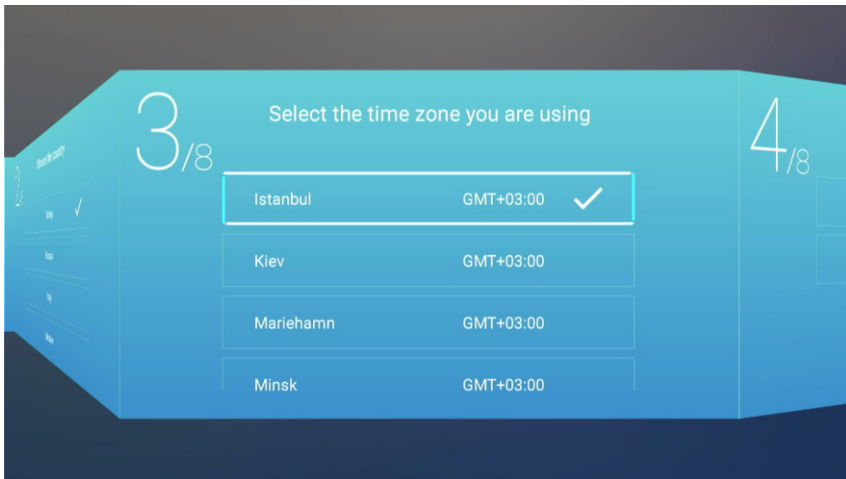 

 Press ◀ / ▶ button to select Home/Store mode.

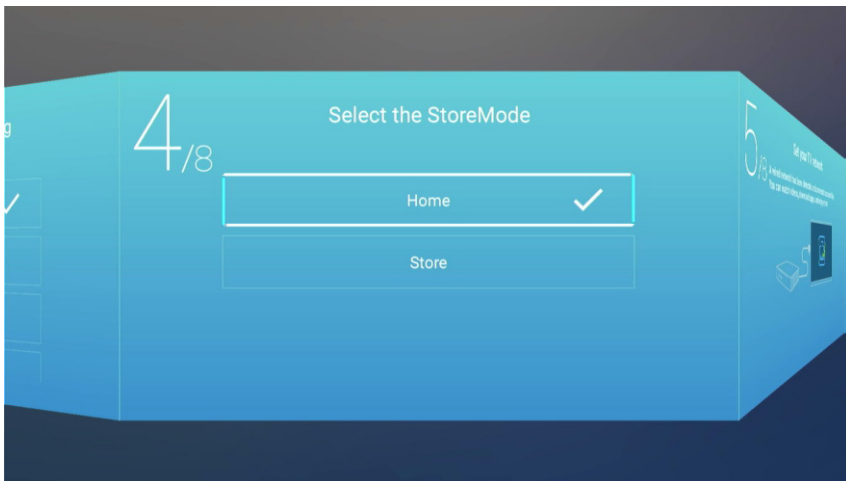


 Press ◀ / ▶ button to select Set your TV network.

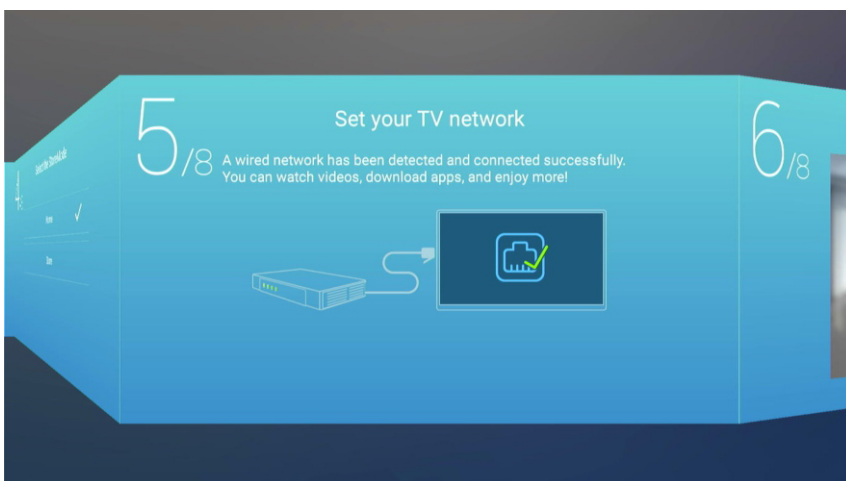




 Press ◀ / ▶ button to select Connect the TV assistant.

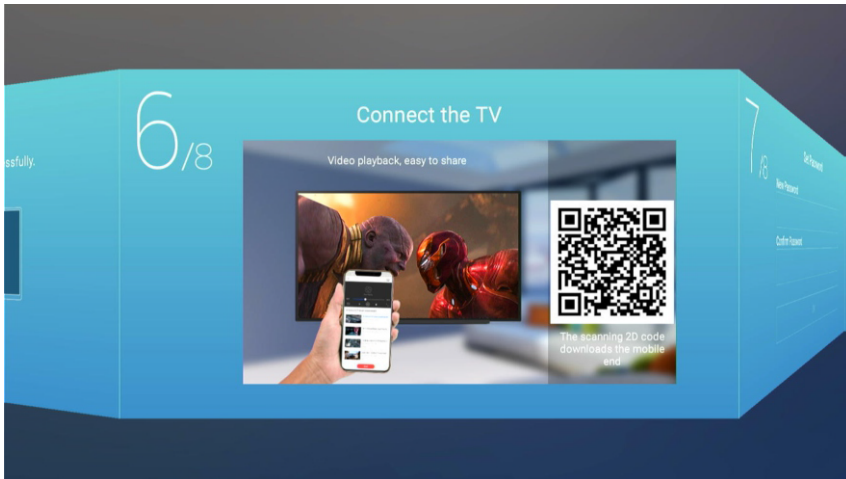


 Press ◀ / ▶ button to select Set Password(Default password is 1234).

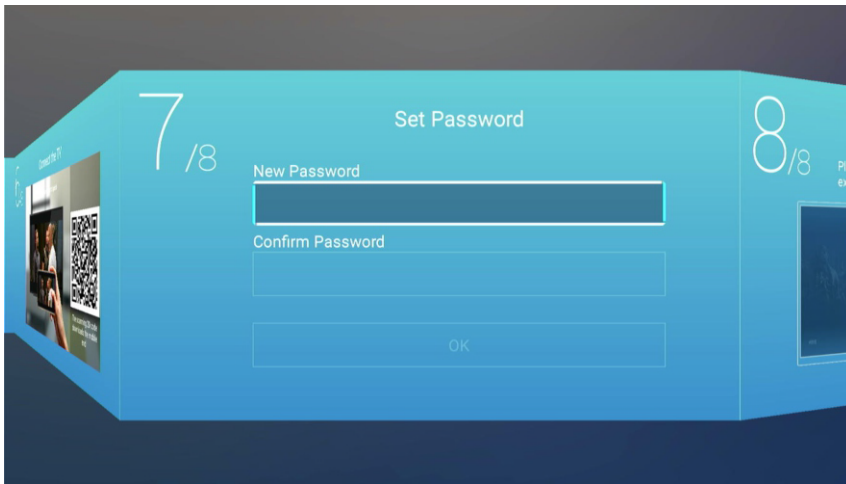

Press ◀ / ▶ button to select TV viewing guide.

 Press ▼ / ▲ button to choose the way you watch TV programs or source: Home page/DTV/ATV/AV1/AV2/HDMI1/HDMI2/HDMI3.

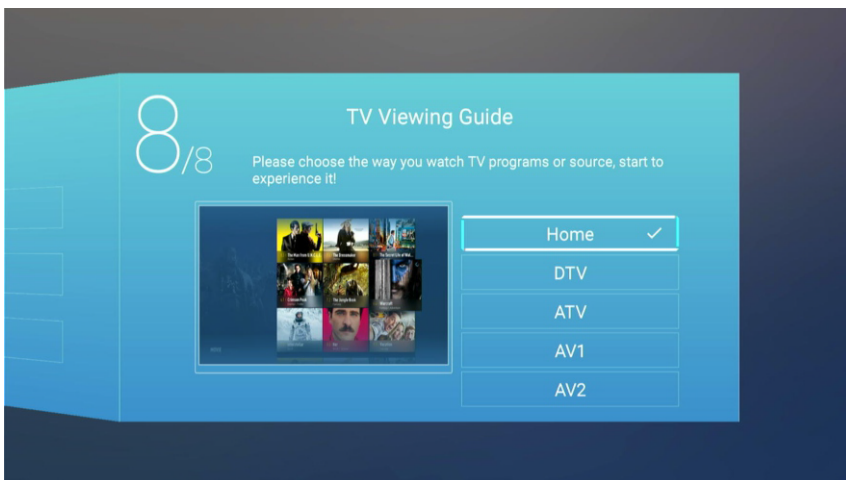

# Home page

 
 
Press ▼ / ▲ button to select **Home page** in **Setup Wizard** or press ◀ / ▶ button to select **Home** in the menu of TV input .



## SETTINGS


Press ▼ / ▲ / ◀ / ▶ button to select **Setting**, and press **OK** button to enter the System Setting.

Press ◀ / ▶ button to select Network/Time/Commen/System Info.

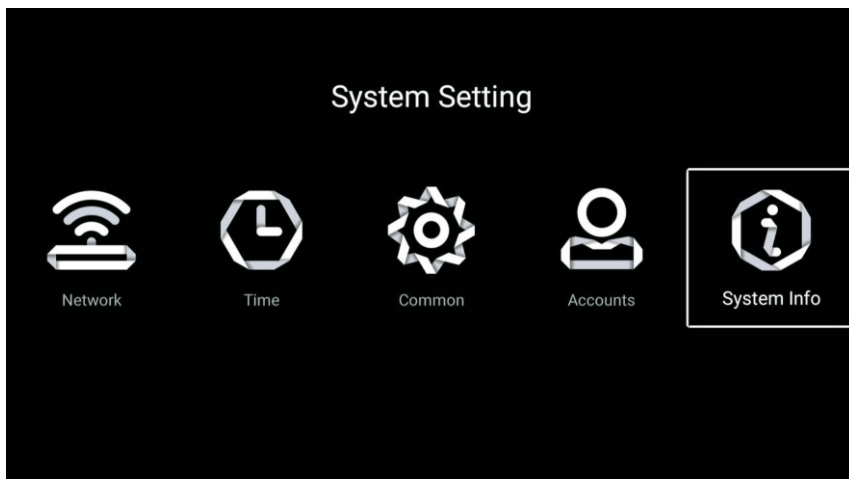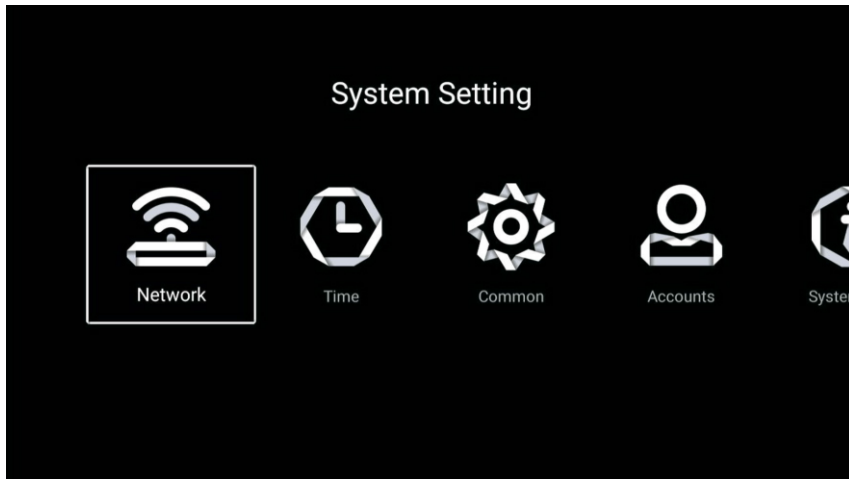



### Network

 Press ◀ / ▶ button to select Network.

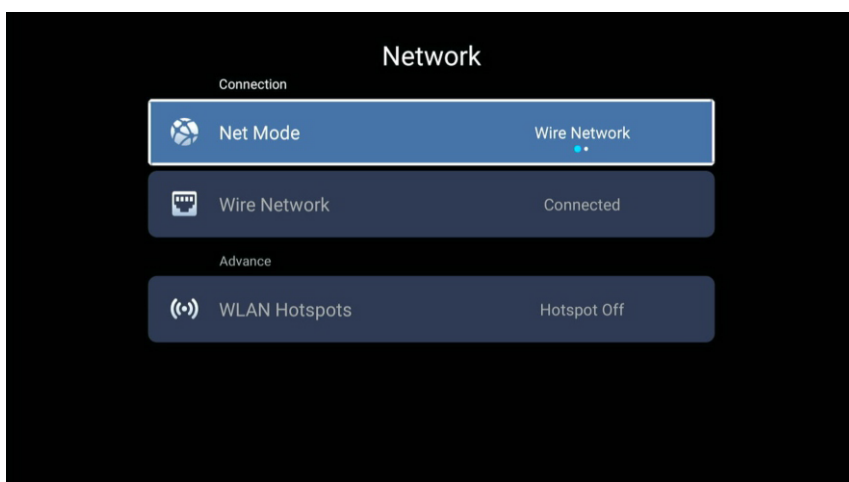

## Time

  Press ◀ / ▶ button to select Time.

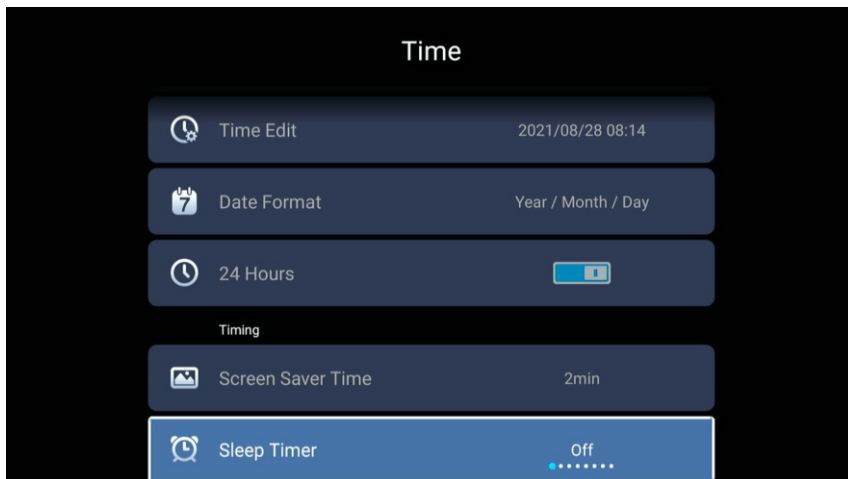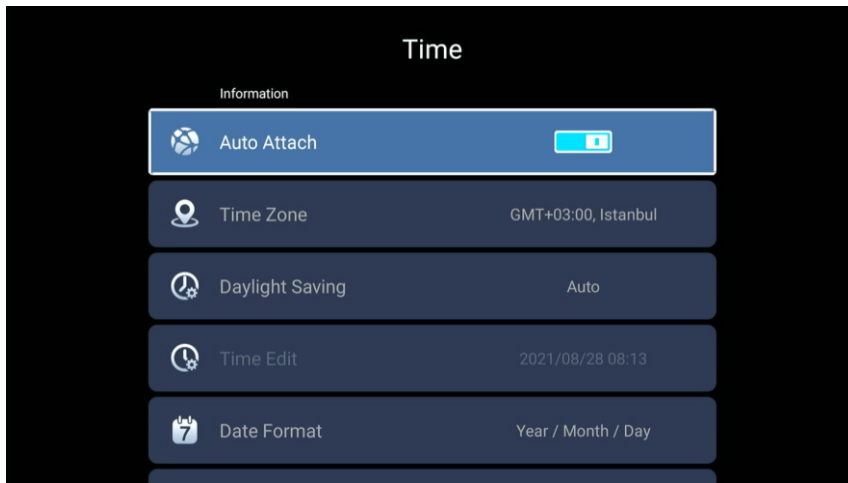


Press ▼ / ▲ button to select Auto Attach/Time Zone/Daylight Saving/Time Edit/Date Format/24 Hours/Screen saver time/Sleep Timer.

- |                   |   |
|-------------------|---|
| Auto Attach       | Get the current time and date automatically.                            |
| Time Zone         | Set the current time zone.  |
| Daylight Saving   | Set the daylight saving Auto/On/Off.                                    |
| Time Edit         | Set the current time.   |
| Date Format       | Set the current date format.  |
| 24 Hours          | Select the 12 hours or 24 hours.  |
| Screen saver time | Set the screen saver time as Off/1min/2min/5min.                        |
| Sleep Timer       | Set the sleep timer as Off/15min/30min/45min/60min/90min/120min/240min. |

## Common

 Press ◀ / ▶ button to to select Common.

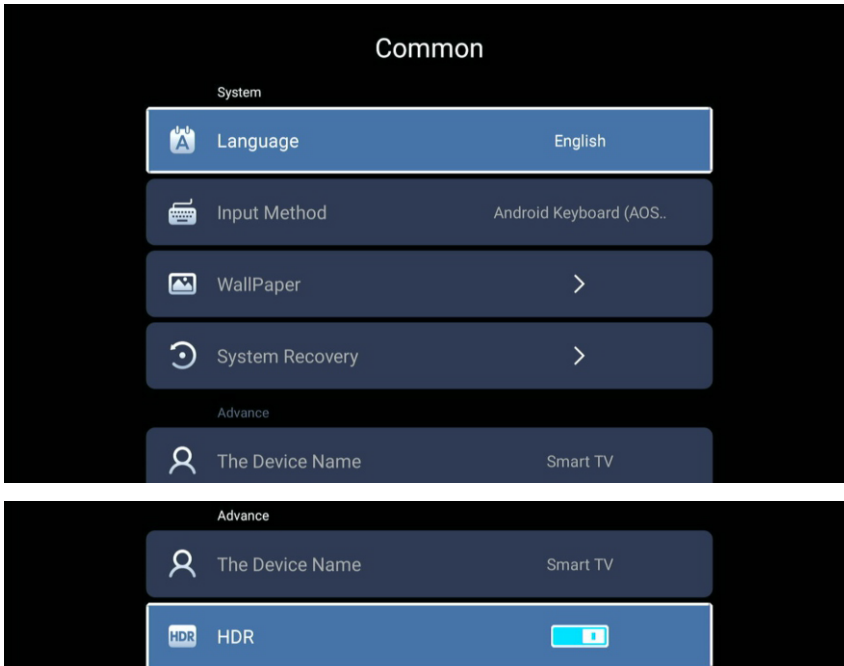


Press ▼ / ▲ button to select Language/Input Method/WallPaper/System Recovery/  
The device name/HDR.

Language	Set the current display language. The default language is English.
Input Method	Set the remote controller input method.
WallPaper	Set the Wallpaper.
System Recovery	Recovery system to original state.
The device name	Set the device name.
HDR	Select the HDR On/Off.



## Accounts

 Press ◀ / ▶ button to to select and add an account.

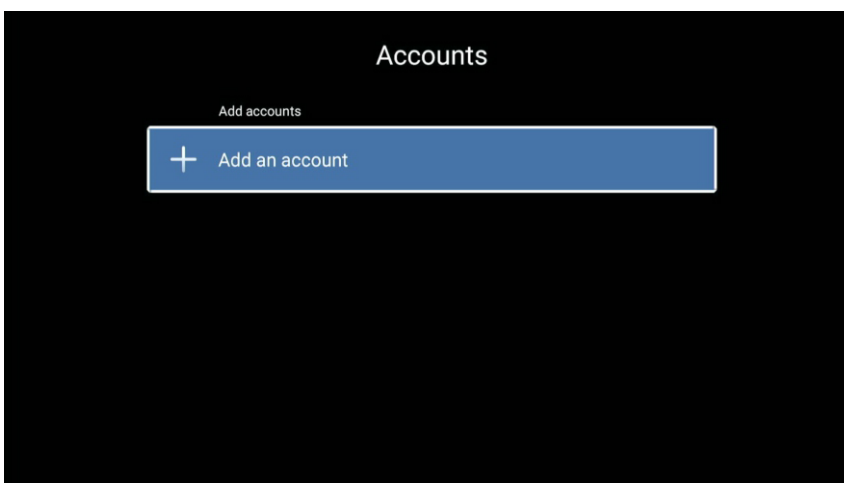

## System Info

  
Press ◀ / ▶ button to select **System Info**.

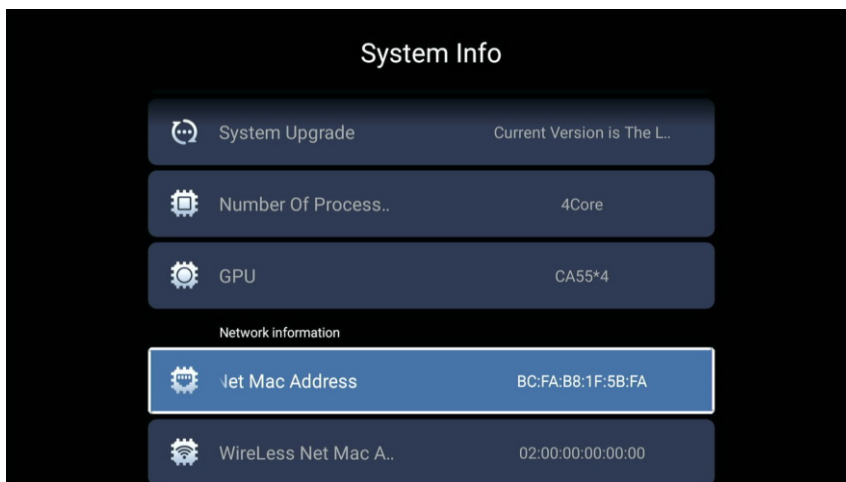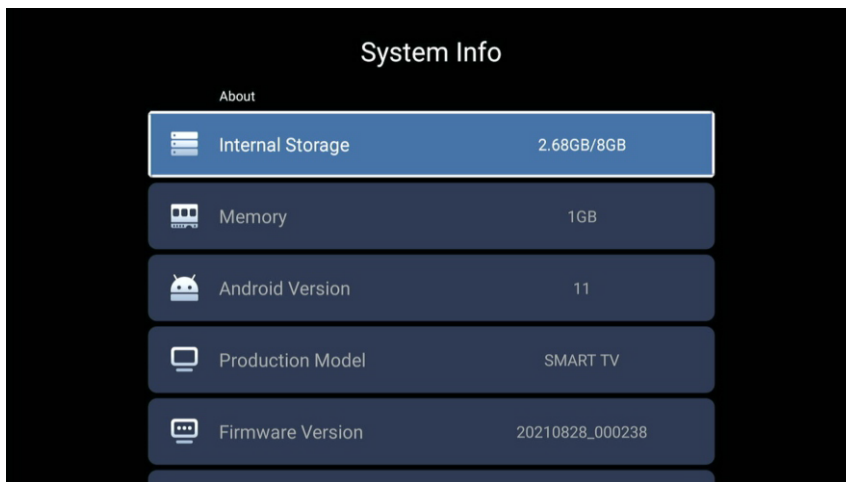

# Media

Press ▼ / ▲ / ◀ / ▶ button to select **Media** on the Home page or press **MEDIA** button on the remote, and press **OK** button to enter the Media Center.

 
Press ◀ / ▶ button to select All/Video/Audio/Image.

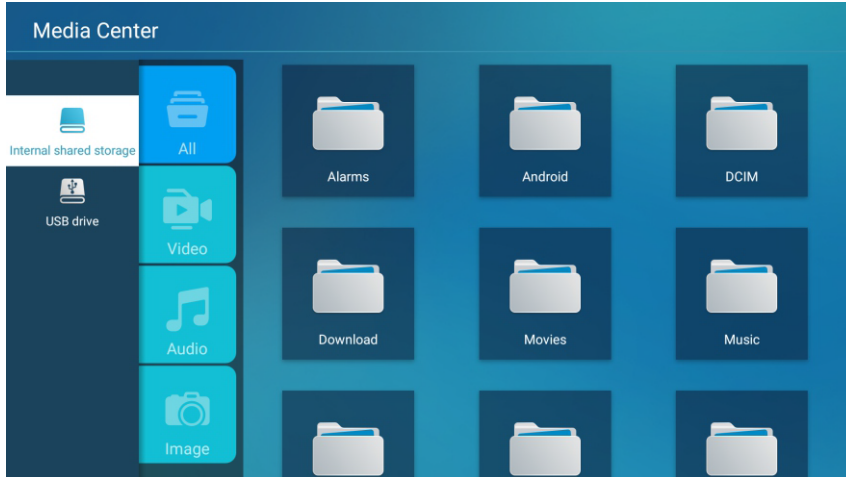

## Video

Press ▼ / ▲ button to select Video or All, and press ▼ / ▲ / ◀ / ▶ button to select Movies.

 Press Menu button to display the setting options on the left side.

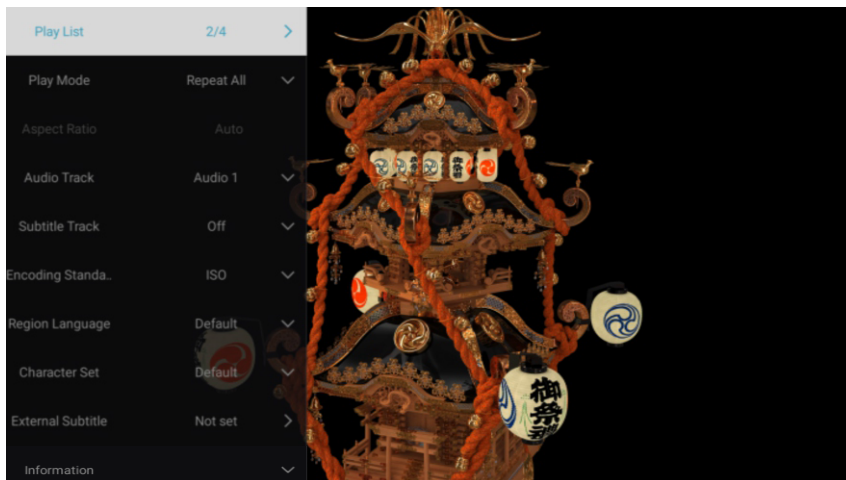

## Play List

Press ▼ / ▲ button to select Play List and press OK button to display all available videos.

## Play Mode

Press ▼ / ▲ button to select Play Mode and press OK button to select.

(Options: Repeat All/Auto exit/Repeat One/Random/Play List)

#### Aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio.

#### Audio Track

Press ▼ / ▲ button to select Audio Track and press OK button to select.

#### Subtitle Track

Press ▼ / ▲ button to select Subtitle Track and press OK button to select close.

#### Encoding Standard

Press ▼ / ▲ button to select Encoding Standard and press OK button to select **ISO/WINDOWS**.

#### Region Language

Press ▼ / ▲ button to select Region Language and press OK button to select .

#### Character Set

Press ▼ / ▲ button to select Character Set and press OK button to select.

 
#### External Subtitles

Press ▼ / ▲ button to select External Subtitles and press OK button to select.



## Audio

Press ▼ / ▲ button to select Audio or All, and press ▼ / ▲ / ◀ / ▶ button to select Music.

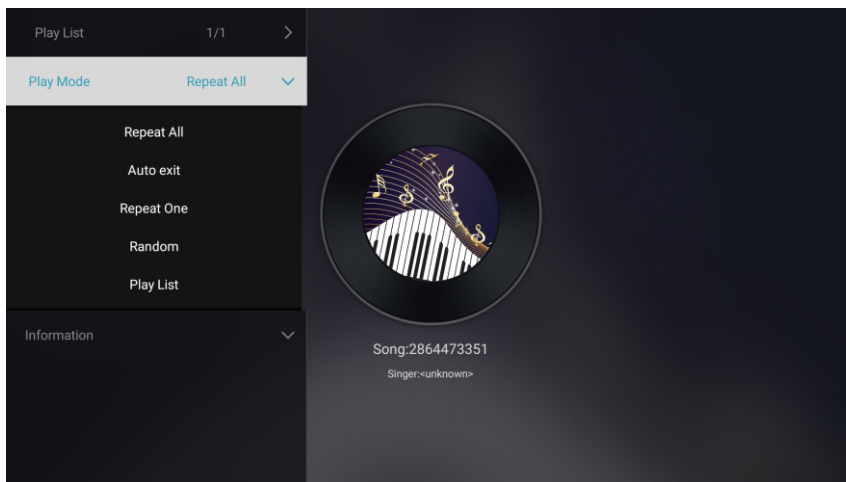

## Play List

Press ▼ / ▲ button to select Play List and press OK button to display all available audios.

 
## Play Mode

Press ▼ / ▲ button to select Play Mode and press OK button to select.

(Options: Repeat All/Auto exit/Repeat One/Random/Play List)

## Image

Press ▼ / ▲ button to select Image or All, and press ▼ / ▲ / ◀ / ▶ button to select Pictures.

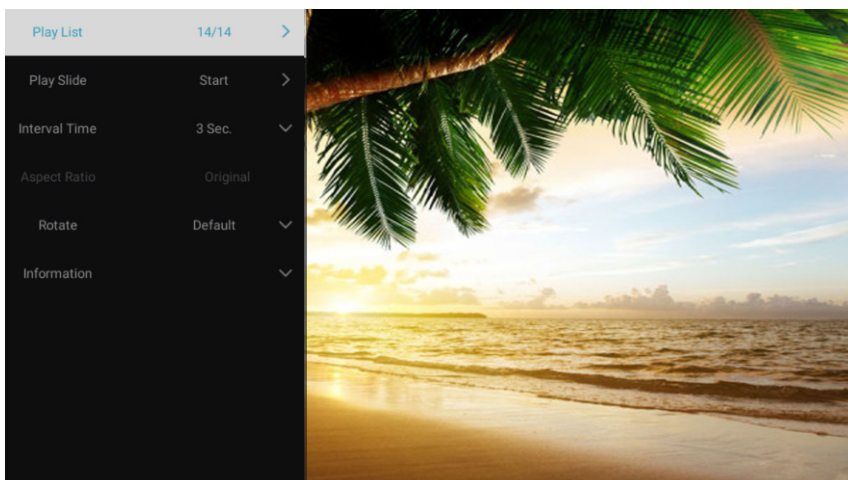

Play List

Playable picture list display.

Play Slide

You can choose to start the slide show.

Interval Time

Select slide show interval. (Optional: 3/5/8/12Sec.)

Aspect ratio

Set the aspect ratio. (Optional: Auto/Full screen/Zoom Out/Original/Zoom1/Zoom2)

Rotate

Set the rotate. (Optional: Default/Rotate Right/Rotate left)

# Input

 
Press ▼ / ▲ / ◀ / ▶ button to select **More** under the “**WISDOM SHARE**” on the Home page.

Press ◀ / ▶ button to select DTV/ATV/AV1/AV2/YPBPR/HDMI1/HDMI2/HDMI3.

Or press **Menu** button, and press ◀ / ▶ button to select Source.

Press ▼ / ▲ button to select the input source you want.

Press **OK** button to enter. Press **EXIT** button to quit.


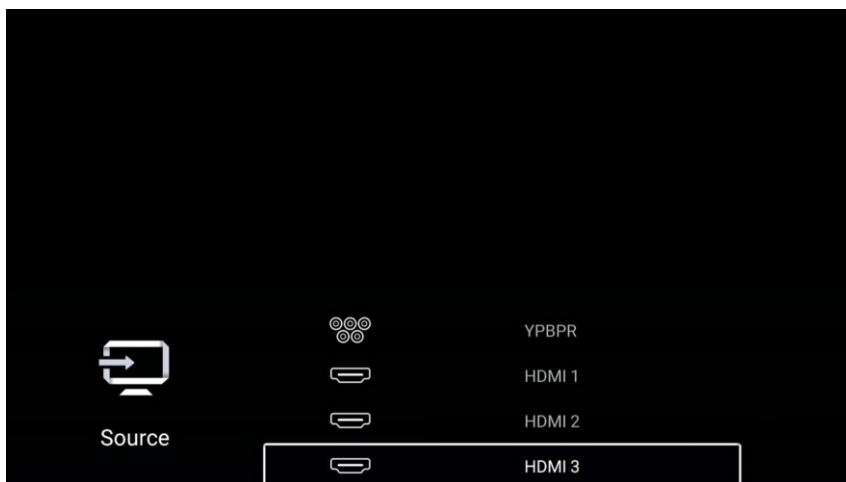


# TV Setting

Press **MENU** button to enter the TV Setting.

Press ◀ / ▶ button to highlight the desired menu icon , and press **OK** button to select.

  ( Optional:Home/Source/Picture/Sound/Channel/Lock/Common/Advance)

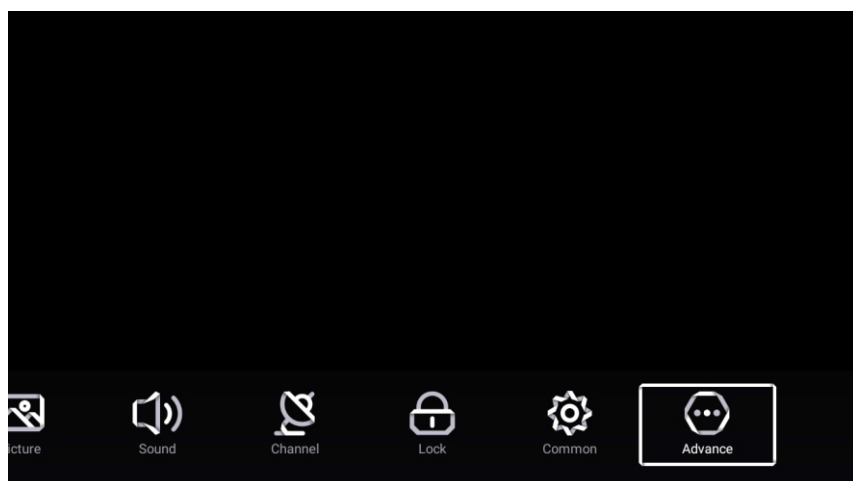
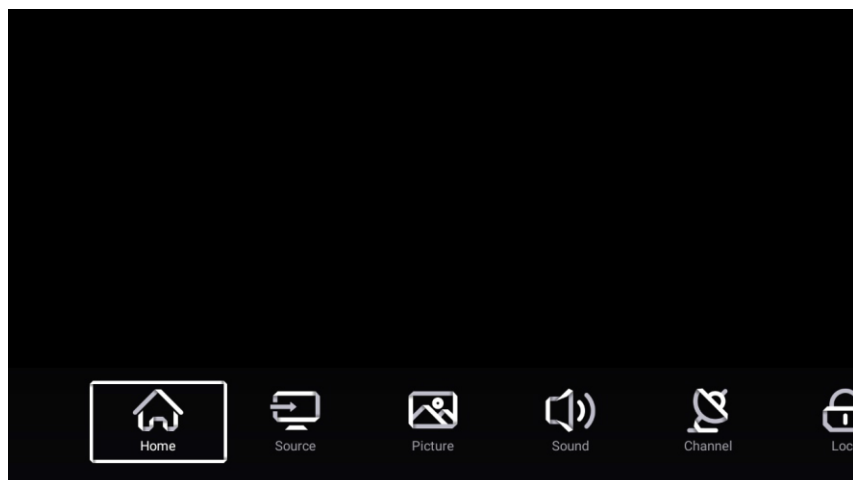


# Picture

Press **MENU** button to enter the main menu.

Press ◀ / ▶ button to select the Picture.

  Press **OK** button to enter the sub-menu.

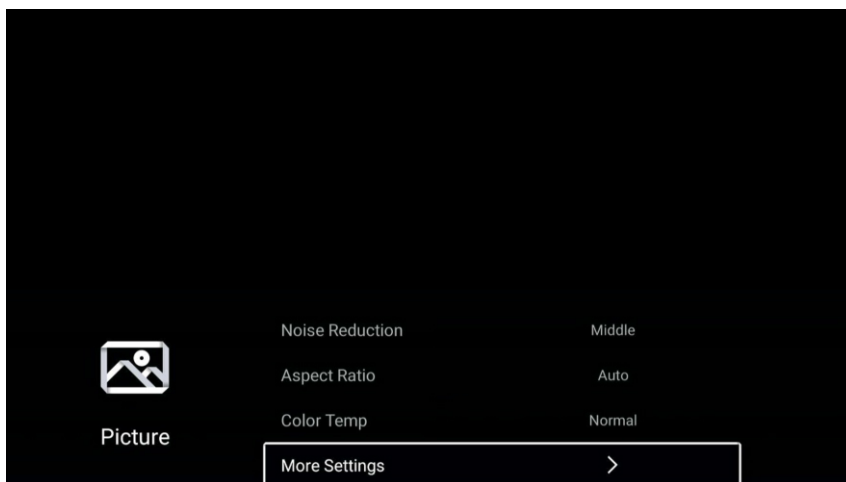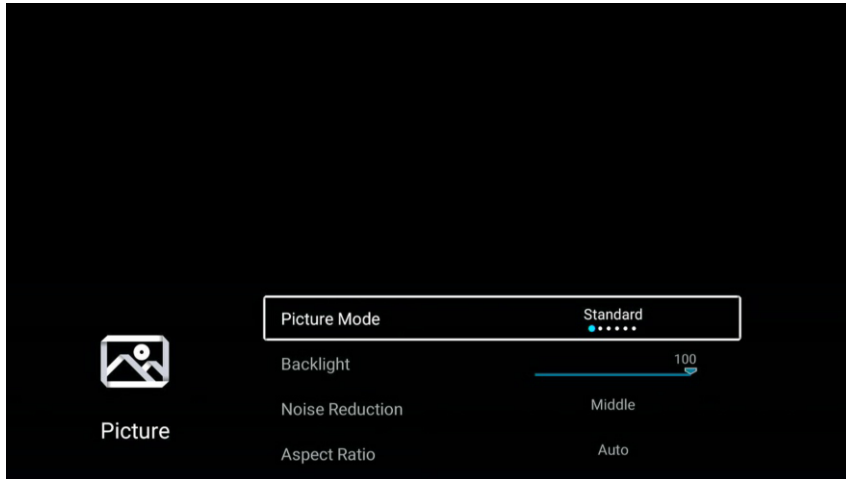

Press ▼ / ▲ button to select Picture Mode/Contrast/Brightness/Color/Sharpness/Backlight/Noise Reduction/Aspect Ratio/Color Temp/More Settings.

Press **MENU** or **EXIT** button to quit.

## Picture Mode

Highlight the item and press **OK** button to enter the sub-menu, that shows the picture mode you can choose.

Press ◀ / ▶ button to select Standard/Dynamic/Vivid/Energy Saving/User.

Standard	Produces a standard image.
Dynamic	Enhance the contrast ,color and clarity of the screen, so that the picture in the dynamic will balance the color.
Soft	Reduce the screen contrast , color and clarity to make the screen looks soft.
Vivid	Enhance the contrast , color and clarity of the screen to make the color more vivid.
Energy Saving	Reduce screen brightness, improved contrast for energy saving.
User	Select to customize picture settings.

## Contrast/Brightness/Color/Sharpness

These terms are available only when "User" is selected in Picture Mode.

Press ▼ / ▲ button to select Contrast/Brightness/Color/Sharpness.

Press ◀ / ▶ button to adjust.

Contrast	Adjust the contrast of the image.
Brightness	Adjust the brightness of the image.
Color	Adjust the color intensity of the image.
Sharpness	Adjust the edge sharpness of the image.

## Backlight

Press ▼ / ▲ button to select Backlight.

Press ◀ / ▶ button to adjust.

## Noise Reduction(Only available under ATV/AV/HDMI source.)

Set up options to eliminate the image noise intensity.

Press ▼ / ▲ button to select Noise Reduction.

Press ◀ / ▶ button to select Off/Low/Middle/High/Auto.

## Aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio.

Press ◀ / ▶ button to select 16:9/4:3/Zoom1/Zoom2.

## Color Temp

Adjust the overall color of the image.

Press ▼ / ▲ button to select Color Temp.

 
Press ◀ / ▶ button to select Cool/Normal/Warm.

Cool	The picture is in favor of green-blue and less red. The whole color is in favor of light. The picture is more fresh and elegant.
Normal	The picture does not in favor of any color. The color is moderate.
Warm	The picture is in favor of red-green and less blue to make the color more vivid and soft.

## More Settings

Press ▼ / ▲ button to select More Settings.

Press **OK** button to enter the sub-menu.

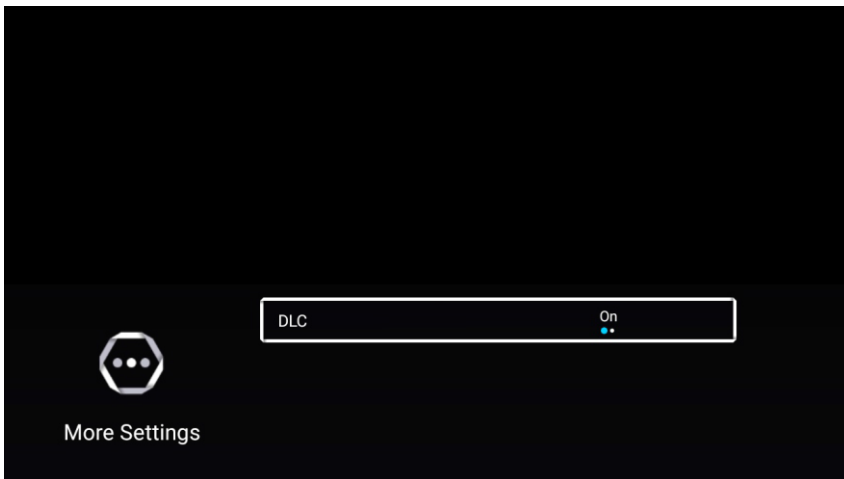

## DLC

Press ▼ / ▲ button to select DLC.

 
 
Press ◀ / ▶ button to select On/Off.

# Sound

Press **MENU** button to enter the main menu.

Press ◀ / ▶ button to select the Sound.

Press **OK** button to enter the sub-menu.

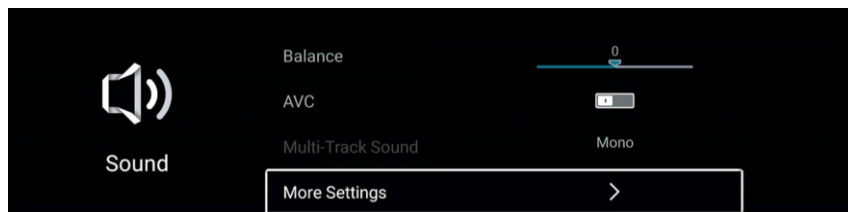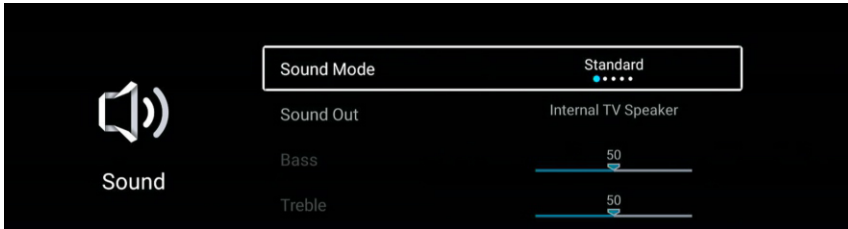

Press ▼ / ▲ button to select Sound Mode/Sound Out/Bass/Treble/Balance/AVC/Multi-Track Sound /More Settings.

Press **MENU** or **EXIT** button to quit.

## Sound Mode

Press ▼ / ▲ button to select Sound Mode.

Press ◀ / ▶ button to select Standard/Music/Movie/News/User.

- |          |   |
|----------|---|
| Standard | Emit balanced sound under any circumstances.          |
| Music    | Enhance the high pitch and reduce the bass.           |
| Movie    | Enhances treble and bass for a rich sound experience. |
| News     | Enhance the voice.                                    |
| User     | Select to customize sound settings.                   |

## Sound Out

Press ▼ / ▲ button to select Sound Out.

Press ◀ / ▶ button to select Internal TV Speaker/SPDIF/HDMI ARC/Headphone.

**Bass**

Adjust the low frequency sounds.

Press ▼ / ▲ button to select Bass. Press ◀ / ▶ button to adjust.

**Treble**

Adjust the high frequency sounds.

Press ▼ / ▲ button to select Treble. Press ◀ / ▶ button to adjust.

**Balance**

Balanced left and right channels.

Press ▼ / ▲ button to select Balance. Press ◀ / ▶ button to adjust.

**AVC**

Press ▼ / ▲ button to select AVC. Press ◀ / ▶ button to select On/Off.

Note: After open the "AVC", once the volume is set up, it can keep the volume of the speaker steady no matter what kind of difference among the TV sound of each channel.

**Multi-Taack Sound**

 
Press ▼ / ▲ button to select Multi-Taack Sound.

(It only available under ATV source.)



## More Settings

Press ▼ / ▲ button to select More Settings. Press OK button to enter the sub-menu.

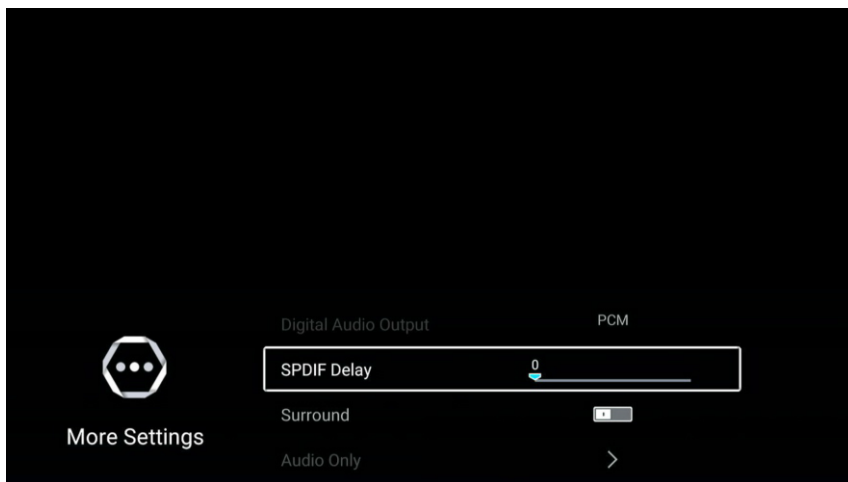

## Digital Audio Output

Press ▼ / ▲ button to select Digital Audio Output. Press ◀ / ▶ button to select Off/PCM/RAW.

## SPDIF Delay

Press ▼ / ▲ button to select SPDIF Delay. Press ◀ / ▶ button to select .

## Surround

Press ▼ / ▲ button to select Surround. Press ◀ / ▶ button to select On/Off.

## Audio Only

Press ▼ / ▲ button to select Audio Only. Press OK button enter the sub-menu.

 
# Channel

Press **MENU** button to enter the main menu.

Press ◀ / ▶ button to select Channel.

Press **OK** button to enter the sub-menu.

## ATV

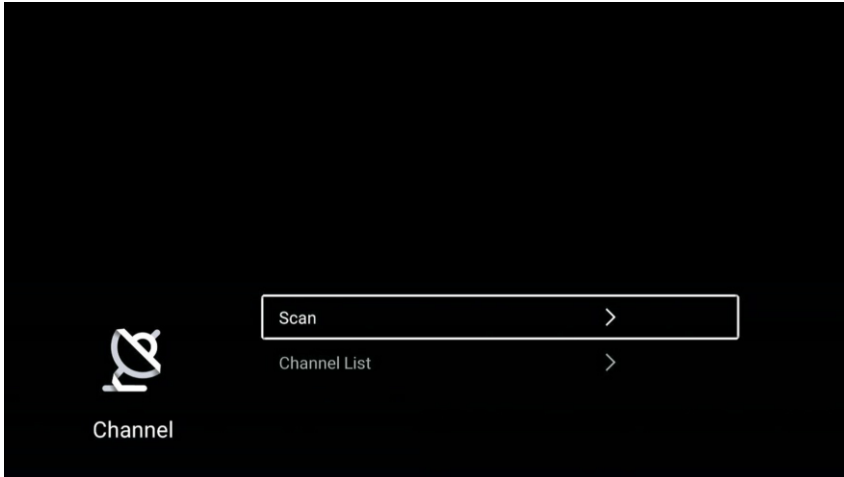


Press ▼ / ▲ button to select Scan/Channel List.

Press **MENU** or **EXIT** button to quit.

## Scan

 Press ▼ / ▲ button to select Scan. Press **OK** button to enter the sub-menu.

Press ▼ / ▲ button to select Auto Scan/Analog Manual Scan.

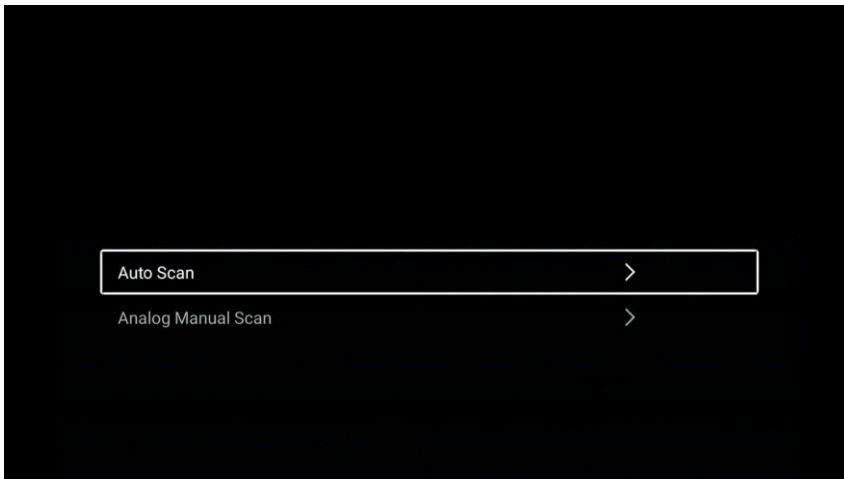


## Auto Scan

Automatic search can search for effective program channel automatically.

Press ▼ / ▲ button to select Auto Scan, then press **OK** button to start auto search.

 If you want to stop searching, press **EXIT** or **MENU** button to stop searching.

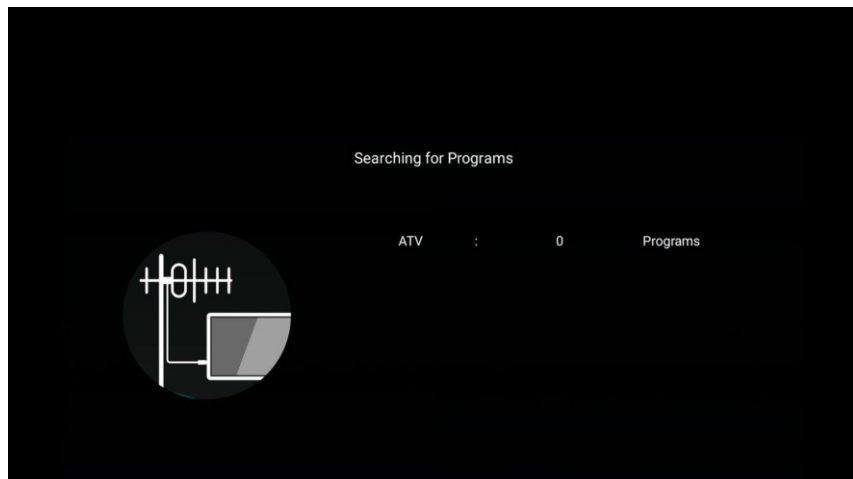


## Analog Manual Scan

Analog manual search can search for effective simulation program channel manually.

It can be selected only in the ATV Input.

Press ▼ / ▲ button to select Analog Manual Scan , and press **OK** button to enter the sub-menu.

 Press **EXIT** or **MENU** button to quit.

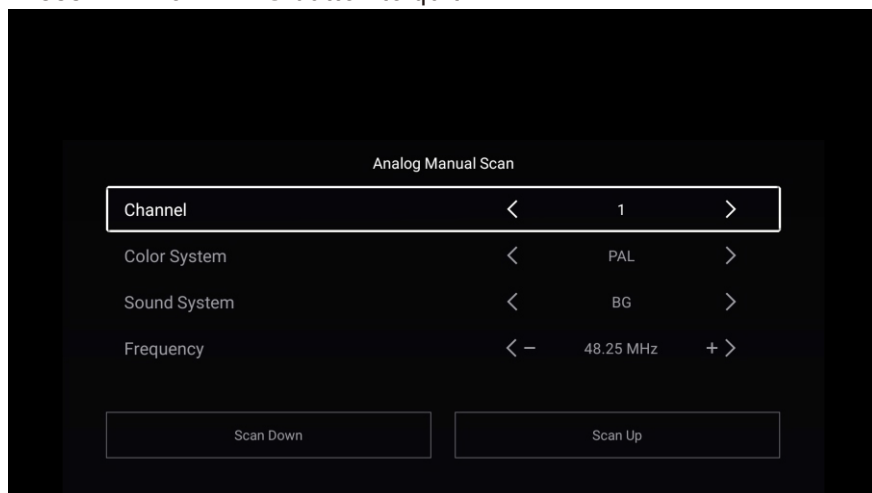

### Channel

Press ▼ / ▲ button to select Channel. Press ◀ / ▶ button to select the channel number.

### Color System

Press ▼ / ▲ button to select Color System. Press ◀ / ▶ button to select PAL/SECAM/NTSC/Auto.

### Sound System

Press ▼ / ▲ button to select Sound System. Press ◀ / ▶ button to select DK/BG/I/L/M/N.

 
 
### Frequency

Press ▼ / ▲ button to select Frequency. Press ◀ / ▶ button to adjust.

## Channel List

View all of the existing programs.

Press ▼ / ▲ button to select Channel List. Press **OK** button to enter the sub-menu.

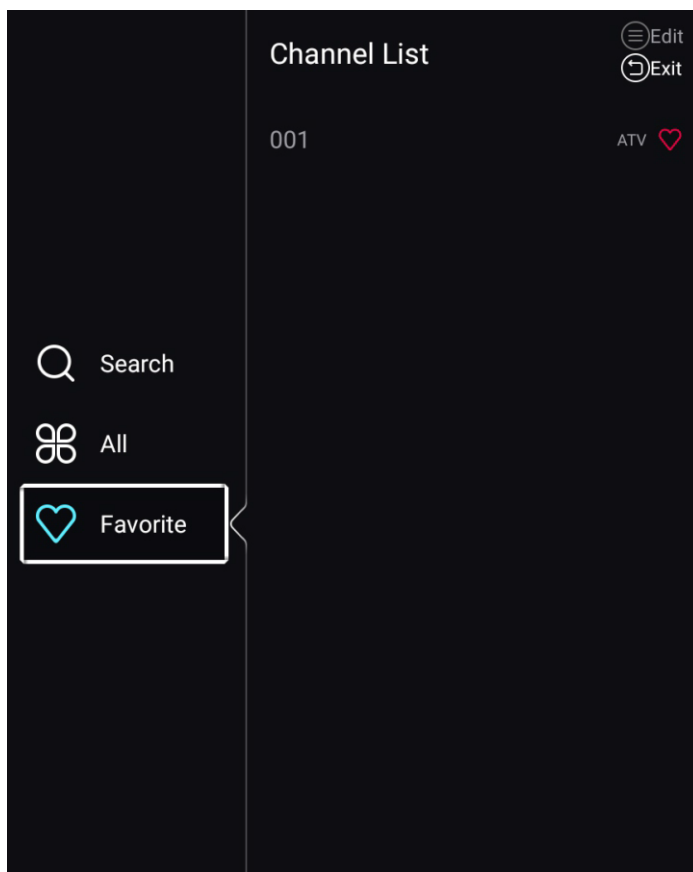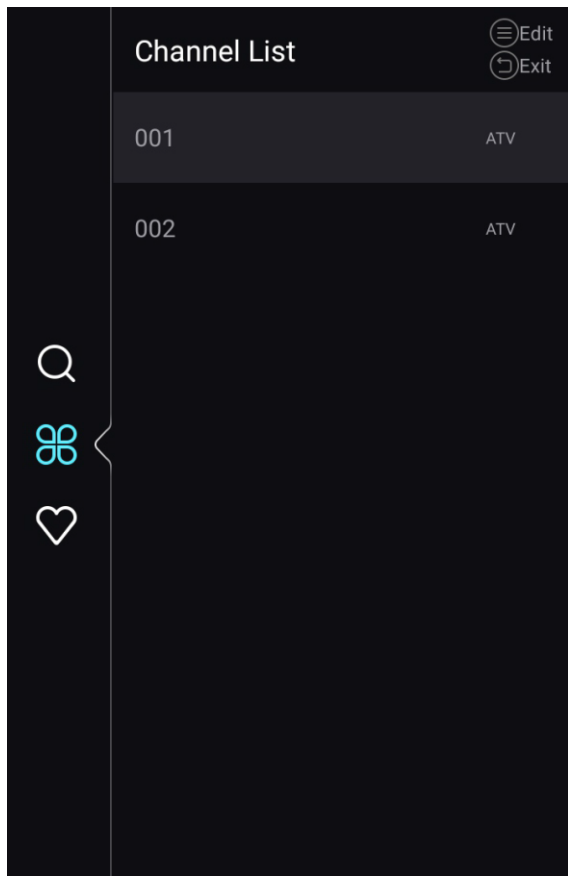

Press ▼ / ▲ button to select All/Favorite.

## All

Press ▼ / ▲ button to select All. Press **MENU** button to edit the program.

(Optional: Move/Top/Favorite/Rename/Delete/Skip.)

 
 
If the program is selected as an analog signal, the program can be renamed.

## Favorite

Press ▼ / ▲ button to select Favorite. Press **MENU** button to edit the Favorite Channel.

(Optional: Favorite/Rename/Delete.)

## DTV

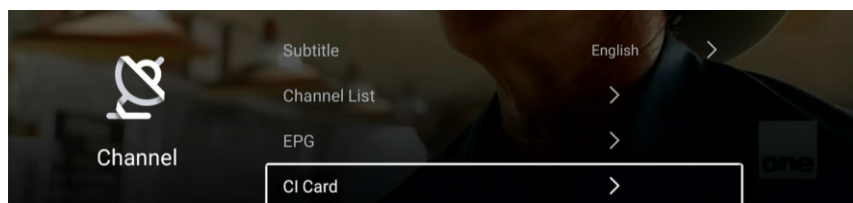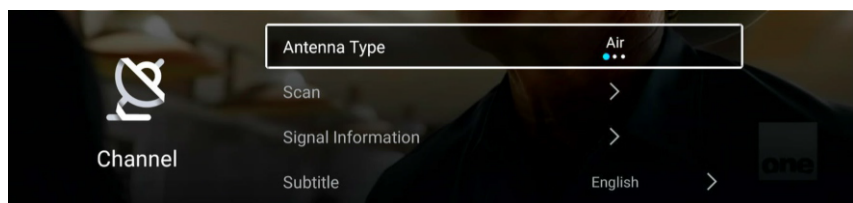

Press ▼ / ▲ button to select Antenna Type/Scan/Signal Information/Subtitle/Channel List/EPG/CI Card.  
Press **MENU** or **EXIT** button to quit.


### Antenna Type

 Press ▼ / ▲ button to select Antenna Type. Press ◀ / ▶ button to select Air/Cable/Satellite.

### Scan

Press ▼ / ▲ button to select Scan. Press **OK** button to enter the sub-menu.

Press ▼ / ▲ button to select Auto Scan/Digital Manual Scan.

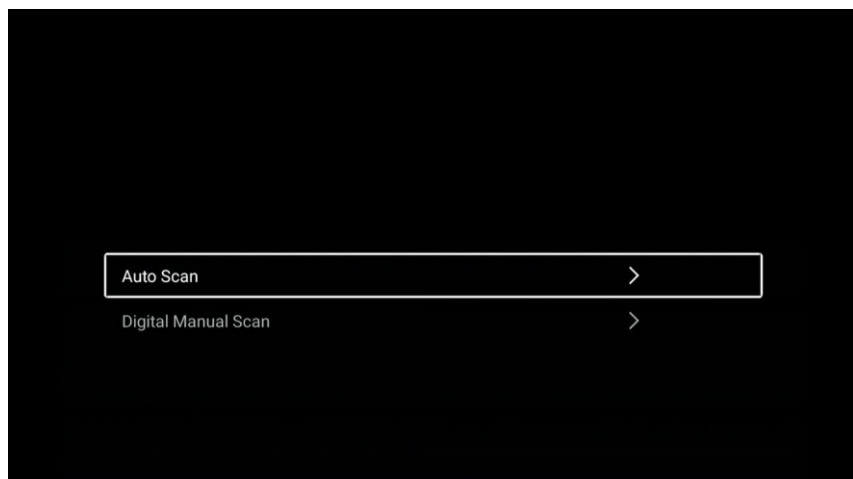


## Auto Scan

Automatic search can search for effective program channel automatically.

Press ▼ / ▲ button to select Auto Scan, then press **OK** button to start auto search.

 If you want to stop searching, press **EXIT** or **MENU** button to stop searching.

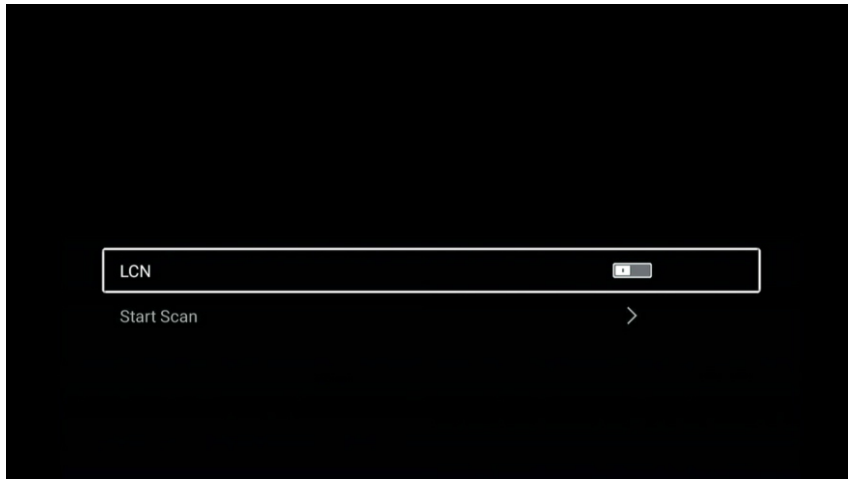


## LCN

Press ▼ / ▲ button to select LCN. Press ◀ / ▶ button to select On/Off.

## Start Scan

 Press ▼ / ▲ button to select Start Scan. Press ◀ / ▶ button to start auto scan.

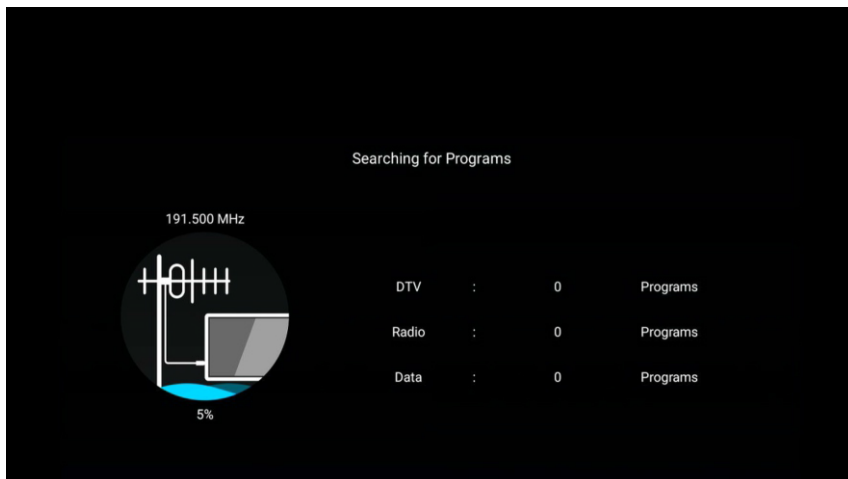


## Digital Manual Scan

Digital manual search can search for effective simulation program channel manually.

Press ▼ / ▲ button to select Digital Manual Scan , and press **OK** button to enter the sub-menu.

 Press **EXIT** or **MENU** button to quit.

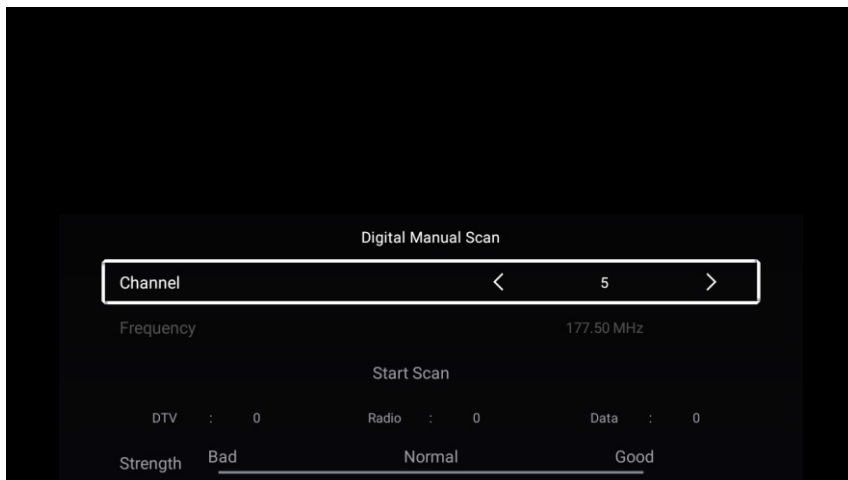

## Signal Information

Press ▼ / ▲ button to select Signal Information .Press ENTER&▼ / ▲button to select view.

 
 
## Subtitle

Press ▼ / ▲ button to select Subtitle .Press ENTER&▼ / ▲button to select.

## Channel List

View all of the existing programs.

Press ▼ / ▲ button to select Channel List. Press **OK** button to enter the sub-menu.

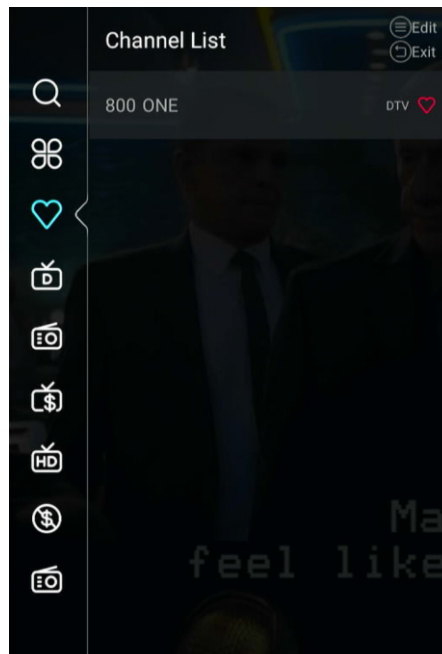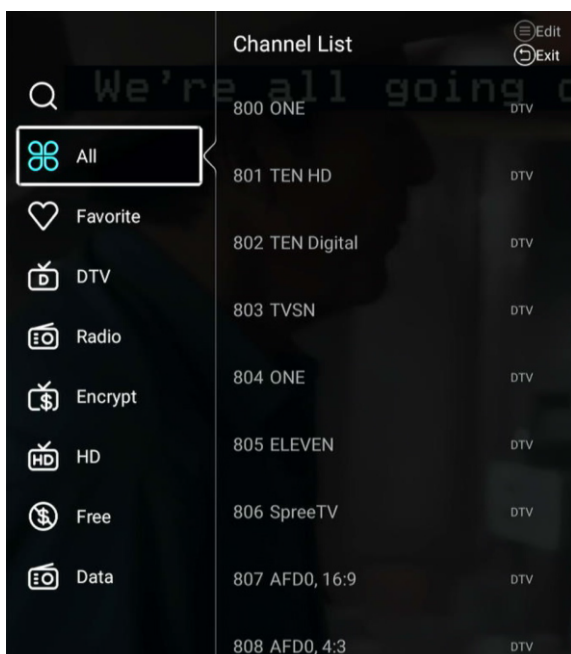

Press ▼ / ▲ button to select All/Favorite/DTV/Radio/Encrypt/HD/Free/Data.

### All

Press ▼ / ▲ button to select All. Press **MENU** button to edit the program.

(Optional: Favorite/Delete/Skip.)

If the program is selected as an analog signal, the program can be renamed.

### Favorite

 
Press ▼ / ▲ button to select Favorite. Press **MENU** button to edit the Favorite Channel.

(Optional: Favorite/Delete.)

ATV/DTV/Radio/Encrypt/HD/Free/Data are type of program.

### EPG

Press ▼ / ▲ button to select EPG. Press **MENU** button to enter the sub-menu.

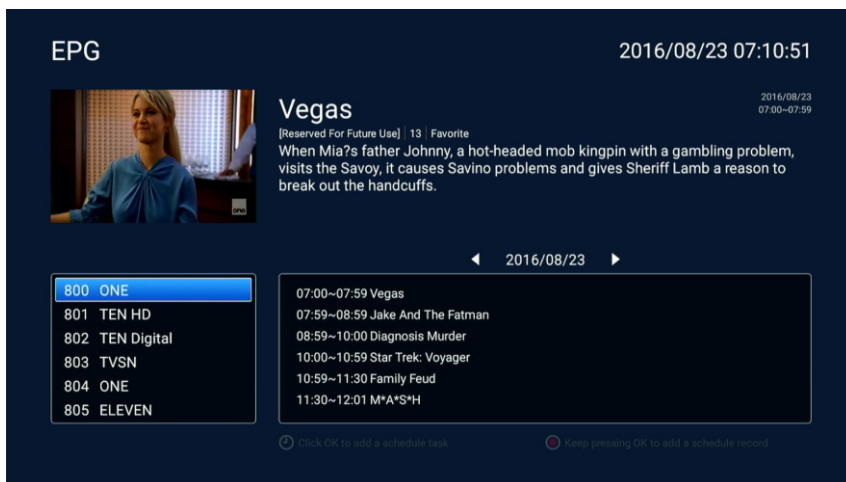


### CI Card

Press ▼ / ▲ button to select CI Card to view and set the the information of CI card.



## DVB-S

 In DTV source, set the Antenna Type as Satellite. (It only available with DVB-S function.)

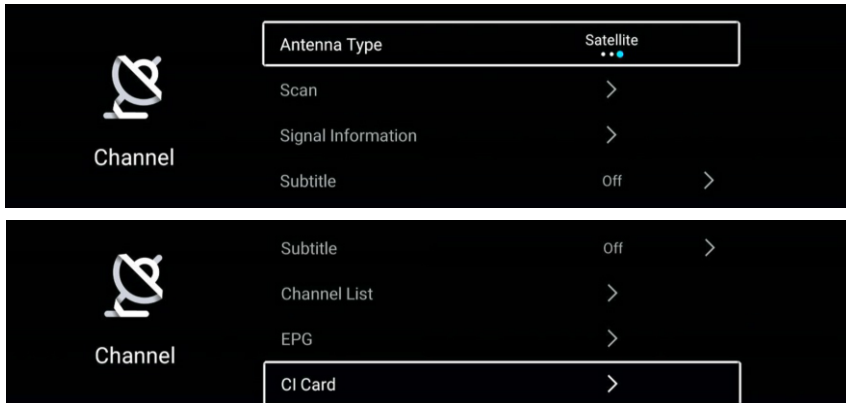

Press ▼ / ▲ button to select Antenna Type/Scan/Signal Information/Subtitle/Channel List/EPG/CI Card. Press **MENU** or **EXIT** button to quit.



### Antenna Type

  Press ▼ / ▲ button to select Antenna Type. Press ◀ / ▶ button to select Air/Cable/Satellite.

### Scan


Press ▼ / ▲ button to select Scan.

Press **OK** button to enter the sub-menu. and press ▼ / ▲ button to select the parameter.

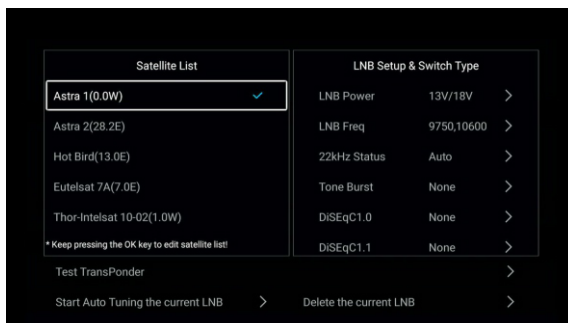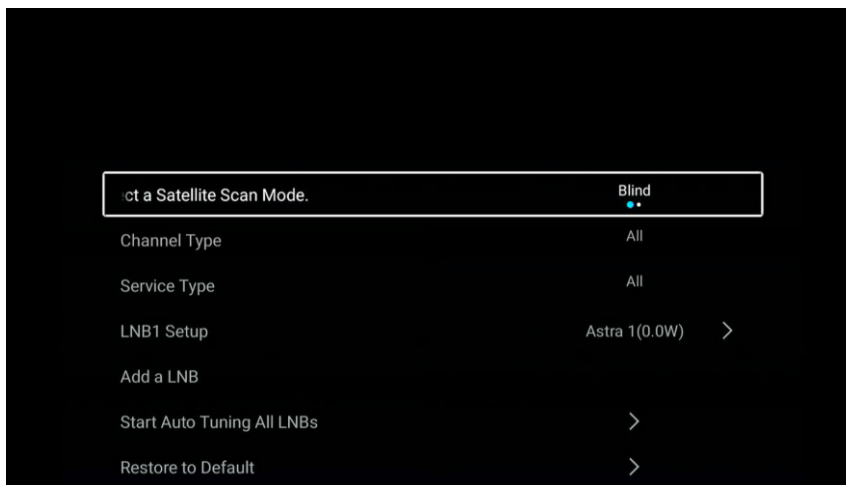

### Start Auto Tuning All LNBs

 Press ▼ / ▲ button to select and press OK button to start scan to search programs.

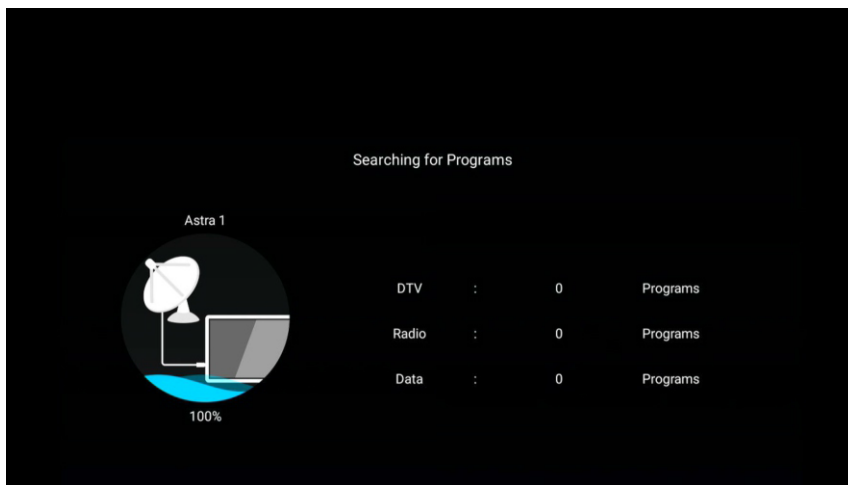

### Signal Information

Press ▼ / ▲ button to select Signal Information and press OK button to view.

 
 
### Subtitle

Press ▼ / ▲ button to select Subtitle .Press ENTER&▼ / ▲button to select.

### Channel List

View all of the existing programs.

Press ▼ / ▲ button to select Channel List. Press **OK** button to enter the sub-menu.

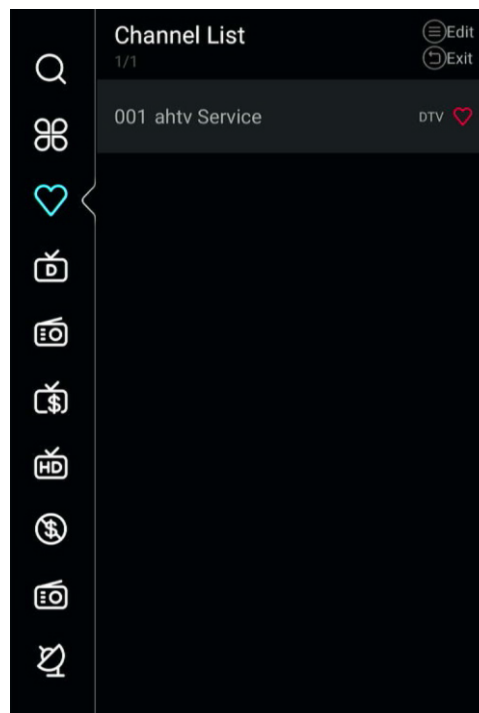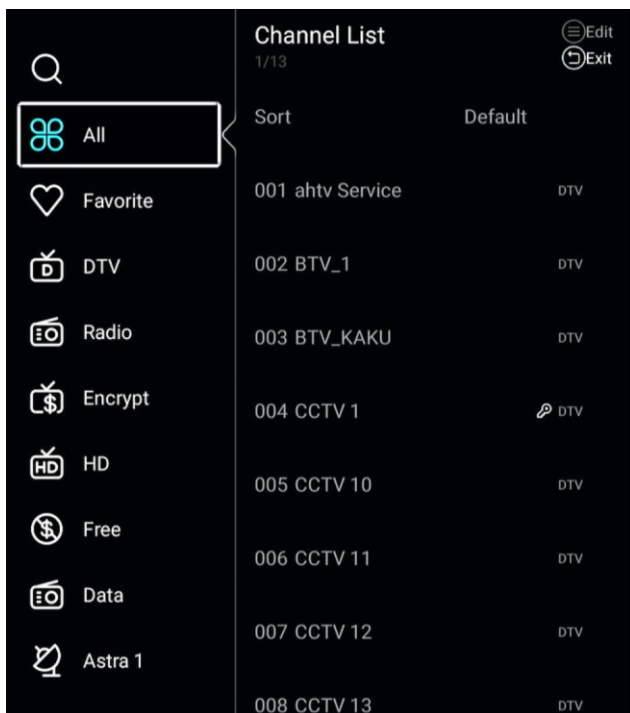

Press ▼ / ▲ button to select All/Favorite/DTV/Radio/Data/Encrypt/HD/Free/Astra1.

### All

Press ▼ / ▲ button to select All. Press **MENU** button to edit the program.

(Optional: Move/Top/Favorite/Delete/Skip.)

### Favorite

Press ▼ / ▲ button to select Favorite. Press **MENU** button to edit the Favorite Channel.

 
(Optional: Favorite/Delete.)

ATV/DTV/Radio/Encrypt/HD/Free/Data/Astra1 are type of program.

Astra1 only available when adding the Astra1 LNB on the "Scan" menu.

### EPG(Same as "DTV" source)

Press ▼ / ▲ button to select EPG. Press **MENU** button to enter the sub-menu.

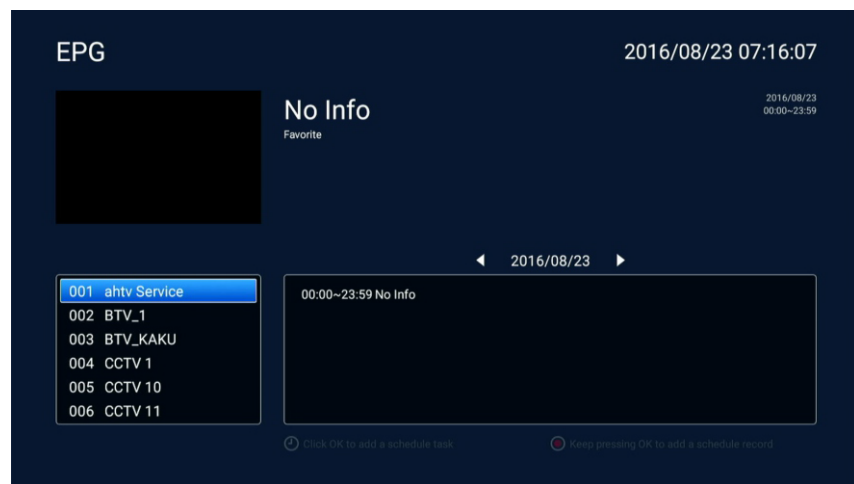

### CI Card

 
 
Press ▼ / ▲ button to select CI Card to view and set the the information of CI card.

# Lock

Press **MENU** button to enter the main menu.

Press ◀ / ▶ button to select **Lock**.

Press **OK** button to input password to enter the sub-menu. (Default password is 1234)

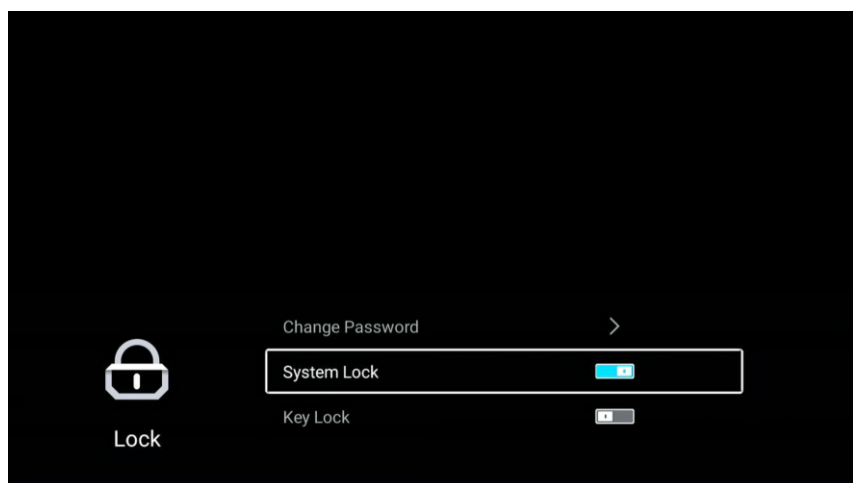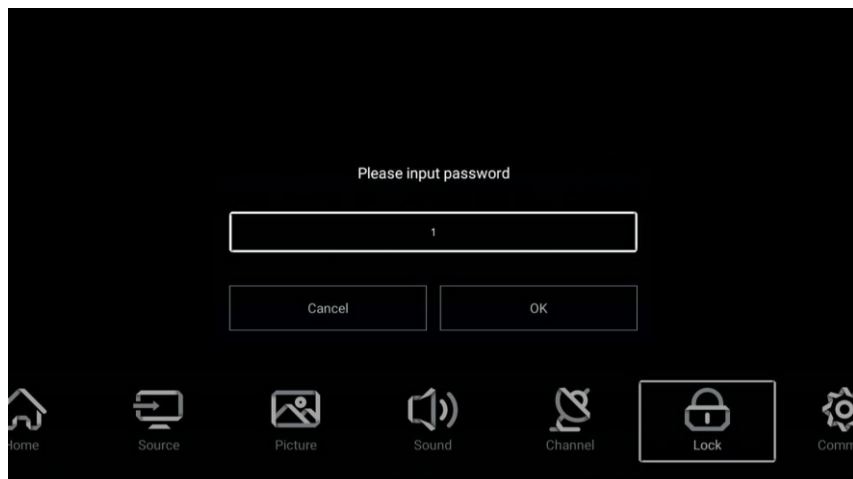

Press ▼ / ▲ button to select Change Password/System Lock/Key Lock.

## Change Password

Press ▼ / ▲ button to select Change Password. Press ENTER button to set Password.

## System Lock

Press ▼ / ▲ button to select System Lock. Press ◀ / ▶ button to select On/Off.

## Key Lock

 
 
 
Press ▼ / ▲ button to select Key Lock. Press ◀ / ▶ button to select On/Off.

# Common

Press **MENU** button to enter the main menu.

Press ◀ / ▶ button to select **Common**.

Press **OK** button to enter the sub-menu.

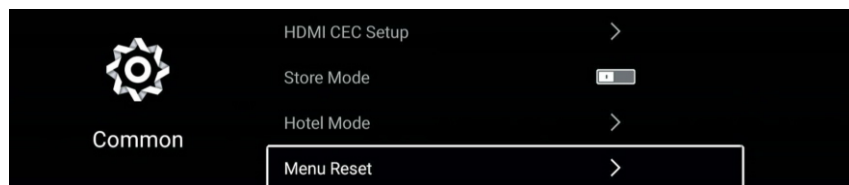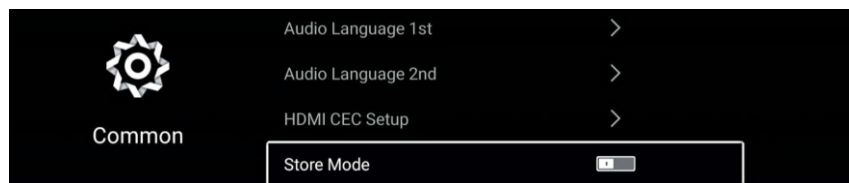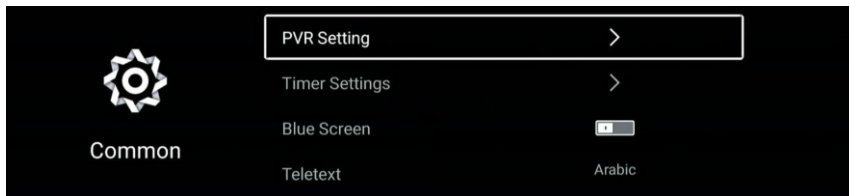

Press ▼ / ▲ button to select PVR Setting/Timer Settingsr/Blue Screen/Teletext/  
Audio Language 1st/Audio Language 2nd/Subtitle Language 1st/Subtitle Language 2nd/  
HDMI CEC Setup/Store Mode/Hotel Mode/MenuReset.

## PVR Setting

Press ▼ / ▲ button to select PVR Setting.

Press ▼ / ▲ button to select Select Disk/Format/Speed/Record List/Schedule List.

Press ENTER button to enter sub-mune.

 
## Timer Settings

Press ▼ / ▲ button to select Timer Settings.

Press ▼ / ▲ button to select OSD Timer/Autostandby Timer/Sleep Timer/Off Timer/Off Time/  
On Timer/On Time.

Press ENTER button to enter sub-mune.

(Note:Off Timer/On Timer are the optional features.)

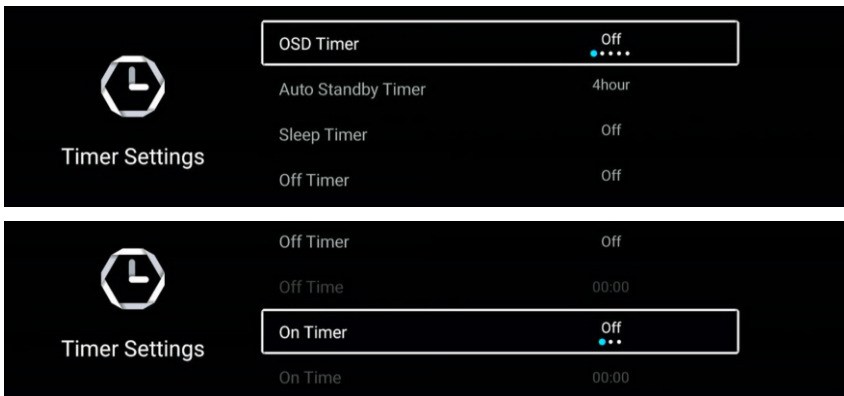

### OSD Timer

Press ▼ / ▲ button to select OSD Timer.

Press ◀ / ▶ button to select Off/5sec/15sec/30sec/40sec.

### Autostandby Timer

Press ▼ / ▲ button to select Autostandby Timer.

Press ◀ / ▶ button to select Off/3hour/4hour/5hour.

### Sleep Timer

Press ▼ / ▲ button to select Sleep Timer.

Press ◀ / ▶ button to select Off/15min/30min/45min/60min/90min/120min/240min.

### Off Timer

Press ▼ / ▲ button to select Off Timer.

Press ◀ / ▶ button to select Off/Once/Monday~Sunday/Monday~Friday/Monday~Saturday/Saturday~Sunday/Sunday.

If setting on, you can adjust **Off Time**.

### On Timer

Press ▼ / ▲ button to select On Timer.

Press ◀ / ▶ button to select Off/Once/Monday~Sunday

If setting on, you can adjust **On Time**

**Blue Screen**

Set the background color to blue when there is no input signal.

Press ▼ / ▲ button to select Blue Screen. Press ◀ / ▶ button to select On/Off.

**Teletext**

Press ▼ / ▲ button to select Teletext.

Press ◀ / ▶ button to select Arabic/East/West Euro/Farsi/Russian.

**Audio Language 1st**

Press ▼ / ▲ button to select Audio Language 1st. Press ENTER&▼ / ▲ button to select audio language.

**Audio Language 2nd**

Press ▼ / ▲ button to select Audio Language 2nd. Press ENTER&▼ / ▲ button to select audio language.

**Subtitle Language 1st**

Press ▼ / ▲ button to select Subtitle Language 1st. Press ENTER&▼ / ▲ button to select subtitle language.

 
**Subtitle Language 2nd**

Press ▼ / ▲ button to select Subtitle Language 2nd. Press ENTER&▼ / ▲ button to select subtitle language.

## HDMI CEC Setup

Press ▼ / ▲ button to select HDMI CEC Setup.

Press **OK** button to enter the sub-menu.

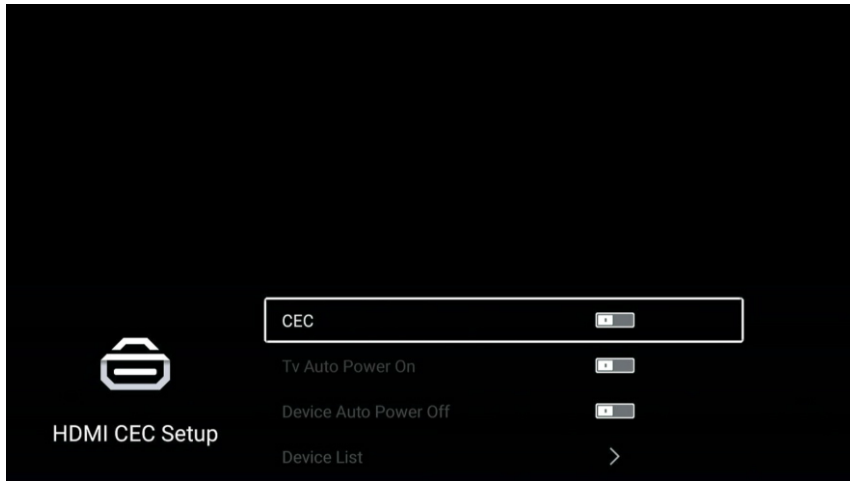

Press ▼ / ▲ button to select CEC/TV Auto Power On/Device Auto Power Off/Device List.

Note: All the Options are available only when the CEC select **On**.

### CEC

Press ▼ / ▲ button to select CEC, and press ◀ / ▶ button to select On/Off.

The following terms are available only when "On" is selected in CEC.

### TV Auto Power On

Press ▼ / ▲ button to select TV Auto Power On, and press ◀ / ▶ button to select On/Off.

### Device Auto Power Off

Press ▼ / ▲ button to select Device Power Off, and press ◀ / ▶ to select On/Off.

### Device List

Press ▼ / ▲ button to select Device List, and press ENTER button to enter.

 
 
### Store mode

Press ▼ / ▲ button to select Store mode. Press ◀ / ▶ to select On/Off.



# Hotel Mode

Press ▼ / ▲ button to select Hotel Mode.  
Press OK button to enter the sub-menu.

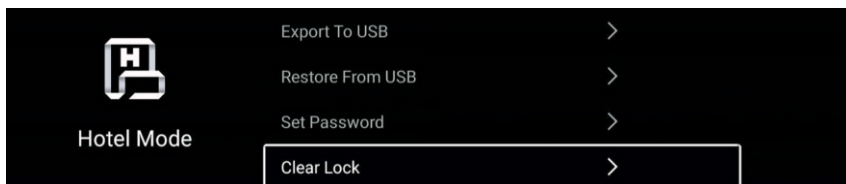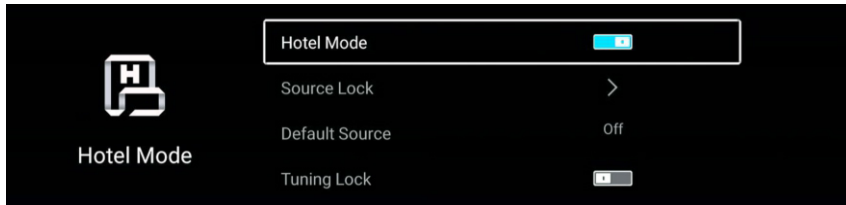

## Hotel Mode

Press ▼ /▲button to select **Hotel Mode**, and then press ◀/▶ button to select ON/OFF.  
Other menu only available on Hotel Mode set “ON”

## Source Lock

Press ▼ /▲button to select **Source Lock**, and then press ENTER button to enter sub-menu.  
Press ▼ /▲button to select and press ENTER to determine whether to lock or not .

## Default Source

Press ▼ /▲button to select **Default Source**, and then press ◀/▶ button to select.  
(Off / DTV / ATV/AV 1/ AV 2/YPBPR / HDMI 1 / HDMI 2 / HDMI 3 )

## Tuning Lock

Press ▼ /▲button to select **Tuning Lock**, and then press ◀/▶ button to select ON/OFF.

## Max Volume

Press ▼ /▲button to select **Max Volume**, and then press ◀/▶ button to adjust.

## Default Volume

Press ▼ /▲button to select **Default Volume**, and then press ◀/▶ button to adjust.

### **Export To USB**

Insert an USB device, and press ▼ /▲button to select **Export To USB**, and then press **OK** button to export data.

### **Restore From USB**

Insert an USB device, and press ▼ /▲button to select **Restore From USB**, and then press **OK** button to restore data from USB.

### **Set Password**

Press ▼ /▲button to select **Set Password**, and then press **ENTER** button to setup.

### **Clear Lock**

Press ▼ /▲button to select **Clear Lock**, and then press **ENTER** button to select.

## Store mode

 
Press ▼ / ▲ button to select Store mode. Press ◀ / ▶ to select On/Off.

## Menu Reset

Recall the default setting.

Press ▼ / ▲ button to select Menu Reset.

Press OK button to enter the sub-menu.

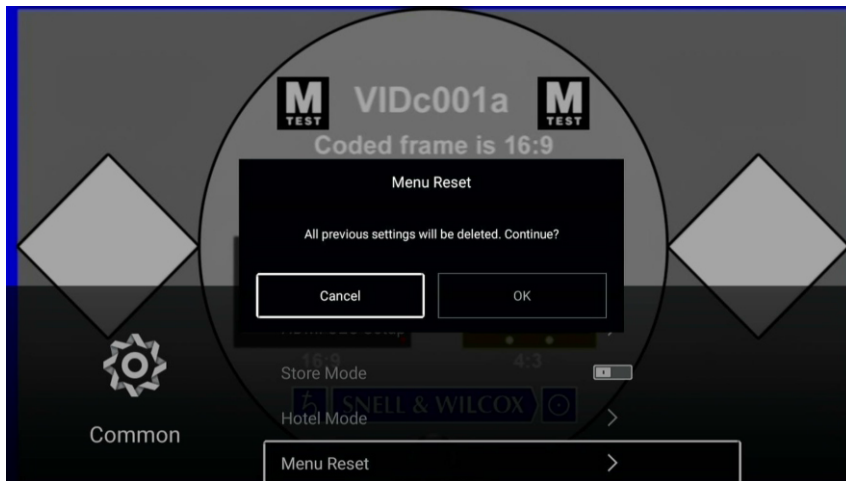

## Advance

Press **MENU** button to enter the main menu.

Press ◀ / ▶ button to select Advance.

Press OK button to enter the System Setting.

(Please refer to the home page--Setting part)

## Help

No power	<ul style="list-style-type: none"> <li>● Check if the AC cord of TV is plugged in or not. If there's still no power, please disconnect the plug, and reconnect to the socket after 60 seconds. Turn the power back on.</li> </ul>
Signal not received properly	<ul style="list-style-type: none"> <li>● Double or phantom images may appear on your TV if there are high buildings or mountains close to where you are. You can adjust the image thru manual operation: consult instruction of vernier regulation, or adjust the direction of the external antenna.</li> <li>● If you use an indoor antenna, signal reception may be more difficult under certain circumstances. Adjust the direction of the antenna for optimum reception. If this does not improve reception, you may have to switch to an external antenna.</li> </ul>
No picture	<ul style="list-style-type: none"> <li>● Check if the antenna at the back of the TV is connected properly.</li> <li>● View other channels to see if the problem still occurs.</li> </ul>
Video appears with no audio	<ul style="list-style-type: none"> <li>● Try increasing the volume.</li> <li>● Check if the TV's sound is on mute or not.</li> </ul>
Audio is present, but video does not appear or is discolored	<ul style="list-style-type: none"> <li>● Try adjusting the contrast and brightness.</li> </ul>
Static noise affects video and audio quality	<ul style="list-style-type: none"> <li>● Check if the antenna at the back of the TV is connected properly.</li> </ul>
Broken lines on screen	<ul style="list-style-type: none"> <li>● Electrical appliances such as hair dryers or vacuums etc. may be interfering with your TV set. Switch these appliances off.</li> </ul>
Remote doesn't work	<ul style="list-style-type: none"> <li>● Make sure the plastic bag which came with the remote control is removed. Try using the remote in a shorter distance from the TV. Check if the placement of the batteries is correct, or try using new batteries with the remote control.</li> <li>● The TV will go into Standby mode if it receives no response in a few minutes.</li> </ul>
No video (PC mode)	<ul style="list-style-type: none"> <li>● Please check if the cable is connected to the VGA port correctly, or if the cable is bent in some places.</li> </ul>
Vertical line blinking (PC Mode)	<ul style="list-style-type: none"> <li>● Enter the main menu, and adjust the vertical placement to eliminate the vertical line.</li> </ul>
Horizontal tearing (PC Mode)	<ul style="list-style-type: none"> <li>● Adjust the horizontal placement of the screen to clear any horizontal lines.</li> </ul>
Screen is too bright or dark (PC Mode)	<ul style="list-style-type: none"> <li>● Adjust the brightness or contrast in the main menu.</li> </ul>
No response from the PC	<ul style="list-style-type: none"> <li>● Check if the PC's display resolution is set to a compatible resolution for the TV.</li> </ul>
Lines appearing when a device is connected to the RCA port	<ul style="list-style-type: none"> <li>● Make sure you are using a cable in good quality.</li> </ul>
Problems are unresolved	<ul style="list-style-type: none"> <li>● Unplug the power cable and wait for 30 seconds, then reconnect to the socket. If problems still persist, do not attempt to repair the TV by yourself. Kindly contact the service center.</li> </ul>

Do not leave your TV displaying a static image, whether it is from a paused video, menu screen, etc. for an extended period of time, doing so will damage the display and may cause image burn-in.

## Specifications

Screen Size	Power Consumption (LED)	Accessories
24"	31W/36W/40W	User's manual Remote controller AAA Batteries
32"	32W/40W/56W	
39"/40"	60W/70W/76W/90W	
42"	65W/67W/70W/90W	
43"	70W/80W/90W	
50"	108/100W/120W	
55"	110W/118W/135W	
58"	120W/135W/160W	
65"/70"/75"	160W/180W/195W/250W	

★ LIFE TIME : 60,000 Hrs

	Operation Frequency	Transmitting Power
WiFi	2400~2483.5	Less Than 100mW



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



 
The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

This user manual for reference only

The actual effects and functions of some products will be fine-tuned, please refer to the actual product.

# Remote Controller

The remote controller cannot be used unless it is within the receivable range. Before you use the remote control, please make sure there's no obstacle between the remote control and the receiver.

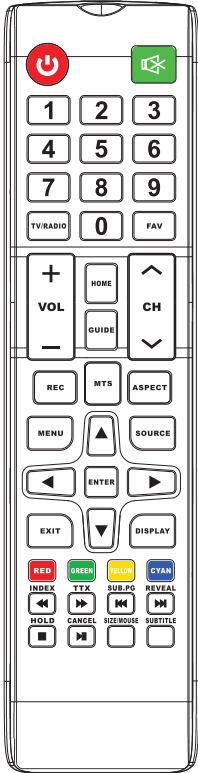

1. **POWER:** Turn on the TV or enter standby mode.
2. **MUTE:** Turn off the sound and turn on when press again.
3. **0-9:** Figures "0-9" are used to directly input channel number.
4. **MTS:** Press to select the MTS mode.(for example, Nicam , BTSC, MONO, STEREO, eg )
5. **MENU:** Start system menu and return to upper menu.
6. **SOURCE:** Input source selection button.
7. **▲▼◀▶** Press **▼▲** button to select items.  
Press **◀▶** button to adjust it.
8. **ENTER:** To confirm the choice with the highlighted menu item.
9. **EXIT:** Press to exit the OSD menu.
10. **DISPLAY :** Press to display the source and channel's

11. **VOL+:** Increase the volume.
12. **REFRESH:** Refresh page.
13. **HOLD:** HOLD On or Off for current page display .
14. **VOL-:** Decrease the volume.
15. **CAP:** A key to the current image is saved to the disk.
16. **PLAY/PAUSE:** Press to PLAY/PAUSE in the USB mode.  
start play and PAUSE ,in USB mode.
17. **CANCEL:** When a page is selected in the mode of text, it may take some time before it becomes available, pressing the CANCEL key will return to the TV mode. When the required page is found , the page number will appear at the top of the TV picture, press the CANCEL key to return to the mode of text for you to browse this page.
18. **TV/RADIO :** When watching channel, allows you to switch between TV and Radio modes.
19. **STOP:** Press to STOP in the USB mode.
20. **MIX:** TV and TXT pictures are mixed together (transparent background)  
GREEN/RED/YELLOW/CYAN button
21. **CH+:** Increase the program.  
HOME: A key back to the android home page.
22. **CH-:** Decrease the program.
23. **ASPECT:** Aspect function.
24. **MOUSE:** Mouse switch.  
SIZE: Change the size of display in Teletext mode.  
(SUBTITLE: To display subtitle in USB mode.
25. **REC:** Record begin in PVR mode.
26. **GUIDE:** Launches the EPG (Electronic Program Guide)
27. **FAV:** Press to add or remove your favorite channels under tv menu.
28. **FF:** Press to fast forward in USB mode.  
TTX: Switch the teletext on and off.
29. **PREV:** Press to skip backwards in USB mode  
SUB. PG: Press to access sub page.
30. **FR:** Press to fast reverse in USB mode.  
INDEX: Request the Index page in Teletext mode.
31. **NEXT:** Press to skip forward in USB mode.  
REVEAL: Reveal or Hide the hidden words.

# Remote Controller

## BATTERY INSTALLATION OF REMOTE CONTROL UNIT

 
1. Open the battery compartment cover.

2. Insert two 'AAA' (pencil size) 1.5V batteries. Make sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.

3. Close the battery compartment cover.


### Note:

- Recommend use alkaline type batteries.
- The life time of the batteries may last up to one year, depending on how often the remote control is used. For the best performance, the batteries should be replaced on a yearly basis, or when remote operation becomes erratic.
- Be sure to place the batteries in the correct direction, as shown left.
- Do not mix old and new batteries, or different types.
- Old batteries may leak chemical and damage the remote control. Always remove batteries as soon as they become weak.

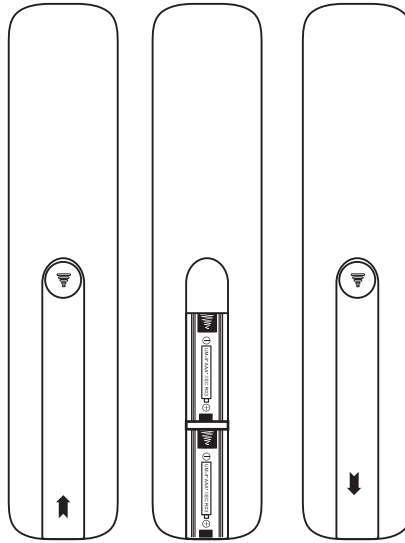

## SUGGESTION

 To make it more convenient for base installation and to avoid any risk of scratches and damage, we advise you using the type of PH2 screwdriver.

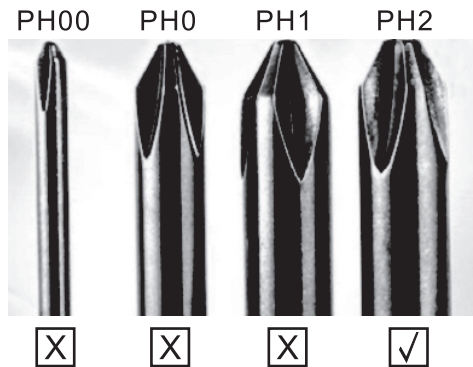

---

## WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

 
1. Using cabinets or stands recommended by the manufacturer of the television set.
2. Only using furniture that can safely support the television set.
3. Ensuring the television set is not overhanging the edge of the supporting furniture.
4. Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
5. Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
6. Educating children about the dangers of climbing on furniture to reach the television set or its controls. If your existing television set is being retained and relocated, the same considerations as above should be applied.

Wall-mounted screw: 22-24inch M4, 28-70inch M6, 75inch M8

**Note:** don't hang at an angle to avoid the risk of falling off.

---

**Note:** If the model has a CI card slot on its top, a silicone plug for the CI card slot can be found in the accessory bag (for models without CI card slot, there is no such silicone plug), please insert the silicone plug into the slot when the CI card is not in use.

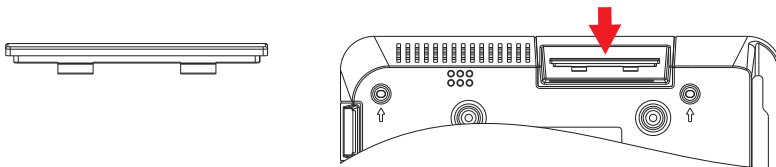

**Note:** Picture for reference purposes only.

---







## UPUTSTVO ZA UPOTREBU

### LED TELEVIZORI MODEL: 40AOS410C

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SR



# SADRŽAJ

Sigurnosne informacije .....	2
Važne bezbednosne instrukcije .....	3
Montaža držača .....	4
Tipke televizora i interfejs .....	5
Dijagram za povezivanje eksternih uređaja .....	6
Instaliranje i povezivanje televizora .....	7
Upustvo za in instalaciju postolja .....	7
<b>TV MENU</b> .....	<b>8</b>
Čarobnjak za podešavanje .....	8
Početna stranica .....	11
Mediji .....	16
Ulaz .....	19
TV Podešavanja .....	20
Pomoć .....	45
Specifikacija .....	46
Daljinski Upravljač .....	47

---

### OPREZI!

Ovaj uređaj koristi visoki napon. Da bi spriječili rizik od strujnog udara nemojte ga otvarati. U slučaju potrebe, obratite se kvalifikovanom servisnom licu

If the TV any changes or coarse adjustment, electric shocks to be hurt, do not attempt to open a machine-maintenance, customer contact centres needed overhaul.



Simbol sa znakom uzvika u jednakostraničnom trouglu upozorava korisnika da pogleda instrukcije za korišćenje i održavanje (popravku) u dokumentaciji isporučenom sa uređajem.



Upozorenje  
Simbol munje u jednakostraničnom trouglu upozorava korisnika na prisustvo opasnog neizolovanog napona unutar proizvoda koji može biti dovoljan za rizik od strujnog udara

 
## Važne mere bezbednosti

1. Pročitajte ovo uputstvo.
2. Čuvajte ovo uputstvo.
3. Obratite pažnju na sva upozorenja
4. Pratite sva uputstva.
5. Nemojte koristiti aparat u blizini vode.
6. Čistite uređaj samo sa suvom krpom.
7. Ne blokirajte otvore za ventilaciju. Instalirajte TV prema uputstvima proizvođača.
8. Ne stavljajte uređaj pored izvora toplote kao što su radijatori, grejači, šporeti i slični aparati
9. Nemojte oštetiti priključni kabl. Ako priključni kabl ne odgovara vašoj utičnici, potražite savet od električara.
10. Kabl za napajanje ne sme biti pritisnut ili uklešten, posebno u delu oko utičnice ili mestu gde kabl izlazi iz aparata.
11. Samo koristiti priložene/dodatke preporučene od strane proizvođača
12. Koristite nosač za montiranje na zid ili stalak od proverenih proizvođača.
- Ako koristite pokretni stalak za postavljanje TV-a, pazite da ga ne prevrnete kada okrećete stalak.
13. Uvek isključite televizor tokom grmljavine ili kada ga ne koristite na duži period.
14. Sve servisne radnje na uređaju mora obavljati samo kvalifikovano osoblje, a posebno ako je oštećen kabl za napajanje, ako ste slučajno sipali tečnost ina uređaj, ukoliko je aparat bio izložen vlazi ili kiši.
15. Ovaj uređaj nije namenjen za ugradnju ( u delove nameštaja ili pregradne zidove koji ne obezbeđuju dovoljnu ventilaciju) osim ako izričito nije navedeno od strane proizvođača.
16. Aparat mora biti zaštićen od prskanja ( voda, ulje itd)
17. Ne stavljajte nikakve predmete na uređaj (posude sa vodom, upaljene sveće, itd).
18. Montiranje uređaja na zid ili plafon-uređaj mora da bude instaliran na zid ili plafon u skladu sa uputstvima datim od strane proizvođača.
19. Da bi se smanjio rizik od požara ili električnih šokova ne izlažite kiši i vlazi...
20. Glavni prekidač se koristi i za isključivanja uređaja iz naponske mreže, isključivanje uređaja bi trebalo biti lako i dostupno.
21. Nikad nemojte postavljati televizor, daljinski upravljač ili baterije u blizini izvora koji proizvode toplotu ili direktno izloženo sunčevoj svetlosti.
22. Držite sveće i druge zapaljive predmete dalje od televizora, daljinskog upravljača i baterija radi sprečavanja širenja požara.
23. USB terminal je preporučljivo koristiti pri standardu 2.0 ili višem.
24. Baterije ne trebaju biti izložene toploti kao što je sunce, vatra ili slični toplotni izvori.
25. Ova oprema je klase II i dizajnirana je na takav način da ne zahteva sigurnosni priključak na uzemljenje.
26. Maksimalna temperatura na kojoj se koristi uređaj je 45 stepeni celzijusa.
27. Maksimalna nadmorska visina pri kojoj uređaj radi ispravno je 2000m.
28. Ovo je servisno uputstvo sastavljeno od strane kvalifikovanih servisera. Da bi se smanjio rizik od električnog udara ne pokušavajte uređajem rukovati drugačije nego što je sadržano u uputstvu.


## Montaža nosača

### Pričvršćivanje televizora za zid


1. Postavite uređaj na stolu. Ispod njega postavite tkaninu kojom ćete zaštititi displej od grebanja i oštećenja.
2. Upotrebite šrafciger za skidanje šrafova kojima je fiksirano postolje televizora. Nakon uklanjanja šrafova pažljivo uklonite postolje.
3. Postavite nosač koji se može fiksirati na zid prema potrebnim dimenzijama na pozicijama koje su prikazane na slikama 2 i 3.
4. Probušite četiri rupe na zidu i uz pomoć 4 šrafa pričvrstite nosač na zid.
5. Uz pomoć šrafcigera pričvrstite šrafove na televizoru i na zidu.

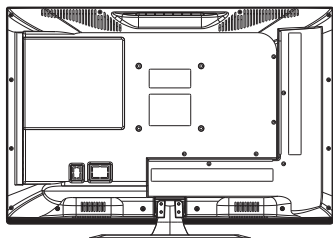


1

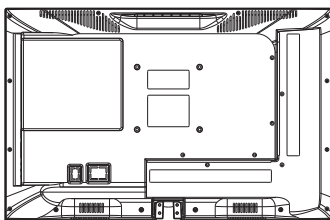 

2

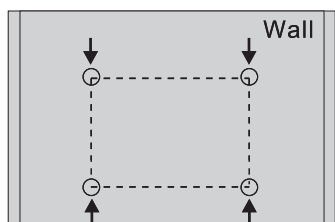 

3

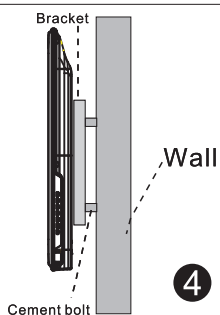 

4

### Beleška:

1. Nosač za TV je opcioni dodatak i on ne dođe u pakovanju.
2. Kada postavite TV oko njega ne smije biti drugih predmeta. Držite ga udaljenog od drugih predmeta..
3. Pratite uputstva za montiranje nosača.
4. Televizor zakačite na nosač koji odgovara njegovim dimenzijama.

### NAPOMENA

UKOLIKO PROGRAM PRATITE PUTEM KABLOVSKE TELEVIZIJE PROVERITE DA LI JE PROPISNO IZVEDENO UZEMLJENJE I IZJEDNAČAVANJE POTENCIJALA NA KABLU VAŠEG KABLOVSKOG OPERATERA.

ZA OVE INFORMACIJE KONTAKTIRAJTE VAŠEG KABLOVSKOG OPERATERA.

## Tipke na televizoru i interfejs

### TV dugmici:

Napomena: Ključna uputstva su naveden u nastavku.



Displej/Sakrij taster ikone: kada se ikonica ne pojavljuje pritisnite taster, ikonica će se pojaviti kao slika prikazana gore, automatski se isključuje nakon 5 sekundi ne aktivnosti.

Icon selection: Short press the button, move the loop to the right, select the icon. Izbor ikona: Kratko pritisnite dugme, pomerite udesno, izaberite ikonu.

Odabir funkcija ikona: pritisnite i zadržite taster da bi se ostvarila funkcija ikone.

Opis ikona:

Isključeno ikona: odgovara dugmencetu "POWER" na daljinskom upravljaču.

Meni ikona: Odgovara "MENU" dugmencetu na daljinskom upravljaču.

Vodič ikona: Odgovara "SOURCE" dugmencetu na daljinskom upravljaču.

Pojačaj + ikona: Odgovara "VOL+" dugmencetu na daljinskom upravljaču.

Utišaj ikona: Odgovara "VOL-" dugmencetu na daljinskom upravljaču.

CH+ ikona: Odgovara "CH+" dugmencetu na daljinskom upravljaču.

CH- ikona: Odgovara "CH-" dugmencetu na daljinskom upravljaču.

 
### Priključci

Napomena: Položaj i tip interfejsa su različiti za različite modele TV-a.


	<b>AV Input</b> Eksterni AV signal i levi i desni audio ulaz		Čitackartica CI, zahteva CAM (modulusi u potpunosti pristupa) koristi se za plaćenu TV. Izlaz levog i desnog kanala audio/Video signala (neki modeli nemaju ovaj konektor)
	<b>HDMI ulaz HDMI 1,2,3</b> Povezati sa eksternim HDMI uređajem		<b>USB</b> Povezati sa vašim USB uređajem
	<b>AND 75/Rf konekcija</b> Povezati sa antenom ili kablovskim TV ulazom u vaš uređaj		<b>Optički</b> Digitalni Audio kanal
	<b>RJ45</b> Povezati sa internetom		



# Dijagram za povezivanje eksternih uređaja

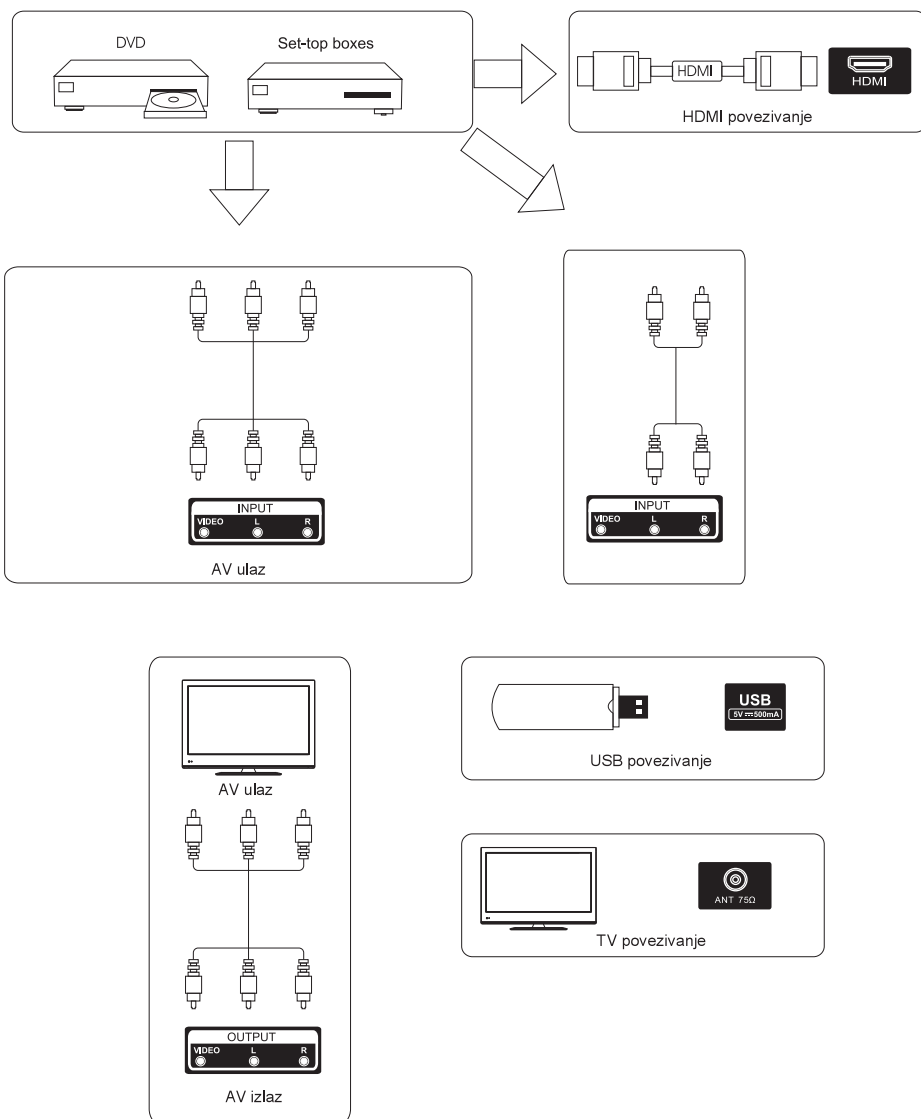

## Instaliranje i povezivanje televizora

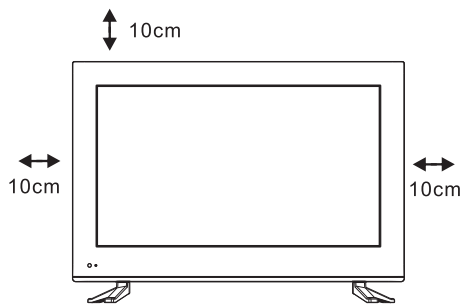 

### Podešavanje Vašeg TV-a

Televizor postavite na stabilno mesto koje može da izdrži njegovu težinu. Da bi izbegli moguće opasnosti ne postavljajte televizor na mesta koja su u blizini vode ili toplote (kao što je lampa, sveća, grejač) i ne blokirajte otvore za ventilaciju sa zadnje strane televizora.

 
### Povezivanje antene i napajanja

1. Povežite antenski kabl u utičnicu za povezivanje antene sa zadnje strane televizora.
2. Za uključivanje kabla u TV (AC 100-240V ~ 50/60Hz).

### Uključite TV


3. Pritisnite tipku da uključivanje na uređaju, zelena signalna lampica će se uključiti. Ako je indikator u režimu mirovanja (svetli crveno), pritisnite dugme za uključivanje na daljinskom upravljaču da uključite TV.

**Napomena:**  
Slika je indikativna.

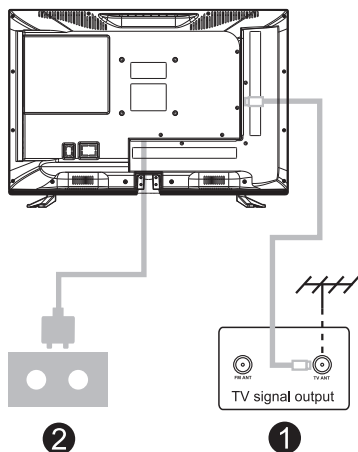


## Uputstvo za instalaciju postolja

 1. Otvorite pakovanje i izvadite TV uređaj.
2. Da bi se izbegla oštećenja TV-a, prekrijte ekran mekim materijalom i stavite ga na ravan sto sa licem na dole i mekim materijalom ispod, bazu postolja pričvrstite sa šarafima.
3. Šarafe dobro pričvrstite kako bi se postolje dobro uklopilo uz TV
4. Instalacija je kompletna

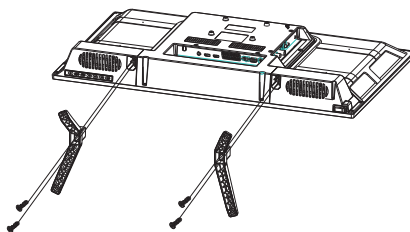


# Čarobnjak za podešavanje

 
Podešavanje sistema će se pojaviti kada prvi put uključite TV. Obavite podešavanje u skladu sa vodičem na ekranu. Pritisnite taster **OK** da biste započeli podešavanje.

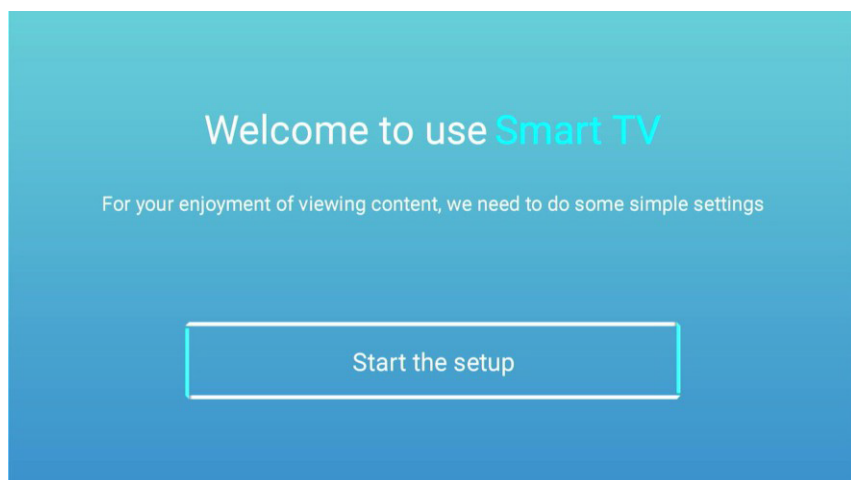

 
Pritisnite taster ▼ / ▲ da izaberete jezik.

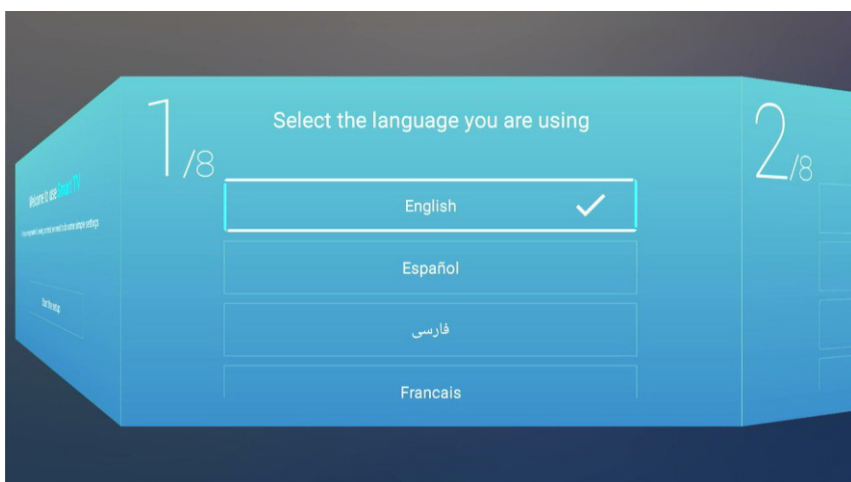

 
Pritisnite taster ◀ / ▶ da izaberete državu.

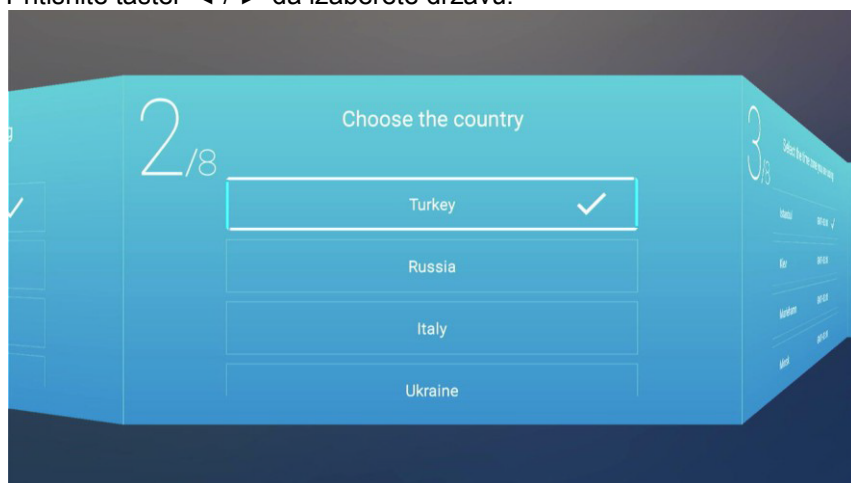

 
Pritisnite taster ◀ / ▶ da izaberete Vremensku zonu

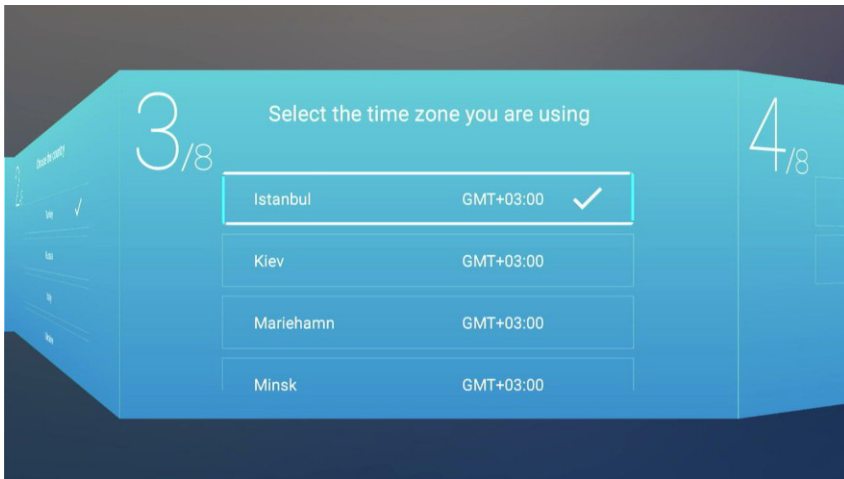

 
Pritisnite taster ◀ / ▶ da izaberete režim Početna/Prodavnica.

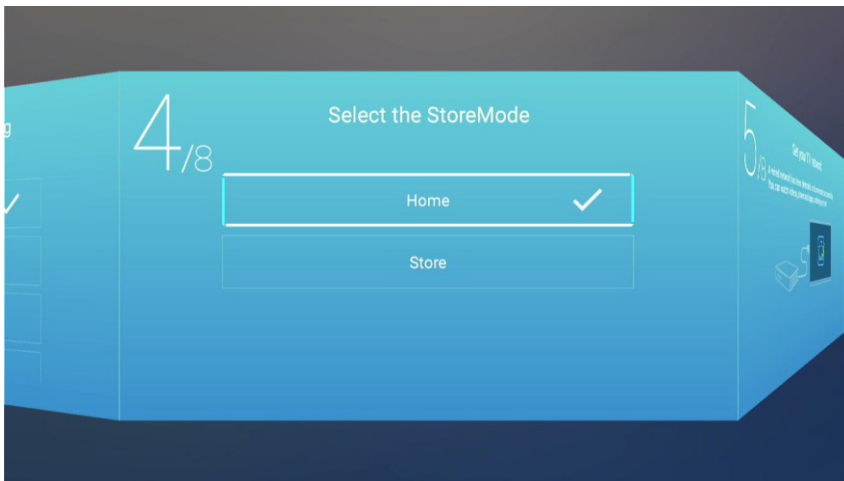

 
Pritisnite taster ◀ / ▶ da izaberete Podesite svoju TV mrežu.

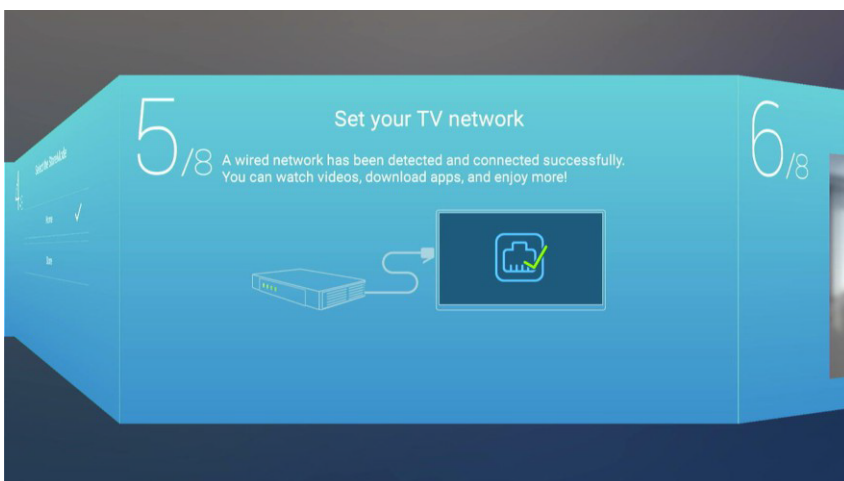

 Pritisnite taster ◀ / ▶ da izaberete Povežite TV pomočnika.

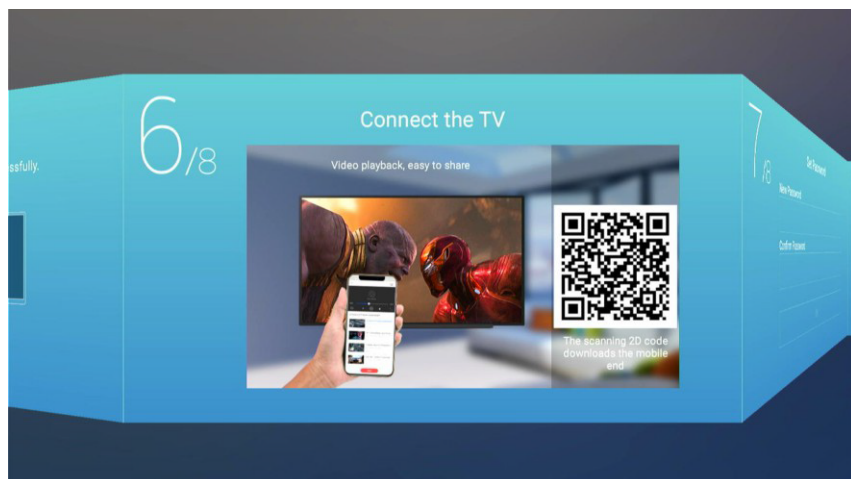

 Pritisnite taster ◀ / ▶ da izaberete Postavite lozinku (podrazumevana lozinka je 1234).

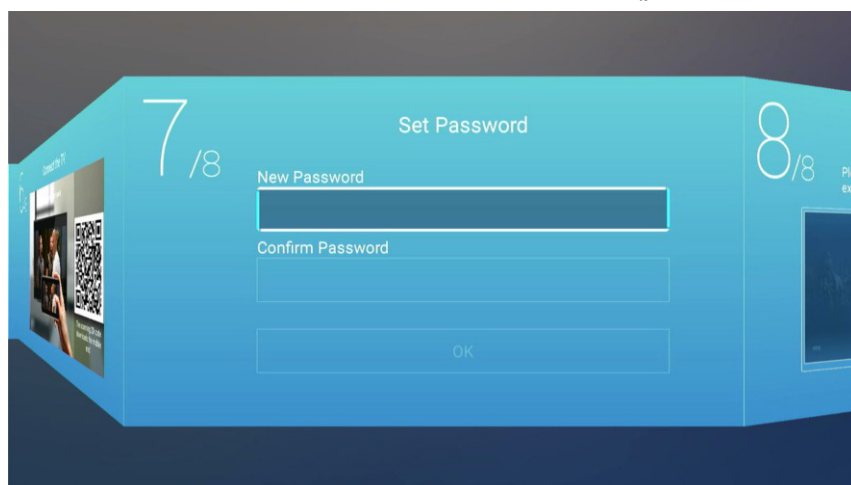


Pritisnite dugme ◀ / ▶ da izaberete Vodič za gledanje TV-a.

Pritisnite dugme ▼ / ▲ da izaberete način na koji gledate TV programe ili izvor: Početna stranica/DTV/ATV/AV1/AV2/HDMI1/HDMI2/HDMI3.





# Početna stranica

 Pritisnite taster ▼ / ▲ da izaberete Početnu stranicu u Čarobnjaku za podešavanje ili pritisnite taster ◀ / ▶ da izaberete Početnu stranicu u meniju TV ulaza.

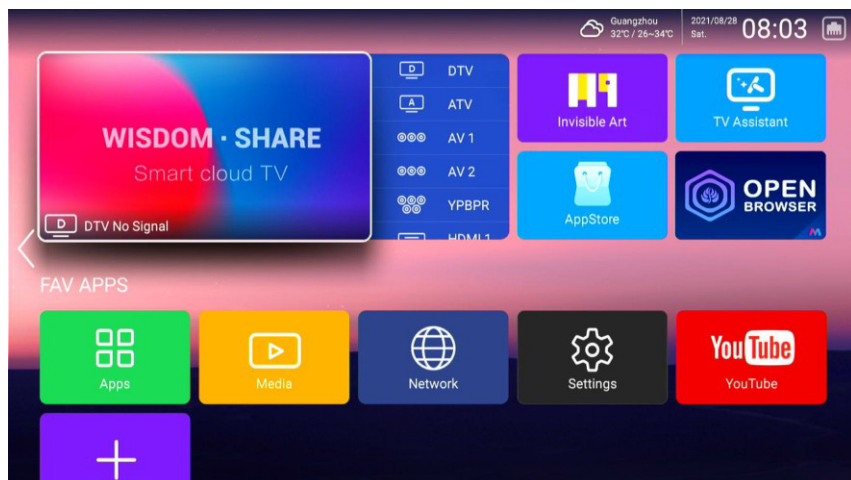


## PODEŠAVANJA

  Pritisnite taster ▼ / ▲ / ◀ / ▶ da izaberete **Podešavanja**, a zatim pritisnite taster **OK** kako biste ušli u Podešavanja sistema. Pritisnite taster ◀ / ▶ da izaberete Mreža/Vreme/Opšte/Informacije o sistemu.

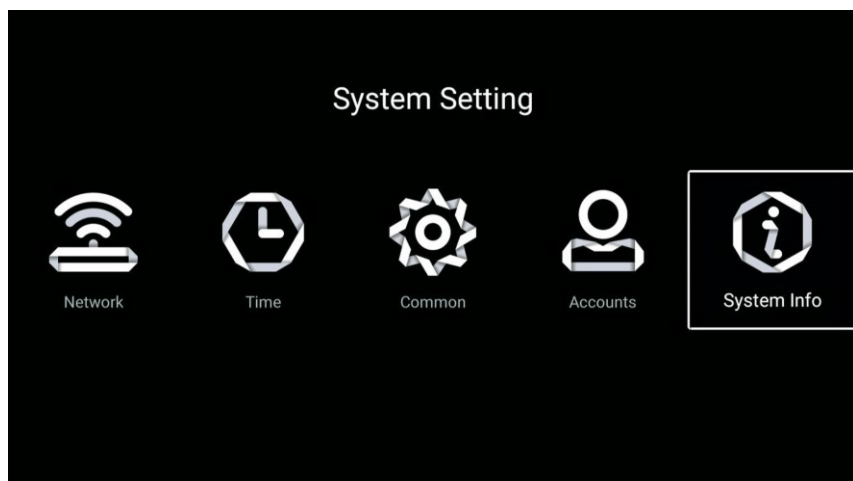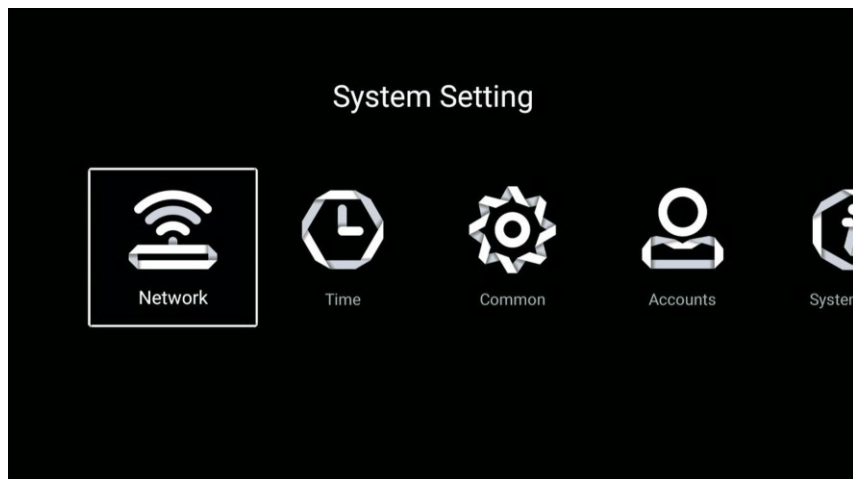



## Mreža

 Pritisnite taster ◀ / ▶ da izaberete Mrežu.

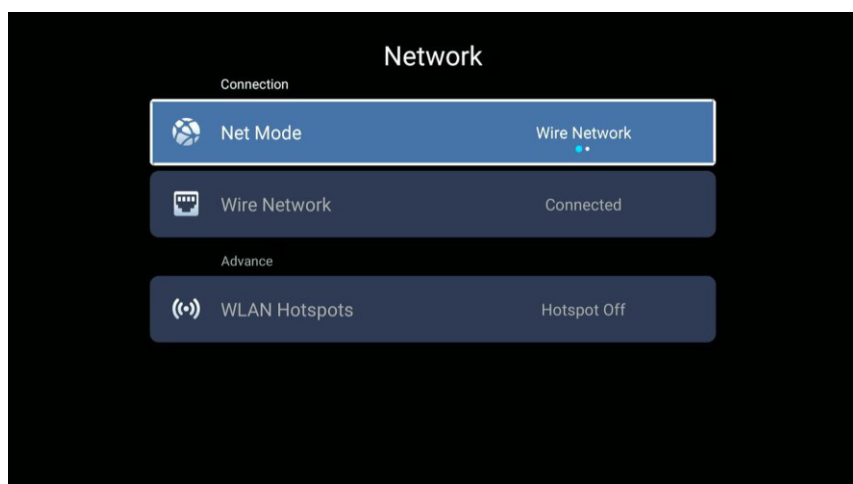

## Vreme

  Pritisnite taster ◀ / ▶ da izaberete Vreme.

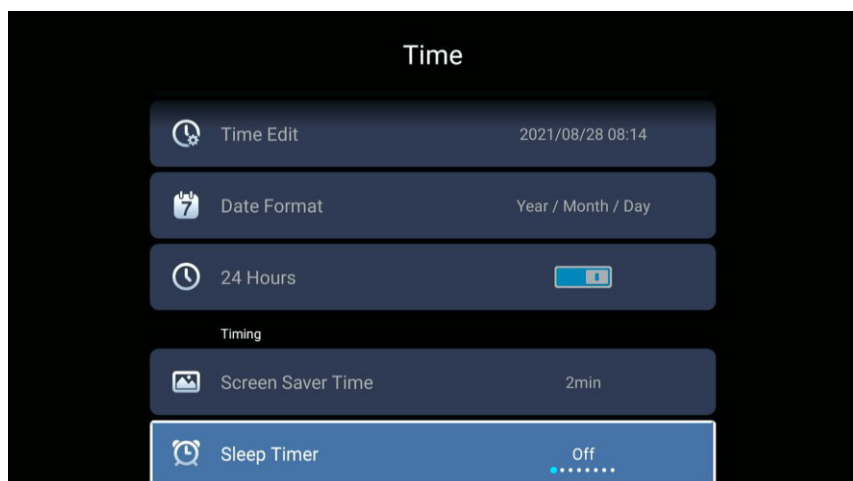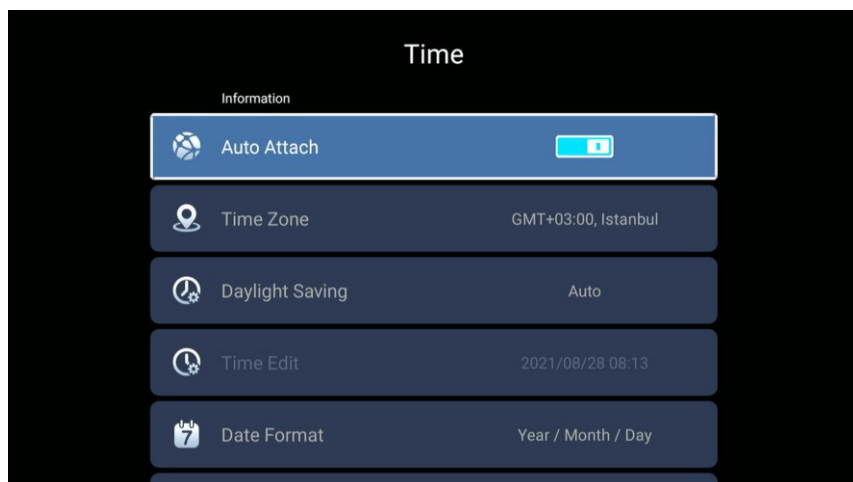


Pritisnite taster ▼ / ▲ da izaberete Auto Attach/Time Zone/Daylight Saving/Time Edit/Date Format/24 Hours/Screen saver time/Sleep Timer.

Auto Attach	Automatski dobijte trenutno vreme i datum.
Time Zone	Podesite trenutnu vremensku zonu.
Daylight Saving	Podesite letnje računanje vremena Automatsko/Uključeno/Isključeno.
Time Edit	Podesite trenutno vreme.
Date Format	Podesite trenutni format datuma.
24 Hours	Izaberite 12-časovni ili 24-časovni format.
Screen saver time	Podesite vreme uključivanja čuvara ekrana na Isključeno/1min/2min/5min.
Sleep Timer	Podesite tajmer za režim spavanja na Isključeno/15min/30min/45min/60min/90min/120min/240min.



## Opšte

 Pritisnite taster ◀ / ▶ da izaberete Opšte.

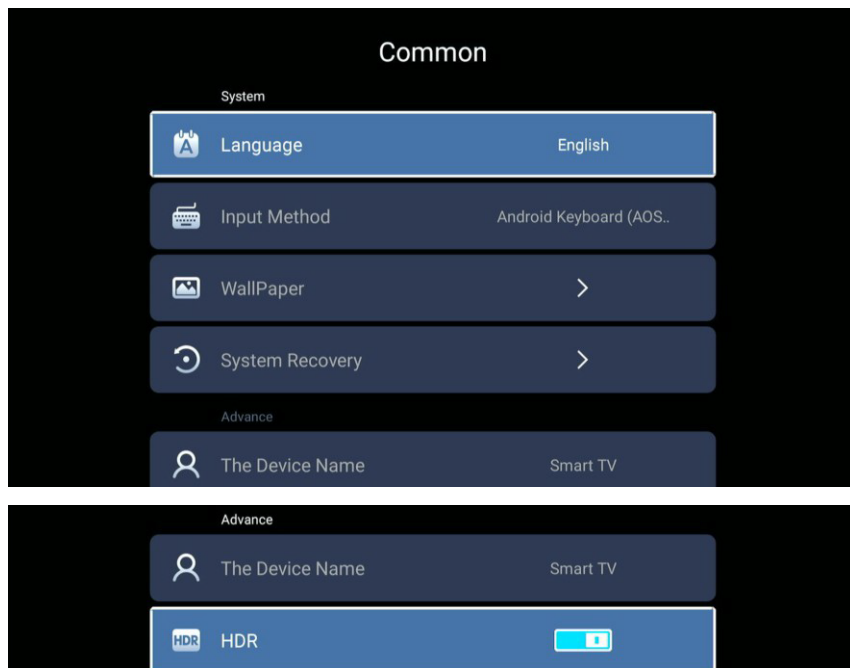


Pritisnite taster ▼ / ▲ da izaberete Language/Input Method/WallPaper/System Recovery/The device name/HDR.

Language	Podesite trenutni jezik prikaza. Podrazumevani jezik je engleski.
Input Method	Podesite metod unosa daljinskog upravljača.
WallPaper	Postavite pozadinu.
System Recovery	Sistem oporavka u prvobitno stanje.
The device name	Podesite naziv uređaja.
HDR	Izaberite HDR Uključeno/Isključeno.



## Nalozi

 Pritisnite taster ◀ / ▶ da izaberete i dodate nalog.

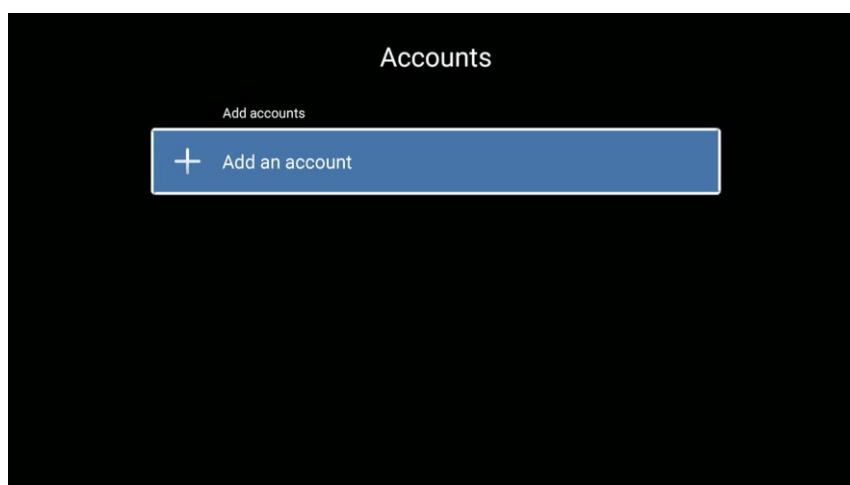


## Informacije o sistemu

  Pritisnite taster ◀ / ▶ da izaberete **Informacije o sistemu**.

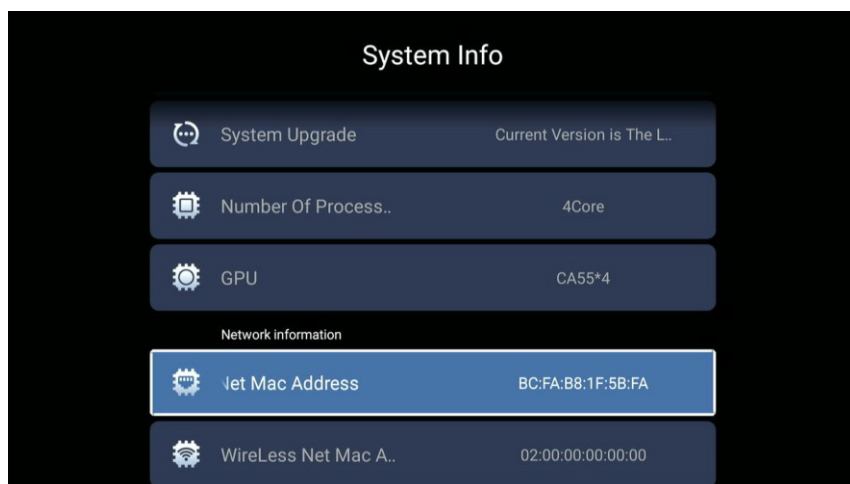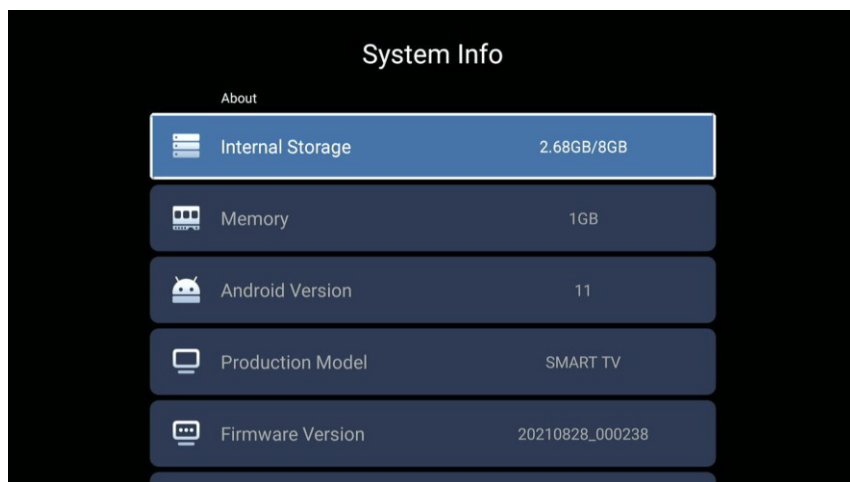


# Mediji

 Pritisnite taster ▼ / ▲ / ◀ / ▶ da izaberete Medije na početnoj stranici ili pritisnite taster **MEDIA** na daljinskom upravljaču i pritisnite taster **OK** kako biste ušli u Media centar. Pritisnite taster ◀ / ▶ da izaberete Sve/Video/Audio/Slika.

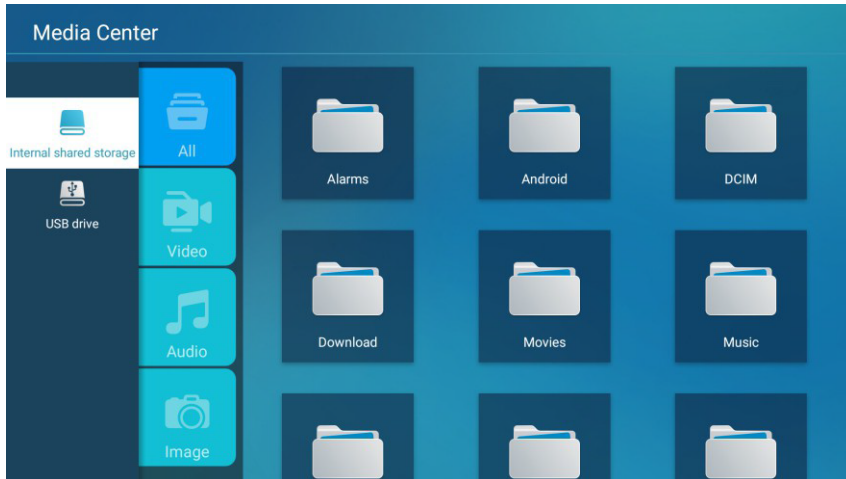

## Video

 Pritisnite taster ▼ / ▲ da izaberete Video ili Sve, a zatim pritisnite taster ▼ / ▲ / ◀ / ▶ da biste izabrali Filmove. Pritisnite taster Meni kako biste prikazali opcije podešavanja na levoj strani.

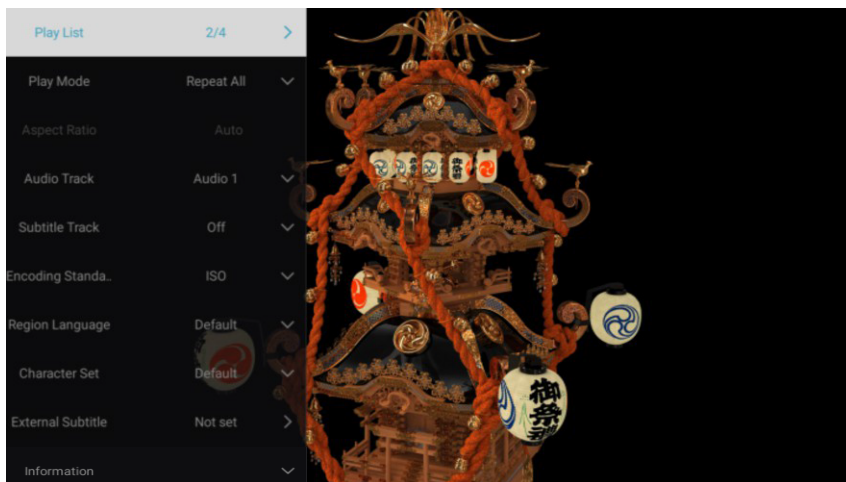

## Play List

Pritisnite taster ▼ / ▲ da izaberete Play List-u i pritisnite taster OK da prikazete sve dostupne video zapise.

## Play Mode

Pritisnite taster ▼ / ▲ da izaberete Play mode i pritisnite taster OK da biste ga izabrali. (Opcije: Ponovi sve / Automatski izlaz / Ponovi jedno / Nasumično / Lista za reprodukciju)

#### Raspon aspekta

Pritisnite taster ▼ / ▲ da izaberete Raspon aspekta.

#### Audio zapis

Pritisnite taster ▼ / ▲ da izaberete Audio zapis i pritisnite taster OK da biste ga izabrali.

#### Traka sa titlovima

Pritisnite taster ▼ / ▲ da izaberete Traku sa titlovima i pritisnite taster OK da biste je izabrali.

#### Standard za kodiranje

Pritisnite taster ▼ / ▲ da izaberete Standard za kodiranje i pritisnite taster OK da izaberete **ISO/WINDOWS**.

#### Regionalni jezik

Pritisnite taster \* / ▲ da biste izabrali Regionalni jezik i pritisnite taster OK da biste ga izabrali.

#### Set znakova

 
Pritisnite taster ▼ / ▲ da izaberete Set znakova i pritisnite taster OK da biste ga izabrali.

#### Eksterni titlovi

Pritisnite taster ▼ / ▲ da biste izabrali Eksterne titlove i pritisnite taster OK da biste ga izabrali.

## Audio

Pritisnite taster ▼ / ▲ da izaberete Audio ili Sve, a zatim pritisnite taster ▼ / ▲ / ◀ / ▶ da biste izabrali Muziku.

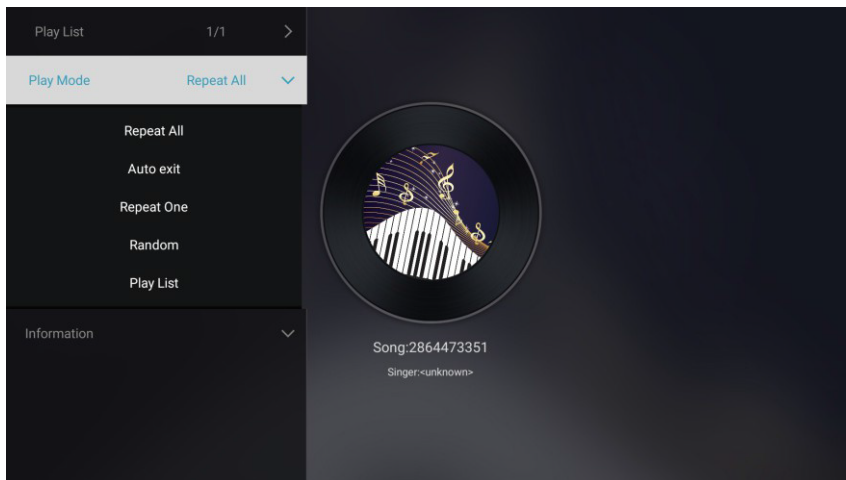

## Play List

Pritisnite taster ▼ / ▲ da izaberete Play List-u i pritisnite taster OK da prikazete sve dostupne audio zapise.

 
## Play Mode

Pritisnite taster ▼ / ▲ da izaberete Play mode i pritisnite taster OK da biste ga izabrali.

(Opcije: Ponovi sve / Automatski izlaz / Ponovi jedno / Nasumično / Lista za reprodukciju)

## Slika

Pritisnite taster ▼ / ▲ da izaberete Slike ili Sve, a zatim pritisnite taster ▼ / ▲ / ◀ / ▶ da biste izabrali Slike.

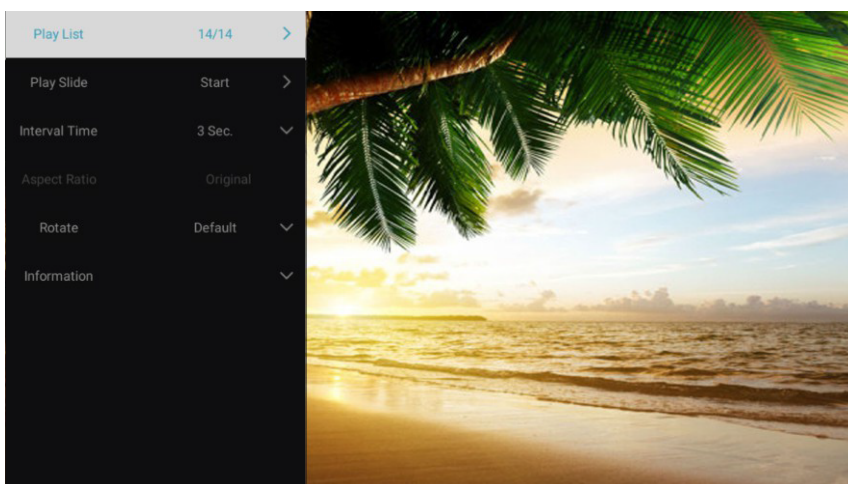

Play List	Prikaz liste slika za reprodukciju.
Play Slide	Možete izabrati da pokrenete projekciju slajdova.
Interval Time	Izaberite interval projekcije slajdova. (Opcionalno: 3/5/8/12 sek.)
Aspect ratio	Podesite raspon aspekta. (Opcionalno: automatsko/ceo ekran/umanjivanje/izvorno/zum1/zum2)
Rotate	Podesite rotaciju. (Opcionalno: Podrazumevano/Rotiraj desno/Rotiraj levo)

# Ulaz

 
Pritisnite taster ▼ / ▲ / ◀ / ▶ da izaberete **Više** pod “**WISDOM SHARE**” na Početnoj stranici.

Pritisnite taster ◀ / ▶ da izaberete DTV/ATV/AV1/AV2/YPBPR/HDMI1/HDMI2/HDMI3.

Ili pritisnite taster **Meni** i pritisnite taster ◀ / ▶ da izaberete Izvor.

Pritisnite taster ▼ / ▲ da izaberete izvor ulaza koji želite.

Pritisnite taster **OK** da biste ušli u meni. Pritisnite taster **EXIT** da biste izašli iz menija.


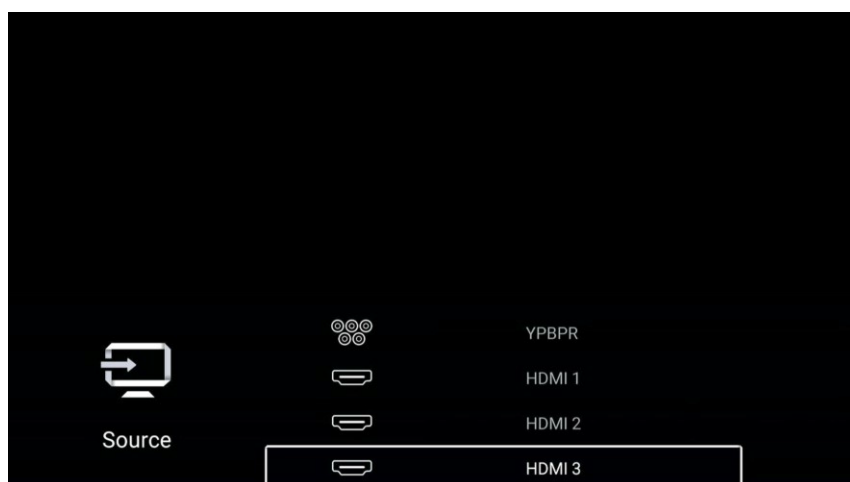


# TV Podešavanja

Pritisnite taster **MENI** kako biste ušli u TV Podešavanja.

Pritisnite taster ◀ / ▶ da biste obeležili željenu ikonicu menija, a zatim pritisnite taster OK da biste je izabrali.

  (Opcionalno: Početna/Izvor/Slika/Zvuk/Kanal/Zaključavanje/Opšte/Napredno)

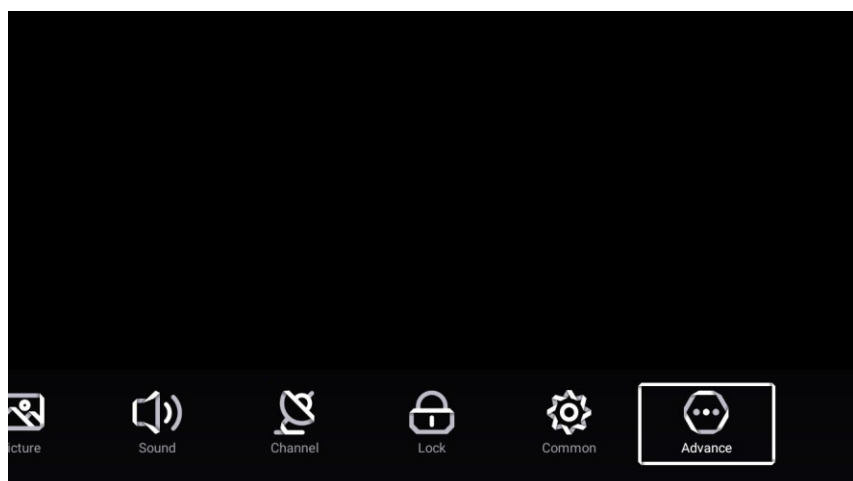
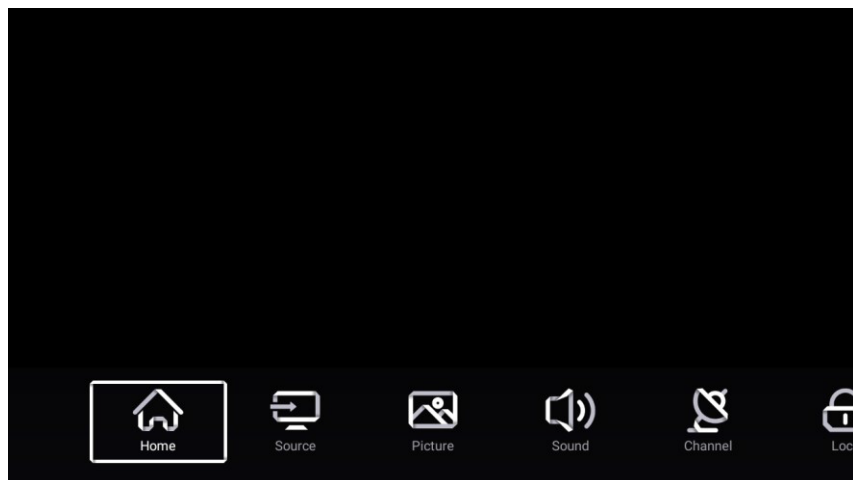


# Slika

Pritisnite taster **MENI** da uđete u glavni meni.

Pritisnite taster ◀ / ▶ da izaberete Sliku.

  Pritisnite taster OK da uđete u podmeni.

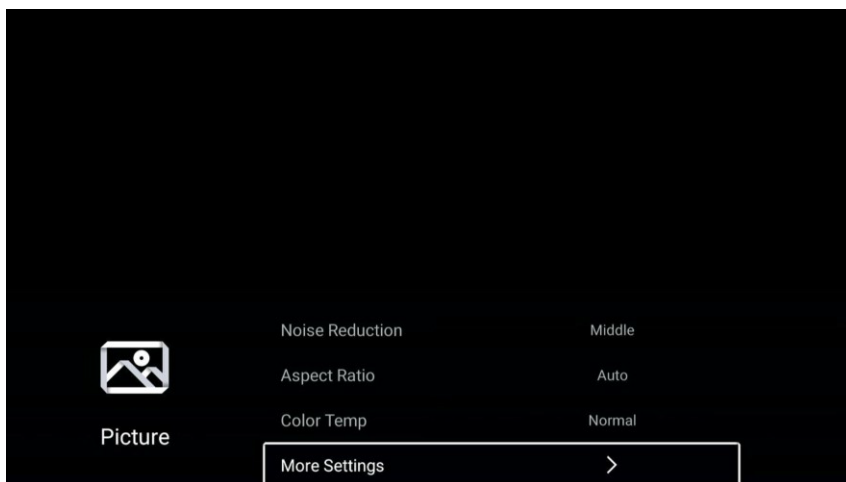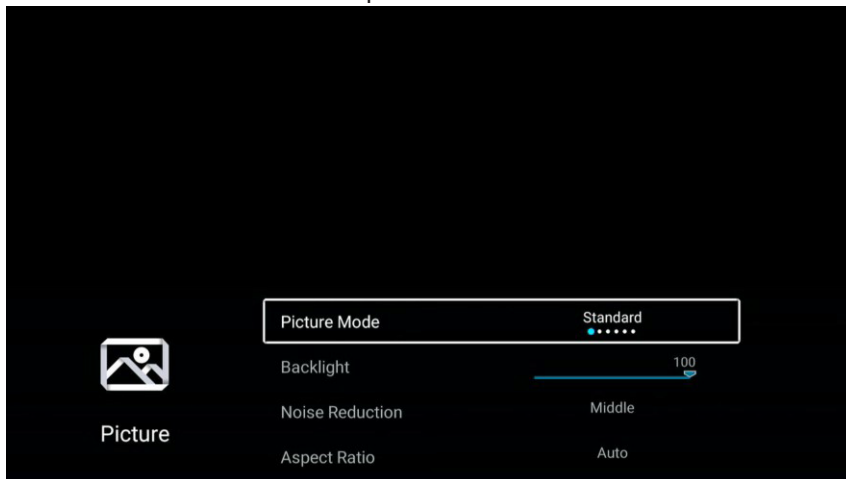

Pritisnite taster ▼ / ▲ da izaberete Režim slike/Kontrast/Osvetljenost/Boja/Oštrina/Pozadinsko osvetljenje/Smanjenje šumatt

Raspon aspekta/Temperatura boje/Više podešavanja.

Pritisnite taster MENI ili EXIT kako biste izašli.



## Režim slike

Označite stavku i pritisnite taster OK da biste ušli u podmeni, koji prikazuje režim slike koji možete izabrati.

Pritisnite taster ◀ / ▶ da izaberete Standard/Dynamic/Vivid/Energy Saving/User.

Standard	Proizvodi standardnu sliku.
Dynamic	Poboljšava kontrast, boju i jasnoću ekrana, tako da će slika u Dynamic režimu uravnotežiti boju.
Soft	Smanjuje kontrast, boju i jasnoću ekrana kako bi ekran dobio mek izgled.
Vivid	Poboljšava kontrast, boju i jasnoću ekrana kako bi boju učinio živopisnijom.
Energy Saving	Smanjuje osvetljenost ekrana, poboljšava kontrast za uštedu energije.
User	Izaberite kako biste prilagodili podešavanja slike.

## Kontrast/Osvetljenost/Boja/Oštrina

Ovi termini su dostupni samo kada je "User" izabran u Režimu slike.

Pritisnite taster ▼ / ▲ da izaberete Contrast/Brightness/Color/Sharpness.

Pritisnite taster ◀ / ▶ za podešavanje.

Contrast	Podesite kontrast slike.
Brightness	Podesite osvetljenost slike.
Color	Podesite intenzitet boje slike.
Sharpness	Podesite oštrinu slike.

## Pozadinsko osvetljenje

Pritisnite taster ▼ / ▲ da izaberete Pozadinsko osvetljenje.

Pritisnite taster ◀ / ▶ za podešavanje.

## Smanjenje šuma (Dostupno samo pod ATV/AV/HDMI izvorom.)

Podesite opcije za uklanjanje intenziteta šuma slike.

Pritisnite taster ▼ / ▲ da izaberete Smanjenje šuma.

Pritisnite taster ◀ / ▶ da izaberete Isključeno/Nisko/Srednje/Visoko/Automatsko.

## Raspon aspekta

Pritisnite taster ▼ / ▲ da izaberete Raspon aspekta.

Pritisnite taster ◀ / ▶ da izaberete 16:9/4:3/Zum1/Zum2.

## Temperatura boje

Podesite sveobuhvatnu boju slike.

Pritisnite taster ▼ / ▲ da izaberete Temperaturo boje.

 
Pritisnite taster ◀ / ▶ da izaberete Cool/Normal/Warm.

Cool	Slika je u korist zeleno-plave i manje crvene boje. Celokupna boja je u korist svetlosti. Slika je svežija i elegantnija.
Normal	Slika ne daje prednost nijednoj boji. Boja je umerena.
Warm	Slika je u korist crveno-zelene i manje plave boje kako bi boja bila živopisnija i mekša.

## Više podešavanja

Pritisnite taster ▼ / ▲ da izaberete Više podešavanja.

Pritisnite taster **OK** da uđete u podmeni.

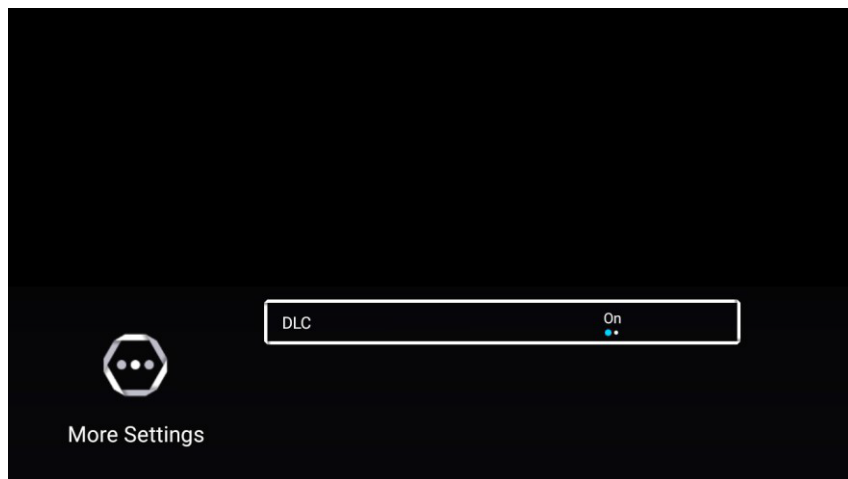

## DLC

Pritisnite taster ▼ / ▲ da izaberete DLC.

 
Pritisnite taster ◀ / ▶ da izaberete Uključeno/Isključeno.

# Zvuk

Pritisnite taster **MENI** da uđete u glavni meni.

Pritisnite taster ◀ / ▶ da izaberete Zvuk.

Pritisnite taster **OK** da uđete u podmeni.

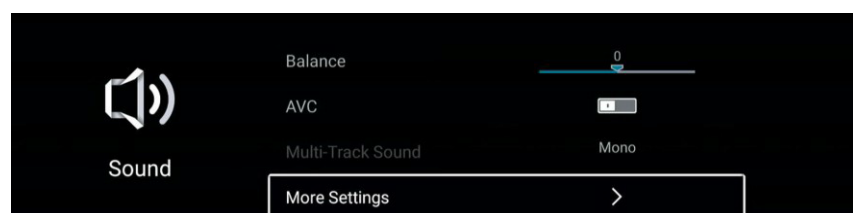

Pritisnite taster ▼ / ▲ da izaberete Sound Mode/Sound Out/Bass/Treble/Balance/AVC/Multi-Track Sound /More Settings.

Pritisnite taster **MENI** ili **EXIT** da biste izašli.

Režim zvuka

Pritisnite taster ▼ / ▲ da izaberete Režim zvuka.

Pritisnite taster ◀ / ▶ da izaberete Standard/Music/Movie/News/User.

Standard	Emituje uravnotežen zvuk pod bilo kojim okolnostima.
Music	Pojačava visok ton i smanjuje bas.
Movie	Poboljšava visoke tonove i bas za bogat doživljaj zvuka.
News	Pojačava glas.
User	Izaberite kako biste prilagodili podešavanja zvuka.

## Izlaz zvuka

Pritisnite taster ▼ / ▲ da izaberete Izlaz zvuka.

Pritisnite taster ◀ / ▶ da izaberete Interni TV zvučnik/SPDIF/HDMI ARC/Slušalice.

**Bas**

Podesite zvukove niske frekvencije.

Pritisnite taster ▼ / ▲ da izaberete Bas. Pritisnite taster ◀ / ▶ da biste ga podesili.

**Visoki tonovi**

Podesite zvukove visoke frekvencije.

Pritisnite taster ▼ / ▲ da izaberete Visoke tonove. Pritisnite taster ◀ / ▶ da biste ih podesili.

**Balans**

Balansirani levi i desni kanali.

Pritisnite dugme ▼ / ▲ da izaberete Balans. Pritisnite dugme ◀ / ▶ da biste ga podesili.

**AVC**

Pritisnite taster ▼ / ▲ da izaberete AVC. Pritisnite taster ◀ / ▶ da izaberete Uključeno/Isključeno.

 
Napomena: Nakon što otvorite "AVC", kada je jačina zvuka podešena, može zadržati jačinu zvuka iz zvučnika stabilnom bez obzira na vrstu razlike između TV zvuka svakog kanala.

**Multi-Taack Zvuk**

Pritisnite taster ▼ / ▲ da izaberete Multi-Taack Zvuk. (Dostupan je samo pod ATV izvorom.)

## Više podešavanja

Pritisnite taster ▼ / ▲ da izaberete Više podešavanja. Pritisnite taster **OK** kako biste ušli u podmeni.

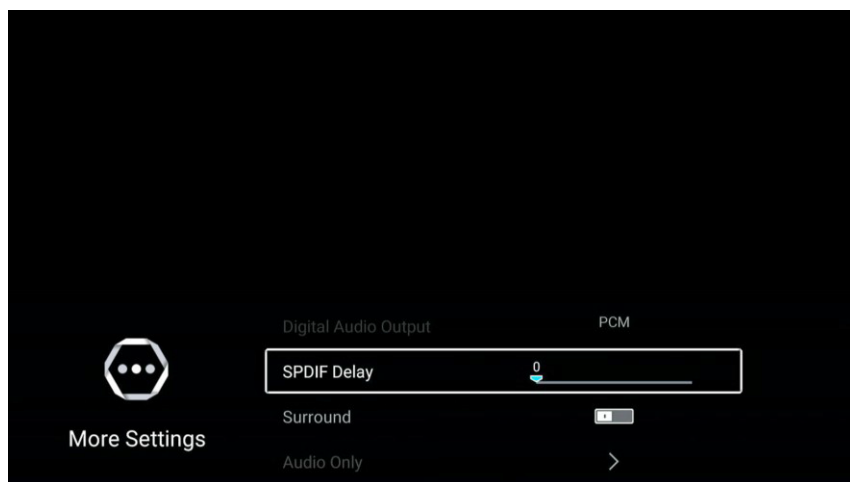

## Digital Audio Output

Pritisnite taster ▼ / ▲ da izaberete Digital Audio Output. Pritisnite taster ◀ / ▶ da izaberete Isključeno/PCM/RAV.

## SPDIF Delay

Pritisnite taster ▼ / ▲ da izaberete SPDIF Delay. Pritisnite taster ◀ / ▶ kako biste izabrali.

## Surround

Pritisnite taster ▼ / ▲ da izaberete Surround. Pritisnite taster ◀ / ▶ da izaberete Uključeno/Isključeno.

## Audio Only

Pritisnite taster ▼ / ▲ da izaberete Audio Only. Pritisnite taster **OK** da uđete u podmeni.

 
## Kanal

Pritisnite taster **MENI** da uđete u glavni meni.

Pritisnite taster ◀ / ▶ kako biste izabrali Kanal.

Pritisnite taster **OK** da uđete u podmeni.

### ATV

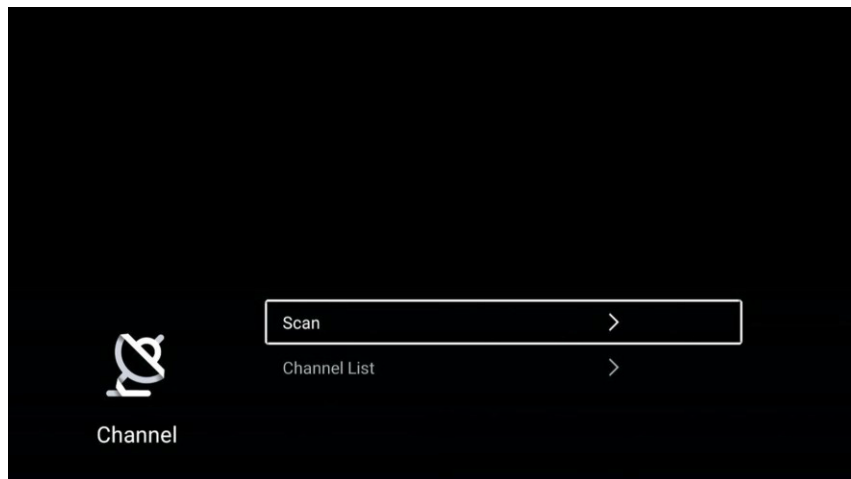


Pritisnite taster ▼ / ▲ da izaberete Skeniranje/Lista kanala.

Pritisnite taster **MENI** ili **EXIT** da biste izašli.

### Skeniranje

 Pritisnite taster ▼ / ▲ da izaberete Skeniranje. Pritisnite taster **OK** kako biste ušli u podmeni.

Pritisnite taster ▼ / ▲ da izaberete Auto Scan/Analog Manual Scan.

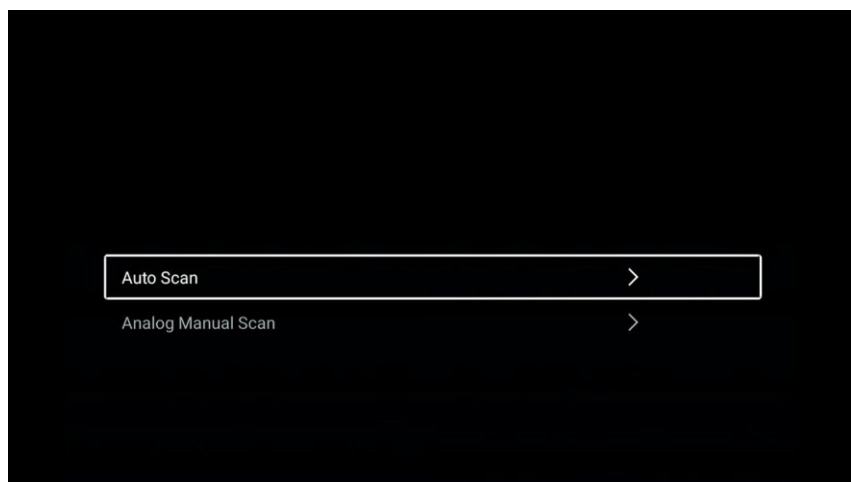


### Automatsko skeniranje

Automatska pretraga može automatski tražiti efektivnu listu programskih kanala.

Pritisnite taster ▼ / ▲ da izaberete Automatsko skeniranje, a zatim pritisnite taster **OK** kako biste pokrenuli automatsku pretragu.

 Ako želite da prekinete pretragu, pritisnite taster **EXIT** ili **MENI** da biste zaustavili pretragu.

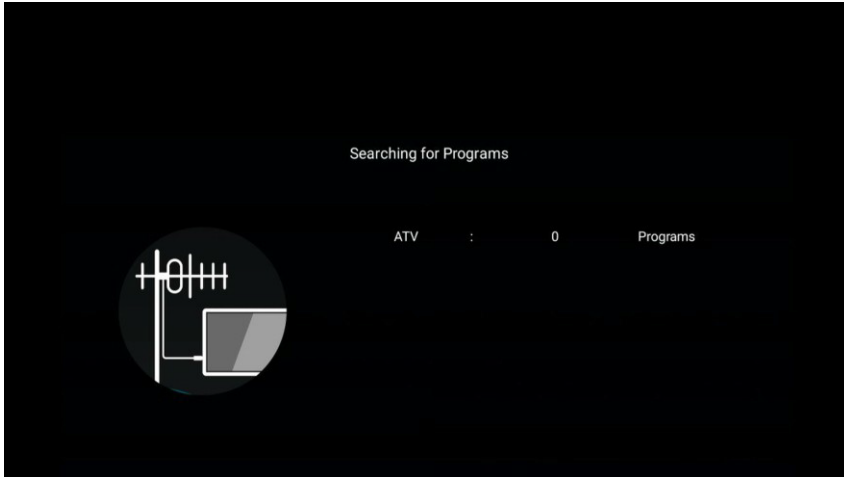


### Analogno ručno skeniranje

Analogna ručna pretraga može ručno tražiti kanal efektivnog simulacionog programa.

Može se izabrati samo u ATV ulazu.

Pritisnite taster ▼ / ▲ da izaberete Analogno ručno skeniranje i pritisnite taster **OK** kako biste ušli u podmeni.

 Pritisnite taster **EXIT** ili **MENI** da biste prekinuli pretragu.

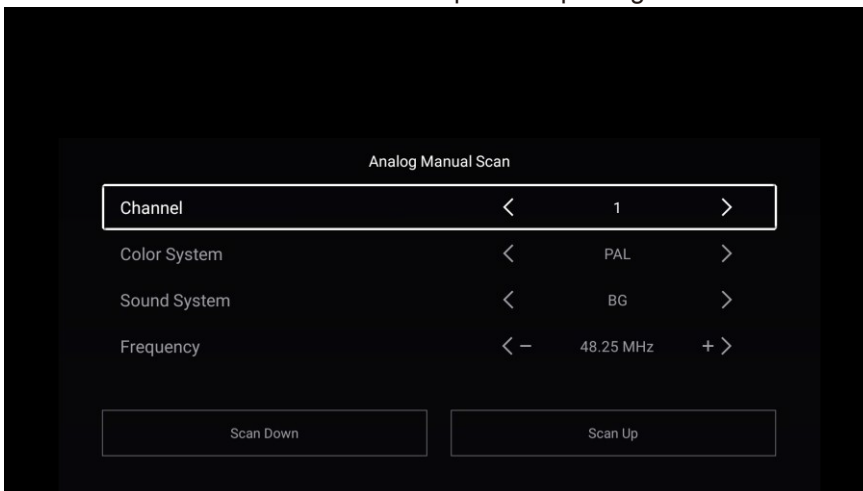

### Kanal

Pritisnite taster ▼ / ▲ da izaberete Kanal. Pritisnite taster ◀ / ▶ da izaberete broj kanala.

### Sistem boja

Pritisnite taster ▼ / ▲ da izaberete Sistem boja. Pritisnite taster ◀ / ▶ da izaberete PAL/SECAM/NTSC/Automatsko.

### Sistem zvuka

Pritisnite taster ▼ / ▲ da izaberete Sistem zvuka. Pritisnite taster ◀ / ▶ da izaberete DK/BG/I/L/M/N.

 
 
### Frekvencija

Pritisnite taster ▼ / ▲ da izaberete Frekvenciju. Pritisnite taster ◀ / ▶ za podešavanje.

## Lista kanala

Pogledajte sve postojeće programe.

Pritisnite taster ▼ / ▲ da izaberete Listu kanala. Pritisnite taster **OK** da uđete u podmeni.

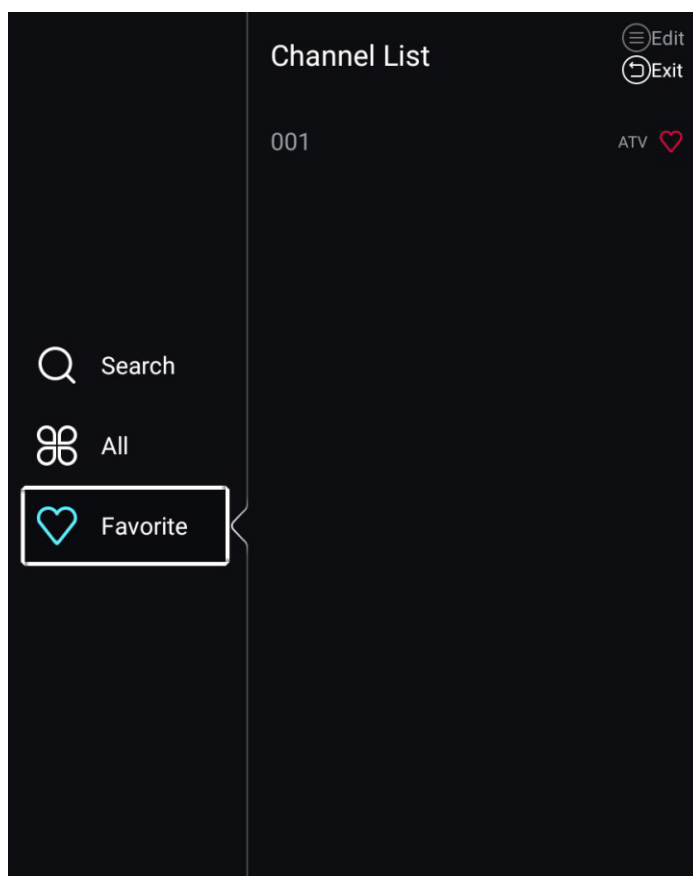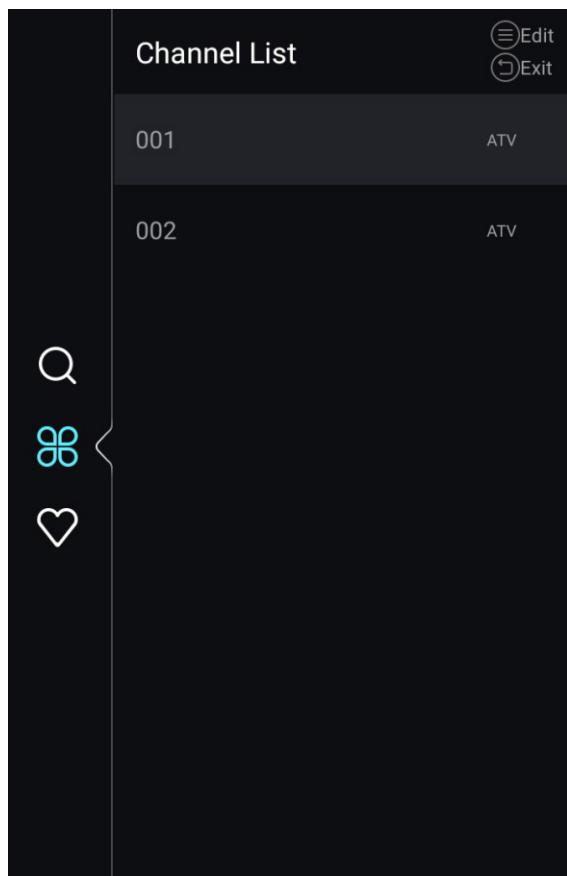

Pritisnite taster ▼ / ▲ kako biste izabrali Sve/Omiljeno.

### Sve

Pritisnite taster ▼ / ▲ da izaberete Sve. Pritisnite taster **MENI** kako biste uredili program.

(Opcionalno: Pomeri/Na vrh/Omiljeno/Preimenuj/Izbriši/Preskoči.)

Ako je program izabran u vidu analognog signala, program se može preimenovati.

 
 
### Omiljeno

Pritisnite taster ▼ / ▲ da izaberete Omiljeno. Pritisnite taster **MENI** da uredite omiljeni kanal.

(Opcionalno: Omiljeno/Preimenuj/Izbriši.)



## DTV

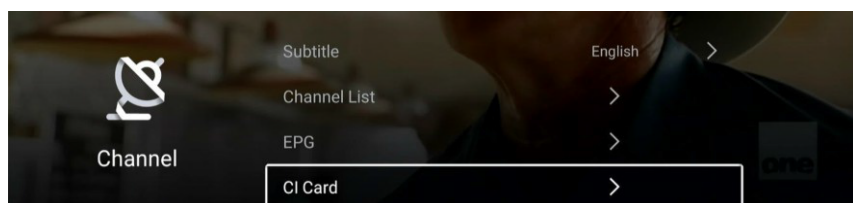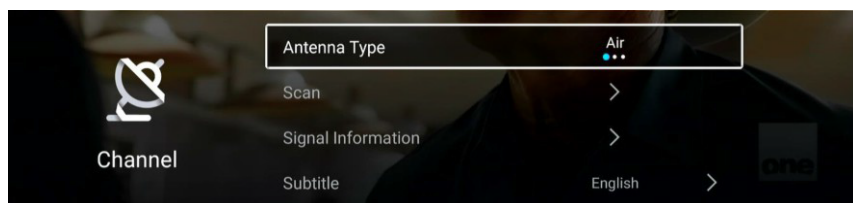

Pritisnite taster ▼ / ▲ da izaberete Tip antene/Skeniranje/Informacije o signalu/Titl/Lista kanala/EPG/CI kartica.  
Pritisnite taster **MENI** ili **EXIT** kako biste izašli.


### Tip antene

 Pritisnite taster ▼ / ▲ da izaberete Tip antene. Pritisnite taster ◀ / ▶ da izaberete Air/Cable/Satellite.

### Skeniranje

Pritisnite taster ▼ / ▲ da izaberete Skeniranje. Pritisnite taster **OK** kako biste ušli u podmeni.

Pritisnite taster ▼ / ▲ da izaberete Auto Scan/Digital Manual Scan.

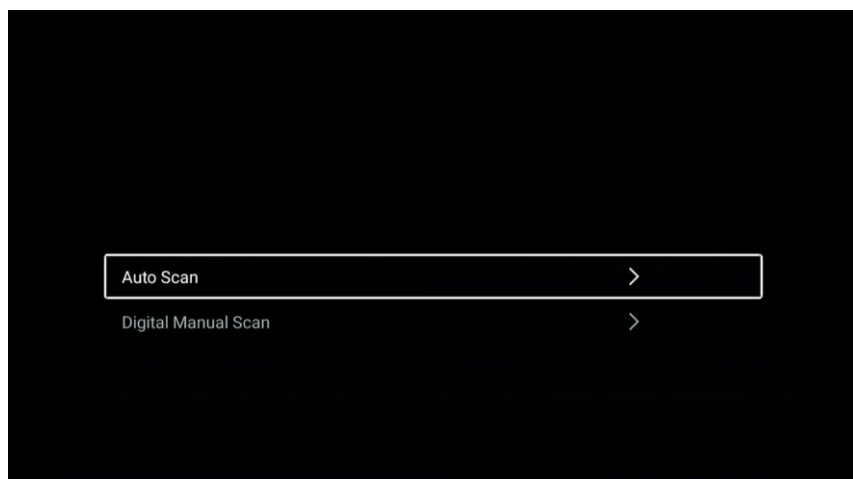


## Automatsko skeniranje

Automatska pretraga može automatski tražiti efektivnu listu programskih kanala.

Pritisnite taster ▼ / ▲ da izaberete Automatsko skeniranje, a zatim pritisnite taster **OK** kako biste pokrenuli automatsku pretragu.

 Ako želite da prekinete pretragu, pritisnite taster **EXIT** ili **MENI** da biste zaustavili pretragu.

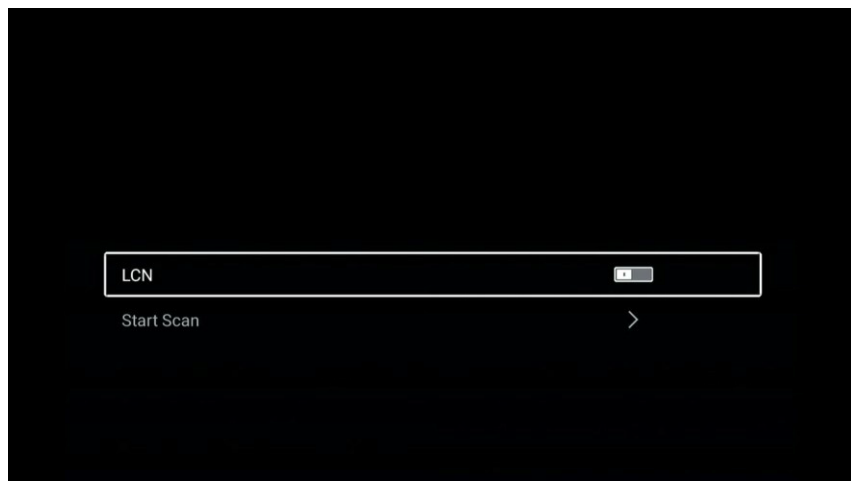


## LCN

Pritisnite taster ▼ / ▲ da izaberete LCN. Pritisnite taster ◀ / ▶ da izaberete Uključeno/Isključeno.

## Pokretanje skeniranja

 Pritisnite taster ▼ / ▲ da izaberete Pokretanje skeniranja. Pritisnite taster ◀ / ▶ kako biste pokrenuli automatsko skeniranje.

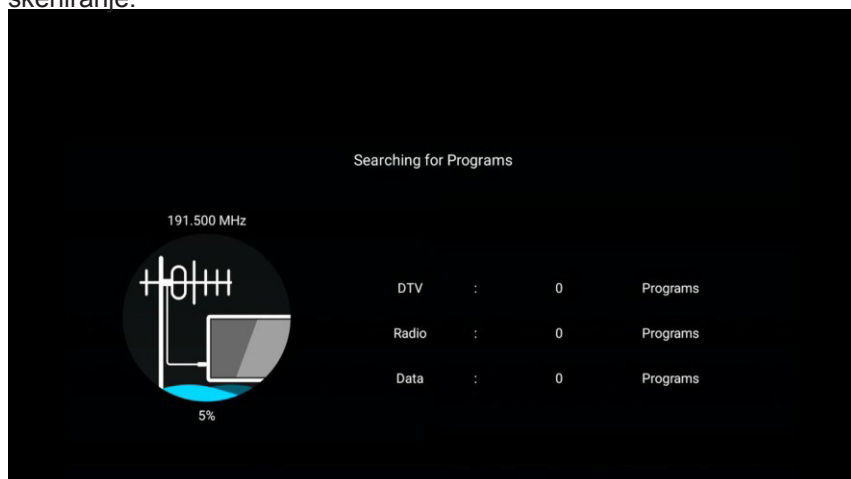


## Digitalno ručno skeniranje

Digitalna ručna pretraga može ručno tražiti kanal efektivnog simulacionog programa.

Pritisnite taster ▼ / ▲ da izaberete Digitalno ručno skeniranje i pritisnite taster **OK** da biste ušli u podmeni.

 Pritisnite taster **EXIT** ili **MENI** da biste zaustavili pretragu

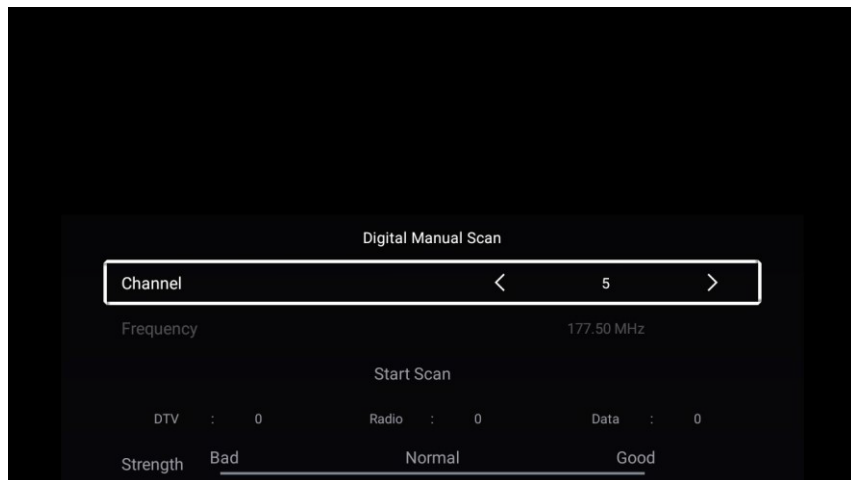

## Informacije o signalu

Pritisnite taster ▼ / ▲ da izaberete Informacije o signalu. Pritisnite taster ENTER&▼ / ▲ da izaberete prikaz.

 
 
## Titl

Pritisnite taster ▼ / ▲ da izaberete Titl. Pritisnite taster ENTER&▼ / ▲ da biste izabrali.

## Lista kanala

Pogledajte sve postojeće programe.

Pritisnite taster ▼ / ▲ da izaberete Listu kanala. Pritisnite taster **OK** da uđete u podmeni.

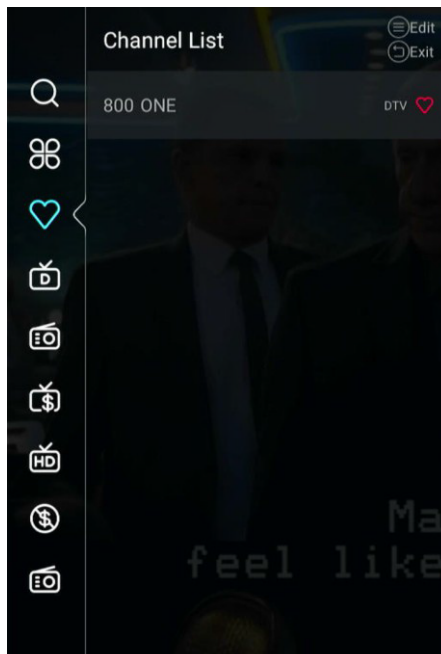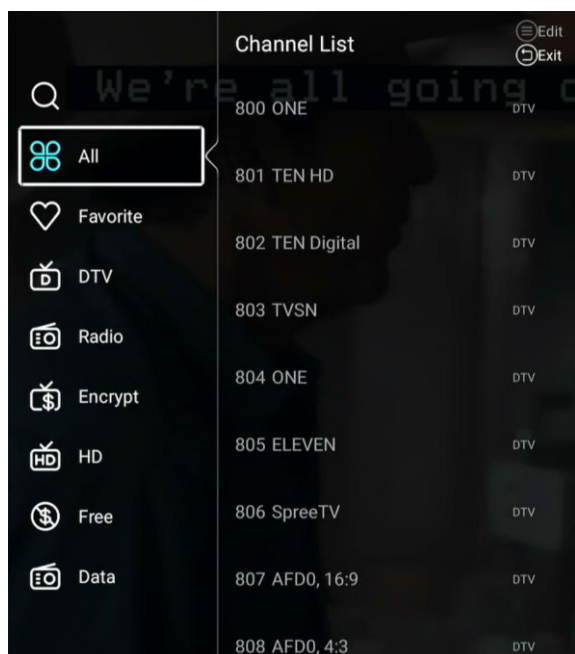

Pritisnite taster ▼ / ▲ da izaberete All/Favorite/DTV/Radio/ Encrypt/HD/Free/Data.

### Sve

Pritisnite taster ▼ / ▲ da izaberete Sve. Pritisnite taster **MENI** da biste uredili program.

(Opcionalno: Omiljeno/Izbriši/Preskoči.)

Ako je program izabran u vidu analognog signala, program se može preimenovati.

### Omiljeno

 
Pritisnite taster ▼ / ▲ da izaberete Omiljeno. Pritisnite taster **MENI** da uredite omiljeni kanal.

(Opcionalno: Omiljeno/Izbriši.)

ATV/DTV/Radio/Encrypt/HD/Free/Data su vrsta programa.

### EPG

Pritisnite taster ▼ / ▲ da izaberete EPG. Pritisnite taster **MENI** da uđete u podmeni.

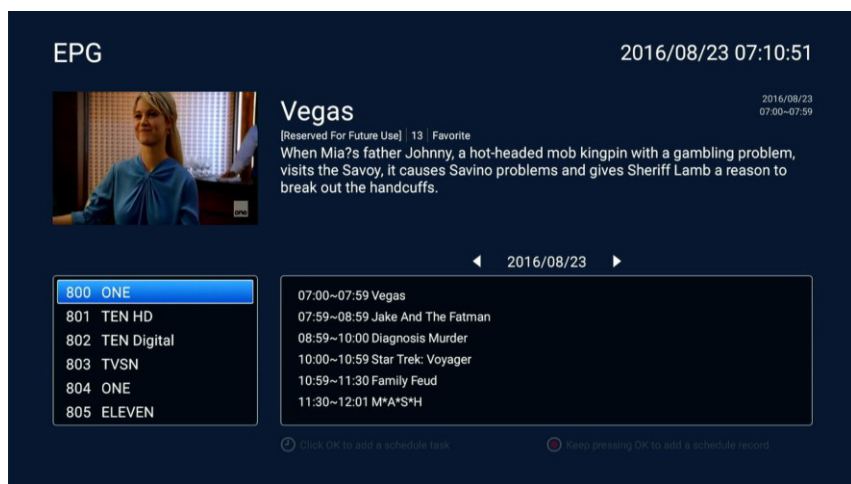


### CI kartica

Pritisnite taster ▼ / ▲ da izaberete CI karticu da vidite i podesite informacije o CI kartici.

## DVB-S

 U DTV izvoru, podesite tip antene kao satelit. (Dostupan je samo sa DVB-S funkcijom.)

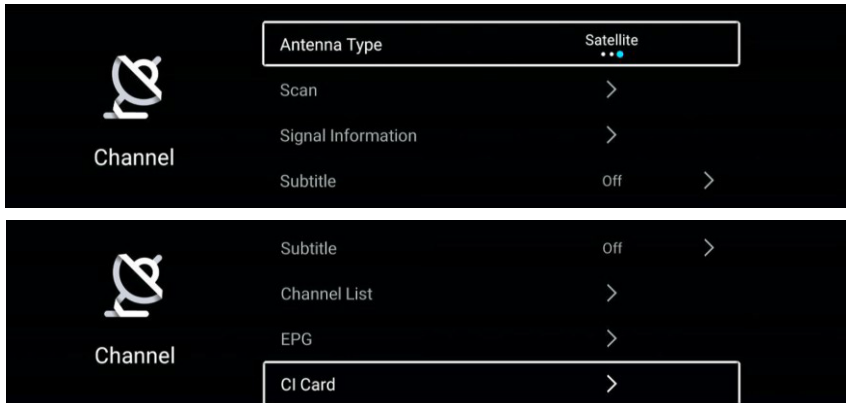

Pritisnite taster ▼ / ▲ da izaberete Tip antene/Skeniranje/Informacije o signalu/Titl/Lista kanala/EPG/CI kartica. Pritisnite taster **MENI** ili **EXIT** da biste izašli.



### Tip antene

  Pritisnite taster ▼ / ▲ da izaberete Tip antene. Pritisnite taster ◀ / ▶ da izaberete Air/Cable/Satellite.

### Skeniranje


Pritisnite taster ▼ / ▲ da izaberete Skeniranje.

Pritisnite taster **OK** da uđete u podmeni. i pritisnite taster ▼ / ▲ da izaberete parametar.

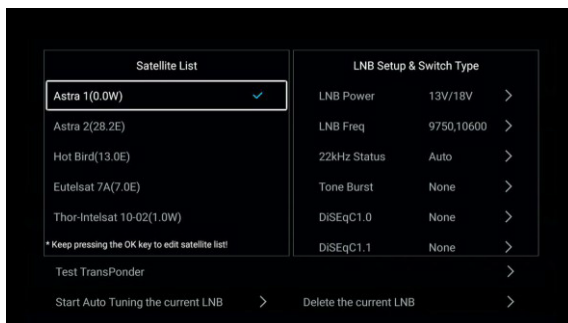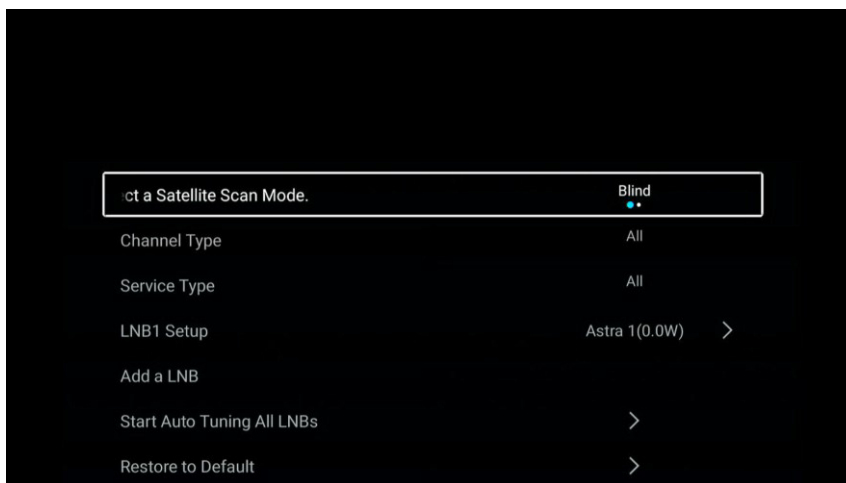

## Pokretanje automatskog podešavanja svih LNB-ova

 Pritisnite taster ▼ / ▲ da izaberete i pritisnite taster OK kako biste započeli skeniranje za pretragu programa.

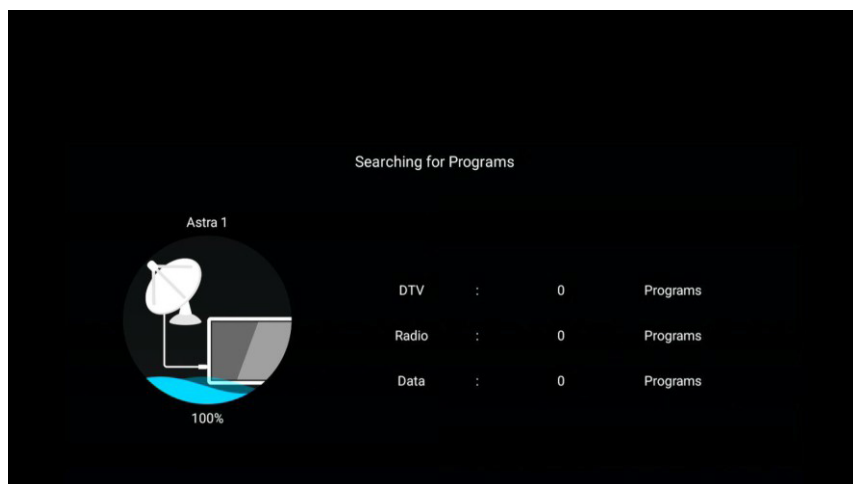

## Informacije o signalu

Pritisnite taster ▼ / ▲ da izaberete Informacije o signalu. Pritisnite taster ENTER&▼ / ▲ da izaberete prikaz.

 
 
## Titl

Pritisnite taster ▼ / ▲ da izaberete Titl. Pritisnite taster ENTER&▼ / ▲ da biste izabrali.

## Lista kanala

Pogledajte sve postojeće programe.

Pritisnite taster ▼ / ▲ da izaberete Listu kanala. Pritisnite taster OK da uđete u podmeni.

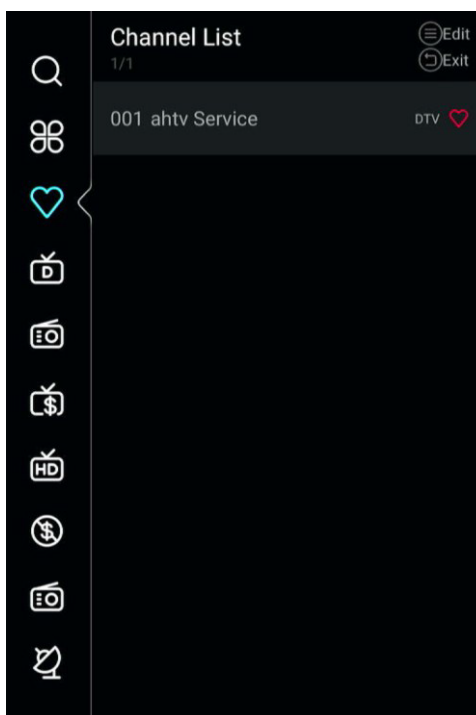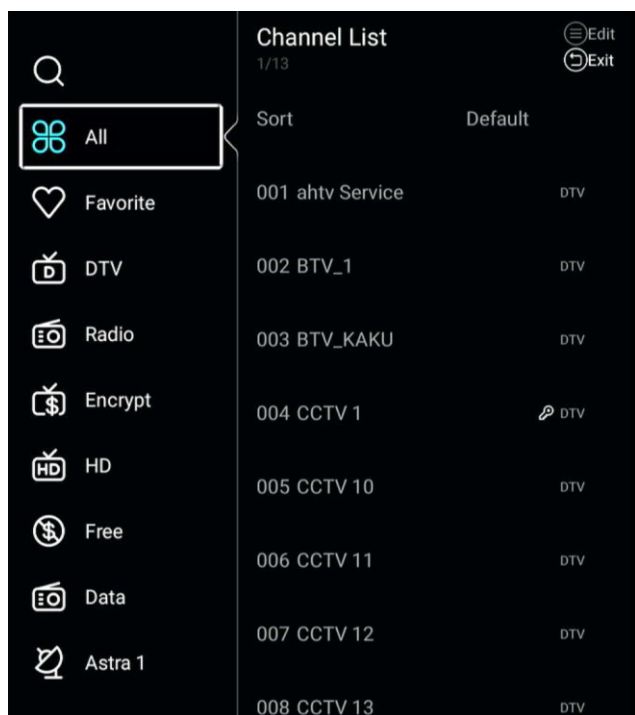

Pritisnite taster ▼ / ▲ da izaberete All/Favorite/DTV/Radio/Data/Encrypt/HD/Free/Astra1.

### Sve

Pritisnite taster ▼ / ▲ da izaberete Sve. Pritisnite taster **MENI** kako biste uredili program.  
(Opcionalno: Pomeri/Na vrh/Omiljeno/Izbriši/Preskoči.)

### Omiljeno

 
Pritisnite taster ▼ / ▲ da izaberete Omiljeno. Pritisnite taster **MENI** da uredite omiljeni kanal.  
(Opcionalno: Omiljeno/Izbriši.)

ATV/DTV/Radio/Encrypt/HD/Free/Data/Astra1 su vrste programa.

Astra1 je dostupna samo kada se Astra1 LNB doda u meni "Skeniranje".

### EPG (Isto kao i "DTV" izvor)

Pritisnite taster ▼ / ▲ da izaberete EPG. Pritisnite taster **MENI** da uđete u podmeni.

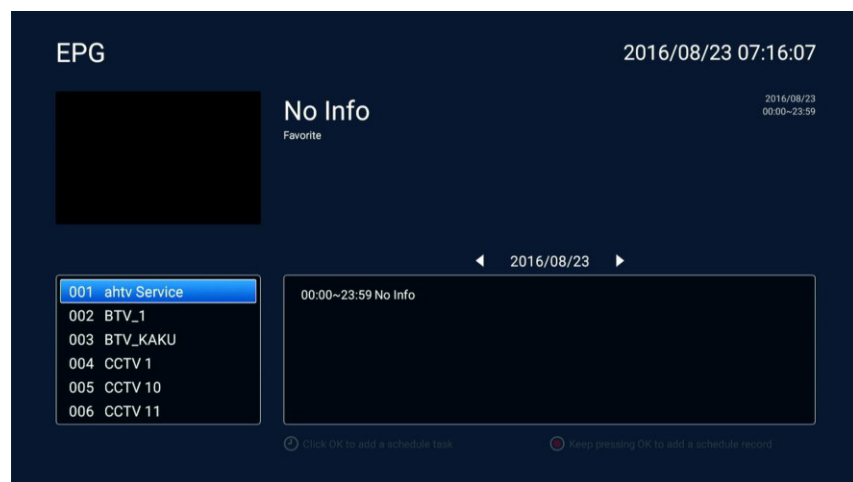

### CI kartica

 
 
Pritisnite taster ▼ / ▲ da izaberete CI karticu da vidite i podesite informacije o CI kartici.

## Zaključavanje

Pritisnite taster **MENI** da uđete u glavni meni.

Pritisnite taster ◀ / ▶ da izaberete Zaključavanje.

Pritisnite taster **OK** da unesete lozinku za ulazak u podmeni. (Podrazumevana lozinka je 1234).

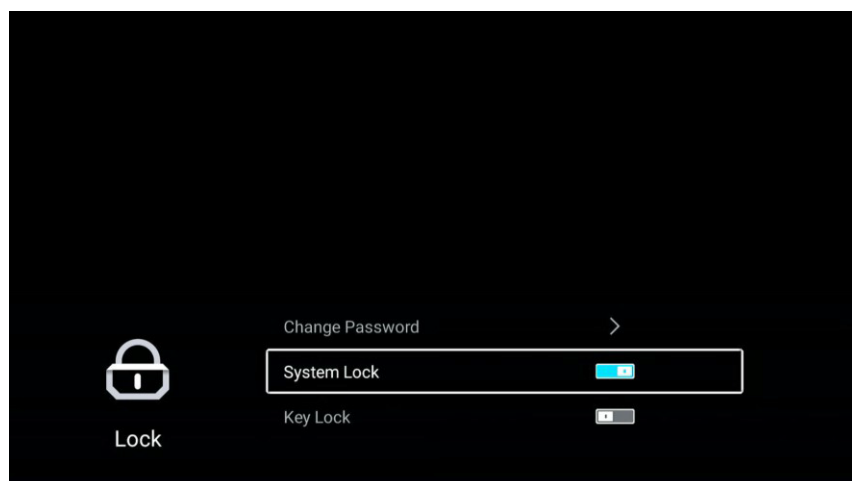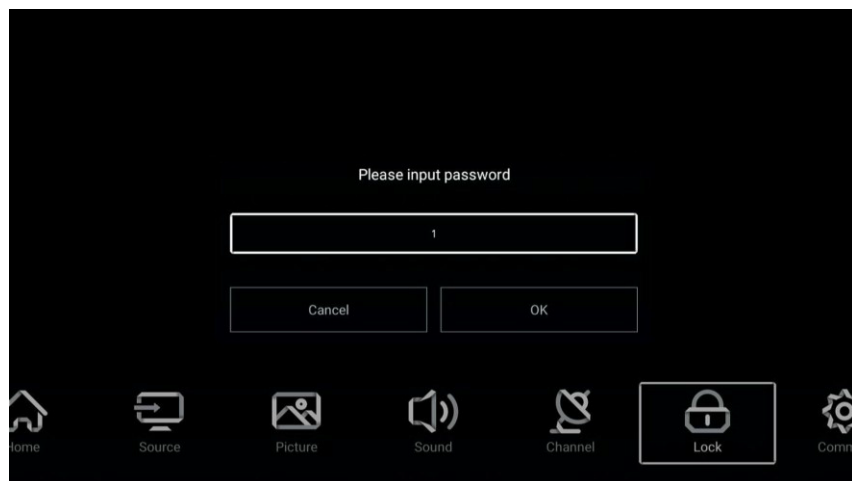

Pritisnite taster ▼ / ▲ da izaberete Promena lozinke/Zaključavanje sistema/Zaključavanje tastera.

### Promena lozinke

Pritisnite taster ▼ / ▲ da izaberete Promenu lozinke. Pritisnite taster **ENTER** da postavite lozinku.

### Zaključavanje sistema

Pritisnite taster ▼ / ▲ da izaberete Zaključavanje sistema. Pritisnite taster ◀ / ▶ da izaberete Uključeno/Isključeno.

### Zaključavanje tastera

Pritisnite taster ▼ / ▲ da izaberete Zaključavanje tastera. Pritisnite taster ◀ / ▶ da izaberete Uključeno/Isključeno.

 
 
 


## Opšte

Pritisnite taster **MENI** da uđete u glavni meni.

Pritisnite taster ◀ / ▶ da izaberete Opšte.

Pritisnite taster **OK** da uđete u podmeni.

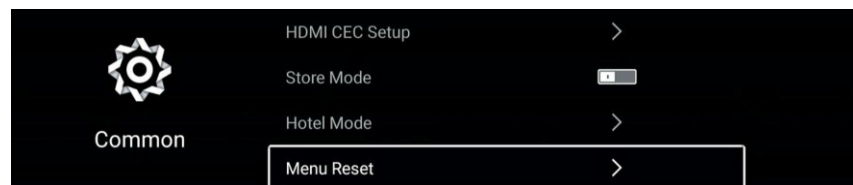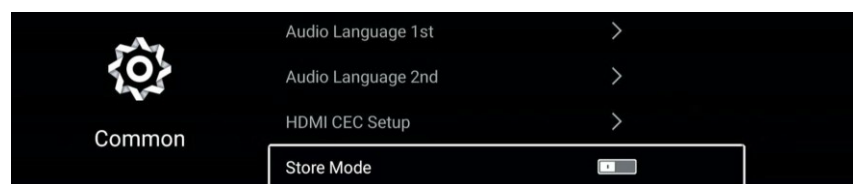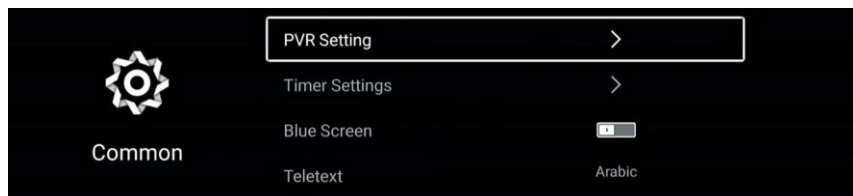

Pritisnite taster ▼ / ▲ da izaberete PVR Setting/Timer Settings/Blue Screen/Teletext/Audio Language 1./Audio Language 2./ Subtitle Language 1./ Subtitle Language 2./ HDMI CEC Setup/ Store Mode/Hotel Mode/MenuReset.

### PVR podešavanje

Pritisnite taster ▼ / ▲ da izaberete PVR podešavanje.

Pritisnite taster ▼ / ▲ da izaberete Select Disk/Format/Speed/Record List/Schedule List.

Pritisnite taster **ENTER** da uđete u podmeni.

 
### Podešavanja tajmera

Pritisnite taster ▼ / ▲ da izaberete podešavanja tajmera.

Pritisnite taster ▼ / ▲ da izaberete OSD tajmer/ Tajmer automatskog mirovanja/ Tajmer za režim spavanja/ Tajmer za isključivanje/ Vreme isključivanja/ Tajmer za uključivanje/Vreme uključivanja.

Pritisnite taster **ENTER** da uđete u podmeni.

(Napomena: Tajmer za isključenje/ Tajmer za uključivanje predstavljaju opcione funkcije.)

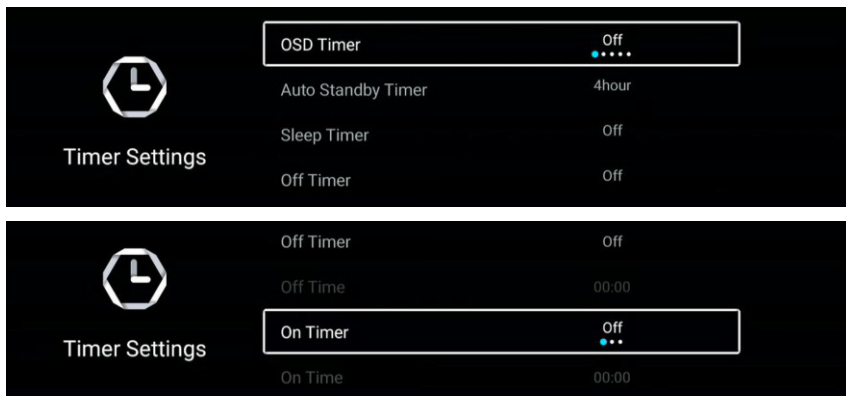

### OSD tajmer

Pritisnite taster ▼ / ▲ da izaberete OSD tajmer.

Pritisnite taster ◀ / ▶ da izaberete Isključeno/5sec/15sec/30sec/40sec.

### Tajmer automatskog mirovanja

Pritisnite taster ▼ / ▲ da izaberete Tajmer automatskog mirovanja.

Pritisnite taster ◀ / ▶ da izaberete Isključeno/3 sata/4 sata/5 sati.

### Tajmer za režim spavanja

Pritisnite taster ▼ / ▲ da izaberete Tajmer za režim spavanja.

Pritisnite taster ◀ / ▶ da izaberete Isključeno/15min/30min/45min/60min/90min/120min/240min.

### Tajmer za isključivanje

Pritisnite taster ▼ / ▲ da izaberete Tajmer za isključivanje.

Pritisnite taster ◀ / ▶ da izaberete Isključeno/Jednom/Ponedeljak~Nedelja/Ponedeljak~Petak/Ponedeljak~Subota/subota~nedelja/nedelja.

Ako je funkcija uključena, možete podesiti **Vreme isključivanja**.

### Tajmer za uključivanje

Pritisnite taster ▼ / ▲ da izaberete Tajmer za uključivanje.

Pritisnite taster ◀ / ▶ da izaberete Isključeno/Jednom/Ponedeljak~Nedelja

Ako je funkcija uključena, možete podesiti **Vreme uključivanja**.

**Plavi ekran**

Postavite boju pozadine na plavu kada nema ulaznog signala.

Pritisnite taster ▼ / ▲ da izaberete Plavi ekran. Pritisnite taster ◀ / ▶ da izaberete Uključeno/Isključeno.

**Teletext**

Pritisnite taster ▼ / ▲ da izaberete Teletext.

Pritisnite taster ◀ / ▶ da izaberete arapski/istočni/zapadni evropski/farsi/ruski.

**Audio jezik 1**

Pritisnite taster ▼ / ▲ da izaberete Audio jezik 1. Pritisnite taster ENTER&▼ / ▲ da izaberete audio jezik.

**Audio jezik 2**

Pritisnite taster ▼ / ▲ da izaberete Audio jezik 2. Pritisnite taster ENTER&▼ / ▲ da izaberete audio jezik.

**Titl jezik 1**

Pritisnite taster ▼ / ▲ da izaberete Titl jezik 1. Pritisnite taster ENTER&▼ / ▲ da izaberete jezik titla.

 
**Titl jezik 2**

Pritisnite taster ▼ / ▲ da izaberete Titl jezik 2. Pritisnite taster ENTER&▼ / ▲ da izaberete jezik titla.

## HDMI CEC podešavanje

Pritisnite taster ▼ / ▲ da izaberete HDMI CEC podešavanje.

Pritisnite taster **OK** da uđete u podmeni.

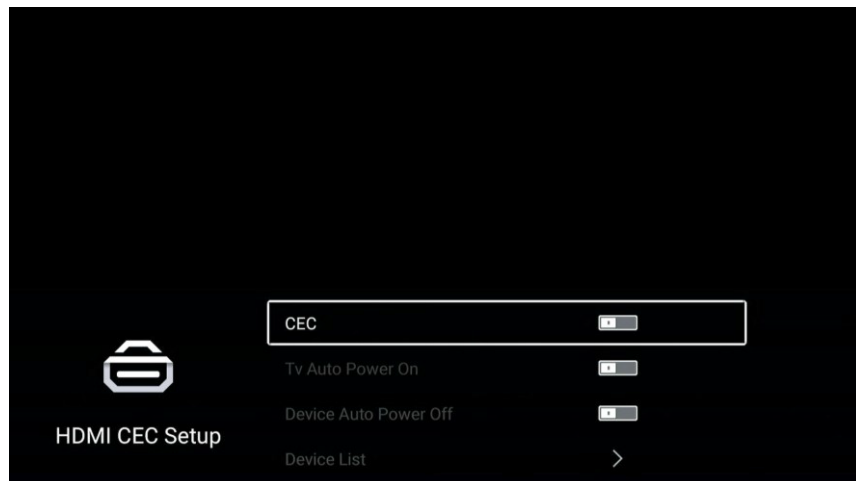

Pritisnite taster ▼ / ▲ da izaberete CEC/TV automatsko uključivanje/automatsko isključivanje uređaja/Lista uređaja.

Napomena: Sve opcije su dostupne samo kada je CEC **uključen**.

### CEC

Pritisnite taster ▼ / ▲ da izaberete CEC, a pritisnite taster ◀ / ▶ da izaberete Uključeno/Isključeno.

Sledeći uslovi su dostupni samo kada je CEC "Uključen".

### TV Automatsko uključivanje

Pritisnite taster ▼ / ▲ da izaberete TV automatsko uključivanje, a pritisnite taster ◀ / ▶ da izaberete Uključeno/Isključeno.

### Automatsko isključivanje uređaja

Pritisnite taster ▼ / ▲ da izaberete Isključivanje uređaja, a zatim pritisnite ◀ / ▶ da izaberete Uključeno/Isključeno.

### Lista uređaja

 
 
 
Pritisnite taster ▼ / ▲ da izaberete Listu uređaja, a zatim pritisnite taster ENTER da biste ušli.

### Režim prodavnice

Pritisnite taster ▼ / ▲ da izaberete Režim prodavnice. Pritisnite ◀ / ▶ da biste izabrali.

## Hotelski režim

Pritisnite taster ▼ / ▲ da izaberete Hotelski režim.  
Pritisnite taster OK da uđete u podmeni.

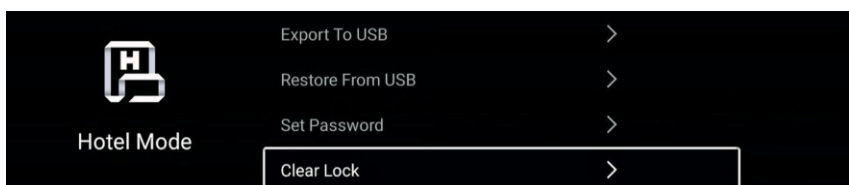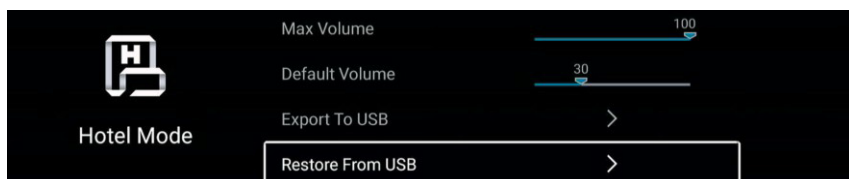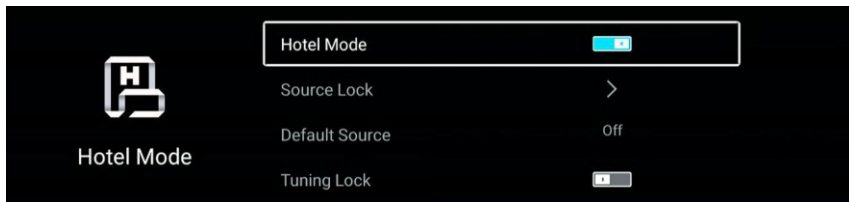

### Hotelski režim

Pritisnite taster ▼ / ▲ da izaberete Hotelski režim, a zatim pritisnite taster ◀ / ▶ da izaberete UKLJUČENO/ISKLJUČENO.  
Drugi meni dostupan samo u Hotelskom režimu postavljenom na "UKLJUČENO".

### Zaključavanje izvora

Pritisnite taster ▼ / ▲ da izaberete **Zaključavanje izvora**, a zatim pritisnite taster ENTER da uđete u podmeni.  
Pritisnite taster ▼ / ▲ da izaberete i pritisnite ENTER da odredite da li ćete zaključati ili ne.

### Podrazumevani izvor

Pritisnite taster ▼ / ▲ da izaberete **Podrazumevani izvor**, a zatim pritisnite taster ◀ / ▶ da izaberete.  
(Isključeno / DTV / ATV/AV 1 / AV 2/YPBPR / HDMI 1 / HDMI 2 / HDMI 3).

### Zaključavanje podešavanja

Pritisnite taster ▼ / ▲ da izaberete **Zaključavanje podešavanja**, a zatim pritisnite taster ◀ / ▶ da izaberete UKLJUČENO/ISKLJUČENO.

### Maksimalna jačina zvuka

Pritisnite taster ▼ / ▲ da izaberete **Maksimalnu jačinu zvuka**, a zatim pritisnite taster ◀ / ▶ kako biste je prilagodili.

### Podrazumevana jačina zvuka

Pritisnite taster ▼ / ▲ da izaberete **Podrazumevanu jačinu zvuka**, a zatim pritisnite dugme ◀ / ▶ kako biste je prilagodili.

### **Izvoz na USB**

Umetnite USB uređaj i pritisnite taster ▼ / ▲ da izaberete **Izvoz na USB**, a zatim pritisnite taster **OK** kako biste izvezli podatke.

### **Vraćanje sa USB-a**

Umetnite USB uređaj i pritisnite taster ▼ / ▲ da izaberete **Vraćanje sa USB-a**, a zatim pritisnite taster **OK** kako biste vratili podatke sa USB-a.

### **Podešavanje lozinke**

Pritisnite taster ▼ / ▲ da izaberete **Podešavanje lozinke**, a zatim pritisnite taster **ENTER** za podešavanje.

### **Brisanje zaključavanja**

Pritisnite taster ▼ / ▲ da izaberete **Brisanje zaključavanja**, a zatim pritisnite taster **ENTER** da izaberete.

## Režim prodavnice

 
Pritisnite taster ▼ / ▲ da izaberete Režim prodavnice. Pritisnite ◀ / ▶ da izaberete Uključeno/Isključeno.

## Resetovanje menija

Povraćaj podrazumevanih podešavanja.

Pritisnite taster ▼ / ▲ da izaberete Reset menija.

Pritisnite taster OK da uđete u podmeni.

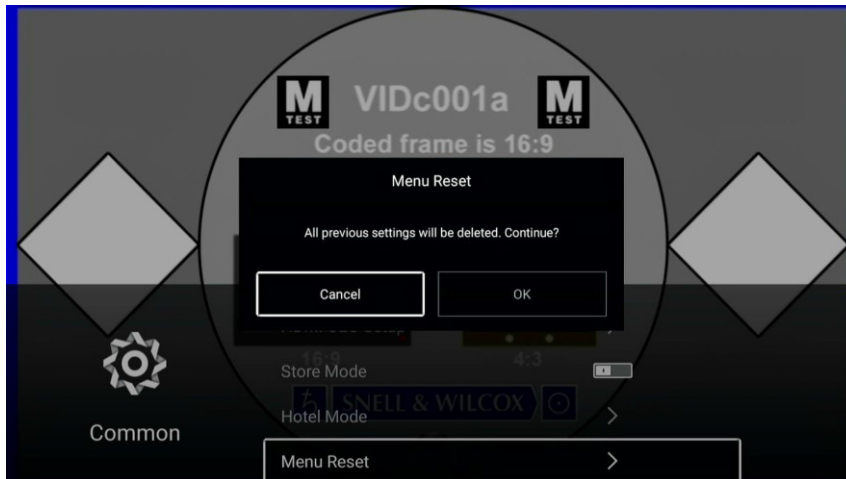

## Napredno

Pritisnite taster **MENI** da uđete u glavni meni.

Pritisnite taster ◀ / ▶ da izaberete Napredno.

Pritisnite taster OK kako biste ušli u Sistemske postavke.

(Molimo pogledajte Početnu stranicu - deo vezan za Podešavanje)

# Pomoć

Nema struje	Proverite da li je kabl za napajanje TV-a uključen. Ukoliko I dalje nema struje isključite ga I nakon 60 sek. uključite ponovo.
Signal nije pravilno primljen	Moguće je da se prikaže dvostruka slika ili fantomska slika ako postoji visoka zgrada ili planina u blizini. Možete ručno podesiti sliku, sledite uputstva kablovskog operatera ili promenite smer spoljnih kanala. Ukoliko koristite unutrašnju antenu, u određenim okolnostima prijem može biti otežavajući. Možete promeniti smer antene da poboljšate sliku. Ukoliko signal I dalje nije dobar moraćete da koristite spoljnu antenu.
Nema slike	Proverite da li je antena sa zadnje strane televizora povezana ispravno. Pokušajte da izaberete neki drugi kanal da proverite da li je problem u nečem drugom.
Slika je dobra, ali nema zvuka	Povećajte jačinu zvuka. Proverite da li je TV u pripravnosti I pritisnite MUTE taster kako bi se zvuk vratio.
Zvuk se dobro čuje ali boje nisu realne ili nema slike	Povećajte kontrast I svetlinu.
Dolazi do zamrzavanja slike I zvuka	Proverite da li je antena na zadnjoj strani televizora povezana ili ne.
Poremećen nivo zvuka	Električni uređaji, kao npr.fen, može uticati na jačinu zvuka. Isključite sve električne uređaje koji emituju buku.
Televizor ne reaguje na daljinski upravljač	Položaj antene nije dobar. Pokušajte da promenite položaj antene. Uperite daljinski upravljač direktno na senzor signala na TV-u. Ukoliko I dalje ne reaguje proverite da li ste skinuli foliju sa daljinskog upravljača I proverite da li su baterije dobro postavljene. TV će se prebaciti u stanje pripravnosti nakon par minuta ukoliko nema reakcije na daljinski upravljač.
Nema video signala (PC Režim)	Proverite da li je kabl ispravno povezan na VGA. Proverite da li ima oštećenja na kablju.
Treperenje na ekranu (PC Režim)	Uđite u glavni meni, upotrebite regulator sata za prikazivanje zvuka kako biste uklonili treperenje.
Horizontalne smetnje (PC Režim)	Podesite Audio zvuk horizontalni u glavnom meniju da uklonite horizontalne smetnje.
Ekran je previse svetao ili taman (PC Režim)	Podesite kontrast ili svetlinu u glavnom meniju.
Funkcija PC režim ne reaguje)	Proverite Podešavanja kompijutera za kompatibilnu rezoluciju ekrana.
Prilikom povezivanja na RCA se pojavljuju linije	Koristite kvalitetniji kabl za povezivanje.
Problem I dalje postoji	Isključite kabl napajanja I sačekajte 30 sekundi, a zatim uključite ponovo. Ukoliko imate problem sa TV uređajem, ne pokušavajte da ga popravite sami. Obratite se specijalizovanom servisu.

Ne ostavljate na televizoru statičnu sliku, bilo da je sa pauziranog ekrana , video menija itd tokom dužeg vremenskog perioda, to će oštetiti ekran I može prouzrokovati gorenje slike.



# Specifikacija

Veličina ekrana	Potrošnja električne energije	Dodaci
24"	31W/36W/40W	Uputstvo za upotrebu x1 Daljinski upravljač x1 Naponski kabl x1 AAA Baterija x2
32"	32W/40W/56W	
39"/40"	60W/70W/76W/90W	
42"	65W/67W/70W/90W	
43"	70W/80W/90W	
50"	100W/108W/120W	
55"	110W/118W/135W	
58"	120W/135W/160W	
65"/70"/75"	160W/180W/195W/250W	

★ Vek trajanja: 60.000 sati

	Operation Frequency	Transmitting Power
WiFi	2400~2483.5	Less Than 100mW

 


Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

# Daljinski Upravljač

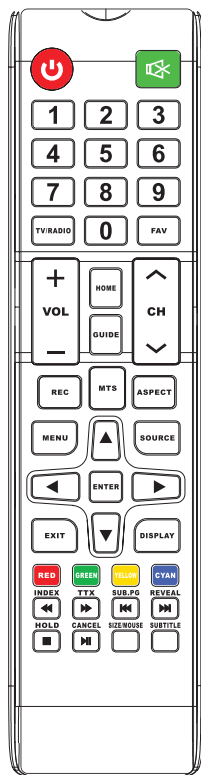


1. **POWER:** Taster za uključivanje i režim mirovanja.
2. **MUTE:** Isključiti zvuk i upaliti kada se pritisne opet.
3. **0-9.** Tasteri za izboga broja kanala.
4. **MTS:** Pritisnite da izaberete MTS mod.
5. **MENI:** Pokrenuti sistemski meni i povratak na gornji meni.
6. **IZVOR:** Izabrati izvor ulaznog signala.
7. **STRELICE:** Upravljanje menijem.

8. **ENTER:** Potvrda odabira.
9. **EXIT:** Pritisnuti za izlazak iz menija.
10. **DISPLAY:** Pritisnuti da se pokaže izvor slike i broj kanala.
11. **VOL+:** Pojačati zvuk.
12. **REFRESH:** Osvežiti stranicu.
13. **HOLD:** Zadržati trenutni display.
14. **VOL-:** Smanjiti zvuk.
15. **CAP:** Taster koji snima trenutnu sliku na disk.
16. **PLAY/PAUSE:** Pritisnite za pokretanje u USB modu, može pokrenuti i pauzirati mediju.
17. **CANCEL:** Povratak na prošli kanal ili otkazati sta je trenutno urađeno.
18. **TV/RADIO:** Pušta TV ili Radio mod.
19. **STOP:** Prekida u USB modu mediju.
20. **MIX:** TV i TXT slike su pomešane na transparentnoj pozadini.
21. **CH+:** Povećati kanal.
22. **CH-:** Smanjiti kanal.
23. **ASPECT:** Funkcija aspekta.
24. **MOUSE:** promeniti miša.
25. **REC:** Snimiti u PVR modu.
26. **GUIDE:** Pokreće vođu izbora programa.
27. **FAV:** Pritisnite da dodate ili sklonite omiljene kanale.
28. **FF:** Pritisnite da premotate unapred u USB modu.
29. **TTX:** Promeniti na teletext.
30. **PREV:** Premotavanje unazad u USB modu.
31. **INDEX:** Traženje index strane u teletext modu.
32. **NEXT:** Pritisnite da preskočite na sledeće u USB modu.
33. **REVEAL:** Otkrivanje ili sakrivanje reči.

# PREDLOG

 Kako bi se osnovna instalacija učinila jednostavnijom i kako bi se izbegao bilo kakav rizik od oštećenja i oštećenja, savetujemo da koristite odvijač tipa PH2.

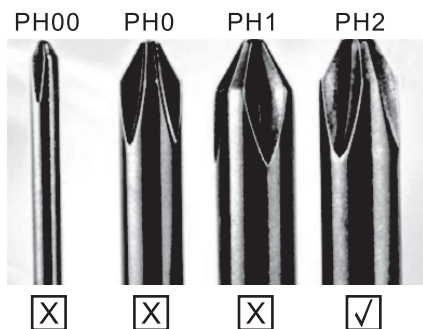

## UPOZORENJE

 
Nikada ne postavljajte TV uređaj na nestabilno mesto. TV uređaj može pasti i dovesti do teških telesnih povreda ili smrti. Mnoge povrede, naročito dece, mogu se izbeći preduzimanjem jednostavnih mera predostrožnosti, kao što su:

1. Korišćenje vitrina ili postolja preporučenih od strane proizvođača TV uređaja.
2. Korišćenje samo onog nameštaja na kome će TV uređaj biti bezbedan.
3. TV uređaj ne prelazi ivicu pomoćnog nameštaja na kome se nalazi.
4. TV uređaj se ne postavlja na nameštaj velike visine (na primer, ormari ili police za knjige) bez pričvršćivanja nameštaja i TV uređaja za odgovarajuću podlogu.
5. TV uređaj se ne postavlja na tkaninu ili druge materijale koji se mogu nalaziti između TV uređaja i pomoćnog nameštaja.
6. Decu treba edukovati o opasnostima usled penjanja na nameštaj kako bi dohvatila TV ili njegove funkcije.
7. Ako zadržavate i premeštate svoj postojeći TV, treba primenjivati iste preporuke kao one gore navedene.

Vijak za montažu na zid: M4 od 22-24 inča, M6 od 28-70 inča, M8 od 75 inča.

**Napomena:** ne postavljajte uređaj pod uglom kako ne bi došlo do njegovog pada.

**Napomena:** Ako model ima otvor za CI karticu na gornjem delu ekrana, silikonski zaštitni poklopac za CI karticu možete pronaći u kesi sa dodatnom opremom (za modele bez otvora za CI karticu, ne postoji zaštitni poklopac). Molimo vas da zaštitni poklopac ubacite u otvor kada se CI kartica ne koristi.

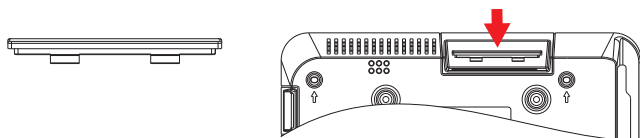

**Napomena:** Slika je ilustrativnog karaktera.





Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.  
Za više informacija o FOX uređajima posetite našu internet stranicu:

**[www.foxelectronics.rs](http://www.foxelectronics.rs)**

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda FOX, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/fox-televizor-32aos411c-akcija-cena/>