

Uputstvo za upotrebu

FOX televizor 58AOS415A



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/fox-televizor-58aos415a-akcija-cena/>



HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

LED TELEVIZORI Model: 58AOS415A

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.



Android OSP

EN

SR

CONTENTS

SAFETY INSTRUCTIONS

----- 2 - 4

DESCRIPTION OF CONTROL KEYS & CONNECTORS

----- 5 - 6

OPERATION OF REMOTE CONTROL

----- 7 - 8

OPERATION OF FUNCTION MEN

----- 9 - 17

TROUBLE SHOOTING GUIDE

----- 18

SPECIFICATIONS



----- 19

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p>	<h4>CAUTION</h4> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Warning: To reduce the risk of electric shock, do not remove cover(or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p>	 <p>The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	--

This appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

CAUTION

- Danger of explosion if batteries are incorrectly replaced.
- Replace with only equivalent type of battery.
- Do not expose battery to direct sunlight or any other source of heat.
- Ensure proper disposal of used batteries.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not perform any servicing other than what is mentioned in the operating manual.
- There are no user-serviceable parts inside the TV; do not open the TV casing.

IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



Safe installation

Use the belt fixing the television to facilitate restraining the television from toping forward.



SAFETY INSTRUCTIONS

 
1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.



5. **Water and Moisture** - The appliance should not be used near water.
6. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Line** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
18. **Conditions requiring Service** - The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen on or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. **The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths, curtains, etc.**


No naked flame sources, such as lighted candles, should be placed on the apparatus.
The apparatus shall be connected to mains socket outlet with a protective earthing connection.
The appliance coupler regarded as disconnection device, the disconnect device shall remain readily operable.
20. **The equipment may be used in tropical and moderate climates.**

SAFETY INSTRUCTIONS



Warning

 High voltages are used in the operating of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.




Warning

To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



Warning

 Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

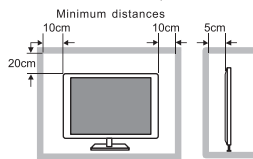

Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

Heat built up can reduce the service life of your television, and can also be dangerous.



Caution

Never stand on, lean on, push suddenly the product or its stand.

You should pay special attention to children.



Caution

 
Do not place the main unit on an unstable cart stand, shelf or table.

Serious injury to an individual, and damage to the television, may result should it fall.



Caution

When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

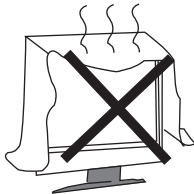

Caution

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.



Caution

















The panel used in this product is made of glass. It can break when the product is dropped or applied with force.

Individuals should execute caution when dealing with broken glass should the panel break.



DESCRIPTION OF CONTROL KEYS & CONNECTORS

CONTROL KEYS:

BUTTON NAME	BUTTON ICON TYPE				BUTTON INSTRUCTION
	1	2	3	4	
SOURCE BUTTON	INPUT			INPUT	To display source menu.
MENU BUTTON	MENU			MENU	To select menu.
VOLUME UP BUTTON	VOL+			 VOL	To increase the sound volume level
VOLUME DOWN BUTTON	VOL-			VOL 	To decrease the sound volume level
PROGRAM UP BUTTON	CH+		C/P ▲	 CH	To select the next higher programme number.
PROGRAM DOWN BUTTON	CH-		C/P ▼	CH 	To select the next lower programme number.
STANDBY BUTTON	POWER			STANDBY	Switch ON/OFF the TV when at standby mode.




 






















NOTE:

 1. All these control buttons designs are common use for our TV models, and please refer to that under your real product.
2. This control keys quantity can be different according to models, and please refer to your real product in hand.

NOTE:

 If your program on tv will be included by cable televisions, Please check your earning and potential evaluation on the cable of your cable operator. For these information contact your cable operator

DESCRIPTION OF CONTROL KEYS & CONNECTORS


PORT NAME	PORTS ICON TYPE			PORT INSTRUCTION
	1	2	3	
AV IN		VIDEO / Y 	AV IN 	AV input port
COMPONENT IN		VIDEO / Y 	YPbPr 	YPbPr signal input port
AV OUT		(mini) AV OUT 	/	AV output port
AUDIO OUT	AUDIO OUT 	L-EXTERNAL SPX-R 	/	AUDIO output port
TERMINAL ANTENNA (75 OHM)	ANT 	RF 	/	TV signal input port
TERMINAL ANTENNA (75 OHM)		RFS2 		Satellite signal input port
VGA		VGA 		RGB signal input port
VGA AUDIO IN		VGA AUDIO IN 		VGA audio input port
HDMI		HDMI 		HDMI signal input port
USB IN		USB 		USB input port
EARPHONE OUT				Earphone output port
AUDIO IN		AUDIO IN 		AUDIO input port
VIDEO OUT		VIDEO OUT 		VIDEO output port
COAXIAL OUT		COAXIAL 		Coaxial output port
OPTICAL		OPTICAL 		Optical output port
SCART		SCART 		SCART signal input port
PCMCIA		PCMCIA 		PCMCIA input port
RJ45 IN		RJ45 		RJ45 input port
TF IN		TF IN 		TF input port

NOTE:

1. All these terminal connection icons are commonly used for our TV models, and please select designated ports.
2. This connection ports quantity can be different according to models, and please refer to your actual product.

OPERATION OF REMOTE CONTROL

 The remote controller cannot be used unless it is within the receivable range. Before you use the remote control, please make sure there's no obstacle between the remote control and the receiver.

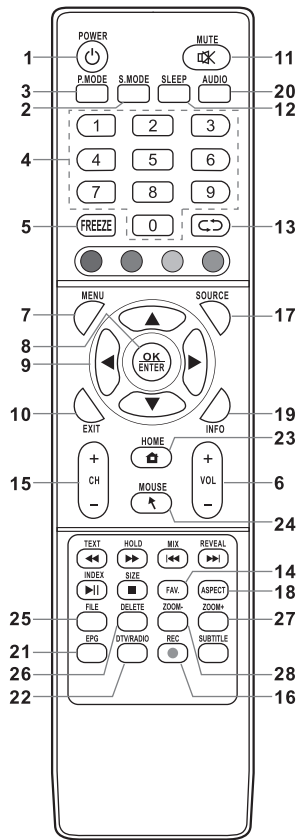

1. POWER BUTTON

Switch On/Off the TV when at standby mode.

2. S.MODE BUTTON

Sound effect selection.

3. P.MODE BUTTON

Picture effect selection.

4. NUMBER BUTTONS

Press these buttons to select the TV program you want to enter or input password.

5. FREEZE BUTTON

Freeze picture.

6. VOL+/VOL- BUTTON

Press two buttons to directly to turn up or turn down the sound volume level.

7. MENU BUTTON

Press the button to open the main menu, press again or use Exit to close.

8. OK/ENTER BUTTON

Press the button to confirm or enter sub menus.

9. UP, DOWN, LEFT, RIGHT ARROW BUTTONS

Press these buttons to select or adjust the desired item on the TV menu.

10. EXIT BUTTON

Press the button to exit.

11. MUTE BUTTON

Press the button to turn off the volume. Press it again to turn on the volume.

12. SLEEP BUTTON

Press the button to set up the TV auto turn off time.

13. RETURN BUTTON

Press the button to toggle between the current and the previous program you were viewing.

14. FAV. BUTTON

Display favourite of program list.

15. CH+/CH- BUTTON

Press two buttons to directly to adjust the TV program.

16. REC BUTTON

Hotkey of PVR.

17. SOURCE BUTTON

Press the button display Source menu.

18. ASPECT BUTTON

Press the button to display and select available aspect modes.

19. INFO BUTTON

Display the source and channel information.

20. AUDIO BUTTON (Optional)

Selects audio mode.

21. EPG BUTTON

Open/Close Electronic program guide.

22. DTV/RADIO BUTTON

Switch DTV program and radio program.

23. HOME BUTTON

Back to home OSD.

24. MOUSE BUTTON

MOUSE On/Off.

25. FILE BUTTON

Android OSD operate guide.

26. DELETE BUTTON

User for delete the input.

27. ZOOM+ BUTTON

Directly to turn up the SMART TV sound volume level.

28. ZOOM- BUTTON

Directly to turn down the SMART TV sound volume level

Note: EPG, DTV/RADIO, REC are only effective in DTV.

OPERATION OF REMOTE CONTROL

TELETEXT FUNCTION (Optional)

1) TEXT BUTTON

Press the TEXT button to change the viewing from TV to Teletext if TV stations in your local have teletext broadcasting.

2) REVEAL BUTTON

This is a toggle function key to display hidden characters.

3) MIX BUTTON

This is a toggle function button to display TV picture and teletext together or teletext only.

4) RED/GREEN/YELLOW/BLUE BUTTONS

These 4 Colour keys in teletext mode can quickly enter the pre-captured teletext pages.

5) ▲ / ▼ BUTTON

These keys can be used as a page up/down key in teletext mode.

6) 0, 1, 2, ..., 9 BUTTON

Using the 0, 1, 2, ..., 9 keys, the required Teletext pages are selected.

7) HOLD BUTTON

Some Teletext information is contained on more than one page, the pages automatically changing after a given reading time. Press the HOLD key to stop the page changing. Press the HOLD key again to allow the page to change.

8) INDEX BUTTON

Press the INDEX key to view Index page in teletext mode.

9) SIZE BUTTON

This key is to expand character size and display half teletext page. Each press will display upper tower Normal page.

USB FUNCTION (Optional)

1) ◀▶ / ▶▶ BUTTON

Skip a scene or music.

2) ◀◀ / ▶▶▶ BUTTON

Go back to the previous or skip to the next.

3) ▶|| BUTTON

Play / Pause.

4) ■ BUTTON

Stop playback.

5) SUBTITLE BUTTON

In the USB playback movies, open or closed subtitle function (Need streaming support)

Note:

 
A USB device must already be connected.

BATTERY INSTALLATION OF REMOTE CONTROL UNIT

1. Open the battery compartment cover.
2. Insert two 'AAA' (pencil size) 1.5V batteries. Make sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.
3. Close the battery compartment cover.

Note:

- Recommend use alkaline type batteries.
- The life time of the batteries may last up to one year, depending on how often the remote control is used. For the best performance, the batteries should be replaced on a yearly basis, or when remote operation becomes erratic.
- Be sure to place the batteries in the correct direction, as shown left.
- Do not mix old and new batteries, or different types.
- Old batteries may leak chemical and damage the remote control. Always remove batteries as soon as they become weak.

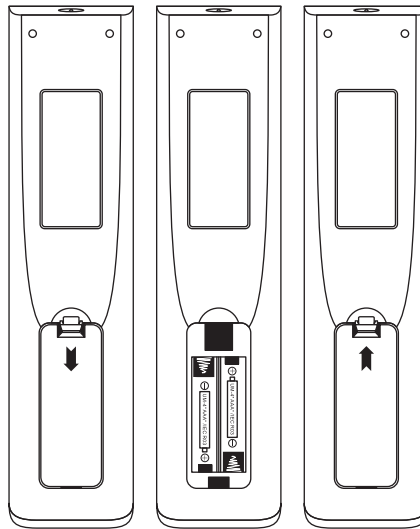


OPERATION OF FUNCTION MENU

Note: The pictures on this manual are only examples and the actual products shall prevail.

Home Page

 Press **【▼】 / 【▲】** button to select Home page in Setup Wizard or press **【◀】 / 【▶】** button to select Home in the menu of TV input .

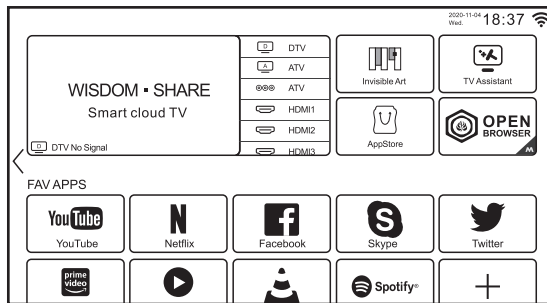


Note: This picture is for reference only.

When the cursor is near the left border, press **【◀】** button to call up the sidebar.

Press the **【▼】 / 【▲】** button to select Apps / Network / Media / Settings.

 
You can choose the program you want on the home page.

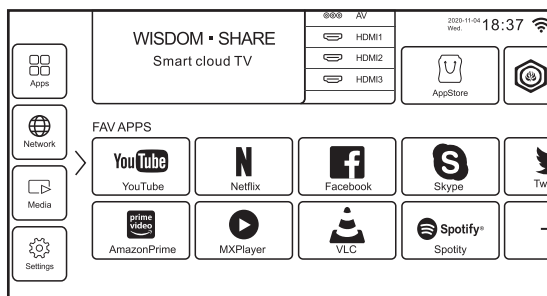

Note: This picture is for reference only.

My Apps

 
Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to select My Apps, and press OK button to enter the App List.

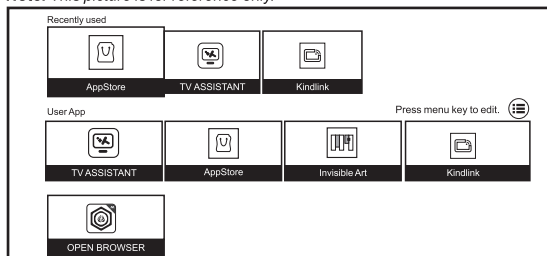

Note: This picture is for reference only.

Settings

 Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to select the Settings, and press OK button to enter the System Setting. Press **【◀】 / 【▶】** button to select Network / Time / Common / Accounts / System Info.

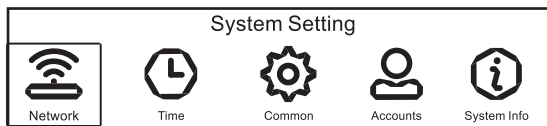


Note: This picture is for reference only.

OPERATION OF FUNCTION MENU

Network

 
Press [◀] / [▶] button to select Network, press OK button to enter.

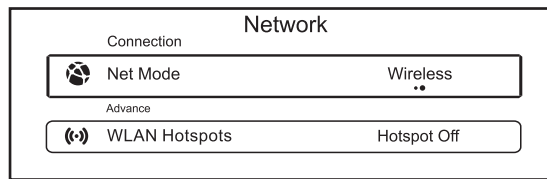

Note: This picture is for reference only.

Time

 
Press [◀] / [▶] button to select Time, press OK button to enter.

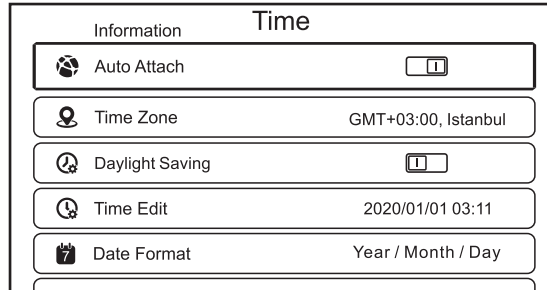

Note: This picture is for reference only.

Common

 Press [◀] / [▶] button to select Common, press OK button to enter.

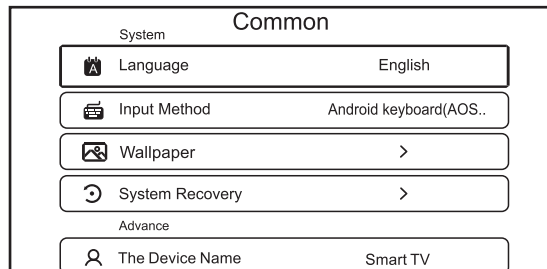

Note: This picture is for reference only.

Accounts

Press [◀] / [▶] button to select Accounts, press OK button to enter.

System Info

 
Press [◀] / [▶] button to select System Info, press OK button to enter.

Media

Press [▼] / [▲] / [◀] / [▶] button to select Multimedia on the Home page, and press OK button to enter the Media Center.

Press [▼] / [▲] button to select All / Video / Audio / Image.


Press [▼] / [▲] / [◀] / [▶] button to select the file, press MENU button to open the submenu.

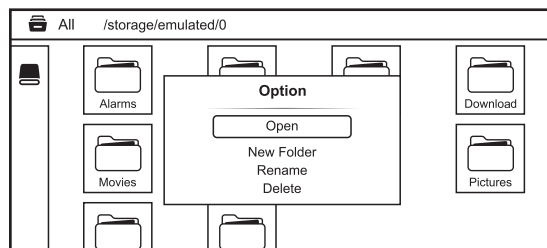

OPERATION OF FUNCTION MENU


Video

 Press **【▼】 / 【▲】** button to select Video or All, and press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to select Movies.

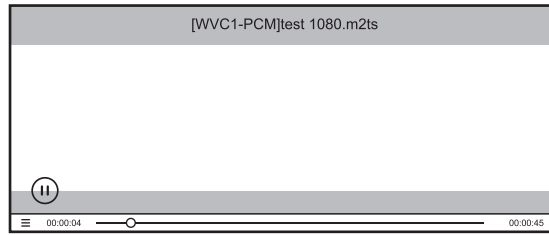


Audio

 Press **【▼】 / 【▲】** button to select Audio or All, and press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to select Music.

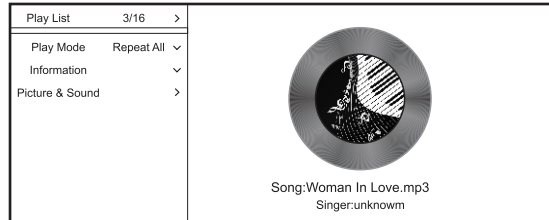

Image

 Press **【◀】 / 【▶】** button to select Image or All, and press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to select Pictures.

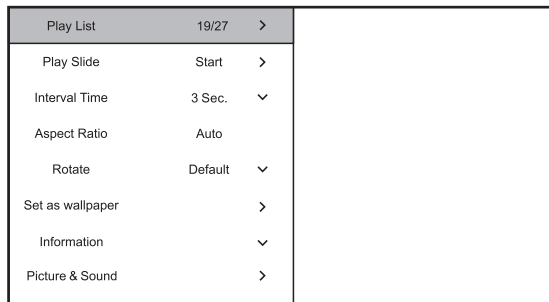


Input Source

Press SOURCE button to enter Input Source menu.
Press **【▼】 / 【▲】** button to select.
Press OK to select source.

TV Setting

 
Press MENU button to enter main menu.
Press **【◀】 / 【▶】** button to highlight the desired menu icon, and press OK button to select.
(Optional: Home / Source / Picture / Sound / Channel / Lock / Common / Advance).

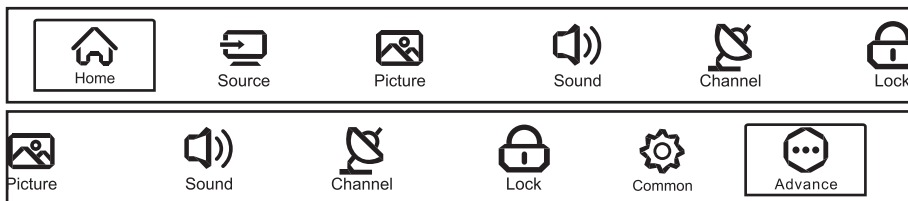

OPERATION OF FUNCTION MENU

1. Picture

 Press MENU button to enter the main menu. Press [◀] / [▶] button to select the Picture. Press OK button to enter the sub-menu.



Press [▼] / [▲] button to select Picture Mode / Contrast / Brightness / Color / Sharpness / Noise Reduction / Aspect Ratio / Color Temp / More Settings. Press MENU or EXIT button to quit.

Picture Mode

Press [▼] / [▲] button to select Picture Mode. Press [◀] / [▶] button to adjust. (Optional: Standard, Dynamic, Soft, Energy Saving, User).

Contrast / Brightness / Color / Sharpness (Optional in user mode only)

Press [▼] / [▲] button to select. Press [◀] / [▶] button to adjust.

Contrast Adjust image contrast.
Brightness Adjust image brightness.
Color Adjust image color density.
Sharpness Adjust the image edge sharpness.

Noise Reduction

Set up options to eliminate the image noise intensity.
Press [▼] / [▲] button to select Noise Reduction.
Press [◀] / [▶] button to select Off / Low / Middle / High / Auto.

Aspect Ratio

 
Press [▼] / [▲] button to select Aspect Ratio. Press [◀] / [▶] button to adjust.

Color Temp

Adjust the overall color of the image.
Press [▼] / [▲] button to select Color Temp.
Press [◀] / [▶] button to select Cool / Normal / Warm.
Cool Produces a gentle blue-hued image.
Normal Produces a vivid image.
Warm Produces a red-hued image.

More Settings

Press [▼] / [▲] button to select More Settings. Press OK button to enter the sub-menu.

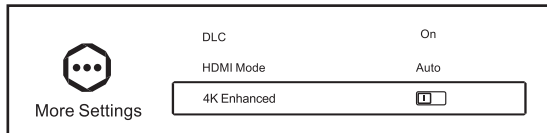

DLC

Press [▼] / [▲] button to select DLC. Press [◀] / [▶] button to select On / Off.

HDMI Mode (Show only under HDMI)

Press [▼] / [▲] button to select HDMI Mode.
Press [◀] / [▶] button to select Video / Graphic / Auto.

4K Enhanced (Show only under HDMI)

 
Press [▼] / [▲] button to select 4K Enhanced.
Press [◀] / [▶] button to adjust.

OPERATION OF FUNCTION MENU

2.Sound

Press MENU button to enter the main menu. Press **【◀】 / 【▶】** button to select the Sound. Press OK button to enter the sub-menu.

Press **【▼】 / 【▲】** button to select the item to be set. Press MENU or EXIT button to quit.

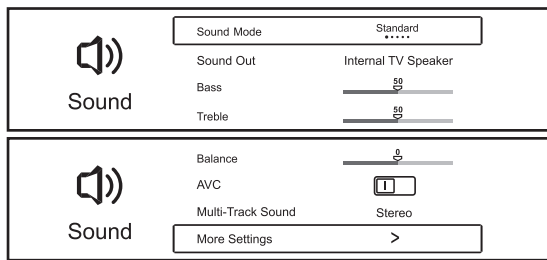

Sound Mode

Press **【▼】 / 【▲】** button to select Sound Mode.

Press **【◀】 / 【▶】** button to select. (Optional: Standard / Music / Movie / News / User).

Sound Out

Press **【▼】 / 【▲】** button to select Sound Out. Press **【◀】 / 【▶】** button to adjust. (Optional: Internal TV Speaker, SPDIF, HDMI ARC, Headphones).

Bass / Treble (Optional in user mode only)

Press **【▼】 / 【▲】** button to select. Press **【◀】 / 【▶】** button to adjust.

Bass Adjust the low frequency sounds.

Treble Adjust the high frequency sounds.

Balance

Balanced left and right channels.

Press **【▼】 / 【▲】** button to select Balance. Press **【◀】 / 【▶】** button to adjust.

AVC

Press **【▼】 / 【▲】** button to select AVC. Press **【◀】 / 【▶】** button to select On / Off.

Note: After open the "AVC", once the volume is set up, it can keep the volume of the speaker steady no matter what kind of difference among the TV sound of each channel.

Hearing Impaired (Show only under DTV)

Press **【▼】 / 【▲】** button to select Hearing Impaired. Press **【◀】 / 【▶】** button to adjust.

Audio Description (Show only under DTV)

Press **【▼】 / 【▲】** button to select Audio Description. Press **【◀】 / 【▶】** button to adjust.

AD Volume (Show only under DTV)

Press **【▼】 / 【▲】** button to select AD Volume. Press **【◀】 / 【▶】** button to adjust.

 
Multi-Track Sound (Show only under ATV)

Press **【▼】 / 【▲】** button to select. Press **【◀】 / 【▶】** button to adjust.

Note: Audio Description / Hearing Impaired / AD Volume / Multi-Track Sound function requires signal support to be effective.

More Settings

Press **【▼】 / 【▲】** button to select More Settings. Press OK button to enter the sub-menu.

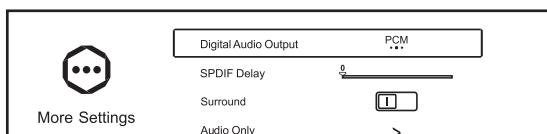

OPERATION OF FUNCTION MENU

Digital Audio Output

Press **▼** / **▲** button to select Digital Audio Output.
Press **◀** / **▶** button to select Off / PCM / RAW.

SPDIF Delay

Press **▼** / **▲** button to select SPDIF Delay. Press **◀** / **▶** button to adjust.

Surround

 
Press **▼** / **▲** button to select Surround. Press **◀** / **▶** button to choose On / Off.

Audio Only


Press **▼** / **▲** button to select Audio Only. Press OK button will turn off the backlight.

3.Channel

Press MENU button to enter the main menu.
Press **◀** / **▶** button to select Channel.
Press OK button to enter the sub-menu.

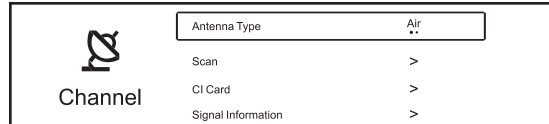

 Press **▼** / **▲** button to select the item to be set. Press MENU or EXIT button to quit.

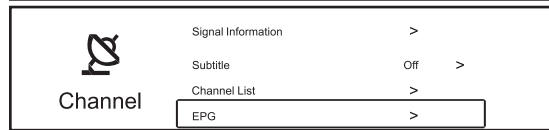

Antenna Type

Press **▼** / **▲** button to select Antenna Type. Press **◀** / **▶** button to select Air / Cable / Satellite.
Note: 'Satellite' is an optional feature, some models do not have this feature, the actual product shall prevail.

Scan

Press **▼** / **▲** button to select Scan. Press OK button to enter the sub-menu.

CI Card (Optional, some models do not have this function.)

Press **▼** / **▲** button to select CI Card. Press OK button to enter the sub-menu.

Signal Information

Press **▼** / **▲** button to select Signal Information. Press OK button to enter the sub-menu.

Subtitle

Press **▼** / **▲** button to select Subtitle. Press OK button to enter the sub-menu.

Channel List

Press **▼** / **▲** button to select Channel List. Press OK button to enter the sub-menu.
Press MENU button edit the channel, press EXIT or MENU button to quit.

EPG

Press **▼** / **▲** button to select EPG.
Press OK button to enter the sub-menu.




OPERATION OF FUNCTION MENU

4.Lock

Press MENU button to enter the main menu.
Press **【◀】 / 【▶】** button to select Lock.
Press OK button to enter the sub-menu.

Please input password	
Cancel	OK

Press **【▼】 / 【▲】** button to select Change Password / System Lock / Key Lock / Parental Guidance.

 Lock	Change Password >
	System Lock <input type="checkbox"/>
	Key Lock <input type="checkbox"/>
	Parental Guidance Off

Change Password

Press **【▼】 / 【▲】** button to select Change Password.
Press OK button to enter the sub-menu.

Set Password	
Old Password	
New Password	
Comfirm Password	
Cancel	OK

System Lock



Press **【▼】 / 【▲】** button to select System Lock.
Press **【◀】 / 【▶】** button to select On / Off.
When System Lock is set to On, press **【▼】 / 【▲】** to select Key Lock / Parental Guidance.

Parental Guidance

Press **【▼】 / 【▲】** button to select Parental Guidance. Press **【◀】 / 【▶】** button to adjust.

5.Common

Press MENU button to enter the main menu. Press **【◀】 / 【▶】** button to select Common. Press OK button to enter the sub-menu.

 Common	PVR Settings >
	Timer Settings >
	Blue Screen <input type="checkbox"/>
	Teletext West Euro
 Common	Audio Language 1st >
	Audio Language 2nd >
	HDMI CEC Setup >
	Menu Reset >

Press **【▼】 / 【▲】** button to select the item to be set. Press MENU or EXIT button to quit.

PVR Setting (Show only under DTV)

Press **【▼】 / 【▲】** button to select PVR Setting. Press OK button to enter the sub-menu.
Note: This function requires a USB flash drive to be inserted.

Timer Settings

Press **【▼】 / 【▲】** button to select Timer Settings.
Press OK button to enter the sub-menu.

OSD Timer

Press **【▼】 / 【▲】** button to select OSD Timer.
Press **【◀】 / 【▶】** to select. (Optional: off, 5sec, 15sec, 30sec, 40sec)

Auto standby Timer

Press **【▼】 / 【▲】** button to select Auto standby Timer. Press **【◀】 / 【▶】** to select. (Optional: off, 3hour, 4hour, 5hour)

Sleep Timer

Press **【▼】 / 【▲】** button to select Sleep Timer. Press **【◀】 / 【▶】** to select. (Optional: off, 15min, 30min, 45min, 60min, 90min, 120min, 240min)

OPERATION OF FUNCTION MENU

Blue Screen

Set the background color to blue when there is no input signal.

Press **▼** / **▲** button to select Blue Screen.

Press **◀** / **▶** button to select On / Off.

Teletext (This function requires the support of signals transmitted by TV operators.)

Press **▼** / **▲** button to select Teletext. Press **◀** / **▶** to select.

Audio Language 1st (Show only under DTV)

Press **▼** / **▲** button to select Audio Language 1st.

Press OK button to enter the sub-menu.

Audio Language 2nd (Show only under DTV)

Press **▼** / **▲** button to select Audio Language 2nd.

Press OK button to enter the sub-menu.


HDMI CEC Setup

Press **▼** / **▲** button to select HDMI CEC Setup. Press OK button to enter the sub-menu.

Press **▼** / **▲** button to select CEC / Tv Auto Power On / Device Auto Power Off / ARC / Device List.

Note1: All the Options are available only when the HDMI CEC Switch select On.

 Note2: The Device List is available only when the source select HDMI.



CEC

Press **▼** / **▲** button to select CEC. Press **◀** / **▶** button to select On / Off.

The following terms are available only when "On" is selected in CEC.

Tv Auto Power On

Press **▼** / **▲** button to select Tv Auto Power On. Press **◀** / **▶** button to select On / Off.

Device Auto Power Off

Press **▼** / **▲** button to select Device Auto Power Off. Press **◀** / **▶** to select On / Off.

Device List

 
Press **▼** / **▲** button to select Device List. Press OK/ **▶** button to enter the sub-menu.

Hotel Mode(Optional)

Press **▼** / **▲** button to select Hotel Mode.

Press OK/ **▶** button to enter the sub-menu.


(The default password is 4711.)

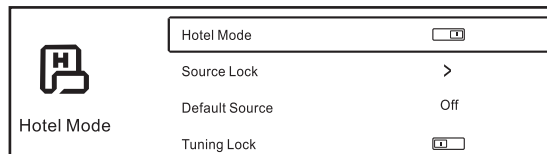

Hotel Mode

Press **▼** / **▲** button to select Hotel Mode.

 
press **◀** / **▶** button to select on or off.

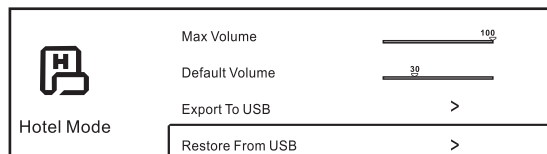

OPERATION OF FUNCTION MENU

Source Lock

 Press [▼] / [▲] button to select Source Lock, press OK button to enter sub-menu and press [▼] / [▲] button to select source, press OK to determine whether to lock or not. All the Sources you select are not available.

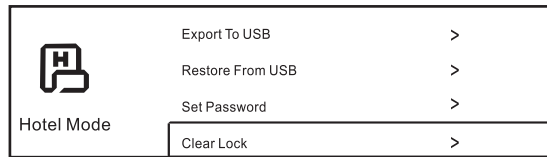

Default Source

Set the default Source. Every time you turn on, you enter the default Source you set.

Press [▼] / [▲] button to select Default Source, press OK button to enter sub-menu to select.

Tuning Lock

Press [▼] / [▲] button to select Tuning Lock, press [◀] / [▶] button to select on or off.

Max Volume

Press [▼] / [▲] button to select Max Volume, press [◀] / [▶] button to adjust.

Default Volume

Press [▼] / [▲] button to select Default Volume, press [◀] / [▶] button to adjust.

Export To USB

Export Hotel mode settings to U disk.

Press [▼] / [▲] button to select Export To USB, press OK button to confirm export.

Restore Form USB

Import the hotel mode settings on the U disk into the TV.

Press [▼] / [▲] button to select Restore Form USB, press OK button to confirm import.

Set Password

Press [▼] / [▲] button to select Set Password, press OK button to enter the sub-menu.

Clear Lock

 
Press [▼] / [▲] button to select Clear Lock, press OK button to clear the setting you have done before.

Note: Hotel mode is an optional feature, some models do not have this feature.

OPERATION OF FUNCTION MENU


Menu Reset

Recall the default setting.
Press **【▼】 / 【▲】** button to select Menu Reset.
Press OK button to enter the sub-menu.

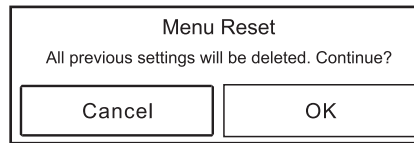

5.Advance

 Press MENU button to enter the main menu. Press **【◀】 / 【▶】** button to select Advance. Press OK button to enter the System Setting.

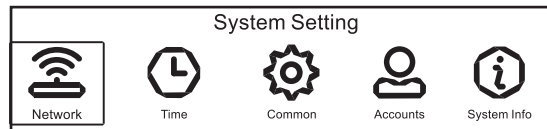

TROUBLE SHOOTING GUIDE

Many apparent malfunctions are caused slight misadjustments of the regular controls of your unit or equally simple causes. If any difficulty arises through normal use of your unit, check the list of common problems in the list below.

If the problem persists, unplug your unit and contact your dealer.

SYMPTOM	METHODS OF CHECKING OR ADJUSTING
No picture or sound	Check the AC plug is in the socket. Check house circuit breaker is in the ON position.
Picture normal but no sound	Check that the volume is not at its minimum setting or on MUTE.
Remote control not working	Check that TV set power is ON. Check batteries are operational and inserted correctly. Make sure infrared receiving window on TV is not exposed to strong lighting or blocked in any way.
Cannot receive any TV signal	Ensure SOURCE switch is set to TV. Check aerial location and connection. Re-check your tuning method.
No program signals output from external source	Check SOURCE button to make sure it is in the correct position for reception.
Contrast and brightness problems	Make necessary adjustments to relevant settings.
Intermittent poor contrast and colour fading on all channels	Check aerial positioning
Dotted lines or stripes appear on screen	There may be Interference from another electrical product. Move appliance if it persists.
Snow on screen	Check aerial for broken circuit, loose connection or any visible damage.
Double images or 'ghosting'	Check aerial location and direction - strong winds may cause it to move. Also check whether mountains or tall buildings may be the problem. Minor adjustment of the direction of your antenna should keep the ghosting to a minimum.

Note: External rooftop/antenna adjustment should be left to a suitably qualified person.

SPECIFICATIONS

Aspect Ratio	16:9
System	PAL/SECAM BG/DK, I DVB-T/C+T2
Base impedance	75Ω (Unbalance)
Receiving TV Band	All Channels Receiveable
AC Supply Voltage	100-240V~ 50/60Hz

Note: Part of the design and the specification may be changed without prior notice.

INFRA-RED REMOTE CONTROL

Features: Full function remote control

Effective Distance Power: 8 metres

Power Supply: DC 3V (Two batteries, size AAA, recommend use alkaline type batteries)

Dolby Audio

Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.



FOX[®]
be smart

HDMI[®]
HIGH-DEFINITION MULTIMEDIA INTERFACE

UPUTSTVO ZA UPOTREBU

LED TELEVIZORI Model: 58AOS415A

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.



Android OSP

EN

SR



FOX[®] **FOX LED televizori**
be smart - stvoreni za uživanje.

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SADRŽAJ

BEZBEDNOSNE INFORMACIJE

----- 2 - 4

OPIS KONTROLNIH TASTERA I KONEKTORA

----- 5 - 6

DALJINSKI UPRAVLJAČ

----- 7 - 8

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

----- 9 - 17

VODIČ ZA REŠAVANJE PROBLEMA

----- 18

SPECIFIKACIJA



----- 19

BEZBEDOSNE INFORMACIJE

VAŽNA BEZBEDONOSNA UPUTSTVA

UPOZORENJE

KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NEMOJTE KORISTITI PRODUŽNI KABL, DUPLI UTIKAČ ILI DRUGE DODATKE NA UTIČNICI OSIM ONIH KOJI BI MOGLI DA SPREČE IZAZIVANJE STRUJNOG UDARA. KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NE IZLAŽITE OVAJ UREDAJ VLAZI ILI KIŠI.

 <p>Ovaj simbol munje u jednakostraničnom trouglu upozorava korisnike na prisustvo opasnog i ne izolovanog napona unutar kućišta proizvoda koji može biti dovoljan da stvori rizik STRUJNOG UDARA</p>	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>Upozorenje: Da biste smanjili rizik od strujnog udara nemojte skidati pok-lopac (ili zadnju stranu). Unutra nemadelova koje korisnik može sam dazameni. Za obavljanje servisa zatražite pomoć kvalifikovanog osoblja</p>	 <p>Znak uzvika unutar jedna-kostraničnog trougla u ovom uputstvu upozorava korisnika na prisustvo važnih instrukcija za rad i održavanje (servisiranje) uređaja.</p>
--	---	---

Ovaj aparat ne treba izlagati vodi, a predmete ispunjene tečnošću poput vaza ne treba da budu postavljeni na i oko uređaja.

OPREZ

Postoji opasnost od eksplozije ako se baterija nepropisno zameni. Zamenite postojeću sa samo odgovarajućom vrstom baterije. Nemojte izlagati bateriju direktnoj sunčevoj svetlosti ili bilo kojem drugom izvoru toplote. Obezbedite pravilno odlaganje istrošenih baterija. Ostavite lako dostupnim mesto gde je utikač ili nastavak za prekid napajanja. Da biste smanjili rizik od strujnog udara, ne obavljajte bilo kakvo servisiranje osim onih koje se pominju u ovom uputstvu.

VAŽNE INFORMACIJE

Ako televizor nije postavljen na dovoljno stabilnom mestu, može postojati potencijalna opasnost od pada.

Mnoge povrede, posebno dečije, mogu se izbeći primenom jednostavnih mera opreza kao što su:

Korišćenje elemenata ili stalaka koje je preporučio proizvođač televizora.

Korišćenje samo onog nameštaja koji može sigurno izdržati uređaj.

Obezbeđivanje uređaja tako da ne prelazi ivicu nameštaja.

Nemojte postavljati TV-a na visok nameštaj (na primer, ormare ili police) bez predhodnog pričvršćivanja kako nameštaja tako i uređaja na odgovarajuću površinu.

Ne pokrivajte televizora krpom i ne stavlajte drugi materijal između televizora i nameštaja na kom stoji.



Sigurna instalacija

Koristite pojas za fiksiranje televizora kako bi sprečili uređaj od pada unapred.



 
BEZBEDNOSNE INFORMACIJE

1. **Pročitajte uputstva**- Sve napomene o sigurnosti i načinu rada treba pročitati pre uključivanja aparata.
2. **Sačuvajte uputstva** – Uputstva za sigurnost i uputstvo za upotrebu treba da se sačuvaju za buduće potrebe.
3. **Imajte u vidu Upozorenja** – Treba se pridržavati svih upozorenja na aparatu i svih uputstava za upotrebu.
4. **Pratite uputstva**- Treba pratiti sva uputstva.




5. **Voda i vlažnost** – Aparat ne treba koristiti u blizini vode.
6. **Nosač i postolje** – Aparat treba koristiti samo sa nosačem ili postoljem koje preporučuje proizvođač
7. **Montaža na zid ili plafon** – Aparat treba da se montira na zid ili plafon samo po preporuci proizvođača.
8. **Ventilacija** – Aparat treba da bude dobro postavljen, tako da lokacija ili pozicija aparata ne ometaju njegovo provetranje.
9. **Toplota** – Ovaj aparat treba postaviti dalje od izvora toplote kao što su radijatori i peći.
10. **Napajanje** - Aparat treba povezati samo na napajanje kao što je opisano u uputstvima za upotrebu ili onako kako je naznačeno na uređaju.
11. **Uzemljenje ili polarizacija** – Treba preduzeti mere predostrožnosti.
12. **Zaštita kablja za napajanje** – Naponski kabl treba da bude usmeren tako da je malo verovatno da se može gaziti, priklještititi stvarima na njemu i njegovom kraju.
13. **Čišćenje** – Aparat bi trebalo čistiti samo po preporuci proizvođača.
14. Napajanje spoljne antene treba da se nalazi daleko od dalekovoda.
15. **Uzemljenje spoljne antene** – Ako je spoljna antena povezana na prijemnik, antenski sistem mora biti uzemljen kako bi se obezbedila zaštita od naponskog i izvornog statičkog elektriciteta.
16. **Kada ga dugo ne koristite** – napajanje uređaja trebalo bi da bude isključeno iz utičnice kada se ne koristi duži vremenski period.
17. **Upad predmeta i tečnosti** – Treba paziti da predmeti ne upadnu, a tečnost ne prospe u kućište kroz otvore.
18. **Kada je potreban servis** – Aparat treba da servisira kvalifikovano servisno osoblje kada su:
 - Kabal za struju ili utikač oštećeni.
 - Kada predmeti upadnu ili kada se tečnost prolje po uređaju
 - Kada je aparat izložen kiši
 - Kada aparat ne radi normalno ili pokazuje značajnu promenu u radu.
19. Ventilacioni otvori ne bi trebalo da budu pokriveni predmetima, kao što su novine, tkanine, zavese itd.
20. Izvore otvorenog plamena, kao što su upaljene sveće, ne bi trebalo da stoje na aparatu
21. Aparat će biti povezan sa mrežnom utičnicom sa zaštitnim uzemljenjem. Utičnica ili nastavak za prekid napajanja trebaju da budu lako dostupni.

BEZBEDOSNE INFORMACIJE



UPOZORENJE

 Visok napon se koristi u napajanju ovog proizvoda. Ne uklanjajte zadnjipoklopac. Obratite se kvalifikovanoj osobi za obavljanje servisa.




UPOZORENJE

Da biste sprečili požar ili strujni udar, nemojte izlagati uređaj kiši ili vlazi.



UPOZORENJE

 Nemojte ispuštati i gurati predmete u kućište TV-a ili u otvore. Nikadanemojte prosipati tečnost na TV prijemnik.

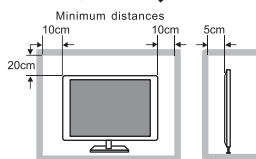

OPREZ

Ako televizor treba da se ugradi u zatvoreni odeljak ili na sličan način, morate se pridržavati dela uputstva o mini-malnim udaljenostima. Toplota može smanjiti životni vek televizora, a takođe može biti povećan rizik od požara.



OPREZ

Nikada nemojte da stanete ili se oslonite ili gurnete uređaj ili stalak na kom se uređaj nalazi. Treba obratiti posebnu pažnju na decu.



 
OPREZ

Ne stavljajte glavnu jedinicu na nestabilno postolje, policu ili sto. Usled pada može doći do ozbiljne povrede lica ili štete na televizoru.



OPREZ

Kada se proizvod ne koristi duži vremenski period, preporučljivo je da isključite mrežni kabl iz utičnice .

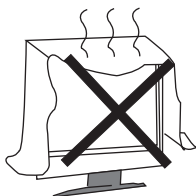

OPREZ

Izbegavajte izlaganje glavne jedinice direktnom suncu i drugim izvorima toplote. Ne postavljajte televizor na druge proizvode koji emituju toplotu. Na primer: Video uređaj, audio pojačala. Ne blokiraj otvore za ventilaciju u zadnjem poklopcu. Ventilacija je od suštinskog značaja za sprečavanje električnih kvarova. Ne stavljajte kabl za napajanje ispod glavne jedinice.
















 


OPREZ

Panel (ekran) koji se koristi u ovom proizvodu napravljen je od stakla. Može se slomiti padom uređaja ili nasilnim udarcem. Pojedinci treba oprezno da rade sa razbijenim staklom ekrana.



OPIS KONTROLNIH TASTERA I KONEKTORA

NAZIV TASTERA

NAZIV DUGMIĆA	VRSTA TASTERA				INSTRUKCIJE ZA UPOTREBU
	1	2	3	4	
SOURCE BUTTON	INPUT			INPUT	PRIKAZIVANJE GLAVNOG MENIJA ZA IZBOR FUNKCIJA TV UREĐAJA (DIGITALNI, ANTENSKI, SMART, OPCIJA, MEDIA - USB, HDMI)
MENU BUTTON	MENU			MENU	PRIKAZIVANJE MENIJA TV UREĐAJA
VOLUME UP BUTTON	VOL+				POJAČAVANJE ZVUKA
VOLUME DOWN BUTTON	VOL-				UTIŠAVANJE ZVUKA
PROGRAM UP BUTTON	CH+		C/P ▲		PREBACIVANJE NA VIŠI KANAL
PROGRAM DOWN BUTTON	CH-		C/P ▼		PREBACIVANJE NA NIŽI KANAL
STANDBY BUTTON	POWER			STANDBY	UKLJUČIVANJE/ISKLUČIVANJE TV UREĐAJA DOK JE U REŽIMU MIROVANJA

NAPOMENA

1. Kontrolni tasteri su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.
2. Broj i raspored kontrolnih tastera može biti drugačiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem i njihovom namenom.

NAPOMENA

Ukoliko program pratite putem kablovske televizije proverite da li je propisno izvedeno Uzemljenje i izjednačavanje potencijala na kablju vašeg kablovskog operatera. Za ove Informacije kontaktirajte vašeg kablovskog operatera.


OPIS KONTROLNIH TASTERA I KONEKTORA

NAZIV ULAZA/IZLAZA	VRSTA IKONICE ZA ULAZ/IZLAZ			INSTRUKCIJE ZA UPOTREBU
	1	2	3	
AV IN		VIDEO / Y	AV IN	AUDIO/VIDEO ULAZ
COMPONENT IN		YPbPr	/	YPbPr ULAZ, ZA POVEZIVANJE EKSTERNIH UREĐAJA (DVD, PLAYER, KUĆNI BIOSKOP...)
AV OUT		AV OUT	/	AUDIO/VIDEO IZLAZ
AUDIO OUT	AUDIO OUT	L-EXTERNAL SPX-R	/	AUDIO IZLAZ ZA POVEZIVANJE EKSTERNIH ZVUČNIKA
TERMINAL ANTENNA (75OHM), TV SIGNAL INPUT PORT	ANT	RF	/	POVEZIVANJE ANTENE ZA ZEMALJSKE KANALE (KROVNA/SOBNA ANTENA)
TERMINAL ANTENNA (75OHM), SATELIT SIGNAL INPUT PORT		RF(S2)		POVEZIVANJE SATELITSKE ANTENE
AUDIO IN		AUDIO IN		AUDIO ULAZ
VIDEO OUT		VIDEO OUT		VIDEO IZLAZ
COAXIAL OUT		COAXIAL		DIGITALNI IZLAZ ZA EKSTERNE ZVUČNIKE
VGA		VGA		VGA ULAZ ZA POVEZIVANJE RAČUNARA I TV UREĐAJA
VGA AUDIO IN		VGA AUDIO IN		VGA ULAZ ZA AUDIO POVEZIVANJE
HDMI		HDMI		HDMI ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA
USB IN		USB		USB ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA I MEMORIJA
EARPHONE OUT				IZLAZ ZA POVEZIVANJE SLUŠALICA
SCART		SCART		SCART ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA
OPTICAL		OPTICAL		OPTIČKI IZLAZ ZA POVEZIVANJE UREĐAJA KOJI KORISTE OPTIČKI KABL
RJ45 IN		RJ45		ZA POVEZIVANJE TV UREĐAJA NA INTERNET (LAN MREŽA)
DC IN, OPTIONAL		DC IN		OPCIONO – ULAZ ZA POVEZIVANJE NA ADAPTER OD 12V
TF IN		TF IN		ULAZ ZA OČITAVANJE MEMORIJSKE KARTICE
PCMCIA		PCMCIA		ULAZ ZA CI (CI+)

- 1.Svi ulazi / izlazi su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.
2.Broj ulaza/izlaza može biti drugačiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem I njihovom namenom

DALJINSKI UPRAVLJAČ

 Prilikom upotrebe daljinskog upravljača, usmerite ga ka prijemniku signala daljinskog upravljača. Predmeti koji se nađu između daljinskog upravljača i prijemnika signala mogu da onemogućavaju normalno funkcionisanje.

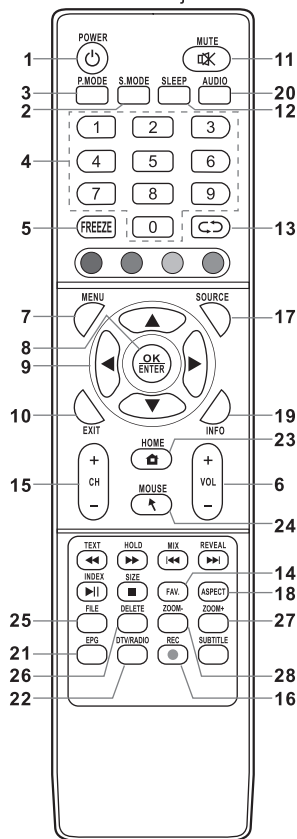

1. **POWER TASTER**
uključivanje/isključivanje TV uređaja
2. **S.MODE TASTER**
taster za podešavanje zvučnih efekata
3. **P.MODE TASTER**
taster za odabir efekata slike
4. **NUMBER (NUMERIČKI) TASTERI**
direktno biranje kanala ili unošenje lozinke
5. **FREEZE (ZAMRZAVANJE) TASTER**
zamrzavanje trenutnog prikaza na ekranu
6. **VOL+/VOL- TASTER**
pojačavanje/utišavanje zvuka
7. **MENU (MENI) TASTER**
ulazak u glavni meni, za izlaz, pritisnite ponovo ili koristite dugme "EXIT"

8. **OK/ENTER TASTER**
potvrđivanje izbora ili ulazak u podmeni
9. **UP, DOWN, LEFT, RIGHT ARROW (STRELICE GORE, DOLE,LEVO, DESNO)TASTER**
kretanje kroz meni
10. **EXIT (IZLAZ) TASTER**
izlaz iz trenutnog menija
11. **MUTE (ISKLJUČIVANJE ZVUKA) TASTER**
pritisnite za isključenje zvuka. Ponovnim pritiskom vraćate zvuk na predhodnu jačinu
12. **SLEEP (AUTO-ISKLJUČIVANJE) TASTER**
podešavanje automatskog isključivanja TV uređaja u određeno vreme
13. **RETURN (POVRATAK) TASTER**
povratak na kanal koji ste predhodno gledali
14. **FAV. (OMILJENO) TASTER**
prikazivanje omiljene programske liste
15. **CH+/CH- (SLEDEĆI/PREDHODNI PROGRAM) TASTER**
promena TV kanala
16. **REC (SNIMANJE) TASTER**
snimanje trenutnog programa (radi samo u DTV režimu rada)
17. **SOURCE (IZVOR SIGNALA) TASTER**
izbor funkcije TV uređaja (digitalni, antenski, smart opcija, media-USB, HDMI)
18. **ASPECT (FORMAT PRIKAZA) TASTER**
izbor formata prikaza slike na ekranu
19. **INFO (INFORMACIJA) TASTER**
prikazivanje informacija o trenutnom statusu signala, kvaliteta slike, programima ...
20. **AUDIO TASTER**
izbor zvuka sa različitih izvora (ako postoji)
21. **EPG (ELEKTRONSKI PROGRAMSKI VODIČ) TASTER**
otvaranje/zatvaranje EPG-a (samo u DTV režimu rada)
22. **DTV/RADIO TASTER**
prelazak sa DTV na radio program i obrnuto
23. **HOME (POČETNI) TASTER**
povratak na Smart - TV početnu stranu
24. **MOUSE TASTER**
prebacivanje kontrole na kursor vidljiv na ekranu.
25. **FILE (USB) TASTER**
direktan ulazak u USB režim rada.
26. **DELETE (BRISANJE) TASTER**
brisanje u USB režimu rada.
27. **ZOOM + (UVEĆAJ) TASTER**
uvećanje slike u Smart režimu rada.
28. **ZOOM - (UMANJI) TASTER**
umanji slike u Smart režimu rada.

Napomena:

EPG, DTV/RADIO, REC funkcije imaju efekta samo u DTV modu

DALJINSKI UPRAVLJAČ

TELETEXT FUNKCIJA (Opciono)

1) TEXT TASTER

pritisnite taster za prelazak sa TV slike na Teletext, ukoliko TV stanica podržava isti.

2) REVEAL TASTER Za

prikazivanje skrivenih karaktera.

3) MIX TASTER

Taster za prikazivanje Teletexta I TV slike zajedno ili samo Teletext slike. Ovaj taster omogućava korisniku da unese 4 digitalne podstrane za trenutnu stranu. Ukoliko sledeće digitalne strane nisu unesene za 5 sekundi, predhodni broj strane će biti ponovo pozvan i prikazan na ekranu.

4) RED/GREEN/YELLOW/BLUE TASTER

Ova 4 tastera u Teletext modu služe za brzo prebacivanje (zumiranje, prebacivanje na sledeću stranu...)

5) UP/DOWN TASTER

Pomeranje stranice gore/dole uteletext modu

6) 0,1,2...9 TASTER

Izbor određene stranice uz pomoć numerisanih tastera.

7) HOLD TASTER

Neke teletext informacije se nalazna više stranica koje se automatski menjaju nakon određenog vremena. Pritisnite taster HOLD da zaustavite promenu strana. Za nastavak promene strane, pritisnite ponovo HOLD

8) SIZE TASTER

Taster za povećanje dimenzije karaktera i prikazivanje pola teletext strane. Svaki pritisak će prikazivati više i više do normalne strane

9) INDEX TASTER

Pritisnite ovaj taster kako biste videli index stranu u teletext modu. Prikaz teletext vremena.

USB FUNKCIJA (Opciono)

1) ◀ / ▶ TASTER

Premotajte scenu ili muziku

2) ◀◀ / ▶▶ TASTER

Vraćanje na predhodni ili prelazak na naredni fajl

3) ▶|| TASTER

početak / pauza

4) ■ TASTER

Zaustavljanje. Pritisnite da potvrdite akciju (Na primer:kopiraj, nalepi itd.) Ponavljanje scene ili muzike u reprodukciji filmova na USB-u.

5) SUBTITLE TASTER

Otvara ili zatvara funkciju titla (titl mora biti preuzet sa interneta i mora biti identičan kao fajl, kao i kompatibilan sa fajlom koji podržava)

 
Napomena: USB uređaj već mora biti povezan.

INSTALACIJA BATERIJA U DALJINSKI UPRAVLJAČ

1. Otvorite poklopac odeljka za baterije
2. Stavite dve AAA baterije (uske) od 1.5V. Budite sigurni da se polaritet baterija (+ i -) podudara sa polaritetom unutar odeljka.

Napomena:

- Preporučujemo upotrebu alkalnih baterija
- Rok trajanja baterija može biti i duže od jedne godine, u zavisnosti od toga koliko često se daljinski upravljač koristi. Za najbolje performanse, baterij treba menjati bar jednom godišnje ili onda kada počnu da ometaju rad daljinskog upravljača.
- Budite sigurni da su baterije okrenute u dobrom pravcu, kao na slici.
- Nemojte mešati stare i nove baterije ili različite vrste baterija.
- Stare baterije mogu iscureti i oštetiti daljinski upravljač. Uvek uklonite oslabljene baterije.
- Ne bacajte baterije u vatru, ne punite i ne rasklapajte ih. Naročito nemojte puniti, sklupati i rasklapati, zagrevati ili sagorevati upotrebene baterije. poštujujte odgovarajuće propise o zaštiti okoline u vezi sa upotrebljenim baterijama.

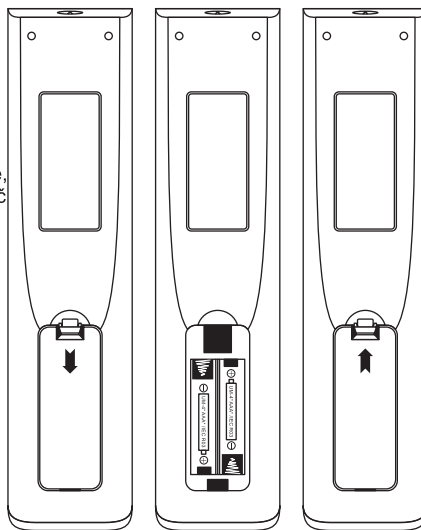


RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Napomena: Slike na ovom priručniku su date samo kao primeri a merodavne su slike na samim proizvodima.

Početna stranica


Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali početnu stranu

 【▶】 tipka za izbor početne stranu u meniju TV inputa.

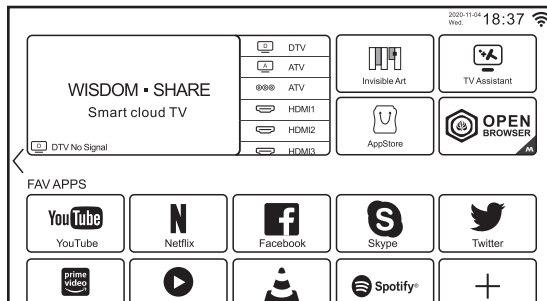

Napomena: Ova slika je data samo kao referenca.

 
Kada je kursor blizu leve ivice, pritisnite tipku **【◀】** kako biste pozvali bočnu traku. Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali podešavanja aplikacija / mreže / medija. Na početnoj strani možete izabrati program koji želite.

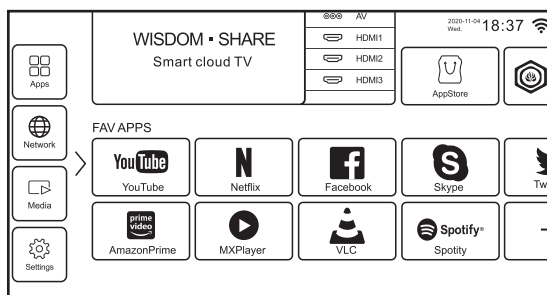

Napomena: Ova slika je data samo kao referenca.

MyApps (Moje aplikacije)

 
Pritisnite tipku **【▼】 / 【▲】 / 【◀】 / 【▶】** kako biste izabrali Moje aplikacije i pritisnite tipku OK kako biste ušli u spisak aplikacija.

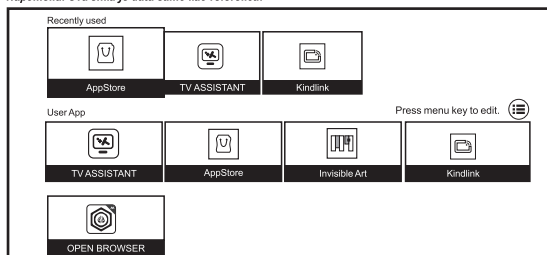

Napomena: Ova slika je data samo kao referenca.

Settings (Podešavanja)

 Pritisnite tipku **【▼】 / 【▲】 / 【◀】 / 【▶】** kako biste izabrali podešavanja, a OK tipku kako biste ušli u Podešavanja sistema. Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali Mrežu / Vreme / Osnovne funkcije. / Podatke o sistemu.

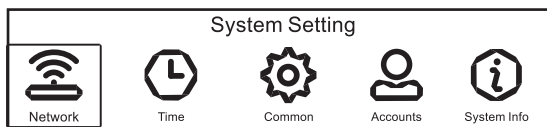


Napomena: Ova slika je data samo kao referenca.

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Network (Mreža)

 
Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali Mrežu, zatim pritisnite OK tipku kako biste ušli.

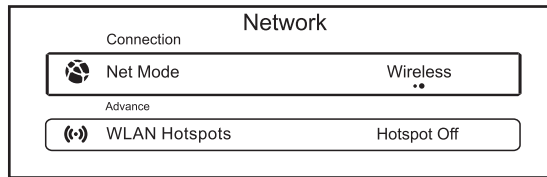

Napomena: Ova slika je data samo kao referenca.

Time (Vreme)

 
Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali Vreme. Pritisnite tipku OK kako biste ušli.

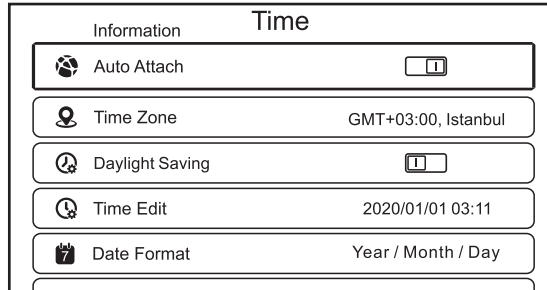

Napomena: Ova slika je data samo kao referenca.

Common (Osnovne funkcije)

 Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali Osnovne funkcije, zatim pritisnite tipku OK, kako biste ušli.

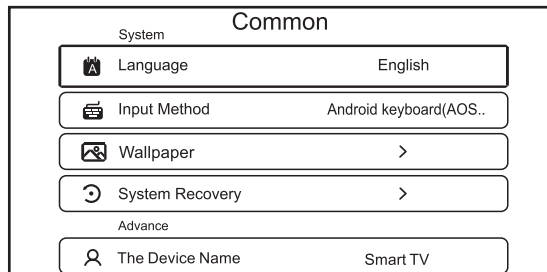

Napomena: Ova slika je data samo kao referenca.

Рачуни

Притисните дугме **【◀】 / 【▶】** за одабир Рачуни, притисните дугме OK за улаз.

System Info (Informacije o sistemu)

 
Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali Informacije o sistemu, a zatim pritisnite tipku enter kako biste ušli.

Mediji

Pritisnite tipku **【▼】 / 【▲】 / 【◀】 / 【▶】** kako biste izabrali Multimediju na početnoj stranici i pritisnite tipku OK da biste ušli u Medija centar.

Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali Sve / Video / Audio / Slika.


Pritisnite tipku **【▼】 / 【▲】 / 【◀】 / 【▶】** kao biste izabrali datoteku, pritisnite tipku MENU kako biste otvorili podmeni.

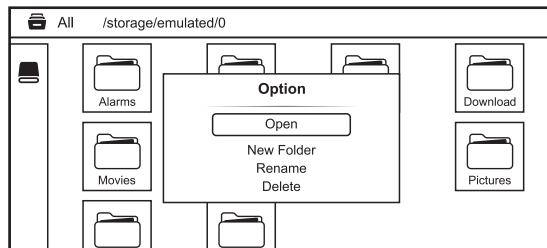

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Video

 Pritisnite tipku **【▼】** / **【▲】** kako biste izabrali Video ili Sve i pritisnite tipku **【▼】** / **【▲】** / **【◀】** / **【▶】** kako biste izabrali Filmove.

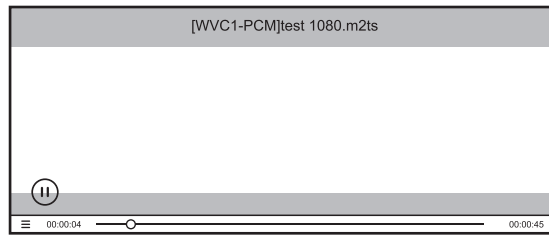

Audio

Pritisnite tipku **【▼】** / **【▲】** kako biste izabrali Audio ili Sve i pritisnite tipku **【▼】** / **【▲】** / **【◀】** / **【▶】** kako biste izabrali Muziku.


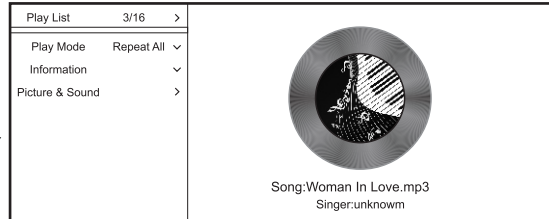 


Image (Slika)

 Pritisnite tipku **【◀】** / **【▶】** kako biste izabrali Sliku ili Sve i pritisnite tipku **【▼】** / **【▲】** / **【◀】** / **【▶】** kako biste izabrali Slike.

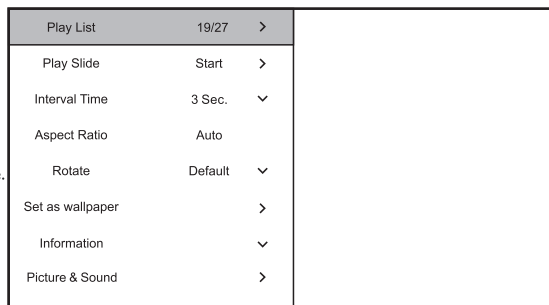

Source (Izvor)

Pritisnite tipku SOURCE (izvor) kako biste ušli u meni izvora

 
Pritisnite tipku **【▼】** / **【▲】** kako biste izabrali.

Pritisnite OK kako biste izabrali izvor.

Podešavanje TV-a

Pritisnite tipku MENU (meni) kako biste ušli u glavni meni.


Pritisnite tipku **【◀】** / **【▶】** kako biste označili željenu ikonicu menija i pritisnite tipku OK radi izbora. (Opciono: Home / Source / Picture / Sound / Channel / Lock / Common / Advance (početna strana / izvor / slika / zvuk / kanal / zaključavanje / osnovne funkcije / napredne funkcije)).

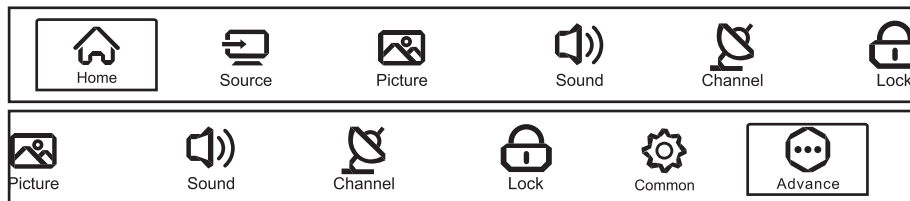

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

1. Picture (Slika)

 Pritisnite tipku MENU kako biste ušli u glavni meni. Pritisnite tipku [◀] / [▶] kako biste izabrali Sliku. Pritisnite tipku OK kako biste ušli u pod-meni.

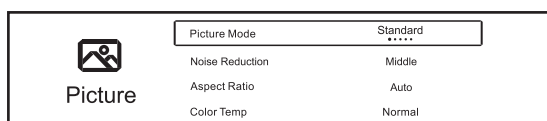

Pritisnite tipku [▼] / [▲] kako biste izabrali Režim slike / Kontrast / Osvetljenje / Boju / Oštrinu / Smanjenje buke / Format / Temp. boja / Još podešavanja. Pritisnite tipku MENU ili EXIT kako biste završili.

Picture Mode (Režim slike)

Pritisnite tipku [▼] / [▲] kako biste izabrali Režim slike, potom pritisnite tipku [◀] / [▶] radi izbora. (Opciono: Standard, Dynamic, Vivid, Energy Saving, User).

Contrast / Brightness / Color / Sharpness (Kontrast / Osvetljenost / Boja / Oštrina) (opciono samo u korisničkom režimu)

Pritisnite tipku [▼] / [▲] radi izbora, odnosno tipku [◀] / [▶] radi podešavanja.

Kontrast Podešavanje kontrasta slike.
Osvetljenost Podešavanje osvetljenosti slike.
Boja Podešavanje gustine boje slike.
Oštrina Podešavanje ivične oštrine slike.

Noise Reduction (Smanjenje šuma)

Podesite opcije za eliminisanje jačine šuma.

Pritisnite tipku [▼] / [▲] radi izbora Smanjenja jačine šuma.

Pritisnite tipku [◀] / [▶] kako biste izabrali podešavanja Off / Low / Middle / High / Auto (Isklj./Niska/Srednja/Auto).

Aspect Ratio (Format)

Pritisnite tipku [▼] / [▲] kako biste izabrali Format. Pritisnite tipku [◀] / [▶] za podešavanje.

Color Temp (Temperatura boja)

 
Podesite ukupne boje slike. Pritisnite tipku [▼] / [▲] kako biste izabrali Temp. boje.

Pritisnite tipku [◀] / [▶] kako biste izabrali Cool / Normal / Warm (hladna/normalna/topla).

Cool Slika sa blago pojačanim plavim nijansama.
Normal Živa slika.
Warm Slika sa pojačanim nijansama crvene boje.

More Settings (Dodatna podešavanja)

Pritisnite tipku [▼] / [▲] kako biste izabrali Dodatna podešavanja. Pritisnite tipku OK kako biste ušli u pod-meni.

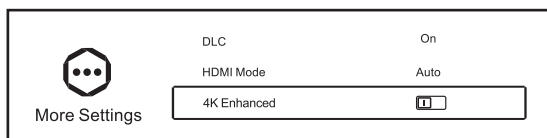

DLC

Pritisnite tipku [▼] / [▲] kako biste izabrali DLC. Pritisnite tipku [◀] / [▶] kako biste izabrali On / Off.

HDMI mode (HDMI režim) (Prikazuje se samo pod HDMI)

Pritisnite tipku [▼] / [▲] kako biste izabrali HDMI režim. Pritisnite tipku [◀] / [▶] kako biste izabrali Video / Graphic / Auto.

4K Enhanced (4K poboljšano) (prikazuje se samo pod HDMI)

 
Pritisnite tipku [▼] / [▲] kako biste izabrali 4K Enhanced (4K poboljšano). Pritisnite tipku [◀] / [▶] za podešavanje.

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

2. Sound (Zvuk)

Pritisnite tipku MENU kako biste ušli u glavni meni. Pritisnite tipku [◀] / [▶] kako biste izabrali Zvuk. Pritisnite tipku OK kako biste ušli u pod-meni.

Pritisnite tipku [▼] / [▲] kako biste izabrali stavku za podešavanje. Pritisnite tipku MENU ili EXIT kako biste završili.

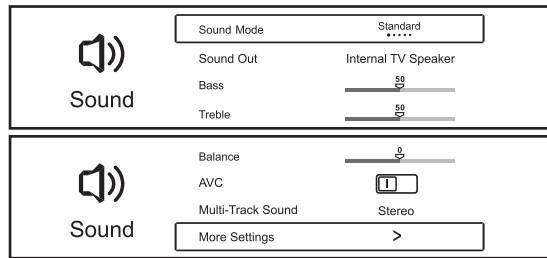

Sound Mode (Režim zvuka)

Pritisnite tipku [▼] / [▲] kako biste izabrali Režim zvuka.

Pritisnite tipku [◀] / [▶] radi izbora. (Opciono: Standard / Music / Movie / News / User).

Звук изван

Притисните дугме [▼] / [▲] за одабир Звук изван. Притисните дугме [◀] / [▶] за подешавање.)Опционално: Унутрашњи ТВ, Звучник, слушалице SPDIF,HDMI ARC).

Bass / Treble (Bas / Visoki tonovi) (opciono samo u korisničkom režimu)

Pritisnite tipku [▼] / [▲] radi izbora. Pritisnite tipku [◀] / [▶] radi podešavanja.

Bass Podešavanje zvukova niske frekvencije.

Treble Podešavanje zvukova visoke frekvencije.

Balance (Balans)

Balans levog i desnog kanala.

Pritisnite tipku [▼] / [▲] kako biste izabrali Balans. Pritisnite tipku [◀] / [▶] radi podešavanja.

AVC

Pritisnite tipku [▼] / [▲] kako biste izabrali AVC. Pritisnite tipku [◀] / [▶] kako biste izabrali On / Off.

Napomena: Nakon što otvorite "AVC", nakon podešavanja zvuka, jačina zvuka koji se emituje sa zvučnika ostaje stabilna, bez obzira na razlike između TV zvuka svakog kanala.

Hearing Impaired (za lica sa oštećenim sluhom) (Važi samo u DTV)

Pritisnite tipku [▼] / [▲] kako biste izabrali funkciju za lica sa oštećenim sluhom. Pritisnite tipku [◀] / [▶] radi podešavanja.

Audio Description (Audio opis) (važi u DTV)

Pritisnite tipku [▼] / [▲] kako biste izabrali Audio Description (Audio opis). Pritisnite tipku [◀] / [▶] radi podešavanja.

ADVolume (AD jačina zvuka) (važi samo u DTV)

Pritisnite tipku [▼] / [▲] button to select ADVolume. Pritisnite tipku [◀] / [▶] za podešavanje.

Napomena: Only works when Audio Description is set to On.

 
Multi-Track Sound (zvuk sa više traka) (prikazuje se samo u ATV)

Pritisnite tipku [▼] / [▲] radi izbora. Pritisnite tipku [◀] / [▶] radi podešavanja.

Napomena: Audio Description / ADVolume / Hearing Impaired / Multi-Track Sound funkcija zahteva podršku za signal kako bi bila aktivna.

More Settings (Dodatna podešavanja)

Pritisnite tipku [▼] / [▲] kako biste izabrali Dodatna podešavanja. Pritisnite tipku OK kako biste ušli u pod-meni.

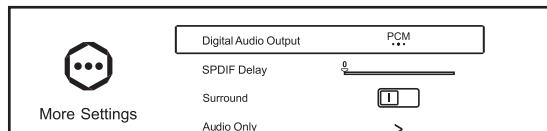

Digital Audio Output (Digitalni audio izlaz)

Pritisnite tipku [▼] / [▲] kako biste izabrali digitalni audio izlaz. Pritisnite tipku [◀] / [▶] kako biste izabrali Off / PCM / RAW.

SPDIF Delay (SPDIF odlaganje)

Pritisnite tipku [▼] / [▲] kako biste izabrali SPDIF odlaganje. Pritisnite tipku [◀] / [▶] za podešavanje.

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Surround (Okruženje)

Pritisnite tipku [▼] / [▲] kako biste izabrali Okruženje. Pritisnite tipku [◀] / [▶] kako biste izabrali ON / OFF.

Audio Only (Samo audio)

Pritisnite tipku [▼] / [▲] kako biste izabrali Samo audio. Pritiskom na tipku OK isključuje se pozadinsko osvetljenje.

3. Channel (Kanal)

Pritisnite tipku MENU radi ulaska u glavni meni. Pritisnite tipku [◀] / [▶] kako biste izabrali Kanal. Pritisnite tipku OK kako biste ušli u pod-meni. Pritisnite tipku [▼] / [▲] kako biste izabrali stavku za podešavanje. Pritisnite tipku MENU ili EXIT kako biste završili.

Channel	Antenna Type	Air
	Scan	>
	CI Card	>
	Signal Information	>
Channel	Signal Information	>
	Subtitle	Off >
	Channel List	>
	EPG	>

Antenna Type (Tip antene)

Pritisnite tipku [▼] / [▲] kako biste izabrali Tip antene. Pritisnite tipku [◀] / [▶] kako biste izabrali Air / Cable / Satellite (vazдушna / kablovska / preko satelita).

Napomena: "Satelit" je opcionalna funkcija kojom neki modeli ne raspolažu, relevantna je konfiguracija konkretnog modela.

Scan (Pretraga)

Pritisnite tipku [▼] / [▲] kako biste izabrali Pretragu. Pritisnite tipku OK kako biste ušli u pod-meni.

Auto Scan (Automatska pretraga)

Funkcija automatske pretrage može automatski da pretražuje dostupne kanale.

Pritisnite tipku [▼] / [▲] kako biste izabrali Auto Scan, potom pritisnite tipku OK kako biste započeli automatsku pretragu. Ako želite da zaustavite pretragu pritisnite tipku EXIT ili MENU kako biste to učinili.

Analog Manual Scan (Analogno manuelno pretraživanje) (Prikazuje se samo u Air / Cable)

Pritisnite tipku [▼] / [▲] kako biste izabrali analogno manuelno pretraživanje.

Pritisnite tipku OK kako biste ušli u pod-meni. Pritisnite tipku EXIT ili MENU kako biste završili.

Digital Manual Scan (Digitalno manuelno pretraživanje) (Prikazuje se samo u Air / Cable)

Pritisnite tipku [▼] / [▲] kako biste izabrali digitalno manuelno pretraživanje.

Pritisnite tipku OK kako biste ušli u pod-meni. Pritisnite tipku EXIT ili MENU kako biste završili.

CI Card (CI kartica) (Ova funkcija na raspolaganju je samo kod TV uređaja sa CI funkcijom)

Pritisnite tipku [▼] / [▲] kako biste izabrali CI karticu. Pritisnite tipku OK kako biste ušli u pod-meni.

Signal Information (Podaci o signalu)

Pritisnite tipku [▼] / [▲] kako biste izabrali Podatke o signalu. Pritisnite tipku OK kako biste ušli u pod-meni.

Subtitle (Titlovi)

Pritisnite tipku [▼] / [▲] kako biste izabrali titlove. Pritisnite tipku OK kako biste ušli u pod-meni.

Channel List (Lista kanala)

Pritisnite tipku [▼] / [▲] kako biste izabrali Listu kanala. Pritisnite tipku OK kako biste ušli u pod-meni.

Pritisnite tipku MENU kako biste uredili kanal.

Pritisnite tipku EXIT ili MENU kako biste završili.

EPG

Pritisnite tipku [▼] / [▲] kako biste izabrali.

Pritisnite tipku OK kako biste ušli u pod-meni.

EPG		2016/02/20 12:19:10AM																																	
	Pie in the Sky	2016/02/20	01:00AM - 02:00AM																																
	[Drama]																																		
	The Truth Will Out: The first series of the charming police drama. Henry is asked to search for a missing policeman, but all he wants to do is get his restaurant ready! [S]																																		
◀ 2016/02/20 ▶																																			
<table border="1"><tr><td>20</td><td>Drama</td></tr><tr><td>21</td><td>5 USA</td></tr><tr><td>26</td><td>ITVBe</td></tr><tr><td>27</td><td>ITV2+1</td></tr><tr><td>30</td><td>SSTAR</td></tr><tr><td>37</td><td>QUEST</td></tr><tr><td>39</td><td>The Store</td></tr><tr><td>44</td><td>Channel 5+1</td></tr></table>	20	Drama	21	5 USA	26	ITVBe	27	ITV2+1	30	SSTAR	37	QUEST	39	The Store	44	Channel 5+1	<table border="1"><tr><td>01:00AM - 02:00AM</td><td>Pie in the Sky</td></tr><tr><td>02:00AM - 04:00AM</td><td>Lovejoy Christmas Special</td></tr><tr><td>04:00AM - 07:00AM</td><td>Home Shopping</td></tr><tr><td>07:00AM - 09:20AM</td><td>Home Shopping</td></tr><tr><td>07:20AM - 07:50AM</td><td>A Fine Romance</td></tr><tr><td>07:50AM - 08:50AM</td><td>House of Cards</td></tr><tr><td>08:50AM - 09:50AM</td><td>House of Cards</td></tr><tr><td>09:50AM - 10:50AM</td><td>House of Cards</td></tr></table>	01:00AM - 02:00AM	Pie in the Sky	02:00AM - 04:00AM	Lovejoy Christmas Special	04:00AM - 07:00AM	Home Shopping	07:00AM - 09:20AM	Home Shopping	07:20AM - 07:50AM	A Fine Romance	07:50AM - 08:50AM	House of Cards	08:50AM - 09:50AM	House of Cards	09:50AM - 10:50AM	House of Cards		
20	Drama																																		
21	5 USA																																		
26	ITVBe																																		
27	ITV2+1																																		
30	SSTAR																																		
37	QUEST																																		
39	The Store																																		
44	Channel 5+1																																		
01:00AM - 02:00AM	Pie in the Sky																																		
02:00AM - 04:00AM	Lovejoy Christmas Special																																		
04:00AM - 07:00AM	Home Shopping																																		
07:00AM - 09:20AM	Home Shopping																																		
07:20AM - 07:50AM	A Fine Romance																																		
07:50AM - 08:50AM	House of Cards																																		
08:50AM - 09:50AM	House of Cards																																		
09:50AM - 10:50AM	House of Cards																																		

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

4. Lock (Zaključavanje)

Pritisnite tipku MENU kako biste ušli u glavni meni. Pritisnite tipku **◀** / **▶** kako biste izabrali Zaključavanje. Pritisnite tipku OK kako biste ušli u pod-meni.

Pritisnite tipku **▼** / **▲** kako biste izabrali Change Password / System Lock / Key Lock / Parental Guidance (Promena lozinke / zaključavanje tipki / Roditeljski nadzor).

Change Password (Promena lozinke)

Pritisnite tipku **▼** / **▲** kako biste izabrali Promenu lozinke. Pritisnite tipku OK kako biste ušli u pod-meni.

System Lock (Zaključavanje sistema)

 
Pritisnite tipku **▼** / **▲** kako biste izabrali zaključavanje sistema. Pritisnite tipku **◀** / **▶** kako biste izabrali Off / On. Kada je zaključavanje sistema uključeno (On), pritisnite tipku **▼** / **▲** kako biste izabrali Zaključavanje tipku / Roditeljski nadzor.

Parental Guidance (Roditeljski nadzor)




Pritisnite tipku **▼** / **▲** kako biste izabrali Roditeljski nadzor. Pritisnite tipku **◀** / **▶** radi podešavanja.

5. Common (Osnovne funkcije)

Pritisnite tipku MENU kako biste ušli u glavni meni. Pritisnite tipku **◀** / **▶** kako biste izabrali Osnovne funkcije. Pritisnite tipku OK kako biste ušli u pod-meni. Pritisnite tipku **▼** / **▲** kao biste izabrali stavku koja se podešava. Pritisnite tipku MENU ili EXIT kako biste završili.

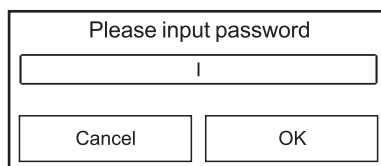

Napomena: Početna lozinka "0000"

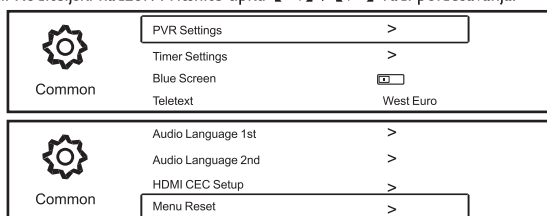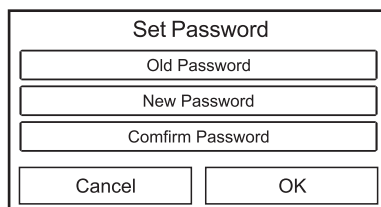   

PVR Setting (PVR podešavanje) (Prikazuje se samo u DTV)

Pritisnite tipku **▼** / **▲** button to select PVR podešavanje. Pritisnite tipku OK kako biste ušli u pod-meni.

Napomena: Ova funkcija zahteva stavljanje USB fleš drajva.

OSD Timer (OSD tajmer)

Pritisnite tipku **▼** / **▲** kako biste izabrali OSD tajmer. Pritisnite tipku **◀** / **▶** radi izbora željene vrednosti. (Opciono: isključeno, 5 sekundi, 15 sekundi, 30 sekundi, 40 sekundi)

Autostandby Timer (Tajmer za automatski stendbaj)

Pritisnite tipku **▼** / **▲** kako biste izabrali Tajmer za automatski stendbaj. Pritisnite **◀** / **▶** radi izbora. (Opciono: isključeno, 3 sata, 4 sata, 5 sati)

Sleep Timer (Tajmer za mirovanje)

Pritisnite tipku **▼** / **▲** kako biste izabrali Tajmer za mirovanje. Pritisnite **◀** / **▶** radi izbora željene vrednosti. (Opciono: isključeno, 15 min, 30 min, 45 min, 60 min, 90 min, 120 min, 240 min)

Blue Screen (Plavi ekran)

Podesite boju u pozadini na plavu kada nema ulaznog signala. Pritisnite tipku **▼** / **▲** kako biste izabrali Plavi ekran.

Pritisnite tipku **◀** / **▶** kako biste izabrali On / Off.

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Teletext (Teletext) (Ova funkcija zahteva podršku signala koje prenose TV operateri.)

Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali Teletext. Pritisnite **【◀】 / 【▶】** kako biste izabrali željeno podešavanje. (Opciono: arapski, istočni j., zapadni j., Farsi, ruski)

Audio Language 1st (Audio jezik prvi) (Pokazuje se samo u DTV)

Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali Prvi audio jezik. Pritisnite tipku OK kako biste ušli u pod-meni.

Audio Language 2nd (Audio jezik drugi) (Pokazuje se samo u DTV)

 
Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali Drugi audio jezik. Pritisnite tipku OK kako biste ušli u pod-meni.

Subtitle Language 1st (Jezik za titlove prvi) (Pokazuje se samo u DTV)

Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali prvi jezik za titlove. Pritisnite tipku OK kako biste ušli u pod-meni.

HDMI CEC Setup (HDMI CEC podešavanje)

Pritisnite tipku **【▼】 / 【▲】** button to select HDMI CEC Setup. Pritisnite tipku OK kako biste ušli u pod-meni.



Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali CEC / Tv Auto Power On / Device Auto Power Off / ARC / Device List. (CEC / automatsko uključivanje TV-a / automatsko isključivanje uređaja / ARC Spisak uređaja).

Napomena 1. Sve opcije su dostupne samo kada je uključen HDMI CEC Switch.

Napomena 2: Spisak uređaja dostupan je samo kada je izabrani izvor HDMI.

CEC

Pritisnite tipku **【▼】 / 【▲】** kaok biste izabrali CEC. Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali On/Off. Sledeće je dostupno samo kada je u CEC izabrano "On".

Tv Auto Power On (Automatsko isključivanje napajanja televizora)

 
Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali Automatsko isključivanje napajanja televizora. Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali On / Off.

Device Auto Power Off (Isključivanje napajanja uređaja)

Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali isključivanje napajanja uređaja. Pritisnite **【◀】 / 【▶】** kako biste izabrali On / Off.


Начин хотела(Опционално)

Притисните дугме **【▼】 / 【▲】** за одабир Начин хотела. Притисните дугме OK/ **【▶】** за улазак у подмени. (Задана лозинка је 4711.)

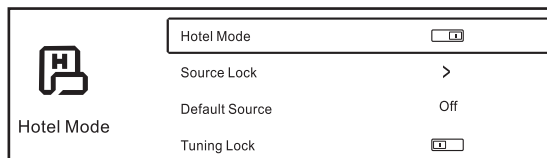

Начин хотела

 Притисните дугме **【▼】 / 【▲】** за одабир Начин хотела. Притисните дугме **【◀】 / 【▶】** за одабир паљења или гашења.

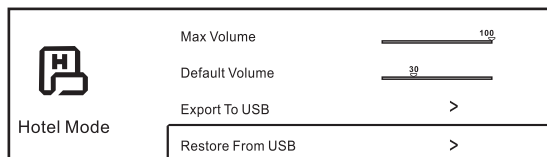


RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

Безбедносно закључавање

Притисните дугме [▼] / [▲] за одабир Безбедносно закључавање, притисните дугме ОК за улаз у подмени и

 притисните дугме [▼] / [▲] за одабир извора, притисните ОК за одређивање да ли закључати или не. Сви извори које одаберете више нису доступни.

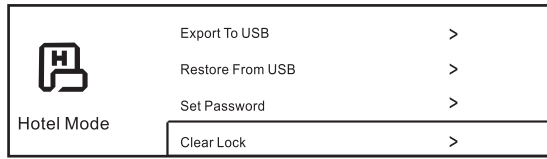

Задани извор

Поставите задани извор. Сваки пут када укључите улазите у задани извор којег сте поставили. Притисните дугме [▼] / [▲] за одабир заданог извора, притисните дугме ОК за улазак у подмени за одабир.

Подешавање закључавања

Притисните дугме [▼] / [▲] за одабир Подешавање закључавања, притисните дугме [◀] / [▶] за одабир паљења или гашења.

Максимална јачина

Притисните дугме [▼] / [▲] за одабир Максимална јачина, притисните дугме [◀] / [▶] за подешавање.

Задана јачина

Притисните дугме [▼] / [▲] за одабир Задана јачина, притисните дугме [◀] / [▶] за подешавање.

Извезите на USB

Извезите поставке Начин хотела на U диск.

Притисните дугме [▼] / [▲] за одабир

Извезите на USB, притисните дугме ОК за потврду извоза.

Формулар за враћање USB

Увезите поставке начина хотела на U диску у TV.

Притисните дугме [▼] / [▲] за одабир Формулар за враћање USB,

притисните дугме ОК за потврду увоза.

Подесите лозинку

Притисните дугме [▼] / [▲] за одабир Поставити лозинку,

притисните дугме ОК за улазак у подмени.

Обрисати закључавање

 
Притисните дугме [▼] / [▲] за одабир Обрисати закључавање,

притисните дугме ОК за брисање поставки које сте пре направили.

Забелешка: Начин хотела је опционална особина, неки модели немају ову особину.

Menu Reset (Resetovanje menija)


Povratite podrazumevano podešavanje. Pritisnite tipku [▼] / [▲] kako biste izabrali resetovanje menija. Pritisnite tipku OK kako biste ušli u pod-meni.

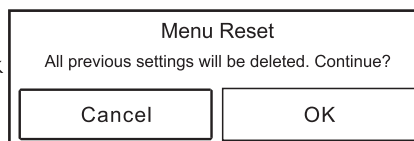

RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

6. Advance (Napredno podešavanje)

 Pritisnite tipku MENU kako biste ušli u glavni men Pritisnite tipku [◀] / [▶] kako biste izabrali Napredno podešavanje. Pritisnite tipku OK kako biste izabrali Podešavanje sistema.

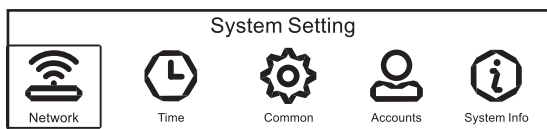

VODIČ ZA REŠAVANJE PROBLEMA

Mnogi kvarovi su prouzrokovani neodgovarajućim i nepravilnim podešavanjem i uglavnom su jednostavni za otkloniti. Ukoliko imate poteškoća sa rukovanjem, prvo pogledajte sledeću listu uobičajnih grešaka i njihovih rešenja.

SIMPTOMI	METODA PROVERAVANJA I PODEŠAVANJA
Nema slike ili zvuka	Proverite da li je naponski kabl ispravno priključen u utičnicu.
Slika je normalna ali bez zvuka	Proverite da nije slučajno zvuk podešen na nečujno (MUTE). Ukoliko jeste pojačajte zvuk.
Daljinski upravljačne radi.	Proverite da li je TV uključen. Proverite da li su baterije ispravno postavljene. Uverite se da infracrveni odašiljač na daljinskom ili TV-u nije izložen velikoj svetlosti ili da nije blokiran na bilo koji način.
Ne primete nikakav TV signal	Proverite da li je SOURCE prekidač postavljen na TV-u. Proverite i podešavanje za lokaciju i povezanost. Pokušajte da ponovo pretražite kanale i proverite metod pretrage.
Bez signala programa sa spoljašnjeg izvora	Proverite da li je taster SOURCE podešen na ispravnu poziciju za prijem signala.
Problem sa kontrastom i osvetljenjem	Napravite potrebne i željene izmene.
Slab kontrast i blede boje na svim kanalima	Proverite podešavanje za lokaciju prijema signala.
Linije ili tačke po celom ekranu	Drugi električni uređaji mogu da izazovu smetnje. Sklonite ih od televizora.
Sneg na ekranu	Proverite lokacijska podešavanja, kratak spoj, prekinuta konekcija ili bilo koja vidljiva oštećenja.
Dupla slika ili zamagljenost	Proverite podešavanja za lokaciju i uopšte položaj antene ili uređaja. Jak vetar može da izazove takve probleme. visoke zgrade ili planine takođe. Malo podešavanje antene može u mnogo čemu da popravi sliku.

NAPOMENA:

Spoljna ili krovna antena treba da bude postavljena od strane ovlašćenog osoblja.

NAPOMENA:

Ne podržavaju svi mobilni uređaji funkciju deljenja prikaza na ekran tv-a. Molimo vas da proverite da li vaš mobilni uređaj podržava ovu funkciju.

SPECIFIKACIJA

Proporcija ekrana	16:9
Sistem	PAL/SEC AM BG/DK/I, DVB-T/C+T2, DVB-S/S2(Optional)
Impedansa koaksijalnog kabla	75 Ω
Prijem TV kanala	Ceo opseg kanala
Napajanje, voltaža	100-240V~ 50/60Hz

Napomena: Delovi i specifikacije mogu da budu promenjene bez predhodne najave.

Daljinski upravljač:

Karakteristike: Daljinski upravljač sa svim funkcijama ima radijus rada 8 metara
Napajanje: DC 3V (dve baterije, veličine AAA, preporuka da koristite alkalne)



Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.
Za više informacija o FOX uređajima posetite našu internet stranicu:

www.foxelectronics.rs

33AS-S706-ESDXFOX0

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda FOX, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/fox-televizor-58aos415a-akcija-cena/>