

## Uputstvo za upotrebu

FOX televizor 58DLE858



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/fox-televizor-58dle858-akcija-cena/>



**HDMI**<sup>®</sup>  
HIGH-DEFINITION MULTIMEDIA INTERFACE

## UPUTSTVO ZA UPOTREBU

### LED TELEVIZORI Model:58DLE858

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

EN

SR

## IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



**WARNING:**

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**REGULATORY INFORMATION**

This equipment generates and uses can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**CAUTION**

DO not attempt to modify this product in any way without written authorization from supplier. Unauthorized modification could void the user's authority to operate this product.

It is not recommended to keep a certain still image displayed on the screen for a long time as well as displaying extremely bright images on screen.

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

**WARNING**

To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain Or Moisture.

Don't use the apparatus in tropical climates.

The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

The Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment.

Keep minimum distances (5cm) around the apparatus for sufficient ventilation; (Minimum distance around the apparatus for sufficient ventilation.)

No naked flame sources, such as lighted candles, should be placed on the apparatus;

To prevent the spread of fire, keep candles or other open flames away from this product at all times.

The device may malfunction when under electrostatic discharge. It can be manually resumed by power off and power on again.

**CAUTION**

**Connecting the Power Cord**

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and its if appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

The MAINS plug is used as the disconnect device, and the disconnect device shall remain readily operable.

BOMARE COMPANY SARL declare that the product BM4392 complies with the essential health and safety requirements of the R&TTE directive 1999/5/CE.

Power source of this TV : 100-240V 50/60HZ.


This TV complies with CE standard.

Alternating current:

To indicate on the rating plate that the equipment is suitable for alternating current only, to identify the relevant terminals.

**IMPORTANT SAFETY INSTRUCTIONS**

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.


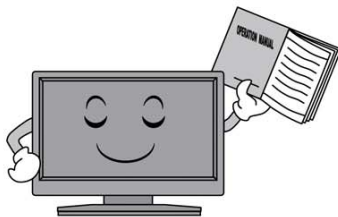


7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.




5. Do not use this apparatus near water.

8. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

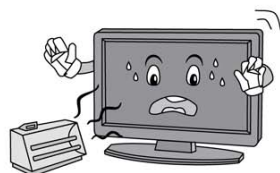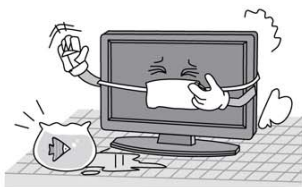

6. Clean only with a dry cloth.


9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

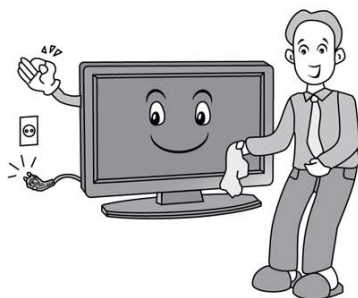

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



13. Unplug power cord and antenna during lightning storms or when unused for long periods of time.

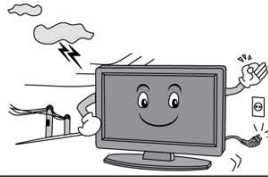

11. Only use the attachments/accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



**ON DISPOSAL**

- The fluorescent lamp used in this product contain a small amount of mercury.
- Do not dispose of this product with general household waste.
- Disposal of this product must be carried out in accordance to the regulations of your local authority.

**NOTE**

- If the TV feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with TV.
- Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However these have no adverse effect on the monitor's performance.
- Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effect on the screen.

### Using the remote control

---


When using the remote control, aim it at remote sensor on the television. If there is an object between the remote control and the remote sensor on the unit, the unit may not operate.

- ◆ Point the remote control at the REMOTE SENSOR located on the television.
- ◆ When using this television in a very brightly lit area, the infrared REMOTE CONTROL SENSOR may not work properly.
- ◆ The recommended effective distance for using the remote control is about 7 metres.

### Installing Batteries in the Remote Control

---

1. Open the cover at the back of the remote control.
2. Install two AAA size batteries. Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.
3. Replace the cover.

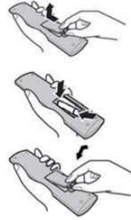

### Battery replacement

---

You will need to install the batteries into the remote control to make it operate following the instruction below.

When the batteries become weak, the operating distance of the remote control will be greatly reduced and you will need to replace the batteries.

#### Notes on Using Batteries:

The use of the wrong type of batteries may cause chemical leakage and/or explosion. Please note the following:

- ◆ Always ensure that the batteries are inserted with the + and - terminals in the correct direction as shown in the battery compartment.
- ◆ Different types of batteries have different characteristics. Do not mix different types.
- ◆ Do not mix old and new batteries. Mixing old and new batteries will shorten battery life and/or cause chemical leakage.
- ◆ Replace batteries as soon as they do not work.
- ◆ Chemicals which leak from batteries may cause skin irritation. If any chemical matter seeps out of the batteries, wipe it up immediately with a dry cloth.
- ◆ The batteries may have a shorter life expectancy due to storage conditions. Remove the batteries whenever you anticipate that the remote control will not be used for an extended period.
- ◆ The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

#### CAUTION:

- ◆ It may result in an explosion if batteries are replaced incorrectly.
- ◆ Only replace batteries with the same or equivalent type.



### Cable Installation

Please read the relevant content in "Notice for Maintenance and Safety" carefully before the installation and use.

1. Take out the TV from the package and put it in a drafty and flat place.

**NOTE:**

◆ When you plug or unplug the TV, computer or other equipments, you must make sure that the AC power has been already shut down; when unplugging the power cable or signal cable, please hold the plug (the insulated part), do not draw the body of the cable.

2. The RF output terminal can be connected with the RF input port of the TV.
3. The output AV terminal of DVD can be connected with the AV input port of the TV through AV cable.
4. Connect one end of the VGA cable with the VGA port on computer, connect the other end of the VGA cable with the VGA port on the TV, and tighten the bolts clockwise on the each end of VGA cable.

**NOTE:**

◆ While connecting the 15-pin VGA, please do not insert the plug overexertedly, for fear the pin might be broken.

5. Connect one end of the HDMI cable with HDMI output port, connect the other end of the HDMI cable with the HDMI port on the TV.

**NOTE:**

◆ While connecting the HDMI, please aim at carefully, do not insert overexertedly, for fear the pin might be broken.

6. Check and make sure that all AV cables are connected with the corresponding ports correctly.
7. Connect the AC power cable with 100-240V<sup>~</sup> power supply.

---

**NOTE:**

◆ The range of power input for the TV is 100-240V<sup>~</sup> 50/60Hz, do not connect the TV power input port with the AC power out of the above range.

◆ Please hold the insulated part of the plug when you are unplugging the power cable, do not touch directly the metallic part of the cable.

---

### QUICK START GUIDE



---

- **Connection**

1. Connect the mains and antenna.
2. Press the  button on remote control to turn on TV from standby mode.

- **Initial Setup**


When the TV is initially powered on, a sequence of on-screen prompts will assist in configuring basic settings.

1. Select the desired OSD (On Screen Display) language.  
Press the  button, then press the **OK** button.
2. Select the appropriate country.  
Press the  button to select the country, then press the **OK** button to Start Channel Tuning.


### Turning on and off the TV

---

- **Turn on the TV**

Connect the AC input cable. At this time the TV will enter standby mode.  
Press the  button on remote control to turn on TV from standby mode.

- **Turn off the TV**

Press the  button on the remote control to enter standby mode.  
Do not leave your set in standby mode for long periods of time. It is best to unplug the set from the mains and aerial.

- **No signal**

There is No Signal menu on screen when there is no input signal. In TV/DTV mode, if there is no signal in fifteen minutes, the TV will turn off automatically. In PC mode, the TV set will automatically turn off in five minutes if no input signal. When VGA cable is connected, the TV turns on automatically.

### Programme Selection

---

- **Using the CH+ / CH- on the panel of TV or on the remote control.**

Press CH+ to increase channel number.  
Press CH- to decrease channel number.

- **Using 0-9 digital buttons.**

 

You can select the channel number by pressing 0 to 9. (In TV, DTV mode)

- **Using -/-- button**

Using -/-- button enables you to enter double digit channel numbers


### Volume adjustment

---

- Press the VOL+/- button to adjust the volume.
- If you want to switch the sound OFF, press the .
- You can release mute by pressing the  or increase/decrease the volume.

### Changing the Input Source

 ---

You can select the input source by pressing the **INPUT** button on the remote control.  
Press the  button to cycle through the input source, and press the **OK** button to confirm your choice.

## Remote Control



### Definition of the buttons on remote control:

1. : Enter or quit the stand by mode.
2. : Mute or restore sound.
3. **NUMBER BUTTONS**: Use to choose channels.
4. : Change the channel bits want to input
5. : Return to last viewed program
6. **P.MODE**: Pressto cycle through the available video picture mode.
7. **S.MODE**: Pressto cycle through the different sound settings.
8. **MENU**: Press to display/disappear the on screen menus or to quit some operations.
9. **SLEEP**: Set the sleep timer.
10. **INPUT**: Select signal source.
11. **AUDIO**: Switch between NICAM DUAL /NICAM DUAL /NICAM DUAL + /MONO and switch Audio language in DTV mode.
12. **OK**: Select or confirm menu item.
13. : Select direction.
14. **EXIT**: Quit the current interface.
15. **HOME**: Return to home menu.
16. : Switching the keyboard/mouse button.
17. **VOL+/VOL-**: Increase/Decrease audio volume.
18. **CH+/CH-**: Scroll to next/previous channel.
19. **INFO**: Show channel program information.
20. **LIST** : Channel List Key.
21. **COLOR BUTTONS**: Red/green/yellow/blue key navigation link.
  - : Fast reverse (in MEDIA mode)
  - : Fastforward (in MEDIA mode)
  - : Previous (in MEDIA mode)
  - : Next (in MEDIA mode)
  - : Play / Pause (in MEDIA mode)
  - : Stop (in MEDIA mode)
22. **FAV**: Display the favorites program
23. **TEXT**: Enter the Teletext, press again for MIX mode, press this button again to exit
24. **HOLD**: Hold the teletext page on display press again to release
25. **SUBTITLE**: Enter subtitle mode
26. **INDEX**: Go to index page/Enter the recorded list.(In PVR mode).
27. **REVEAL**: Reveal the hidden information of some teletext pages.
28. **RADIO**: Switching the keyboard/mouse button.
29. **EPG**: Call up the EPG(Electronic Program Guide),using in the DTV mode.
30. **DELETE**: Delete or backspace button.
31. **BROWSER**: Browse the web.
32. **MEDIA**: Go to media mode.
33. **SUBPAGE**: Enter the subpage.
34. **SIZE**: Change the size of Teletext screen in display mode.
35. **REC**: To stare recording(In PVR Mode).

### NOTE:


- All pictures in this manual are examples, only for reference, actual product may differ from the pictures.
- The buttons not mentioned here are not used.

## OPERATION OF FUNCTION MENU

**Note: The pictures on this manual are only examples and the actual products shall prevail.**


### Setup Wizard

Connect an RF cable from the TV's input called "RF-In" and to your TV Aerial socket. Press OK button to select the Start the setup.

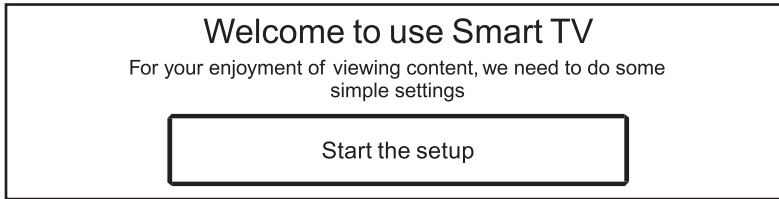


*Note: This picture is for reference only.*

Press **【▼】 / 【▲】** button to select the language. Press OK button to sure, and press **【▶】** button to select the time zone.

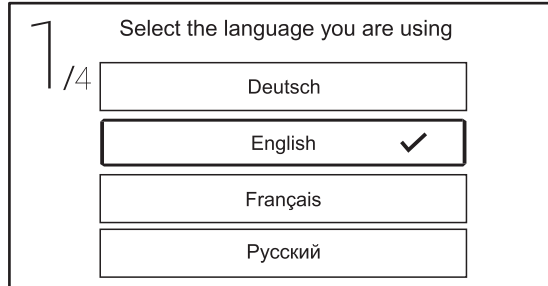


*Note: This picture is for reference only.*

Press **【▼】 / 【▲】** button to select the time zone. Press OK button to sure, and press **【▶】** button to connect the WIFI/ network.

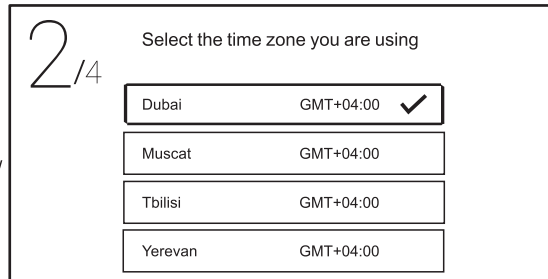

*Note: This picture is for reference only.*


Press OK button to connect the WIFI/ network. Press **【▶】** button to select the input source.

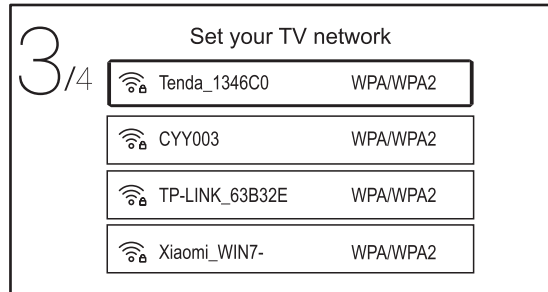

*Note: This picture is for reference only.*

# OPERATION OF FUNCTION MENU


Press **▼** / **▲** button to select the input source.

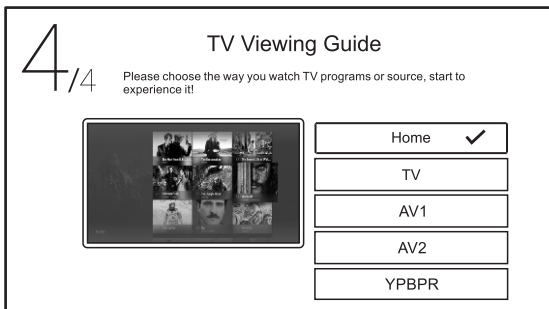

Note: This picture is for reference only.


## Home Page

Press **▼** / **▲** button to select Home page in Setup Wizard or press **◀** / **▶** button to select Home in the menu of TV input.

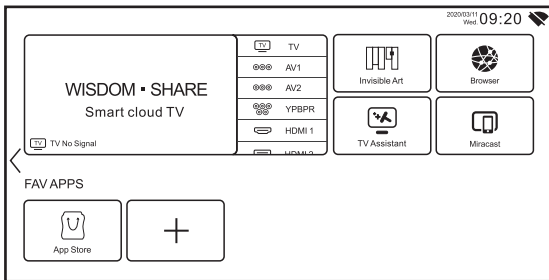

Note: This picture is for reference only.


When the cursor is near the left border, press **◀** button to call up the sidebar. Press the **▼** / **▲** button to select Apps / Network / Media / Settings. You can choose the program you want on the home page.

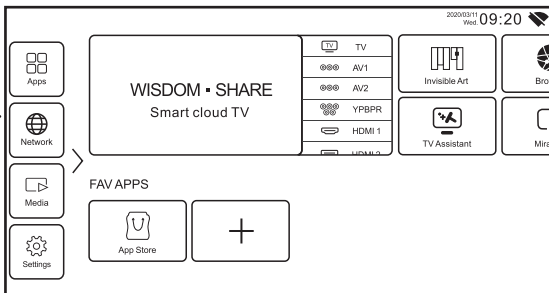

Note: This picture is for reference only.

### My Apps

Press **▼** / **▲** / **◀** / **▶** button to select My Apps, and press OK button to enter the App List.

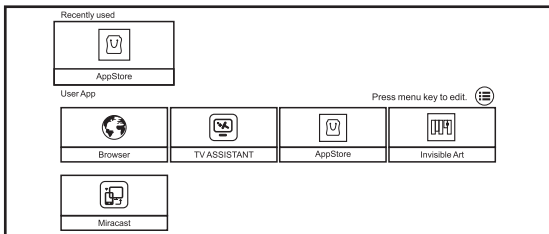


Note: This picture is for reference only.

## OPERATION OF FUNCTION MENU

### Settings


Press **▼** / **▲** / **◀** / **▶** button to select the Settings, and press OK button to enter the System Setting.

Press **◀** / **▶** button to select Network / Time / Common / System Info.

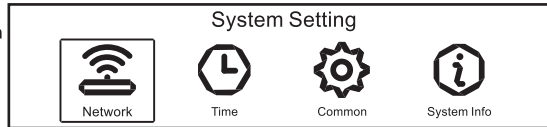


### Network

Press **◀** / **▶** button to select Network, press OK button to enter.

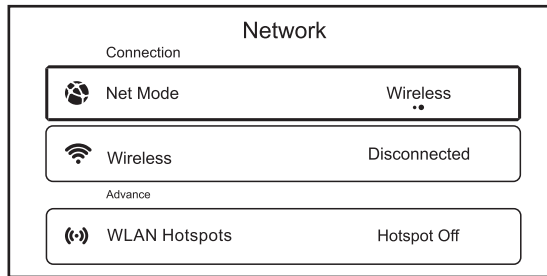

### Time


Press **◀** / **▶** button to select Time, press OK button to enter.

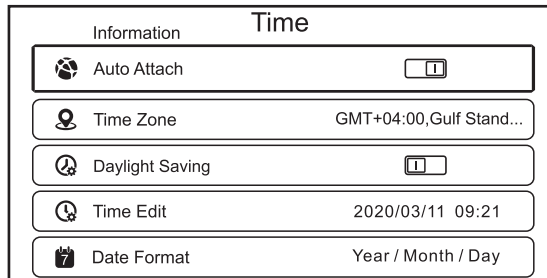

*Note: This picture is for reference only.*

### Common

Press **◀** / **▶** button to select Common, press OK button to enter.

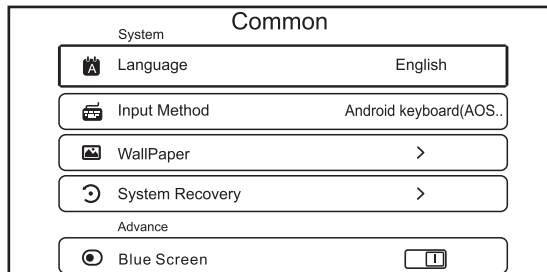

*Note: This picture is for reference only.*

### System Info


Press **◀** / **▶** button to select System Info, press OK button to enter.

## Media

Press **▼** / **▲** / **◀** / **▶** button to select Multimedia on the Home page, and press OK button to enter the Media Center.

Press **▼** / **▲** button to select All / Video / Audio / Image.


Press **▼** / **▲** / **◀** / **▶** button to select the file, press MENU button to open the submenu.

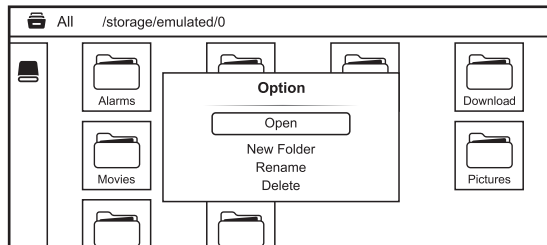

## OPERATION OF FUNCTION MENU

### Video

Press **▼** / **▲** button to select Video or All, and press **▼** / **▲** / **◀** / **▶** button to select Movies.

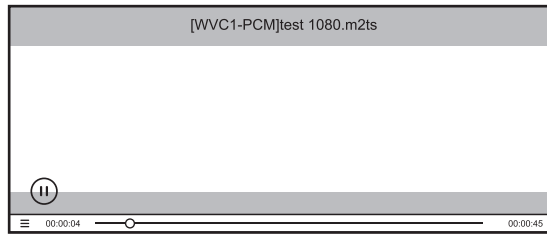


### Audio

Press **▼** / **▲** button to select Audio or All, and press **▼** / **▲** / **◀** / **▶** button to select Music.



### Image

Press **◀** / **▶** button to select Image or All, and press **▼** / **▲** / **◀** / **▶** button to select Pictures.

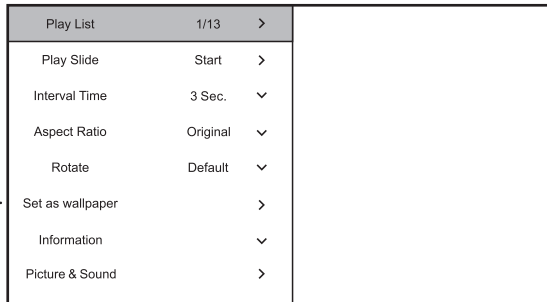

## Input Source

Press SOURCE button to enter Input Source menu.

Press **▼** / **▲** button to select.

Press OK to select source.

## TV Setting

Press MENU button to enter main menu.

 
Press **◀** / **▶** button to highlight the desired menu icon, and press OK button to select. (Optional: Home / Source / Picture / Sound / Channel / Lock / Common / Advance).



# OPERATION OF FUNCTION MENU

## 1. Picture

Press MENU button to enter the main menu. Press [◀] / [▶] button to select the Picture. Press OK button to enter the sub-menu.



Press [▼] / [▲] button to select Picture Mode / Contrast / Brightness / Color / Sharpness / Noise Reduction / Aspect Ratio / Color Temp / More Settings. Press MENU or EXIT button to quit.

### Picture Mode

Press [▼] / [▲] button to select Picture Mode, then press [◀] / [▶] button to select. (Optional: Standard, Dynamic, Vivid, Energy Saving, User).

- Standard Produces a standard image.
- Dynamic Enhance the contrast, color and clarity of the screen, so that the picture in the dynamic will balance the color.
- Vivid Image colors more beautiful, more vivid picture.
- Energy Saving Select energy saving mode will affect the screen brightness etc.
- User User-defined picture settings.

### Contrast / Brightness / Color / Sharpness (Optional in user mode only)

Press [▼] / [▲] button to select, and press [◀] / [▶] button to adjust.

- Contrast Adjust image contrast.
- Brightness Adjust image brightness.
- Color Adjust image color density.
- Sharpness Adjust the image edge sharpness.

### Noise Reduction

Set up options to eliminate the image noise intensity.

Press [▼] / [▲] button to select Noise Reduction.

Press [◀] / [▶] button to select Off / Low / Middle / High / Auto.

### Aspect Ratio

Press [▼] / [▲] button to select Aspect Ratio. Press [◀] / [▶] button to adjust.

### Color Temp

Adjust the overall color of the image.


Press [▼] / [▲] button to select Color Temp.

Press [◀] / [▶] button to select Cool / Normal / Warm.

- Cool Produces a gentle blue-hued image.
- Normal Produces a vivid image.
- Warm Produces a red-hued image.

### More Settings

Press [▼] / [▲] button to select More Settings. Press OK button to enter the sub-menu.

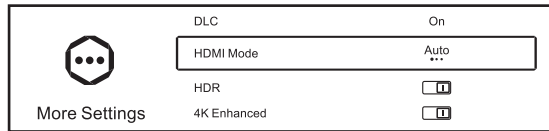

### DLC

Press [▼] / [▲] button to select DLC. Press [◀] / [▶] button to select On / Off.

### HDMI Mode (Show only under HDMI)

Press [▼] / [▲] button to select HDMI Mode.

Press [◀] / [▶] button to select Video / Graphic / Auto.

### HDR (Show only under HDMI)


Press [▼] / [▲] button to select HDR. Press [◀] / [▶] button to adjust.

### 4K Enhanced (Show only under HDMI)

Press [▼] / [▲] button to select 4K Enhanced. Press [◀] / [▶] button to adjust.

## 2. Sound

Press MENU button to enter the main menu. Press [◀] / [▶] button to select the Sound. Press OK button to enter the sub-menu.

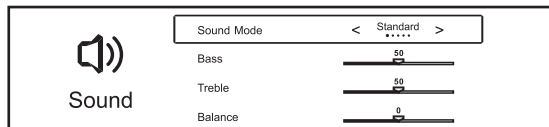

Press [▼] / [▲] button to select the item to be set. Press MENU or EXIT button to quit.



## OPERATION OF FUNCTION MENU

### Sound Mode

Press **▼** / **▲** button to select Sound Mode.

Press **◀** / **▶** button to select. (Optional: Standard / Music / Movie / News / User).

Standard Emit balanced sound under any circumstances.

Music Enhance the high pitch and reduce the bass.

Movie Enhances treble and bass for a rich sound experience.

News Enhance the voice.

User Select to customize sound settings.

### Bass/Treble (Optional in user mode only)

Press **▼** / **▲** button to select. Press **◀** / **▶** button to adjust.

Bass Adjust the low frequency sounds.

Treble Adjust the high frequency sounds.

### Balance

Balanced left and right channels.

Press **▼** / **▲** button to select Balance. Press **◀** / **▶** button to adjust.

### AVC

Press **▼** / **▲** button to select AVC. Press **◀** / **▶** button to select On / Off.

**Note:** After open the "AVC", once the volume is set up, it can keep the volume of the speaker steady no matter what kind of difference among the TV sound of each channel.

### Audio Description (Valid only under DTV)

Press **▼** / **▲** button to select Audio Description. Press **◀** / **▶** button to adjust.

### ADVolume (Valid only under DTV)

Press **▼** / **▲** button to select ADVolume. Press **◀** / **▶** button to adjust.

**Note:** Only works when Audio Description is set to On.

### Hearing Impaired (Valid only under DTV)

Press **▼** / **▲** button to select Hearing Impaired. Press **◀** / **▶** button to adjust.


### Multi-Track Sound (Show only under ATV)

Press **▼** / **▲** button to select. Press **◀** / **▶** button to adjust.

**Note:** Audio Description / ADVolume / Hearing Impaired / Multi-Track Sound function requires signal support to be effective.

### More Settings

Press **▼** / **▲** button to select More Settings. Press OK button to enter the sub-menu.

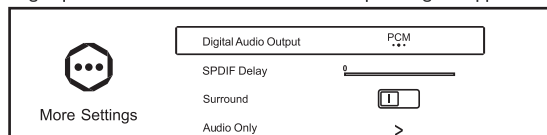

### Digital Audio Output

Press **▼** / **▲** button to select Digital Audio Output.

Press **◀** / **▶** button to select Off / PCM / RAW.

### SPDIF Delay

Press **▼** / **▲** button to select SPDIF Delay. Press **◀** / **▶** button to adjust.

### Surround

Press **▼** / **▲** button to select Surround. Press **◀** / **▶** button to choose ON / OFF.


### Audio Only

Press **▼** / **▲** button to select Audio Only. Press OK button will turn off the backlight.

## 3.Channel

Press MENU button to enter the main menu. Press **◀** / **▶** button to select Channel. Press OK button to enter the sub-menu.

Press **▼** / **▲** button to select the item to be set. Press MENU or EXIT button to quit.

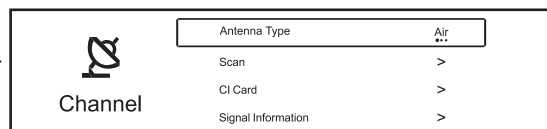

### Antenna Type

Press **▼** / **▲** button to select Antenna Type.

Press **◀** / **▶** button to select Air / Cable / Satellite.

**Note:** 'Satellite' is an optional feature, some models do not have this feature, the actual product shall prevail.

# OPERATION OF FUNCTION MENU

## Scan

Press **▼** / **▲** button to select Scan. Press OK button to enter the sub-menu.

## Auto Scan

Automatic search can search for effective program channel automatically.

Press **▼** / **▲** button to select Auto Scan, then press OK button to start auto search. If you want to stop searching, press EXIT or MENU button to stop searching.

## Analog Manual Scan (Show only under Air / Cable)

Press **▼** / **▲** button to select Analog Manual Scan.

Press OK button to enter the sub-menu. Press EXIT or MENU button to quit.

## Digital Manual Scan (Show only under Air / Cable)

Press **▼** / **▲** button to select Digital Manual Scan.

Press OK button to enter the sub-menu. Press EXIT or MENU button to quit.

## CI Card (This function is only available for TVs with CI function)

Press **▼** / **▲** button to select CI Card. Press OK button to enter the sub-menu.

## Signal Information

Press **▼** / **▲** button to select Signal Information. Press OK button to enter the sub-menu.

## Audio Language

Press **▼** / **▲** button to select Audio Language. Press OK button to enter the sub-menu.

## Subtitle

Press **▼** / **▲** button to select Subtitle. Press OK button to enter the sub-menu.

## Channel List


Press **▼** / **▲** button to select Channel List. Press OK button to enter the sub-menu.

Press MENU button edit the channel. Press EXIT or MENU button to quit.

## EPG


Press **▼** / **▲** button to select EPG.

Press OK button to enter the sub-menu.

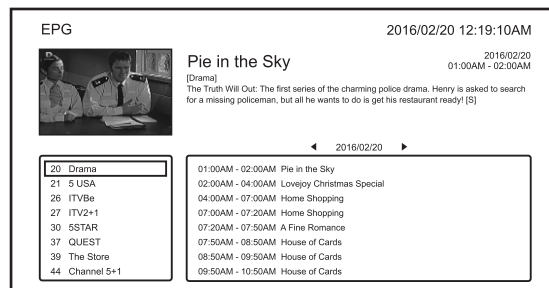

## 4.Lock


Press MENU button to enter the main menu. Press **◀** / **▶** button to select Lock. Press OK button to enter the sub-menu.

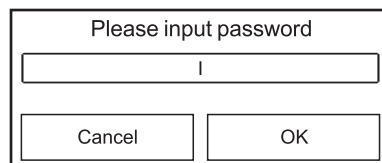

**Note:** Initial password "0000"


## OPERATION OF FUNCTION MENU

Press **▼** / **▲** button to select Change Password / System Lock / Key Lock / Parental Guidance.

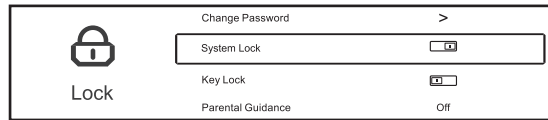

### Change Password

Press **▼** / **▲** button to select Change Password. Press OK button to enter the sub-menu.

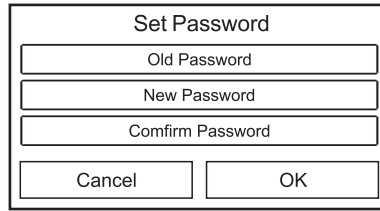

### System Lock

Press **▼** / **▲** button to select System Lock.

Press **◀** / **▶** button to select Off / On.

 
When System Lock is set to On, press **▼** / **▲** button to select Key Lock / Parental Guidance.

### Parental Guidance

Press **▼** / **▲** button to select Parental Guidance. Press **◀** / **▶** button to adjust.

### 5.Common

Press MENU button to enter the main menu. Press **◀** / **▶** button to select Common. Press OK button to enter the sub-menu.



Press **▼** / **▲** button to select the item to be set. Press MENU or EXIT button to quit.

### PVR Setting (Show only under DTV)

Press **▼** / **▲** button to select PVR Setting. Press OK button to enter the sub-menu.

**Note:** This function requires a USB flash drive to be inserted.

### OSD Timer

Press **▼** / **▲** button to select OSD Timer.

Press **◀** / **▶** to select. (Optional: off, 5sec, 15sec, 30sec, 40sec)

### Autostandby Timer

Press **▼** / **▲** button to select Autostandby Timer. Press **◀** / **▶** to select.

(Optional: off, 3hour, 4hour, 5hour)

### Sleep Timer

Press **▼** / **▲** button to select Sleep Timer. Press **◀** / **▶** to select.

(Optional: off, 15min, 30min, 45min, 60min, 90min, 120min, 240min)

### Blue Screen

Set the background color to blue when there is no input signal.

Press **▼** / **▲** button to select Blue Screen.

Press **◀** / **▶** button to select On / Off.

### Teletext (This function requires the support of signals transmitted by TV operators.)

Press **▼** / **▲** button to select Teletext. Press **◀** / **▶** to select.

(Optional: Arabic, East, West Euro, Farsi, Russian)

## OPERATION OF FUNCTION MENU

### Audio Language 1st (Show only under DTV)

Press **▼** / **▲** button to select Audio Language 1st. Press OK button to enter the sub-menu.

### Audio Language 2nd (Show only under DTV)

Press **▼** / **▲** button to select Audio Language 2nd. Press OK button to enter the sub-menu.

### Subtitle Language 1st (Show only under DTV)

 
Press **▼** / **▲** button to select Subtitle Language 1st. Press OK button to enter the sub-menu.

### Subtitle Language 2nd (Show only under DTV)

Press **▼** / **▲** button to select Subtitle Language 2nd. Press OK button to enter the sub-menu.

### HDMI CEC Setup

Press **▼** / **▲** button to select HDMI CEC Setup. Press OK button to enter the sub-menu.



Press **▼** / **▲** button to select CEC / Tv Auto Power On / Device Auto Power Off / ARC / Device List.

**Note1:** All the Options are available only when the HDMI CEC Switch select On.

**Note2:** The Device List is available only when the source select HDMI.

### CEC

Press **▼** / **▲** button to select CEC, press **◀** / **▶** button to select On / Off.

The following terms are available only when "On" is selected in CEC.

### Tv Auto Power On

Press **▼** / **▲** button to select Tv Auto Power On. Press **◀** / **▶** button to select On / Off.

### Device Auto Power Off

Press **▼** / **▲** button to select Device Auto Power Off. Press **◀** / **▶** to select On / Off.

### ARC

Press **▼** / **▲** button to select ARC. Press **◀** / **▶** to select On / Off.

### Device List


Press **▼** / **▲** button to select Device List. Press OK / **▶** button to enter the sub-menu.

### Menu Reset

Recall the default setting.


Press **▼** / **▲** button to select Menu Reset.

Press OK button to enter the sub-menu.

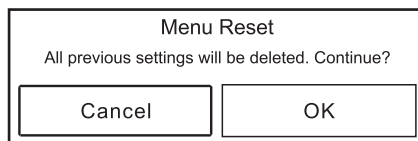

### 6.Advance

Press MENU button to enter the main menu. Press **◀** / **▶** button to select Advance. Press OK button to enter the System Setting.

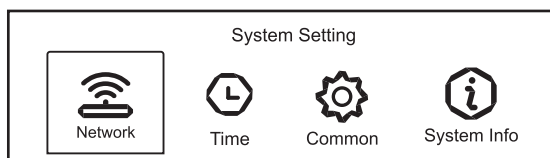

NOTE: The data in the picture is reference only, and the actual goods shall prevail.

## Troubleshooting Guide

### Troubleshooting

Before contact the service technician, perform the following simple checks. If any program still persists, unplug the TV and calling for serving.

PROBLEM	POSSIBLE SOLUTION
No sound and picture	<ul style="list-style-type: none"> <li>- Check whether the main plug has been connected to a wall let.</li> <li>- Check whether you have pressed the POWER button on the front of TV set.</li> <li>- Check the picture contrast and brightness settings.</li> </ul>
Normal picture but no sound	<ul style="list-style-type: none"> <li>- Check the volume.</li> <li>- Sound muted? Press the MUTE button.</li> <li>- Try another channel, the problem may be with the broadcast.</li> <li>- Are the audio cables installed properly?</li> </ul>
The remote control does not work	<ul style="list-style-type: none"> <li>- Check to see if there any object between the product and remote control Causing obstruction.</li> <li>- Are batteries installed with correct polarity (+ to +, - to -)?</li> <li>- Correct remote operating mode set: TV, VCR etc.?</li> <li>- Install new batteries</li> </ul>
Power is suddenly turned off	<ul style="list-style-type: none"> <li>- Is the sleep timer set?</li> <li>- Check the power control settings. Power interrupted.</li> <li>- No broadcast on station tuned with auto activated.</li> </ul>
Picture appears slowly after switching on	<ul style="list-style-type: none"> <li>- This is normal, the image is muted during the product startup process. Please contact your service center, if the picture has not appeared after five minutes.</li> </ul>
No or poor color or poor picture	<ul style="list-style-type: none"> <li>- Adjust the color in menu option.</li> <li>- Keep a sufficient distance between the product and the VCR.</li> <li>- Try another channel, the problem may be with the broadcast.</li> <li>- Are the VIDEO cables installed properly?</li> <li>- Activate the any function to restore the brightness of the picture.</li> </ul>
Horizontal/vertical bars or picture shaking	<ul style="list-style-type: none"> <li>- Check for local interference such as an electrical appliance or power tool.</li> </ul>
Poor reception on some channels	<ul style="list-style-type: none"> <li>- Station or cable product experiencing problems. Tune to another station.</li> <li>- Station signal is weak, reorient antenna to receive weaker station.</li> <li>- Check for sources of possible interference.</li> </ul>
Lines or streaks in pictures	<ul style="list-style-type: none"> <li>- Check the antenna (Change the direction of the antenna).</li> </ul>
No output from one of the speakers	<ul style="list-style-type: none"> <li>- Adjust balance in menu option.</li> </ul>

**NOTE:** There is a problem in VGA mode (Only VGA mode applied).

## Troubleshooting Guide

PROBLEM	POSSIBLE SOLUTION
The signal is out of range.	<ul style="list-style-type: none"><li>- Adjust resolution, horizontal frequency, or vertical frequency.</li><li>- Check it whether the signal cable is connected or loose.</li><li>- Check the input source.</li></ul>
Vertical bar or stripe on back ground & Horizontal Noise & Incorrect position.	<ul style="list-style-type: none"><li>- Work the auto configure or adjust clock, phase, or H/V position.</li></ul>
Screen color is unstable or single color.	<ul style="list-style-type: none"><li>- Check the signal cable.</li><li>- Reinstall the PC video card.</li></ul>

### Maintenance

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

#### Cleaning the screen

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then used it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

#### Cleaning the cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

#### Extended Absence



If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.





#### Disposal of old electrical appliances



The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

# Stand Installation

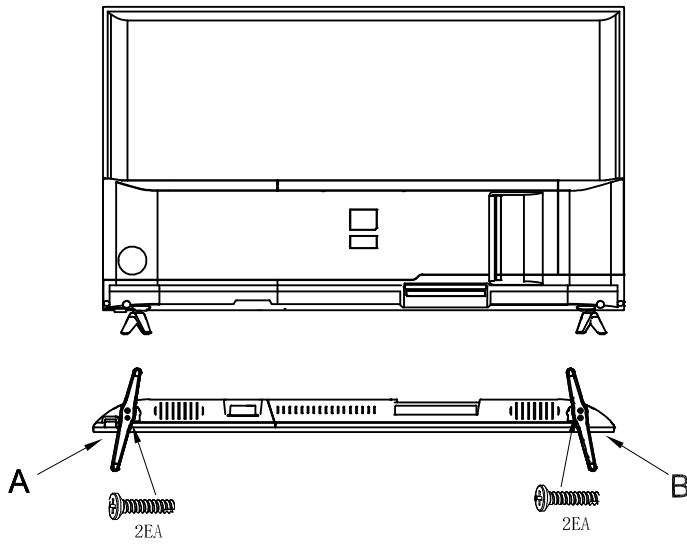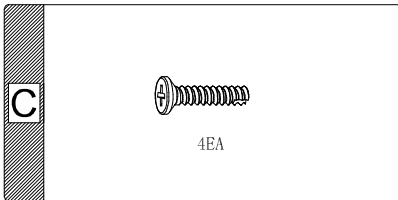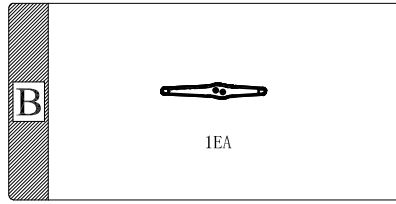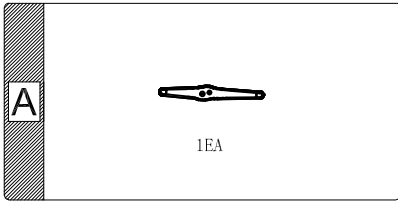



**HDMI**<sup>®</sup>  
HIGH-DEFINITION MULTIMEDIA INTERFACE

## UPUTSTVO ZA UPOTREBU

### LED TELEVIZORI Model:58DLE858

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

EN

SR





Hvala Vam što ste kupili ovaj uređaj.

**FOX LED** televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

---



**UPOZORENJE:**  
KAKO BI SMANJILI RIZIK OD STRUJNOG UDARA NE UKLANJAJTE POKLOPAC (ILI ZADNJI DEO). UNUTAR UREĐAJA NEMA DELOVA KOJE SAMI MOŽETE ZAMENITI. OBRATITE SE KVALIFIKOVANIM SERVISERIMA.



Simbol munje u jednakostraničnom trouglu upozorava korisnika na neizolovane opasne delove pod naponom unutar uređaja, koji može biti dovoljne jačine da predstavlja rizik od električnog udara.



Znak uzvika u jednakostraničnom trouglu obaveštava korisnika na postojanje važnih operacionih instrukcija kao i instrukcija za održavanje u literaturi koja prati proizvod.

### INFORMACIJE O PROPISIMA:

Ova oprema stvara, koristi i zrači radiofrekvenciju i ako nije instalirana i korišćena u skladu sa uputstvom, može izazvati štetne smetnje u radio komunikaciji. Ipak, ne postoji garancija da se smetnje neće pojaviti prilikom određenih instalacija. Ako ova oprema ipak izazove štetne smetnje pri radio ili TV prijemu signala, što se može utvrditi tako što se oprema isključi pa ponovo uključi, korisnik se savetuje da ukloni smetnje pomoću jedne ili više ponuđenih mera:

- Premestite prijemnu antenu.
- Povećajte razdaljinu između opreme i prijemnika.
- Opremu i prijemnik uključite u različite strujne utičnice.
- Posavetujte se sa prodavcem ili sa iskusnim radio/TV serviserom.

Sve izmene ili modifikacije koje nisu izričito odobrene od strane koja je ovlašćena da izda saglasnost, mogu da ponište korisnikovo punomoćje da koristi aparat.

### OPREZ:

NE pokušavajte da modifikujete ovaj proizvod u bilo kom smislu bez pismenog odobrenja prodavca. Neovlašćena modifikacija proizvoda može da poništi korisnikovo punomoćje da koristi aparat.

Nije preporučljivo da određena statična slika bude stalno prikazana na ekranu duže vreme ili da prikazujete ekstremno svetle slike.

Ilustracije u ovom uputstvu su obezbeđene samo kao preporuke i mogu se razlikovati od stvarnog izgleda proizvoda. Dizajn i specifikacije proizvoda mogu se promeniti bez prethodnog upozorenja.

### UPOZORENJE:

Kako bi umanjili rizik od požara i strujnog udara NE izlažite ovaj proizvod kiši ili vlazi. Ne koristite ovaj proizvod u tropskoj klimi.

Ventilacija ne bi trebala da bude blokirana pokrivanjem ventilacionih otvora sa predmetima kao što su novine, krpe, zavese i slično.

Proizvod ne bi trebalo da bude izložen kapljanju ili prskanju. Takođe ni jedan predmet napunjen tečnošću, kao što je na primer vaza za cveće, ne bi trebalo da bude stavljen na njega.

Treba obratiti pažnju na ekološke aspekte prilikom odlaganja baterija. Ne bacajte baterije u kantu za otpatke. Molimo vas da kontaktirate vašeg prodavca kako bi očuvali životnu okolinu.

Održavajte minimalnu razdaljinu (5cm) oko proizvoda kako bi aparat imao dovoljnu ventilaciju i hlađenje.

Na proizvod ne stavljati izvore otvorenog plamena.

Da bi sprečili širenje vatre, držite sveće i ostale izvore otvorenog plamena dalje od ovog proizvoda u svakom trenutku.

Moguć je zastoj rada proizvoda prilikom elektrostatičkog praženjenja. Može se ponovo pokrenuti ručnim gašenjem pa ponovnim paljenjem.

### OPREZ

Povezivanje na strujnu mrežu.

Preporučljivo je da se proizvod uključi u samostalnu strujnu utičnicu, odnosno na strujni kabl na koji nije priključen nijedan drugi potrošač ili produžni kabl.

Ne preopterećujte strujne utičnice. Preopterećene, labave ili oštećene strujne utičnice i produžni kablovi, spaljeni strujni kablovi sa oštećenom izolacijom su opasni. Bilo koji od ovih uslova može dovesti do strujnog udara ili požara. Periodično proveravajte kablove vašeg proizvoda i ako primetite oštećenje ili propadanje istih, isključite aparat i prestanite da ga koristite sve dok ovlašćeni serviser ne otkloni kvar. Štitite naponski kabl od fizičkog i mehaničkog oštećenja, kao na primer od uvrtnja, prignjećenja, priklještenja i gaženja po njemu. Obratite posebnu pažnju na utičnice, utikače naročito u delu gde kablovi izlaze iz aparata.

Mrežni (naponski) utikač se koristi i kao deo za isključivanje aparata i tako isključen aparat je spreman za ponovno uključivanje.


### VAŽNE INFORMACIJE

Ako TV nije postavljen na dovoljno stabilnu podlogu može predstavljati opasnost ako padne. Mnoge ozlede, naročito kod dece, mogu biti izbegnute ako primenite sledeće jednostavne mere:


- Koristite kabinete i stalke preporučene od strane proizvođača.
- Koristite nameštaj koji može da izdrži TV.
- Postarajte se na TV ne visi sa ivice nameštaja.
- Ne postavljajte TV u visoki nameštaj (kao što su na primer šifonjeri i ormani za knjige), a da ge prethodno niste sigurno pričvrstili za odgovarajuću podlogu.
- Ne postavljajte tekstil ili neki drugi materijal između TV-a i nameštaja na kom se on nalazi.
- Podučite decu o opasnostima kod pokušaja da dohvate TV ili njegove komande.

**VAŽNE MERE OPREZA:**


1. Pročitajte ovo uputstvo.
2. Sačuvajte ovo uputstvo.
3. Poslušajte sva upozorenja.
4. Pratite sve instrukcije.

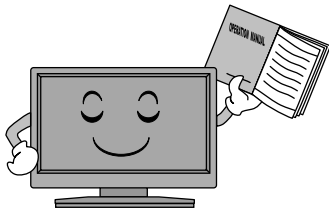


7. Ne blokirajte bilo koji ventilacioni otvor. Montirajte TV u skladu sa uputstvom proizvođača.

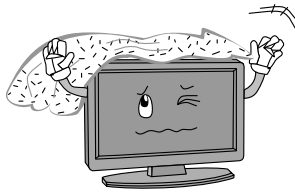


5. Ne koristiti proizvod u blizini vode.

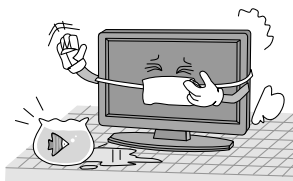

8. Ne postavljati u blizini izvora toplote kao što su radijatori, peći ili drugi objekti (uključujući i pojačavače) koji emituju toplotu.

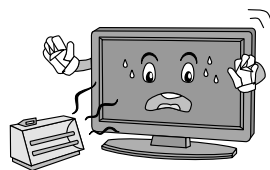


6. Brisati samo sa suvom krpom.

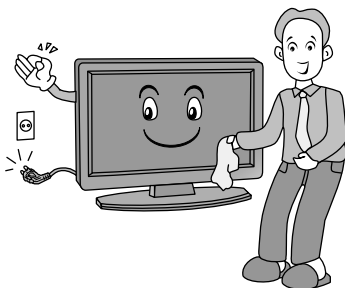


9. Utikač aparata priključite u odgovarajuću utičnicu, odnosno voditi računa da li je utikač sa polarizovanim viljuškama ili sa uzemljenjem pa shodno tome odabrati i utičnicu.

## Mere opreza:

10. Čuvajte mrežni kabl od gaženja ili od priklještenja naročito kod utikača, razvodne kutije i izlaza iz aparata.

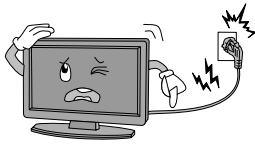

13. Isključite iz struje ovaj aparat za vreme oluja sa munjama ili ako ga duže vreme ne koristite.

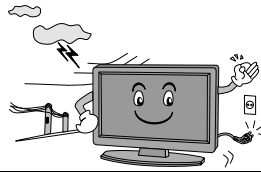


11. Koristite samo one dodatke navedene od strane proizvođača.

12. Koristiti samo sa kolicima, stalkom, tronožcem, podupiračem ili stolom naznačenim od strane proizvođača ili sa onim dobijenim uz aparat. Kada koristite kolica obratite pažnju kada ih pomerate da bi izbegli ozledu ako dođe do prevrtanja.



14. Prepustite servisiranje kvalifikovanim osobama. Servis je potreban kad je aparat oštećen u bilo kom smislu, kao na primer oštećenje utikača ili naponskog kabela, ako je po njemu prosuta tečnost ili je neki predmet upao u njega, ako je bio izložen kiši ili vlazi, ako ne radi normalno ili ako je ispušten.

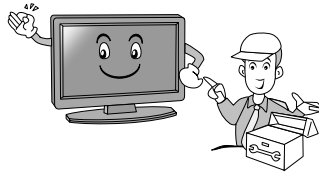

## PRILIKOM ODLAGANJA (BACANJA):

- Fluorescentna lampa koja se koristi u ovom proizvodu sadrži male količine žive.
- Ne bacajte ovaj proizvod sa ostalim kućnim smećem.
- Odlaganje (bacanje) ovog proizvoda mora da se uradi u skladu sa regulativama zemlje u kojoj živite.

## OBRATITI PAŽNJU:

- Ako je aparat hladan na dodir, može doći do malog treperenja prilikom paljenja. Ovo je normalno, nema ničeg nepravilnog u radu vašeg TV-a.
- Nekoliko minuta mogu biti vidljive tačkaste nepravilnosti na ekranu, pojavljujući se kao sićušne crvene, zelene ili plave tačke. Ova pojava nema štetan uticaj na performanse vašeg TV-a.
- Izbegavajte dodirivanje ili držanje vašeg prsta duže vreme na ekranu. Ako to uradite može doći do privremene iskrivljenosti vašeg ekrana.

### Upotreba daljinskog upravljača:

---


Kada koristite daljinski upravljač usmerite ga ka senzoru na TV-u. Ako postoji predmet između daljinskog i senzora, aparat možda neće reagovati.

- Uperite daljinski upravljač ka senzoru na TV-u.
- Kada koristite TV u veoma osetljivoj prostoriji infra crveni senzor možda neće raditi kako treba.
- Preporučena daljina za nesmetan rad daljinskog upravljača je oko 7 metara.

### Postavljanje baterija u daljinski upravljač:

---

1. Otvorite poklopac na zadnjem delu daljinskog upravljača.
2. Postavite dve baterije veličine AAA. Budite sigurni da ste ih postavili pravilno tako da + i - baterija odgovaraju dijagramu unutar upravljača.
3. Vratite poklopac.

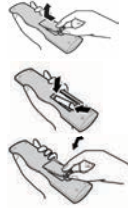

### Zamena baterija:

---

Potrebno je da postavite baterije u daljinski upravljač tako što ćete pratiti sledeće instrukcije. Kada baterije oslabe operativna razdaljina daljinskog upravljača će drastično opasti i moraćete ih zameniti.

#### Preporuka kako koristiti baterije:

Korišćenjem pogrešnih vrsta baterija može dovesti do hemijskog curenja ili eksplozije. Molimo vas obratite pažnju na sledeće:

- Budite sigurni da ste polove + i - baterija postavili kako je prikazano na dijagramu u odeljku za baterije daljinskog upravljača.
- Različite vrste baterije imaju drugačije karakteristike. Ne mešajte različite vrste baterija.
- Ne mešajte nove i stare baterije. Ako to uradite smanjujete životni vek baterije i može doći do curenja iste.
- Promenite baterije istog trenutka kada prestanu da rade.
- Hemikalije koje cure iz baterije mogu izazvati iritaciju kože. Ako hemikalije počnu da cure iz baterije odmah ih obrišite sa suvom krpom.
- Baterije mogu da imaju kraći životni vek zbog stanja prilikom skladištenja. Izvadite baterije kad znate da nećete koristiti daljinski upravljač duže vreme.
- Baterije ne izlažite prekomernoj toploti kao što su sunčeva svetlost, vatra ili slično.

#### Oprez:

- Može doći do eksplozije ako baterije nisu zamenjene pravilno.
- Zamenite baterije sa istom ili sličnom vrstom baterija.

### **Povezivanje kablova:**

---

Molimo vas da pročitate pažljivo važne stavke u delu "Održavanje i bezbednost" pre povezivanja i korišćenja proizvoda.

1. Izvadite TV iz pakovanja i stavite ga na ravnu podlogu.

Obratiti pažnju:

- Kada uključujete ili isključujete TV, kompjuter ili drugi uređaj budite sigurni da je neizmerna struja već isključena. Kada isključujete naponski ili signalni kabl, držite ga za utikač (izolovani deo), a ne za telo kabla.

2. RF izlazni terminal može se povezati sa RF ulazom TV-a.

3. AV terminal DVD-a može se povezati sa AV ulazom TV-a putem AV kabla.

4. Povežite jedan kraj VGA kabla sa VGA portom kompjutera, a drugi kraj sa VGA portom TV-a, a zatim zategnite šrafove u smeru okretanja kazaljki sata na priključcima na oba kraja kabla.

Obratiti pažnju:

Pri priključivanju 15-to pinskog VGA kabla vodite računa da to ne uradite previše jako da ne bi došlo do iskrivljivanja pinova.

5. Priključite jedan kraj HDMI kabla sa HDMI izlazom nekog uređaja, a drugi sa HDMI ulazom TV-a.

Obratiti pažnju:

Pri priključivanju HDMI kabla vodite računa da to ne uradite previše jako da ne bi došlo do iskrivljivanja pinova.

6. Proverite da su odgovarajući AV kablovi spojeni sa odgovarajućim AV ulazima na TV-u.

7. Povežite naponski kabl sa izvorom struje od 100-240V.

---

Obratiti pažnju:

-Opseg izvora napajanja TV-a je 100-240V, 50/60Hz. Ne priključivati ga na izvor napajanja koji nije u tom opsegu.

 
-Molimo vas da držite izolovani deo utikača naponskog kabla kada ga isključujete i nemojte da dodirujete direktno njegove metalne delove.

---

## Vodič za brz start

---

-Povezivanje:

1. Priključite napajanje i antenu.
2. Pritisnite dugme  na daljinskom upravljaču da uključite TV.





-Početno podešavanje:

Kada je TV uključen po prvi put pojavice se niz uputstava na ekranu koji će vam pomoći u podešavanju osnovnih parametara.

1. Izaberite željeni jezik.

Pritiskajte dugmiće ///, a zatim dugme OK.

2. Izaberite odgovarajuću zemlju.


Pritiskajte dugmiće ///, a zatim dugme OK da bi izabrali zemlju posle čega će početi traženje kanala.

## Upaliti/ ugasiti TV

 
---

-Upaliti TV

Priključite kabl za napajanje. U tom trenutku TV će preći u stanje čekanja (standby).

Pritisnite dugme  na daljinskom upravljaču kako bi iz stanja pripravnosti upalili TV.

 -Ugasiti TV

Pritisnite dugme  na daljinskom upravljaču kako bi ga prebacili u stanje pripravnosti (standby).

Ne ostavljajte vaš TV u stanju čekanja duže vreme. Najbolje je da TV isključite iz napajanja i da ga odvojite od kabla za antenu.

-Nema signala

Ako nema ulaznog signala pojavice se poruka koja vas na to upozorava. U TV/DTV modu ako nema signala 15 minuta, TV će se sam ugaziti. U PC modu TV će se sam ugaziti ako ulaznog signala nema 5 minuta. Kada spojite VGA kabl, TV će se sam upaliti.

## Biranje programa

---

- Korišćenje CH+/CH- dugmića na TV u i na daljinskom upravljaču

Pritisnite dugme CH+ da bi prešli na viši kanal.

Pritisnite dugme CH- da bi prešli na niži kanal.

-Korišćenje dugmića sa brojevima (0-9)

Birajte željeni kanal pritiskanjem odgovarajućih brojeva od 0 do 9 ( u TV i DTV modu)


-Korišćenje dugmića -/--


Možete da izaberete deo broja kanala pritiskanjem dugmeta -/--

## Podešavanje zvuka

---

-Pritisnite dugme VOL +/- da podesite jačinu zvuka



-Ako želite da isključite zvuk pritisnite dugme 

-Ako želite da ponovo uključite zvuk pritisnite dugme  ili VOL +/-

## Promena izvora ulaznog signala

---

Možete da birate izvor ulaznog signala tako što ćete pritisnuti dugme INPUT na daljinskom upravljaču.

Zatim pomoću dugmića / se krećite između datih izvora ulaznih signala i pritisnite dugme OK da potvrdite izbor.



Dugmići daljinskog upravljača izgledaju kao što je prikazano:



### NAPOMENE:

- Sve fotografije u ovom priručniku su primeri, samo za referencu, stvarni proizvod može se razlikovati od prikazanih fotografija
- Tasteri koji nisu pomenuti, u ovom modelu se ne koriste

### Definisanje tastera na daljinskom upravljaču:


- STANDBY:** Uključite TV ili pristupite standby modu.
- MUTE:** Isključite/Uključite zvuk.
- NUMBER BUTTONS:** "0-9" se koriste za direktno pristupanje kanalima.
- /- :** Unesite broj kanala koji želite da gledate
- ↺ :** Pritisnite za menjanje između trenutnog i kanala koji ste prethodno gledali.
- P.MODE:** Direktno odaberite mod slike.
- S.MODE:** Direktno odaberite mod zvuka.
- MENU:** Otvorite meni ili se vratite na glavni.
- SLEEP:** Podesite vreme isključenja.
- INPUT:** Izaberite izvor signala.
- AUDIO:** Izbor između NICAM DUAL / NICAM DUAL+ / MONO standard zvuka i u DTV režimu rada izbor jezika koji se sluša
- OK:** Potvrdite odabranu opciju.
- ▲ Pritisnite ▼▲ za odabir stavke.  
◀▶ Pritisnite dugme ▶▶ da je podesite.
- MENU:** Otvorite meni ili se vratite na glavni.
- EXIT:** Pritisnite da napustite OSD meni.
- VOL+/VOL-:** Povećava jačinu zvuka./Smanjuje jačinu zvuka.
- CH+/CH-:** Programi unapred./Programi unazad.
- ASPECT:** Aspekt funkcija.
- INFO:** Prikaži informacije o sadržaju trenutnog kanala
- LIST :** Pristup listi kanala.
- COLOR BUTTONS:** ZELENI/ CRVENI/ ŽUTI/ PLAVI taster  
◀◀ : Brz pregled sadržaja unazad (u MEDIA režimu rada)  
▶▶ : Brz pregled sadržaja unapred (u MEDIA režimu rada)  
◀ : Prethodno (u MEDIA režimu rada)  
▶ : ledeće (u MEDIA režimu rada)  
▶| : Reprodukcija / pauza (u MEDIA režimu rada)  
■ : Zaustavi (u MEDIA režimu rada)
- FAV :** Pritisnite da dodate ili uklonite Vaš omiljeni kanal u okviru tv menija.
- TEXT:** Uključivanje i isključivanje Teletext moda
- HOLD:** Uključenje i isključenje prikaza trenutne stranice.
- SUBTITLE:** Prikazivanje titla u USB modu.
- INDEX:** Zatraži Index stranicu u Teletext modu. Isključenje reprodukcije u PVR modu ili Media Player modu.
- REVEAL:** REVEAL-OTKRIJ - Otkrivanje skrivenih informacija nekih stranica teletexta.
- EPG:** Pozovite EPG (Elektronski programski vodič), samo u DTV režim rada
- SUBPAGE:** Unesite podstranicu.
- SIZE:** Promena veličine prikaza u Teletext modu.
- REC:** Započinjanje snimanja u PVR modu

## RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

**Napomena:** Slike na ovom priručniku su date samo kao primeri a merodavne su slike na samim proizvodima.


### Čarobnjak za podešavanje

Povežite RF kabl sa ulaza u televizor pod nazivom "RF-In" i u Vašu utičnicu za antenu. Pritisnite OK tipku kako biste izabrali početak podešavanja.

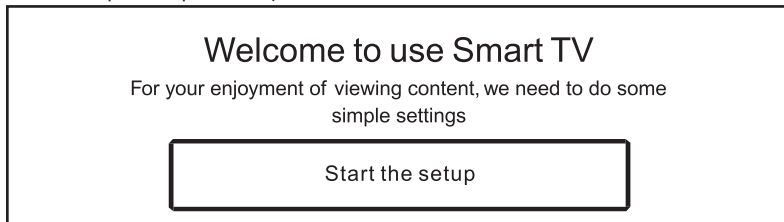


*Napomena: Ova slika je data samo kao referenca.*

Pritisnite tipku **▼** / **▲** kako biste izabrali jezik. Pritisnite OK tipku kako biste potvrdili i pritisnite tipku **▶** kako biste izabrali vremensku zonu.

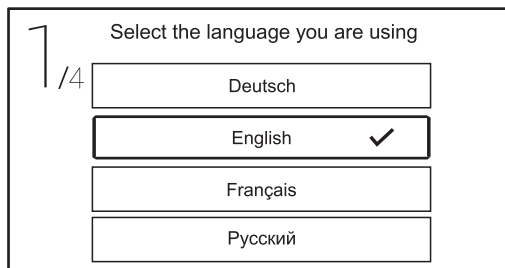


*Napomena: Ova slika je data samo kao referenca.*

Pritisnite tipku **▼** / **▲** kako biste izabrali vremensku zonu. Pritisnite OK tipku kako biste potvrdili, pritisnite tipku **▶** kako biste se povezali na vaj-faj signal/mrežu.

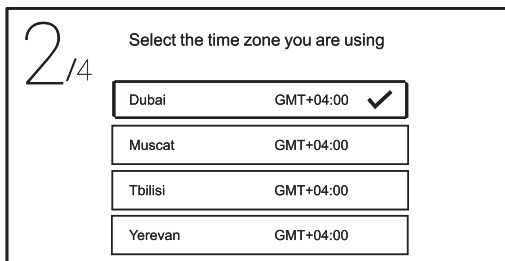

*Napomena: Ova slika je data samo kao referenca.*


Pritisnite OK tipku kako biste se povezali na vaj-faj signal/mrežu. Pritisnite tipku **▶** kako biste izabrali izvor.

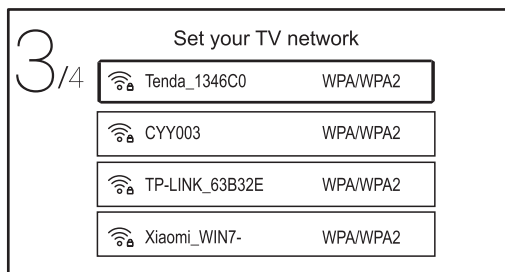

*Napomena: Ova slika je data samo kao referenca.*

## RAD MENIJA FUNKCIJA I GLAVNOG MENIJA


Pritisnite tipku **▼** / **▲** kako biste izabrali izvor.

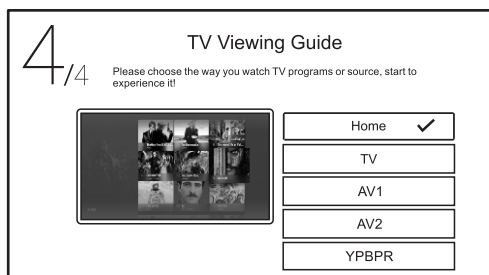

### Početna stranica

Pritisnite tipku **▼** / **▲** kako biste izabrali početnu stranu


**▶** tipka za izbor početne stranu u meniju TV inputa.

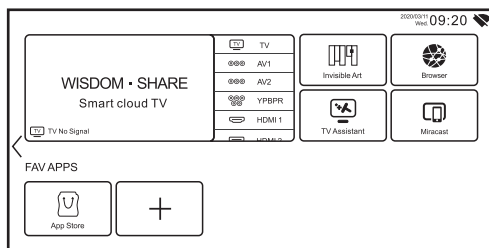

*Napomena: Ova slika je data samo kao referenca.*

Kada je kursor blizu leve ivice, pritisnite tipku **◀** kako biste pozvali bočnu traku.


Pritisnite tipku **▼** / **▲** kako biste izabrali podešavanja aplikacija / mreže / medija. Na početnoj strani možete izabrati program koji želite.

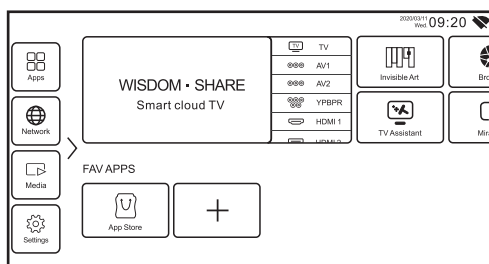

*Napomena: Ova slika je data samo kao referenca.*

### MyApps (Moje aplikacije)

Pritisnite tipku **▼** / **▲** / **◀** / **▶** kako biste izabrali Moje aplikacije i pritisnite tipku **OK** kako biste ušli u spisak aplikacija.

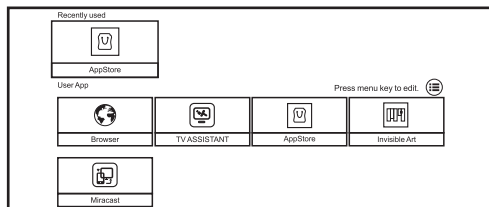

*Napomena: Ova slika je data samo kao referenca.*

## RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

 
### Settings (Podešavanja)

Pritisnite tipku **【▼】 / 【▲】 / 【◀】 / 【▶】**

Kako biste izabrali podešavanja, a OK tipku kako biste ušli u Podešavanja sistema


Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali

Mrežu / Vreme / Osnovne funkcije. / Podatke o sistemu.



### Network (Mreža)


Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali Mrežu, zatim pritisnite OK tipku kako biste ušli.

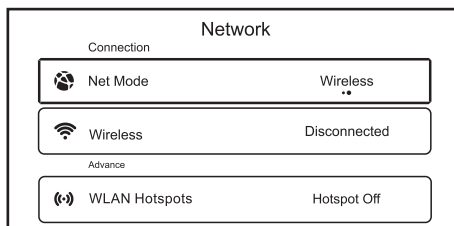

### Time (Vreme)

Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali Vreme.


Pritisnite tipku OK kako biste ušli.

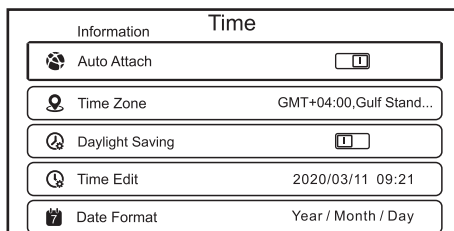

*Napomena: Ova slika je data samo kao referenca.*

### Common (Osnovne funkcije)

Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali Osnovne funkcije, zatim pritisnite tipku OK, kako biste ušli.

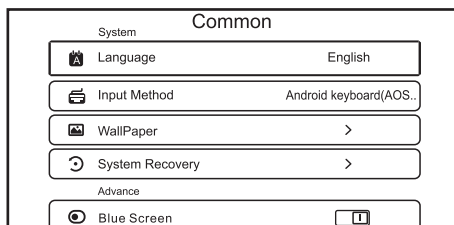

*Napomena: Ova slika je data samo kao referenca.*

### System Info (Informacije o sistemu)


Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali Informacije o sistemu, a zatim pritisnite tipku enter kako biste ušli.

## Mediji

Pritisnite tipku **【▼】 / 【▲】 / 【◀】 / 【▶】** kako biste izabrali Multimediju na početnoj stranici i pritisnite tipku OK da biste ušli u Medija centar.

Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali Sve / Video / Audio / Slika.


Pritisnite tipku **【▼】 / 【▲】 / 【◀】 / 【▶】** kao biste izabrali datoteku, pritisnite tipku MENU kako biste otvorili podmeni.

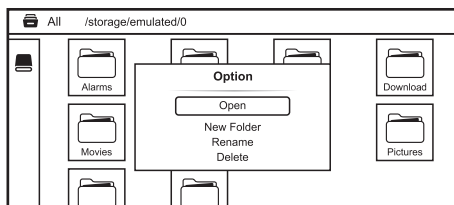

## RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

### Video

Pritisnite tipku **▼** / **▲** kako biste izabrali Video ili Sve i pritisnite tipku **▼** / **▲** / **◀** / **▶** kako biste izabrali Filmove.

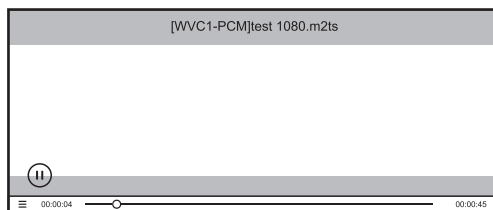


### Audio

Pritisnite tipku **▼** / **▲** kako biste izabrali Audio ili Sve i pritisnite tipku **▼** / **▲** / **◀** / **▶** kako biste izabrali Muziku.



### Image (Slika)

Pritisnite tipku **◀** / **▶** kako biste izabrali Sliku ili Sve i pritisnite tipku **▼** / **▲** / **◀** / **▶** kako biste izabrali Slike.

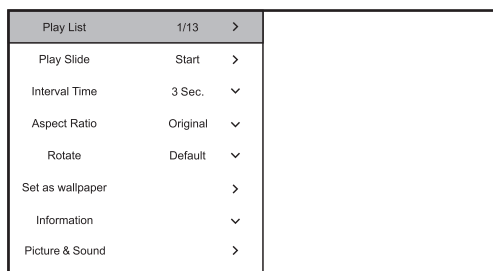

## Source (Izvor)

Pritisnite tipku SOURCE (izvor) kako biste ušli u meni izvora

Pritisnite tipku **▼** / **▲** kako biste izabrali.

Pritisnite OK kako biste izabrali izvor.

## Podешavanje TV-a

Pritisnite tipku MENU (meni) kako biste ušli u glavni meni.

 
Pritisnite tipku **◀** / **▶** kako biste označili željenu ikonicu menija i pritisnite tipku OK radi izbora. (Opciono: Home / Source / Picture / Sound / Channel / Lock / Common / Advance (početna strana / izvor / slika / zvuk / kanal / zaključavanje / osnovne funkcije / napredne funkcije)).



# RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

## I. Picture (Slika)

Pritisnite tipku MENU kako biste ušli u glavni meni. Pritisnite tipku [◀] / [▶] kako biste izabrali Sliku. Pritisnite tipku OK kako biste ušli u pod-meni.



Pritisnite tipku [▼] / [▲] kako biste izabrali Režim slike / Kontrast / Osvetljenje / Boju / Oštrinu / Smanjenje buke / Format / Temp. boja / Još podešavanja. Pritisnite tipku MENU ili EXIT kako biste završili.

### Picture Mode (Režim slike)

Pritisnite tipku [▼] / [▲] kako biste izabrali Režim slike, potom pritisnite tipku [◀] / [▶] radi izbora. (Opciono: Standard, Dynamic, Vivid, Energy Saving, User).

Standard Standardna slika.  
Dynamic Pojačanje kontrasta, boje i jasnoće prikaza ekrana tako da se dobije dinamički balans ekrana.  
Vivid Lepe boje slike i življa slika.  
Energy saving Izbor režima za uštedu energije utiče na osvetljenost ekrana.  
User Podešavanja slike definiše korisnik.

### Contrast / Brightness / Color / Sharpness (Kontrast / Osvetljenost / Boja / Oštrina) (opciono samo u korisničkom režimu)

Pritisnite tipku [▼] / [▲] radi izbora, odnosno tipku [◀] / [▶] radi podešavanja.

Kontrast Podešavanje kontrasta slike.  
Osvetljenost Podešavanje osvetljenosti slike.  
Boja Podešavanje gustine boje slike.  
Oštrina Podešavanje ivične oštrote slike.

### Noise Reduction (Smanjenje šuma)

Podesite opcije za eliminisanje jačine šuma.

Pritisnite tipku [▼] / [▲] radi izbora Smanjenja jačine šuma.

Pritisnite tipku [◀] / [▶] kako biste izabrali podešavanja Off / Low / Middle / High / Auto (Isklj./Niska/Srednja/Auto).

### Aspect Ratio (Format)

Pritisnite tipku [▼] / [▲] kako biste izabrali Format. Pritisnite tipku [◀] / [▶] za podešavanje.

### Color Temp (Temperatura boja)

Podesite ukupne boje slike. Pritisnite tipku [▼] / [▲] kako biste izabrali Temp. boje.

Pritisnite tipku [◀] / [▶] kako biste izabrali Cool / Normal / Warm (hladna/normalna/topla).

Cool Slika sa blago pojačanim plavim nijansama.  
Normal Živa slika.

Warm Slika sa pojačanim nijansama crvene boje.

### More Settings (Dodatna podešavanja)

Pritisnite tipku [▼] / [▲] kako biste

izabrali Dodatna podešavanja. Pritisnite

tipku OK kako biste ušli u pod-meni.

### DLC

Pritisnite tipku [▼] / [▲] kako biste

izabrali DLC. Pritisnite tipku [◀] / [▶] kako biste izabrali On / Off.

### HDMI mode (HDMI režim) (Prikazuje se samo pod HDMI)

Pritisnite tipku [▼] / [▲] kako biste izabrali HDMI režim. Pritisnite tipku [◀] / [▶] kako biste izabrali Video / Graphic / Auto.

### HDR (prikazuje se samo pod HDMI)

Pritisnite tipku [▼] / [▲] kako biste izabrali HDR. Pritisnite tipku [◀] / [▶] radi prilagođavanja.

### 4K Enhanced (4K poboljšano) (prikazuje se samo pod HDMI)

Pritisnite tipku [▼] / [▲] kako biste izabrali 4K Enhanced (4K poboljšano). Pritisnite tipku [◀] / [▶] za podešavanje.


## 2. Sound (Zvuk)

Pritisnite tipku MENU kako biste ušli u glavni meni. Pritisnite tipku [◀] / [▶] kako biste izabrali Zvuk. Pritisnite tipku OK kako biste ušli u pod-meni.

Pritisnite tipku [▼] / [▲] kako biste izabrali

stavku za podešavanje. Pritisnite tipku

MENU ili EXIT kako biste završili.

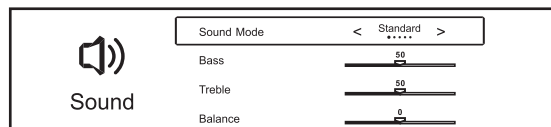

## RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

### Sound Mode (Režim zvuka)

Pritisnite tipku [▼] / [▲] kako biste izabrali Režim zvuka.

Pritisnite tipku [◀] / [▶] radi izbora. (Opciono: Standard / Music / Movie / News / User).

Standard Emitovanje balansirano zvuka pod bilo kojim okolnostima.

Music Pojačanje visokih tonova i smanjenje basa.

Movie Pojačanje visokih tonova i basa za iskustvo bogatog zvuka.

News Pojačanje glasa.

User Za prilagođavanje podešavanja zvuka.

### Bass / Treble (Bas / Visoki tonovi) (opciono samo u korisničkom režimu)

Pritisnite tipku [▼] / [▲] radi izbora. Pritisnite tipku [◀] / [▶] radi podešavanja.

Bass Podešavanje zvukova niske frekvencije.

Treble Podešavanje zvukova visoke frekvencije.

### Balance (Balans)

Balans levog i desnog kanala.

Pritisnite tipku [▼] / [▲] kako biste izabrali Balans. Pritisnite tipku [◀] / [▶] radi podešavanja.

### AVC

Pritisnite tipku [▼] / [▲] kako biste izabrali AVC. Pritisnite tipku [◀] / [▶] kako biste izabrali On / Off.

**Napomena:** Nakon što otvorite "AVC", nakon podešavanja zvuka, jačina zvuka koji se emituje sa zvučnika ostaje stabilna, bez obzira na razlike između TV zvuka svakog kanala.

### Audio Description (Audio opis) (važi u DTV)

Pritisnite tipku [▼] / [▲] kako biste izabrali Audio Description (Audio opis). Pritisnite tipku [◀] / [▶] radi podešavanja.

### ADVolume (AD jačina zvuka) (važi samo u DTV)

Pritisnite tipku [▼] / [▲] button to select ADVolume. Pritisnite tipku [◀] / [▶] za podešavanje.

**Napomena:** Only works when Audio Description is set to On.

### Hearing Impaired (za lica sa oštećenim sluhom) (Važi samo u DTV)

Pritisnite tipku [▼] / [▲] kako biste izabrali funkciju za lica sa oštećenim sluhom. Pritisnite tipku [◀] / [▶] radi podešavanja.

### Multi-Track Sound (zvuk sa više traka) (prikazuje se samo u ATV)

Pritisnite tipku [▼] / [▲] radi izbora. Pritisnite tipku [◀] / [▶] radi podešavanja.

**Napomena:** Audio Description / ADVolume /

Hearing Impaired / Multi-Track Sound funkcija

zahteva podršku za signal kako bi bila aktivna.

### More Settings (Dodatna podešavanja)

Pritisnite tipku [▼] / [▲] kako biste izabrali

Dodatna podešavanja. Pritisnite tipku OK kako

biste ušli u pod-meni.

### Digital Audio Output (Digitalni audio izlaz)

Pritisnite tipku [▼] / [▲] kako biste izabrali digitalni audio izlaz. Pritisnite tipku [◀] / [▶] kako biste izabrali Off / PCM / RAW.

### SPDIF Delay (SPDIF odlaganje)

Pritisnite tipku [▼] / [▲] kako biste izabrali SPDIF odlaganje. Pritisnite tipku [◀] / [▶] za podešavanje.

### Surround (Okruženje)

Pritisnite tipku [▼] / [▲] kako biste izabrali Okruženje. Pritisnite tipku [◀] / [▶] kako biste izabrali ON / OFF.

### Audio Only (Samo audio)

Pritisnite tipku [▼] / [▲] kako biste izabrali Samo audio. Pritiskom na tipku OK isključuje se pozadinsko osvetljenje.

### 3. Channel (Kanal)

Pritisnite tipku MENU radi ulaska u glavni

meni. Pritisnite tipku [◀] / [▶] kako biste

izabrali Kanal. Pritisnite tipku OK kako biste

ušli u pod-meni. Pritisnite tipku [▼] / [▲]

kako biste izabrali stavku za podešavanje.

 

Pritisnite tipku MENU ili EXIT kako biste

završili.

### Antenna Type (Tip antene)

Pritisnite tipku [▼] / [▲] kako biste izabrali Tip antene. Pritisnite tipku [◀] / [▶] kako biste izabrali Air / Cable / Satellite (vazдушna / kablovska / preko satelita).

**Napomena:** "Sateliti" je opcionalna funkcija kojom neki modeli ne raspolažu, relevantna je konfiguracija konkretnog modela.

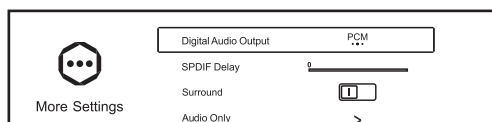

# RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

## Scan (Pretraga)

Pritisnite tipku **▼** / **▲** kako biste izabrali Pretragu. Pritisnite tipku OK kako biste ušli u pod-meni.

## Auto Scan (Automatska pretraga)

Funkcija automatske pretrage može automatski da pretražuje dostupne kanale.

Pritisnite tipku **▼** / **▲** kako biste izabrali Auto Scan, potom pritisnite tipku OK kako biste započeli automatsku pretragu. Ako želite da zaustavite pretragu pritisnite tipku EXIT ili MENU kako biste to učinili.

## Analog Manual Scan (Analogno manuelno pretraživanje) (Prikazuje se samo u Air / Cable)

Pritisnite tipku **▼** / **▲** kako biste izabrali analogno manuelno pretraživanje.

Pritisnite tipku OK kako biste ušli u pod-meni. Pritisnite tipku EXIT ili MENU kako biste završili.

## Digital Manual Scan (Digitalno manuelno pretraživanje) (Prikazuje se samo u Air / Cable)

Pritisnite tipku **▼** / **▲** kako biste izabrali digitalno manuelno pretraživanje.

Pritisnite tipku OK kako biste ušli u pod-meni. Pritisnite tipku EXIT ili MENU kako biste završili.

## CI Card (CI kartica) (Ova funkcija na raspolaganju je samo kod TV uređaja sa CI funkcijom)

Pritisnite tipku **▼** / **▲** kako biste izabrali CI karticu. Pritisnite tipku OK kako biste ušli u pod-meni.

## Signal Information (Podaci o signalu)

Pritisnite tipku **▼** / **▲** kako biste izabrali Podatke o signalu. Pritisnite tipku OK kako biste ušli u pod-meni.

## Audio Language (Audio jezik)

Pritisnite tipku **▼** / **▲** kako biste izabrali Audio jezik. Pritisnite tipku OK kako biste ušli u pod-meni.

## Subtitle (Titlovi)

Pritisnite tipku **▼** / **▲** kako biste izabrali titlove. Pritisnite tipku OK kako biste ušli u pod-meni.

## Channel List (Lista kanala)

Pritisnite tipku **▼** / **▲** kako biste izabrali Listu kanala. Pritisnite tipku OK kako biste ušli u pod-meni.

Pritisnite tipku MENU kako biste uredili kanal. Pritisnite tipku EXIT ili MENU kako biste završili.

## EPG

Pritisnite tipku **▼** / **▲** kako biste izabrali.


Pritisnite tipku OK kako biste ušli u pod-meni.



## 4. Lock (Zaključavanje)

Pritisnite tipku MENU kako biste ušli u glavni meni. Pritisnite tipku **◀** / **▶** kako biste izabrali Zaključavanje.

Pritisnite tipku OK kako biste ušli u pod-meni.

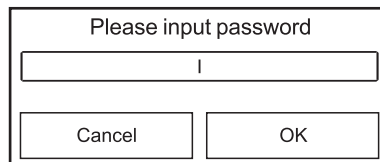


**Napomena:** Početna lozinka "0000"



## RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

 Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali Change Password / System Lock / Key Lock / Parental Guidance (Promena lozinke / zaključavanje tipki / Roditeljski nadzor).




### Change Password (Promena lozinke)

Pririsanite tipku **【▼】 / 【▲】** kako biste izabrali Promenu lozinke. Pritisnite tipku OK kako biste ušli u pod-meni.

### System Lock (Zaključavanje sistema)

Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali zaključavanje sistema. Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali Off / On.

Kada je zaključavanje sistema uključeno (On), pritisnite tipku **【▼】 / 【▲】** kako biste izabrali Zaključavanje tipku / Roditeljski nadzor.

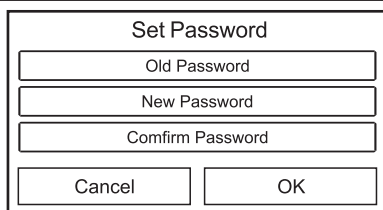


### Parental Guidance (Roditeljski nadzor)

Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali Roditeljski nadzor. Pritisnite tipku **【◀】 / 【▶】** radi podešavanja.

## 5. Common (Osnovne funkcije)

 Pritisnite tipku MENU kako biste ušli u glavni meni. Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali Osnovne funkcije. Pritisnite tipku OK kako biste ušli u pod-meni. Pritisnite tipku **【▼】 / 【▲】** kao biste izabrali stavku koja se podešava. Pritisnite tipku MENU ili EXIT kako biste završili.



### PVR Setting (PVR podešavanje) (Prikazuje se samo u DTV)

Pritisnite tipku **【▼】 / 【▲】** button to select PVR podešavanje. Pritisnite tipku OK kako biste ušli u pod-meni.

**Napomena:** Ova funkcija zahteva stavljanje USB fleš drajva.

### OSD Timer (OSD tajmer)

Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali OSD tajmer. Pritisnite tipku **【◀】 / 【▶】** radi izbora željene vrednosti. (Opciono: isključeno, 5 sekundi, 15 sekundi, 30 sekundi, 40 sekundi)

### Autostandby Timer (Tajmer za automatski stendbaj)

Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali Tajmer za automatski stendbaj. Pritisnite **【◀】 / 【▶】** radi izbora. (Opciono: isključeno, 3 sata, 4 sata, 5 sati)

### Sleep Timer (Tajmer za mirovanje)

Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali Tajmer za mirovanje. Pritisnite **【◀】 / 【▶】** radi izbora željene vrednosti. (Opciono: isključeno, 15 min, 30 min, 45 min, 60 min, 90 min, 120 min, 240 min)

### Blue Screen (Plavi ekran)

Podesite boju u pozadini na plavu kada nema ulaznog signala. Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali Plavi ekran.

Pritisnite tipku **【◀】 / 【▶】** kako biste izabrali On / Off.

### Teletext (Teletekst) (Ova funkcija zahteva podršku signala koje prenose TV operateri.)

Pritisnite tipku **【▼】 / 【▲】** kako biste izabrali Teletekst. Pritisnite **【◀】 / 【▶】** kako biste izabrali željeno podešavanje. (Opciono: arapski, istočni j., zapadni j., Farsi, ruski)

# RAD MENIJA FUNKCIJA I GLAVNOG MENIJA

## Audio Language 1st (Audio jezik prvi) (Pokazuje se samo u DTV)

Pritisnite tipku **▼** / **▲** kako biste izabrali Prvi audio jezik. Pritisnite tipku OK kako biste ušli u pod-meni.

## Audio Language 2nd (Audio jezik drugi) (Pokazuje se samo u DTV)

Pritisnite tipku **▼** / **▲** kako biste izabrali Drugi audio jezik. Pritisnite tipku OK kako biste ušli u pod-meni.

## Subtitle Language 1st (Jezik za titlove prvi) (Pokazuje se samo u DTV)

 
Pritisnite tipku **▼** / **▲** kako biste izabrali prvi jezik za titlove. Pritisnite tipku OK kako biste ušli u pod-meni.

## Subtitle Language 2nd (Jezik za titlove drugi) (Pokazuje se samo u DTV)

Pritisnite tipku **▼** / **▲** kako biste izabrali drugi jezik za titlove. Pritisnite tipku OK kako biste ušli u pod-meni.

## HDMI CEC Setup (HDMI CEC podešavanje)

Pritisnite tipku **▼** / **▲** button to select HDMI CEC Setup. Pritisnite tipku OK kako biste ušli u pod-meni.



Pritisnite tipku **▼** / **▲** kako biste izabrali CEC / Tv Auto Power On / Device Auto Power Off / ARC / Device List. (CEC / automatsko uključivanje TV-a / automatsko isključivanje uređaja / ARC Spisak uređaja).

**Napomena 1:** Sve opcije su dostupne samo kada je uključen HDMI CEC Switch.

**Napomena 2:** Spisak uređaja dostupan je samo kada je izabrani izvor HDMI.

## CEC

Pritisnite tipku **▼** / **▲** kaok biste izabrali CEC. Pritsnite tipku **◀** / **▶** kako biste izabrali On/Off. Sledeće je dostupno samo kada je u CEC izabrano "On".

## Tv Auto Power On (Automatsko isključivanje napajanja televizora)

Pritisnite tipku **▼** / **▲** kako biste izabrali Automatsko isključivanje napajanja televizora. Pritisnite tipku **◀** / **▶** kako biste izabrali On / Off.

## Device Auto Power Off (Isključivanje napajanja uređaja)


Pritisnite tipku **▼** / **▲** kako biste izabrali isključivanje napajanja uređaja. Pritisnite **◀** / **▶** kako biste izabrali On / Off.

## ARC

Pritisnite tipku **▼** / **▲** kako biste izabrali ARC. Pritisnite **◀** / **▶** kako biste izabrali On / Off.

## Device List (Lista uređaja)

Pritisnite tipku **▼** / **▲** kako biste izabrali Listu uređaja. Pritisnite tipku OK / **▶** kako biste ušli u pod-meni.

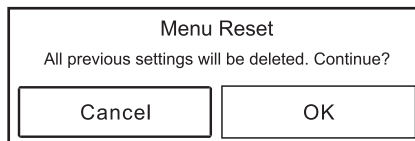


## Menu Reset (Resetovanje menija)

Povratite podrazumevano podešavanje. Pritisnite tipku **▼** / **▲** kako biste izabrali resetovanje menija. Pritisnite tipku OK kako biste ušli u pod-meni.

## 6. Advance (Napredno podešavanje)

Pritisnite tipku MENU kako biste ušli u glavni men. Pritisnite tipku **◀** / **▶** kako biste izabrali Napredno podešavanje. Pritisnite tipku OK kako biste izabrali Podešavanje sistema.

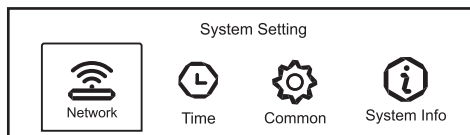

## REŠAVANJE PROBLEMA

### REŠAVANJE PROBLEMA

Pre nego što pozovete servis, sprovedite dole navedene provere. Ako ne uspete da rešite problem na ovaj način, isključite TV iz struje i pozovite servis.

PROBLEM	MOGUĆA REŠENJA
Nema zvuka ni slike	<ul style="list-style-type: none"><li>- Proverite da li je glavni kabl uključen u struju</li><li>- Proverite da li ste pritisnuli POWER dugme</li><li>- Proverite podešavanje kontrasta i jačine svetla</li></ul>
Normalna slika, ali nema zvuka	<ul style="list-style-type: none"><li>- Proverite jačinu zvuka</li><li>- Proverite da li je MUTE opcija uključena</li><li>- Promenite kanal, problem može da bude u emitovanju</li><li>- Da li su svi kablovi vezani za zvuk priključeni kako treba?</li></ul>
Daljinsko upravljanje ne radi	<ul style="list-style-type: none"><li>- Proverite da li je neki objekat između daljinskog upravljača i proizvoda</li><li>- Da li su baterije postavljene ispravno? Proverite polove + i -</li><li>- Da li je postavljen ispravan mod upravljanja: TV, VCR itd.?</li><li>- Promenite baterije</li></ul>
TV se iznenada isključio	<ul style="list-style-type: none"><li>- Da li je postavljen Sleep Timer?</li><li>- Proverite podešavanja uključivanja i isključivanja.</li><li>- Nema emitovanja na određenom kanalu, automatsko gašenje posle nekog vremena</li></ul>
Slika se pojavljuje postepeno nakon uključivanja uređaja	<ul style="list-style-type: none"><li>- Ovo je normalno, slika je isključena tokom uključivanja proizvoda. Molimo Vas da se obratite serviserima u slučaju da se slika ne pojavi nakon 5 minuta.</li></ul>
Slika ili boje su loše ili ih uopšte nema	<ul style="list-style-type: none"><li>- Podesite boju u meniju</li><li>- Napravite značajan razmak između proizvoda i VCR-a</li><li>- Promenite kanal, problem može biti u emitovanju</li><li>- Da li su svi kablovi vezani za VIDEO priključeni ispravno?</li><li>- Aktivirajte bilo koju funkciju kako bi povratili normalnu jačinu svetlosti slike</li></ul>
Pojava horizontalnih ili vertikalnih linija, slika se tresce	<ul style="list-style-type: none"><li>- Proverite da li postoje lokalne smetnje kao što su električni aparati i slično.</li></ul>
Loš signal kod nekih kanala	<ul style="list-style-type: none"><li>- Televizijska stanica ima nekih problema. Promenite kanal</li><li>- Signal je slab, promenite položaj antene</li><li>- Proverite da li postoje neki izvori mogućih smetnji</li></ul>
Linije ili pruge na slikama	<ul style="list-style-type: none"><li>- Proverite antenu (Promenite njen položaj)</li></ul>
Nema zvuka u jednom zvučniku	<ul style="list-style-type: none"><li>- Podesite ravnotežu u meniju</li></ul>

## REŠAVANJE PROBLEMA

PROBLEM	MOGUĆE REŠENJE
Signal je van dometa	- Podesite rezoluciju, horizontalnu frekvenciju ili vertikalnu frekvenciju - Proverite da li je kabl vezan za signal povezan ispravno ili labavo - Proverite izvor
Vertikalna linija ili pruga u pozadini / horizontalna buka / nepravilna pozicija	- Odradite autokonfiguraciju ili podesite sat, fazu ili H/V poziciju
Boja ekrana je nestabilna / jedna boje je nestabilna	- Proverite kabl za signal - Ponovo instalirajte PC video karticu

### ODRŽAVANJE

- Rani kvarovi mogu biti sprečeni. Psžljivo i redovno čišćenje može da produži vreme Vašeg posedovanja televizora. Isključite televizor i izvadite kabl iz struje pre nego što započnete čišćenje.

#### Čišćenje ekrana

1. Evo jednog sjajnog načina da očistite Vaš ekran od prašine na duže vreme. Meku krpu pokvasite u mekoj vodi pomešanoj sa malo omekšivača ili deterdženta. Prosušite krpu dok ne bude skoro potpuno suva, a zatim obrišite ekran.
2. Višak vode ne sme biti na ekranu. Budite sigurni da ga nema pre nego što ponovo uključite televizor.

#### Čišćenje okvira

Prilikom čišćenja koristite meku, suhu krpu bez vlakana. Molimo Vas, proverite da krpa nije mokra.

#### Produženo odsustvo



Ako planirate da ostavite svoj TV isključen na duži vremenski period (npr. tokom odmora), trebalo bi da isključite kabl za napajanje iz struje kako bi izbegli moguću štetu koja može nastati usled udara groma ili izliva struje.

#### Odlaganje starih električnih uređaja








Evropska direktiva 2002/96/EC o električnoj i elektronskoj opremi za otpad (WEEE) kaže da se stari električni uređaji za domaćinstvo ne smeju odlagati sa normalnim, nesortiranim komunalnim otpadom. Stari električni uređaji moraju se sakupljati odvojeno kako bi se optimizovao oporavak i recikliranje okoline.

Simbol precrtane kante za smeće tu je kako bi Vas podsetio da odložite ovaj uređaj zasebno. Potrošači bi trebalo da kontaktiraju lokalnu vlast ili prodavača kako bi dobili sve potrebne informacije o odlaganju aparata.

Beleška: Podaci na slici su samo reference.

# Stand Installation

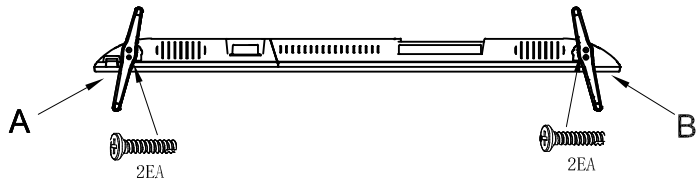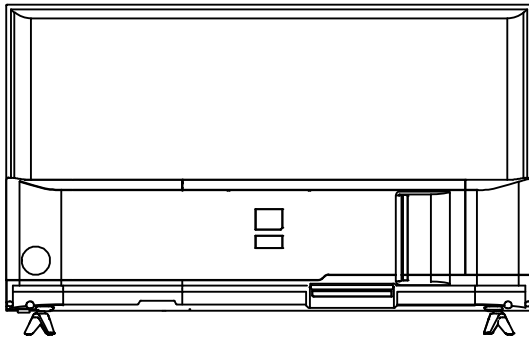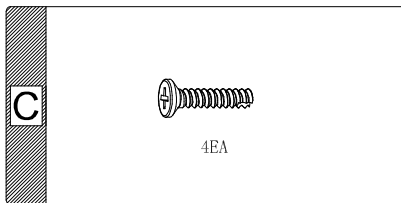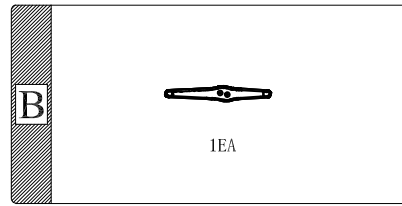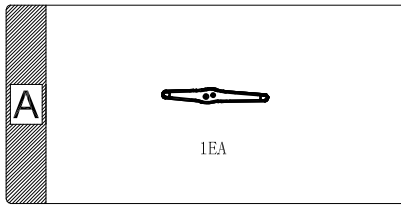



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.  
Za više informacija o FOX uređajima posetite našu internet stranicu:

**[www.foxelectronics.rs](http://www.foxelectronics.rs)**

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda FOX, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/fox-televizor-58dle858-akcija-cena/>