

## Uputstvo za upotrebu (EN)

DENVER partybox zvučnik BPS-350



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/denver-partybox-zvucnik-bps-350-akcija-cena/>

# ENG

## Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. This product is not a toy. Keep it out of reach of children.
2. Warning: This product includes lithium ION battery.
3. Keep product out of the reach of children and pets to avoid chewing and swallowing.
4. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
5. Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
6. Do not expose to heat, water, Dust (dusty environment), moisture, direct sunlight!
7. Please protect your ears against loud volume. Loud volume can damage your ears and risk in hearing loss.
8. Bluetooth wireless technology operates within a range of about 10 m (30 feet). The maximum communication distance may vary depending on the presence of obstacles (people, metal objects, walls, etc.) or the electromagnetic environment.
9. Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices.
10. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
11. Only charge with supplied adaptor.
12. Do not use non original accessories together with the product as this can make the product functionality abnormal.
13. Do not block the devices ventilation. Product should be able to disperse the heat.

## **Specification:**

6.5" +6.5" woofer

2" tweeter

Battery: 7.4 V/3600 mAh

Max Output Power: 250W (25W RMS)

3.5 mm Aux-in

TWS function: Wireless connection, up to 2pcs speakers playing together to double the sound.

USB/Micro SD Card play; FM Radio; Bluetooth connect

Microphone input x 2

BASS/Treble/Microphone Volume/Echo control

Product size: 25 x 24.2 x 59.5 cm

Product net weight: 5.35 kg

Music playing time up to 7-9 hours (50% volume)

Charging time: 6-8 hours

Features on remote control


LED light control: color control-LED ON/OFF control

Recording function: Record your sound via microphone to USB flash/Micro SD card

## **What you have in pack:**

- User manual
- Remote control
- 9V/2A Adaptor

## Top panel operation

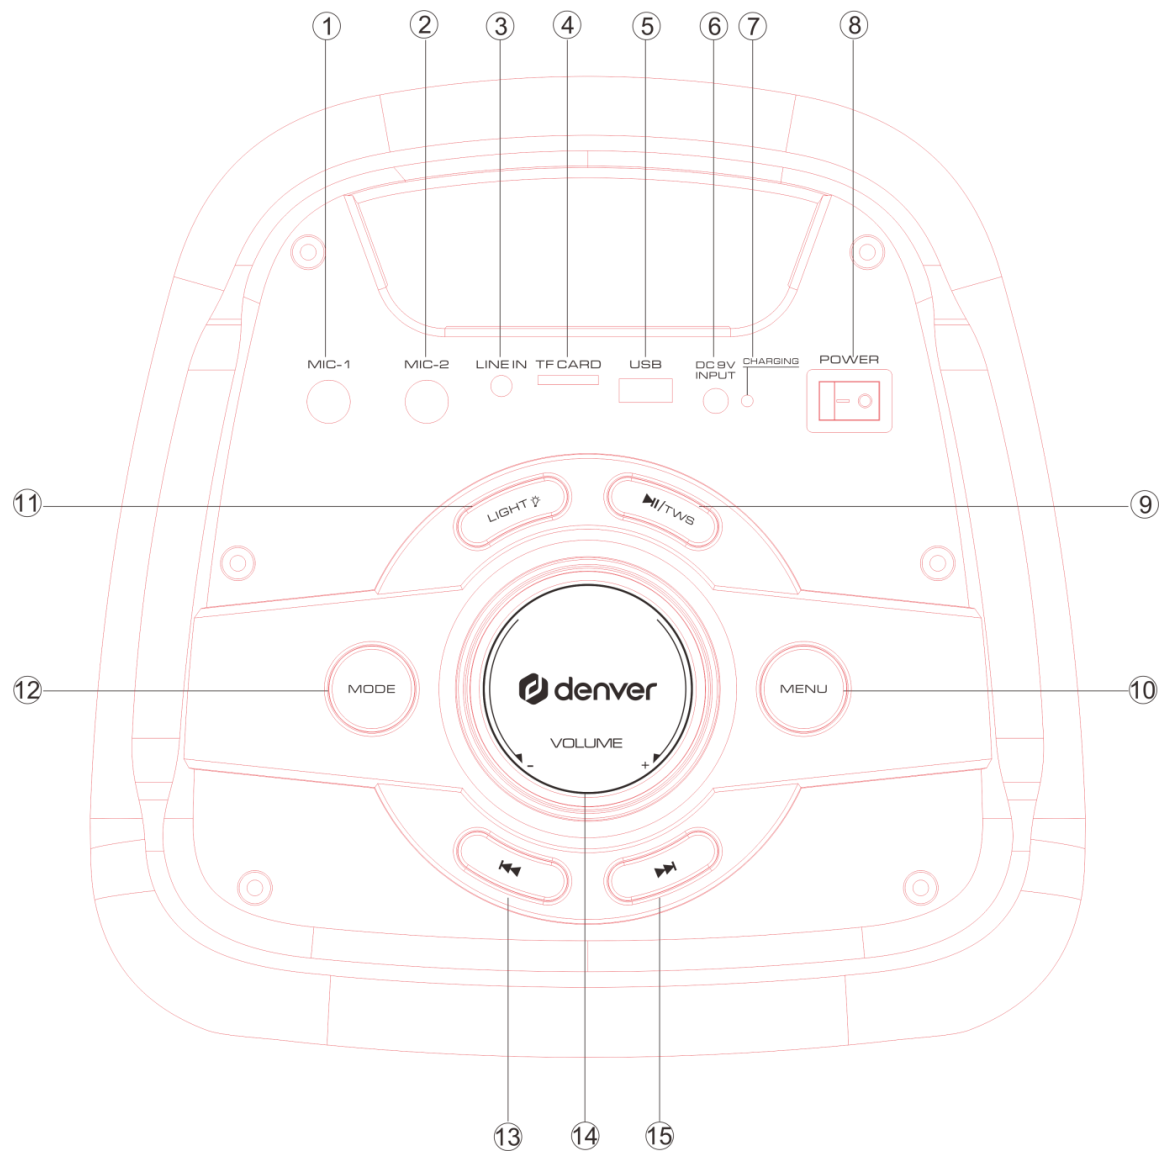

1. Microphone 1 Input
2. Microphone 2 Input
3. Aux-in(3.5mm)
4. Micro SD Card input
5. USB Playing back
6. DC 9V charge.
7. Charging indicator(Red-charging, Green-Full)
8. Switch the Power on/off

9. Play/pause under USB/Micro SD/BT mode, and long press to get TWS function.

## **TWS connection spec:**

When you are playing a speaker (host) under USB/Micro SD/AUX/BT mode, at this time you want another speaker to share this song. You can turn on another speaker, long press the "Play/pause" button, the LED display will show "SLAU" and keep blinking, now it is searching for the host. Once host found, this new speaker will connect automatically to the host, and "SLAU" will not blink. At this time 2pcs speakers are playing the same song.

The new joining speaker can operate: play/pause - previous song-next song- volume control.

10. MENU(control BASS/Treble/MIC Volume)

Press the "MENU" button, the LED Display will show "TE/BS/CU/EC", "TE" means Treble control: if you see "TE" and rotate the main Volume knob, the Treble / mid-high frequency will be from "-9" to "+9".


"BS" means Bass control. Press the "MENU" button and the LED display will show "BS", Once you see "BS" and rotate the main Volume knob, the BASS effect will be from "-9" to "+9"

"CU" means Microphone Volume, "EC" means Echo +/- control. Once you see "CU" or "EC", rotate the Main Volume knob and the Microphone Volume and Echo will be decreased and increased.

Long press the "MENU" button to restore factory settings.

11. Light mode switching on/off, short switch to get different color, long press to change the light mode, or off the light. Press "light" again to start the light
12. MODE switch
13. Short press to get the previous song, long press to fast backward
14. Main volume
15. Short press to get the next song, long press to get fast forward

# Remote control

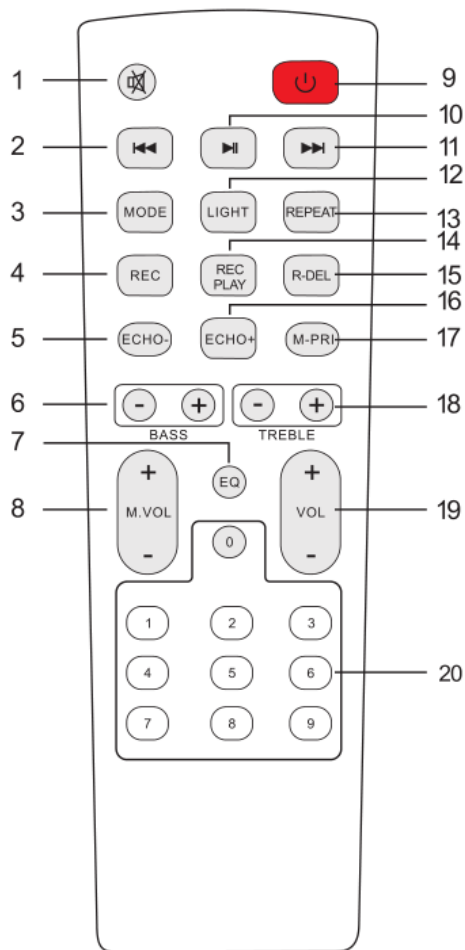

1. Mute  
Available to be mute at any mode
2. Previous Song  
Under USB/Micro SD card mode - previous song.  
Under BT connection mode- previous song.
3. Mode  
Press short to skip to Wireless BT/LINE IN/USB/Micro SD mode.
4. Record function  
Under USB/Micro SD card mode, press the “REC” button to record songs into USB/Micro SD.
5. Echo-
6. BASS+/-


7. EQ function (Pop-rock-Jazz-Classical-Flat)
8. Microphone Volume+/-
9. Stand by
10. Pause & Play
11. Next song  
Under USB/Micro SD card mode - next song.  
Under BT connection mode- next song.
12. Light mode switch  
Short press to change light colors. Press and hold this button to get different modes or turn off the light. Press this button again to turn on the light.
13. Repeat function  
Repeat one song, or loop playback the song in USB/Micro SD storage.
14. Record play
15. Record delete
16. Echo+
17. Microphone priority  
(If you speak via microphone when playing music, your sound will override the sound in USB/Micro SD card)
18. Treble+/-
19. Main Volume
20. Number buttons  
Under USB/Micro SD card mode to choose songs.



## OPERATING INSTRUCTIONS

---

### • **Wireless BT Pairing Mode:**

Press the MODE button on the unit or the remote control until BT is selected.

1. Put the cell phone within 10 meters;
2. Activate the BT features on your cell phone so that the cell phone starts to search for BT device. Please refer to the user manual for details.
3. Select the correct model no. (**Denver BPS-350**)The device found by the cell phone;
4. Short press PLAY/PAUSE button “” to play or pause music.


Short press the “” or “” key to select the previous or next track.



### • **LINE IN MODE:**

Press the MODE button on the unit or the remote control until the LINE is selected. Play the music of the device connected to the LINE input.

### • **FM RADIO MODE:**

-Press the MODE button on the unit or the remote control until FM is selected.


-Press the “”key and the speaker will auto search, then the speaker will read signal from 87.5MHz till 108MHz, if any frequency has signal, the unit will remember it and store it as a channel.


-After the searching is done, shortly press the “” key to the previous channel and the “” key to the next channel.



- **USB Mode:**

1. After start up, press MODE to select “USB” and insert the USB device. The unit will automatically read and play the music in the USB device.

2. Press the “” key short to pause or play.

3. Short press the “” key to the previous song.

4. Short press “” key to the next song.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



UK  
CA



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that

electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type **BPS-350** is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [denver.eu](http://denver.eu) and then click the search ICON on topline of website. Write model number: **BPS-350**. Now enter product page, and RED directive is found under downloads/other downloads.

Operating Frequency Range: 2402MHz~2480MHz,FM:87.5-108MHz  
Max Output Power: 250W (25W RMS)

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

[www.facebook.com/denver.eu](http://www.facebook.com/denver.eu)

## **Adapter Information:**

Manufacturer's name or trade mark, commercial registration number and address:

SHENZHEN FUJIA APPLIANCE CO.,LTD.

91440300279404132H

5F of building F, Hengchangrong (xinghui) science and technology industrial park Huaning Road West, Longhua district, Shenzhen, China,

Model identifier: FJ-SW126G0902000E

Input voltage: 100~240V

Input AC frequency: 50/60Hz

Output voltage: 9V

Output current: 2A

Output power: 18W

Average active efficiency: 85%

Efficiency at low load (10%):71%

No-load power consumption:  $\leq 0.1W$

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Denver, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/denver-partybox-zvucnik-bps-350-akcija-cena/>