

Uputstvo za upotrebu (EN)

SENCOR seckalica SCB 9000WH

SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-seckalica-scb-9000wh-akcija-cena/>

SENCOR®

SCB 9000WH



CORDLESS FOOD CHOPPER

Translation of the original manual



SENCOR®

SCB 900WH



A

1

2

3

4

5

6

 
 
 
 
 
7

8


9

10

11

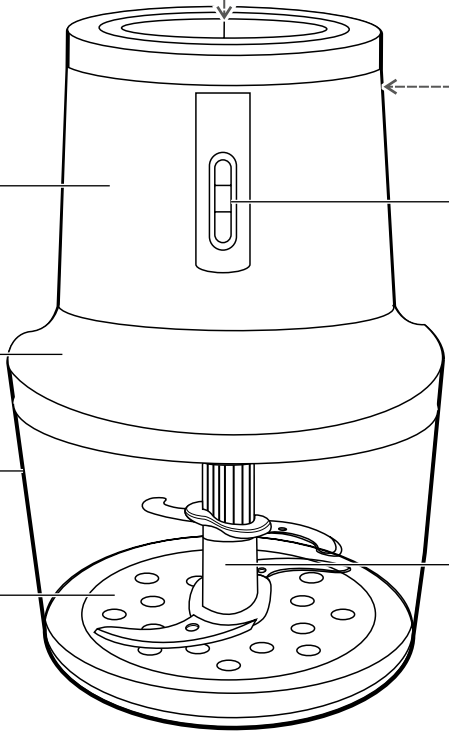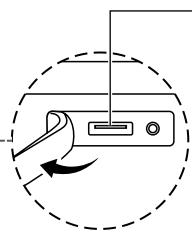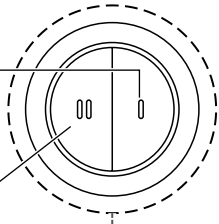

B

 

1

2

3

EN Cordless food chopper

Important safety instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may not be used by children. Keep the appliance and its power cord away from children.
- The appliance may be used by persons with reduced physical, sensory or mental capabilities or with a lack of experience and knowledge, if they are supervised or have been instructed to use the appliance in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.



WARNING

Incorrect use may lead to injuries.

Electrical safety

- Before connecting this appliance to an electrical power socket, make sure that the voltage stated on its rating label corresponds to the voltage in your power socket.
- Connect the appliance only to a properly grounded socket. Do not use an extension cord.
- Fully unwind the power cord before using it.
- Do not connect and disconnect the power cord and adapter to and from the power socket with wet hands.
- Ensure that the adapter plug contacts do not come into contact with water or any other liquid. If precisely this happens, carefully dry the power plug before using it again.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the power cord from the power socket by pulling on the plug.
- Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table or that it is not touching a hot surface or sharp objects.
- Keep the power cord and adapter dry.
- If the power cord or the adapter is damaged, it must be replaced by the manufacturer, its service technician or by a similarly qualified person, as this will prevent a dangerous situation from arising. It is forbidden to use a damaged power cord or adapter.
- Do not wind the power cord around the appliance.
- Always turn off the appliance and disconnect it from the power socket when not using it, when leaving it without supervision and before removing or replacing accessories, and before cleaning, maintenance or storage.
- The appliance is equipped with a built-in long-life battery that can only be removed at a professional service centre. Never attempt to remove it from the appliance yourself.



Attention:

Never disassemble the appliance for the purpose of removing the battery. Never short circuit the appliance or throw it into a fire. Incorrect use, risks releasing toxic substances or causing a fire or explosion.

- Do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty.
- To prevent the risk of injury by electrical shock, never submerge the motor unit and its power cord in water or any other liquid, or wash these parts under running water.
- Always turn off the appliance and disconnect it from the power socket when you have finished charging it.
- If the appliance falls into water, under no circumstances continue using it, but rather hand it over to an authorised service centre for inspection.
- This appliance is designed for household use. Do not use it for commercial purposes or for other purposes for which it is not intended.

Safety during use

- This appliance is designed for household use and is intended for chopping ingredients.
- Do not use the appliance in an industrial environment or outdoors. Do not use it for any other purposes than those intended.
- The appliance is intended for domestic use and similar locations such as:
 - kitchens in stores; offices and other workplaces;
 - in agriculture;
 - for guests of hotels, motels and other similar locations;
 - in bed and breakfast establishments.
- This appliance is not intended to be operated using an external timer switch or a remote control system.
- Use the appliance and its accessories in accordance with the instructions contained in this user's manual.
- Only use the appliance with the original accessories that came with it.
- Before every use, check the selected accessory for damage. Never use the appliance with a damaged accessory.
- Do not place the appliance or its accessories on an electric or gas stove or in its vicinity, on the edge of a table or on an unstable surface. Only place the appliance on an even, dry and stable surface.
- Do not expose the appliance and its accessories to the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessively dusty environments.
- Do not place the appliance and its accessories near heaters, open fires or other sources of heat.
- Make sure that the appliance is correctly assembled before putting it into operation.
- Do not touch moving rotating parts during operation. Otherwise, this could result in injury.

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. In the event that you hand this appliance over to somebody else, make sure to also include this user's manual.
- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all its parts. We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE

- | | |
|--|---|
| A1 Low speed button | A7 USB slot |
| A2 High speed button | A8 Battery power level indicator |
| A3 Motor unit | A9 4-blade chopping blade assembly |
| A4 Lid | A10 USB power cable |
| A5 Chopping bowl, volume 500 ml | A11 Power cable adapter |
| A6 Washer with pin for blade unit | |

- | | |
|---|--|
| B1 High battery capacity indicator | B3 Low battery capacity indicator |
| B2 Medium battery capacity indicator | |

PURPOSE OF USE

- The chopper is suitable for chopping tougher ingredients such as nuts, herbs, cheeses, fruit and vegetables in their raw state or even well diced meat. It is suitable for preparing purée and baby food.

BEFORE FIRST USE

- Thoroughly wash the chopping bowl, lid and blade assembly using warm water and neutral kitchen detergent. Then rinse them with clean water and allow them to dry naturally or dry them out their using a wiping cloth.



Warning:

When cleaning the blade assembly, be very careful not to injure yourself on its sharp edges.

- Clean the motor unit using only a dampened cloth. At the same time, ensure that water does not enter into the unit, especially into the speed control buttons. Do not submerge any of these parts in water, do not clean them under running water or place them in a dishwasher.
- Only clean the power cord and adapter using a dry wiping cloth, never wash with water.

CHARGING THE BATTERY

- To ensure the best possible performance, we recommend to fully charge the appliance before first use. A complete charge takes up to 5 hours.
- Insert the smaller end of the power cord into the USB socket in the top part of the motor unit and the larger end into the supplied power adapter. Then insert the power adapter into a power socket.
- During the charging process, indicators on the motor unit will flash depending on the charge status. The meaning of the light signals is the following:

Indicator (fig. B)	Battery capacity
All indicators are flashing	Low (less than 33 % capacity)
Indicator B3 is lit, and indicators B1 and B2 are flashing	Medium (33-65 % capacity)
Indicators B2 and B3 are lit, indicator B1 is flashing	Medium (66-99 % capacity)
All indicators are lit	The battery is fully charged

- The lifetime of the battery is up to 300 cycles. The actual number of cycles, however, will differ depending on the load placed on the chopper and the ingredients that are processed. For example, with frequent use of the high speed level, the battery will discharge faster.

RECOMMENDATIONS FOR EXTENDING THE LIFETIME OF THE BATTERY

- In order for the battery to serve you as long as possible, charge, use and store the appliance in a dry environment at an ambient temperature of 15-35 °C. Lower or higher temperatures have a negative impact on the lifespan of the battery.
- When the appliance is not used for an extended period of time, charge it at least once every 6 months.

ASSEMBLY AND DISASSEMBLY



Attention:

Before assembling/disassembling the chopper, the motor unit must be turned off and disconnected from the power cord.

When handling the blade assembly or the chopper, be very careful not to injure yourself on the sharp cutting edges.

- Place the chopping bowl on an even and stable surface.
- Assemble the blade assembly: It consists of two parts, the top and bottom chopping blades. Hold the top chopping blades by the middle part and seat them on to the bottom blades from above, and then turn them in one direction or the other so that both parts fit into each other. For a firm connection of both parts, hold the bottom chopping blades with one hand and use the other hand to hold the top chopping blades and turn them anticlockwise until they lock into place.
- Place the chopper on to the central pin on the bottom of the bowl and only then insert the ingredients. Do not fill the chopping bowl past the maximum level mark.
- Put the lid on the chopping bowl and turn it so that the tabs on the bowl slide into the grooves on the lid.
- Then put the motor unit on to the lid. Indicators **B1** to **B3** will start flashing, which means that the unit is ready for use.
- To remove them proceed in the reverse sequence to their assembly.

OPERATION



Note:

You may detect a slight odour when the appliance is used for the first time. That is normal and this odour will go away with further use.

- To start the appliance, press and hold down the low (I) or high (II) speed button.



Attention:

The maximum continuous operating time of the appliance is 1 minute. Then allow it to cool down for approximately 10 minutes. When using the appliance to blend sticky or harder ingredients, interrupt operation already after 30 seconds.

- As soon as the ingredients are processed, release the speed button and wait for the chopper to come to a stop. Only then remove the lid with the motor unit from the chopping bowl.

AUTOMATIC ANTI-OVERLOADING FUNCTION

- The appliance has an automatic anti-overloading function. In the event that the motor unit is overloaded, e.g. due to the ingredients being too tough or hard, indicators **B1** to **B3** will simultaneously flash five times and then the unit will turn itself off. If this happens, allow the appliance to rest for at least 15 minutes and adjust the amount and/or size of the ingredients. Only then continue using the appliance.

BATTERY CAPACITY INDICATOR

- The battery will start discharging when the appliance is used. Its capacity is shown using indicators **B1** to **B3** follows:

Indicator	Battery capacity
All indicators are lit	High
Indicators B2 and B3 are lit	Medium
Indicator B2 is lit	Low
Indicator B3 is flashing	The battery is almost flat

ADVICE AND TIPS

- Before chopping, remove hard parts such as fruit stones or bones from the processed ingredients. This will prevent damaging the blade assembly.
- To make chopping easier, cut hard ingredients into small pieces.

QUICK GUIDE TO PROCESSING INGREDIENTS

- The food processing times provided below are only a reference. The actual processing time depends on the size of the ingredients, their amount and the required final consistency. If the required consistency is not achieved during the maximum operating time of the appliance, you may continue processing the food after the appliance has cooled down.

INGREDIENTS	AMOUNT	SPEED SETTING	PROCESSING TIME
Meat	300 g	(I) to (II)	30 s
Fruit and vegetables	200 g	(I) to (II)	15 s
Hard and semi-hard cheeses	150 g	(II)	10 s
Hard baked goods	100 g	(I) to (II)	20 s
Nuts with shells removed	100 g	(II)	15 s
Herbs	50 g	(I) to (II)	10 s

CLEANING AND MAINTENANCE



Warning:

When cleaning the blade assembly, be very careful not to injure yourself on its sharp edges. Do not use solvents, abrasive cleaning products, etc. for cleaning the appliance. Otherwise the surface coat of the appliance may be damaged.

- Before cleaning, the appliance must be turned off and disconnected from the power cord.
- Disassemble the appliance into its individual parts. Thoroughly wash the blade assembly, the lid and the chopping bowl in warm water and neutral kitchen detergent. Then rinse them with clean water and allow them to dry naturally or dry them out thoroughly using a wiping cloth.
- Wipe the motor unit with a dry or slightly dampened cloth. Make sure that water does not enter into speed control buttons.
- Only clean the power cord and adapter using a dry wiping cloth, never wash with water liquids or other liquids.
- Never dry parts of the appliance over heat sources such as wood stoves, electric or gas stoves, etc.

STORAGE

- When you have finished using the appliance and have cleaned it, place it and its accessories in a clean, dry place out of children's reach. Keep the stored appliance and its accessories away from extreme temperatures, direct sunlight and excessive humidity and do not store it in an overly dusty environment.

TECHNICAL SPECIFICATIONS

Power Adapter:

Input..... 100-240 V ~ 50/60 Hz, 0.5 A Max
Output..... 5.0 V $\overline{\text{---}}$ 2.0 A, 10 W

Unit:

Battery..... 11.1 V Li-Ion, 2000 mAh
Rated Input..... 5.0 V $\overline{\text{---}}$, 2.0 A
Work Power..... 200 W
Electrical shock protection class..... II
Noise level..... 85 dB(A)

The declared noise emission level of the appliance is 85 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

Explanation of technical terminology



Safety class for electrical shock protection: Class II – Electrical shock protection is provided by double or heavy-duty insulation.

Changes to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

.....

DISPOSAL OF USED BATTERIES

Prior to handing over the appliance at a specialised collection facility, it is necessary to ensure that the built-in battery is removed. Battery removal will be performed at the authorised service centre. In the event that the product has been disassembled for the purpose of ecological disposal then it must not be reassembled.



This symbol indicates that the used battery does not belong in ordinary municipal waste. Hand over the used battery to designated collection points for proper disposal. Correct disposal of the battery will help prevent negative impacts on the environment and human health.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.

.....

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand these appliances over to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save

valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electrical or electronic equipment, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-seckalica-scb-9000wh-akcija-cena/>