

## Uputstvo za upotrebu (EN)

SENCOR blender SBL 2111GR

# SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-blender-sbl-2111gr-akcija-cena/>

# Smoothie Maker

User guide

EN



## **SENCOR<sup>®</sup>**

SBL 2110WH / SBL 2111GR / SBL 2112BL  
SBL 2113OR / SBL 2114RD / SBL 2115VT  
SBL 2116YL / SBL 2117TQ / SBL 2118RS

Before using this appliance, please familiarize yourself with its user guide, even if you are already familiar with using similar appliances. Use the appliance only as described in the user guide. Keep the guide for later use.

At least for the duration of the legal claim period or warranty period, we recommend storing the original transport carton, packing material, sales receipt and confirmation of seller's responsibility or the warranty certificate. In the event of transport, we recommend packing the appliance back into the manufacturer's original box.

# Smoothie Maker

SBL 2110WH / SBL 2111GR / SBL 2112BL / SBL 2113OR / SBL 2114RD  
SBL 2115VT / SBL 2116YL / SBL 2117TQ / SBL 2118RS

## CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	3
DESCRIPTION OF THE APPLIANCE.....	6
INTENDED USE AND FUNCTIONS OF THE APPLIANCE.....	7
BEFORE FIRST USE.....	7
ASSEMBLING AND DISMANTLING THE APPLIANCE.....	7
USING THE APPLIANCE.....	8
QUICK GUIDE TO PROCESSING INGREDIENTS.....	9
CLEANING AND MAINTENANCE.....	9
STORAGE.....	9
INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING.....	10
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT.....	10
TECHNICAL DATA.....	10

## **IMPORTANT SAFETY INSTRUCTIONS**

### **READ CAREFULLY AND SAVE FOR FUTURE USE.**

- This appliance may not be used by children. Keep the appliance and its power cord away from children.
- The appliance may be used by persons with reduced physical, sensory or mental capabilities or with a lack of experience and knowledge, if they are supervised or have been instructed to use the appliance in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.



### **Warning:**

Improper use can lead to injury.

# Smoothie Maker

SBL 2110WH / SBL 2111GR / SBL 2112BL / SBL 2113OR / SBL 2114RD  
SBL 2115VT / SBL 2116YL / SBL 2117TQ / SBL 2118RS

- When handling the blade assembly, be very careful not to injure yourself on its sharp cutting edge. This applies especially when removing the blade assembly from the blending jar, when emptying the jar and when cleaning.
  - The surfaces of the appliance that come into contact with food must always be cleaned according to the instructions in this user's manual.
  - Always turn off the appliance and disconnect it from the power socket if you will not be using it and if you will be leaving it without supervision, before assembly, disassembly, replacing accessories and before cleaning or moving it.
  - Before replacing the accessories or accessible parts that move during use, turn the appliance off and disconnect it from the power supply.
- Before plugging the appliance in, make sure that the voltage on its model plate matches the voltage on the electrical socket.
  - Use the appliance only with original accessories that were supplied with it.
  - The appliance is intended for domestic use and is designed to process ordinary quantities of food in the home.
  - Do not use the appliance for purposes for which it is not intended.
  - Do not use the appliance in industrial environments or outdoors.
  - Do not put the appliance on or near an electric or gas stove, on the edge of a table or on unstable surfaces. Put the appliance only on a flat, dry, stable surface.
  - Before operating the appliance, make sure it is properly assembled.
  - When handling hot liquids, use extra caution, because they may release steam or may splash and scald the user. Before pouring hot liquids into the blending container and blending them, let them cool to at least 40 °C.
  - Do not leave the appliance continuously operating for more than 2 minutes. Before restarting, let it cool for at least 2 minutes. When processing harder foods or thicker liquids, do not leave the appliance running for more than 1 minute.
  - The appliance has a thermal fuse that protects the motor from damage if it is subjected to excessive stress. If the appliance shuts off automatically due to motor overload, unplug it, and let it cool for at least 15 minutes. Then you can operate the appliance again.
  - If food sticks to the blade unit or to the wall of the blending container, turn the appliance off and unplug it. Make sure that the blade unit has stopped turning. Remove the container set from the motor unit and turn it so that the blade unit points upward. Remove the blade unit. Use a plastic spatula to clean the blade unit and container wall. Put the blending container together and attach it back to the motor unit. Plug the cord in and continue blending.
  - Do not run the appliance empty. Improper use of the appliance may shorten its service life.
  - Before removing the blending container from the motor unit, make sure that the motor unit is turned off and unplugged, and that the rotating parts have stopped.
  - Do not submerge the motor unit or power cable in water or any other liquid or wash these parts under running water.

# Smoothie Maker

SBL 2110WH / SBL 2111GR / SBL 2112BL / SBL 2113OR / SBL 2114RD  
SBL 2115VT / SBL 2116YL / SBL 2117TQ / SBL 2118RS


EN

- Make sure that the power cable does not come into contact with moisture. Do not place heavy objects on the power cable. Make sure that the power cable does not hang over the edge of a table or touch a hot surface.
- Do not unplug the appliance by pulling on the power cable. This may damage the power cable or socket. Unplug the cable by pulling the electrical plug.
- Do not use the appliance if it is not working right or shows any signs of damage.
- To avoid hazards, do not repair the appliance yourself or modify it in any way. All repairs must be done by an authorized service facility. Tampering with the appliance may void the warranty.

# Smoothie Maker

SBL 2110WH / SBL 2111GR / SBL 2112BL / SBL 2113OR / SBL 2114RD  
SBL 2115VT / SBL 2116YL / SBL 2117TQ / SBL 2118RS

## DESCRIPTION OF THE APPLIANCE

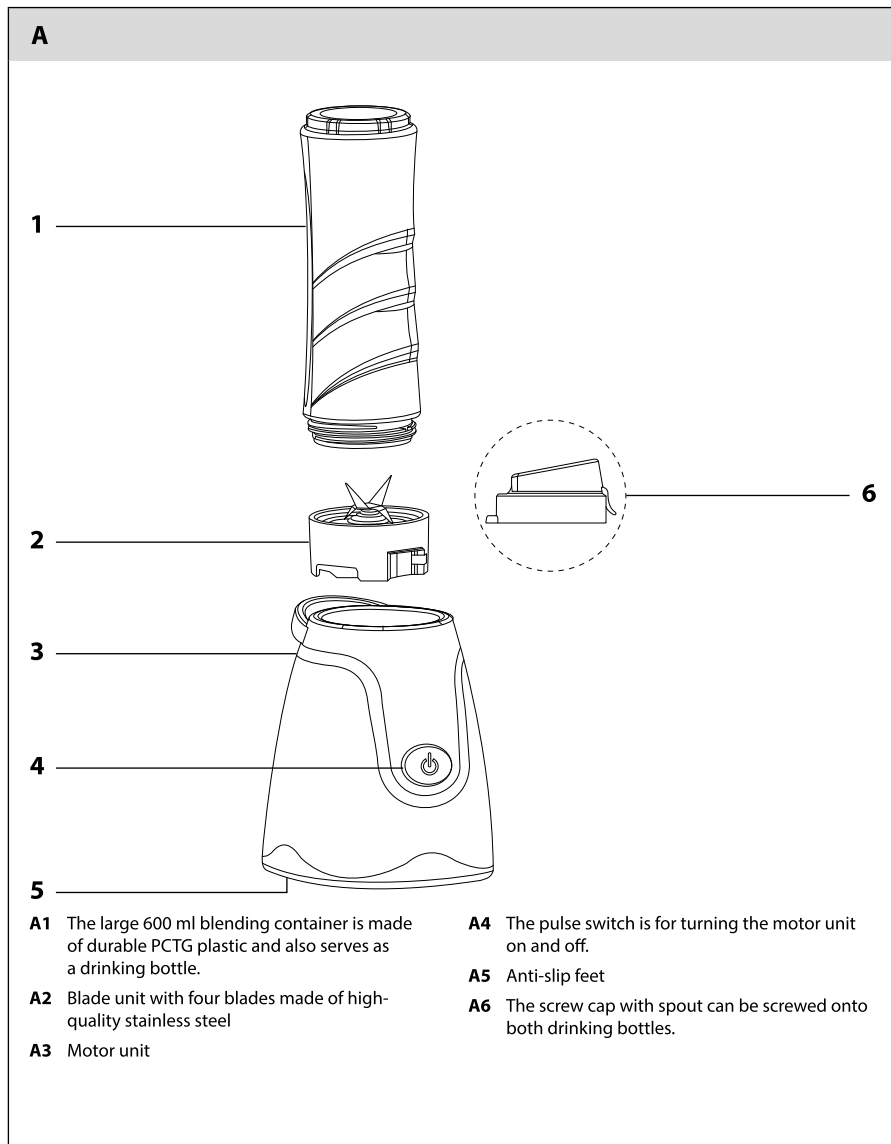

# Smoothie Maker

SBL 2110WH / SBL 2111GR / SBL 2112BL / SBL 2113OR / SBL 2114RD  
SBL 2115VT / SBL 2116YL / SBL 2117TQ / SBL 2118RS

EN

## INTENDED USE AND FUNCTIONS OF THE APPLIANCE

- This Smoothie Maker is ideal for preparing fresh fruit or fitness drinks, dairy and other sorts of cocktails, mixed drinks, excellent salsa, cream soups, sauces and mixed baby foods. It is equipped with a blade unit with four high-quality stainless-steel blades and a blending containers of two sizes, which are made of sturdy PCTG plastic and also serve as a practical drinking bottle. The lid has a closable spout to allow easy carrying with no spilling. Both bottles fit perfectly into a car cupholder. Anti-slip feed with suction cups ensure excellent stability when the Smoothie Maker is in use. The bottle, lid and blade unit are dishwasher safe.

## BEFORE FIRST USE

1. Remove the appliance and its accessories from the packaging.
2. Thoroughly wash all removable parts intended for contact with food (large blending container **A1**, lid **A6** and the blade unit **A2**) in warm water with a neutral dish detergent. Then rinse them with clean water and let them dry or thoroughly dry them with a soft towel.



### Warning:

When cleaning the blade unit **A2**, be extra cautious to avoid injury. The blade edges **A2** are sharp.

## ASSEMBLING AND DISMANTLING THE APPLIANCE

- Before you begin to assemble or disassemble the appliance, make sure the motor unit **A3** is turned off and unplugged from the wall outlet and the rotating parts are not in motion.

### 1. Assembling and dismantling the blending container

- 1.1 Turn blending container **A1** so that its neck points upward.
- 1.2 Place the blade unit **A2** against the neck of container **A1** so that the blades point into **A1**. Screw the blade unit **A2** onto the neck of container **A1**. Turn the assembled container downward with the blade unit **A2**.



### Note:

Put food and liquids into container **A1** before you attach the blade unit to it **A2**.

- 1.3 To dismantle, proceed in the opposite order.
2. **Attaching and removing the blending container from the motor unit**
  - 2.1 Place the motor unit **A3** on a flat, dry surface, such as a kitchen counter. Onto the motor unit **A3**, place the blending container so that the arrow indicator on the blade unit **A2** lines up with the arrow on the motor unit **A3**. Turn the blending unit clockwise until it attaches firmly to the motor unit **A3**. If the blending container assembly is correctly attached to the motor unit **A3**, it cannot be lifted separately.
  - 2.2 To remove the blending container from the motor unit **A3**, proceed in the opposite sequence.
3. **Assembling the drinking bottle**

To assemble the drinking bottle, screw the lid **A6** onto the neck of bottle **A1**. Firmly tighten the lid **A6**. When carrying, make sure the spout is properly closed, so that the bottle's contents do not spill.



# Smoothie Maker

SBL 2110WH / SBL 2111GR / SBL 2112BL / SBL 2113OR / SBL 2114RD  
SBL 2115VT / SBL 2116YL / SBL 2117TQ / SBL 2118RS

## USING THE APPLIANCE

1. Make sure that the motor unit **A3** is turned off and unplugged.
2. Put the ingredients you want to mix into blending container **A1**. We recommend putting the food into container **A1** in the order shown in the chapter "Quick guide to processing ingredients". Containers **A1** can hold food up to the 600 ml line. Do not put more food and liquid into container **A1**.



**Warning:**

Before pouring hot liquids into blending containers **A1** and blending them, let them cool to at least 40°C.

3. Assemble the blending container and then attach the blending container assembly to the motor unit **A3** according to the instructions in the chapter "Assembling and dismantling the appliance".
4. Plug the power cable in and press the pulse switch **A4** to start the smoothie maker. Press and hold switch **A4** for as long as you want to mix. To turn the smoothie maker off, let up on switch **A4**.



**Warning:**

The maximum operating time is 2 minutes. Do not let the appliance run continuously longer than the time indicated above. Then let the appliance cool for 2 minutes. When processing thicker foods or liquids, do not let the appliance run for more than 1 minute.

5. If food sticks to the blade unit **A2** or to the wall of the blending container **A1**, turn the appliance off and unplug it. Make sure that the blade unit **A2** has stopped turning. Remove the container set from the motor unit **A3** and turn it so that the blade unit **A2** points upward. Remove the blade unit **A2**. Use a plastic spatula to clean the blade unit **A2** and wall of container **A1**. Put the blending container together and attach it back to the motor unit **A3**. Plug the cord in and continue blending.
6. After blending is finished, unplug the power cable. Make sure that the blade unit **A2** has stopped turning, and remove the blending container assembly from the motor unit **A3**.
7. Turn blending container **A1** so that the blade unit **A2** points upward. Remove the blade unit **A2** and, if necessary, close bottle **A1** with the lid **A6** or pour the contents into another appropriate container.
8. Clean all parts used according to the instructions in the chapter "Cleaning and maintenance".

# Smoothie Maker

SBL 2110WH / SBL 2111GR / SBL 2112BL / SBL 2113OR / SBL 2114RD  
SBL 2115VT / SBL 2116YL / SBL 2117TQ / SBL 2118RS

EN

## QUICK GUIDE TO PROCESSING INGREDIENTS

- For optimal blending results, put the ingredients in blending container **A1** in the following order: liquids, fresh fruit, frozen fruit, yogurt and ice cream.
- First cut solid foods, such as fruit or vegetables, into smaller pieces of about 1 in (2.5 cm) and then mix them.
- This smoothie maker is not intended for mashing potatoes, blending dough, whipping egg whites or grinding raw meat.

Ingredients	Recommended blending time
Fruit and vegetables cut into smaller pieces	30 s
Smoothies and cocktails	40 s
Salsa	30 s
Soups	30 s
Baby food, side dishes	40 s



### Note:

The listed processing times are only for orientation. Actual blending time depends on the size of the food, the amount, and the desired final consistency.

## CLEANING AND MAINTENANCE

- Before cleaning, make sure the appliance is shut off and unplugged. Disassemble the appliance into its separate parts. Before disassembly, make sure the rotating parts have stopped.
- Thoroughly wash the blade unit **A2** and the emptied blending container **A1** in warm water with a neutral dish detergent. Then rinse these parts under clear running water, dry them with a soft towel or let them air dry. If you have used the lid **A6**, clean it in the same way. We recommend washing all parts immediately after use, so that food does not stick. Dried food is hard to remove. The bottles **A1** and the lid **A6** are all dishwasher safe.



### Warning:

When removing and cleaning the blade unit **A2**, be extra cautious to avoid injury. The blade edges **A2** are sharp.

Some foods may discolor blending containers **A1**. However, this does not affect the operating of the appliance.

- To clean the outer surface of the motor unit **A3** use a cloth soaked in a weak detergent solution. After applying the detergent, dry the surface with a cloth moistened with clean water, and then wipe it dry.
- Never immerse the motor unit **A3** or power cable into water or any other liquid. When cleaning the appliance, do not use solvents, paint thinners or abrasive cleaners. This may damage the surface of the appliance.

## STORAGE

- When you are not using the appliance, store it in a clean, dry place out of the reach of children.

# Smoothie Maker

SBL 2110WH / SBL 2111GR / SBL 2112BL / SBL 2113OR / SBL 2114RD  
SBL 2115VT / SBL 2116YL / SBL 2117TQ / SBL 2118RS

## TECHNICAL DATA

Rated voltage range .....	220–240 V
Rated frequency .....	50/60 Hz
Rated power .....	500 W
Protection class (against electric shock) .....	II
Noise .....	85 dB(A)

This appliance's declared noise emission value is 85 dB(A), which represents acoustic output level A in regard to the reference acoustic output 1 pW.

### Glossary of technical terms

#### Level of protection against electric shock:

Class II - Electric shock protection is provided by double or reinforced insulation.

We reserve the right to change text and technical parameters.

## INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING

Dispose of used packaging at a designated waste disposal facility.

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents indicates that used electrical and electronic equipment is not to be discarded with ordinary municipal waste. For proper disposal, recovery and recycling, take these products to designated collection points. Alternatively, in some countries of the European Union or other European countries, you can return your products to your local retailer when purchasing equivalent new products.

Correct disposal of this product helps save valuable natural resources and helps prevent potential negative effects on the environment and human health that would result from improper disposal. For more details, contact your municipal office or the nearest collection site. Improper disposal of this type of waste may be subject to fines under national regulations.

#### For business entities in the European Union

To dispose of an electrical or electronic equipment, request the necessary information from your retailer or supplier.

#### Disposal in countries outside the European Union

This symbol is valid in the European Union. To dispose of this product, request the necessary information on the correct disposal method from your municipal office or retailer.



This product meets all the basic requirements of the EU directives that apply to it.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-blender-sbl-2111gr-akcija-cena/>