

Uputstvo za upotrebu (EN)

ENERGY SISTEM slušalice Style 7 TWS bele

ENERGY  SISTEM



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/energy-sistem-slusalice-style-7-tws-bele-akcija-cena/>

ENGLISH

Introduction	3
Care and maintenance	3
Safety	4
Features	4
General features	4
Technical specifications	4
Audio	4
Connectivity	4
Microphone	4
Battery	4
Other features	5
Product content	5
General overview	5
First use	6
Switching on and off the device	6
Bluetooth pairing	7
Playback control	7
Call control	7
Using the Voice Assistant feature	7
Charging the battery	7
Warranty	8
Declaration of conformity	8

ENERGY♥SYSTEM

**style7.**Manual de usuario / User manual
Manual de l'utilisateur / Manual do usuário

Introduction

- Thank you for trusting our company and buying the new *Earphones Style 7 True Wireless*. We hope you enjoy the product.
- True Wireless earphones to enjoy music wirelessly.
- Remove the earphones to pause music and wear them again to resume playback.
- Qi compatible charging case included.

Care and maintenance

- Do not expose your *Earphones Style 7 True Wireless* to impacts, dust, humidity or high temperatures.
- Use neither corrosive nor abrasive cleaning products.
- Do not disassemble the device. All repair works should be carried out exclusively by qualified staff of Energy Sistem Technology, S.A.
- Please make sure your *Earphones Style 7 True Wireless* are off when you are not using them. Do not store them with an empty battery for long periods of time.
- You can use a clean wipe with a little hand sanitizer (Hydroalcoholic) to clean smoothly the external surfaces of the Earphones and charging connectors. Do not use these products on the pads or the internal mesh of the

earphones. Avoid getting the charging ports and connectors wet. **Note:** after practicing any exercise, it is recommended to dry the earphones well before placing them in their case.

Safety

- Before using the earphones, turn the volume down. Once you have done this, turn it up slowly until reaching the desired level.
- Avoid noisy environments that force you to turn the volume really high when using your earphones.
- Listening to loud music over a long period of time may cause your ears to get used to high volume levels, resulting in irreversible hearing loss.
- Adjust the volume of your earphones to hear important external sounds.

Features

General features

- In-ear headphones featuring True Wireless Stereo and Bluetooth 5.0 technology. Let nothing stand between you and your music.
- Proximity sensor to control music playback by removing and wearing the earphones.
- Qualcomm chipset and aptX technology for high-quality balanced sound. Enjoy your music like never before.
- Qi compatible charging case to charge your earphones wirelessly.
- Enjoy your music and calls and forget about running out of battery with the 21-hour battery life (6 hours every time you charge them and 15 additional hours with the charging case).
- Dual MEMS microphone for accurate voice capture and stereo calls to not miss a word.
- Easy Connect feature: the earbuds will sync automatically. Simple and easy.

Technical specifications

Audio

- Frequency response: 20 Hz ~ 20 kHz
- Driver diameter: 6 mm
- Neodymium magnet
- Maximum power: 2 mW
- In-ear design
- Type: dynamic

Connectivity

- Bluetooth 5.0, class 2
- Frequency band: 2.4 GHz
- Maximum output power: < 20.00 dBm
- Compatible Bluetooth profiles: HSP / HFP / A2DP / AVRCP
- Up to 20 m distance range
- True Wireless function with auto-pairing
- Hands-free function
- aptX compatible

Microphone

- Type: built-in MEMS microphone
- Sensitivity: -42 dB ± 3 dB (@1 kHz)
- Frequency range: 100 Hz ~ 10 kHz

Battery

Earbuds:

- Capacity: 40 mAh / 3.7 V
- Type: lithium polymer

- Battery life at medium volume: 6 hours*
- Charging time: 1.5 hours
- Charging method: charging case

*This value is approximate. The battery life depends on the selected volume and the type of music.

Charging case:

- Capacity: 350 mAh / 3.7 V
- Type: lithium polymer
- Extra battery life: 15 hours
- Charging time: 2 hours
- Charging method: USB Type-C connection and Qi compatible charging case

Other features


- Volume, playback and microphone controls
- Proximity sensor to control music playback
- Compatible with voice assistant

Product content

- Earphones Style 7 True Wireless
- Charging case
- Interchangeable ear tips*
- USB Type-C cable
- Quick guide

Important: *We recommend that you try the product with the different sizes of ear tips included to choose the ones that best fit your ear as using ear tips that do not fit properly may affect the perceived sound quality.

General overview

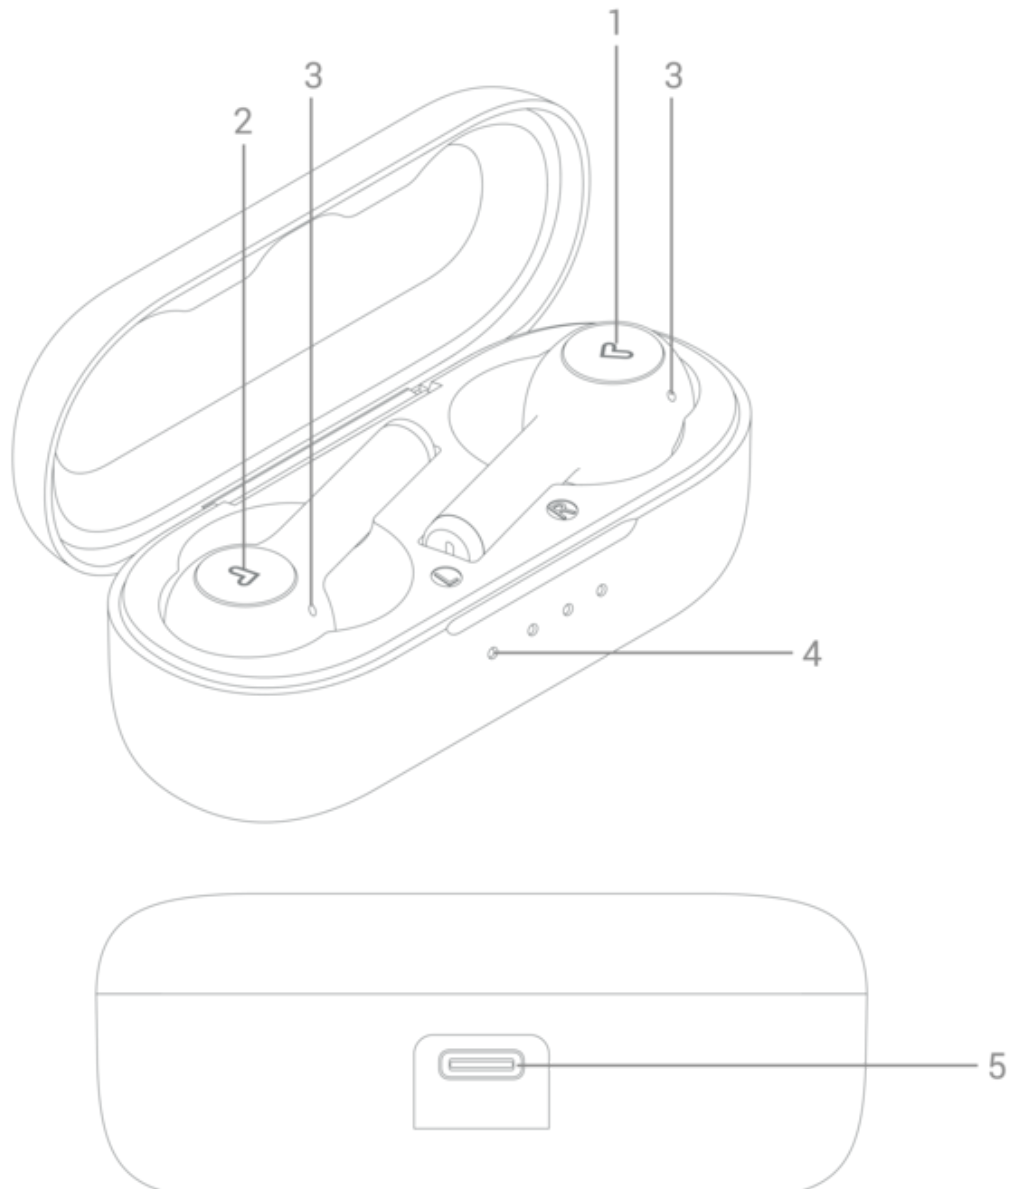

1. Right multifunction button
2. Left multifunction button
3. LED status indicator
4. Charging indicator (charging case)
5. USB Type-C charging port

First use

When you are going to use your *Earphones Style 7 True Wireless* for the first time, insert the headphones into the charging case and charge it for at least 8 hours. This will improve the performance of the batteries in the earphones and the charging case.

Switching on and off the device

To switch on your *Earphones Style 7 True Wireless*, simply take them out of the charging case or tap and hold the *Right and Left multifunction buttons (1 and 2)* for 2 seconds. At this point, the *LED status indicator (3)* starts flashing red and

green.

To switch off your *Earphones Style 7 True Wireless*, put them back in the charging case or tap and hold the *Right and Left multifunction buttons (1 and 2)* for 5 seconds.

To reset the earphones, put them back in the charging case and tap the *Right and Left multifunction buttons (1 and 2)* five times.

Bluetooth pairing

Switch on your *Earphones Style 7 True Wireless*. At this point, the *LED status indicator (3)* on the earbuds flashes red and green and both units pair automatically. Select *Earphones Style 7 True Wireless* from the list of Bluetooth devices on your smartphone or Bluetooth music player and press ?connect?. Both devices will be connected immediately and without codes. You will hear a confirmation sound when the devices are paired. At this point, the *LED status indicator (3)* flashes green.

If you previously paired the earbuds with a device, there is no need to repeat the pairing process. Just enable Bluetooth on your music player and switch on your *Earphones Style 7 True Wireless*. They will sync with it automatically.

Playback control

Play/Pause

Double tap the *Left multifunction button (2)* to resume playback or the *Right multifunction button (1)* to pause the music.

If you prefer, you can use the proximity sensor of your *Earphones Style 7 True Wireless*. Remove one or both earbuds from your ears to pause the music and/or wear them to resume playback.

Volume +/Volume -

Tap the *Right multifunction button (1)* to turn up the volume or the *Left multifunction button (2)* to turn it down.

Skipping to the next or previous track

Tap and hold the *Right multifunction button (1)* or *Left multifunction button (2)* for 2 seconds to skip to the next or previous track during music playback.

Call control

Once the *Earphones Style 7 True Wireless* and your smartphone are synchronized, you can control calls from the earphones.

Answering/Ending a call

To answer an incoming call, tap the *Right multifunction button (1)* or *Left multifunction button (2)* once. Double tap the same button to hang up.

Using the Voice Assistant feature

You can interact with your smartphone voice assistant using your *Earphones Style 7 True Wireless*. To do so, tap the *Right multifunction button (1)* or *Left multifunction button (2)* 3 times in a row. You can give the voice command after hearing the confirmation sound.

Charging the battery

Earphones

When the battery level of your *Earphones Style 7 True Wireless* is below 10%, you will hear a low battery warning sound. To charge the earphones battery, put the earbuds back in the charging case. The earphones *LED status indicator (3)* lights up red and switches off once the charging process is complete.

Caution: Do not charge your headphones with fast charging adapters or dedicated laptop charging adapters, Because their output voltage exceeds 5V and the device may become unusable.

Charging case

When the battery level of the charging case is below 10%, the first LED of the *Charging indicator (charging case) (4)* starts flashing. Plug the USB Type-C end of the provided cable into the *USB Type-C charging port (5)*, and the other end into a 5 V USB charging device. The LEDs of the *Charging indicator (charging case) (4)* light up as the battery charges. Once the charging process is complete, all LEDs will glow.

If you prefer, you can use the wireless charging function of the charging case to charge the earbuds wirelessly.

Note: We recommend not leaving neither your *Earphones Style 7 True Wireless* nor your charging case unused for long periods of time with an empty battery. We advise charging the battery at least once a month.

Warranty

You can check the warranty terms here:

<https://www.energysistem.com/terms-warranty>

Declaration of conformity

Issuer's name: Energy Sistem Technology, S.A. - CIF: A53107488

Address: C/ Calpe, 1 - 03509 Finestrat, Alicante (Spain)

Tel: +34 966 830 324

We declare under our sole and exclusive responsibility that the product:

Description: wireless earphones

Brand: Energy Sistem

Model: Earphones Style 7 True Wireless

Manufacturer: Energy Sistem Technology, S.A.

Manufacturing country: China

referred to in this declaration complies with the essential norms and standards:

EN 50663:2017

EN 62368-1:2019

ETSI EN 301 489-1 V2.2.3(2019-11)

ETSI EN 301 489-17 V3.2.0(2017-03)

ETSI EN 300 328 V2.2.2(2019-07)

in conformity with the provisions of the Directive 2014/53/EU of the European Parliament and of the Council of 29th March 2014.

Finestrat, 1st September 2020



Miguel Ángel Aragüez García

Innovation and Technology Director



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Energy Sistem, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/energy-sistem-slusalice-style-7-tws-bele-akcija-cena/>