

## Uputstvo za upotrebu (EN)

DENVER Tab TAQ-1047 2/16GB

 


Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/denver-tab-taq-1047-216gb-akcija-cena/>

# DENVER<sup>®</sup>

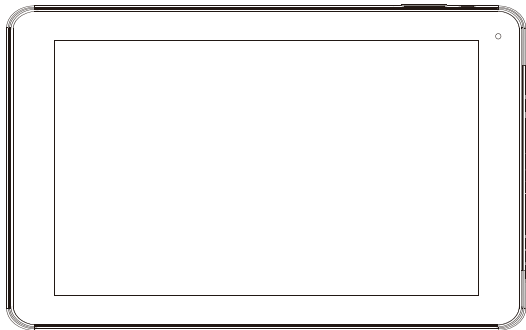


## USER'S MANUAL TAQ-10473KBLUE/PINK

[www.denver-electronics.com](http://www.denver-electronics.com)

Before connecting, operating or adjusting this product,  
please read this user's manual carefully and completely.

ENGLISH / ENGLISH

 Wifi connection must be set up and Google play account (to download apps and games) must be created, before you start up Kidoz software.

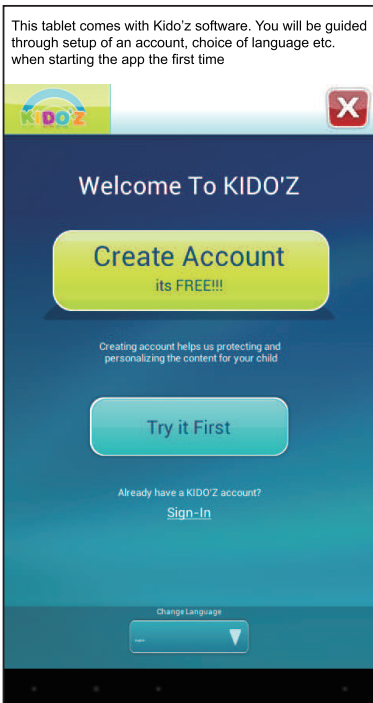

---

## Important safety information

**WARNING:** Read all the safety information below before using this tablet PC.

1. For the electrostatic discharge (ESD) test of EN55035, it was found that manual operation (by switching power ON/OFF switch) is needed to resume normal operation as intended after the test.

2. As this tablet PC is with lithium battery inside, so pls follow below:



- Do not try to open the tablet!
- Do not expose to heat, water, moisture, direct sunlight!
- Only charge with the original adapter supplied with this product!
- Do not attempt to replace the tablet PC battery yourself- you may damage the battery, which could cause overheating and injury. The lithium-ion battery in tablet PC should be replaced only by skilled engineer, and must be recycled or disposed of separately from household waste. Do not incinerate the battery.

3. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

4. The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.

5. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

6. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.


7. Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.

# Table of Contents

Table of Contents .....	3
Unit at a Glance .....	4
Getting Started .....	5
About Applications .....	7
Preinstalled Applications .....	7
Connecting to the Internet .....	8
Email .....	10
Transferring Files .....	11
Troubleshooting .....	12
Specifications .....	13
 
# Unit at a Glance

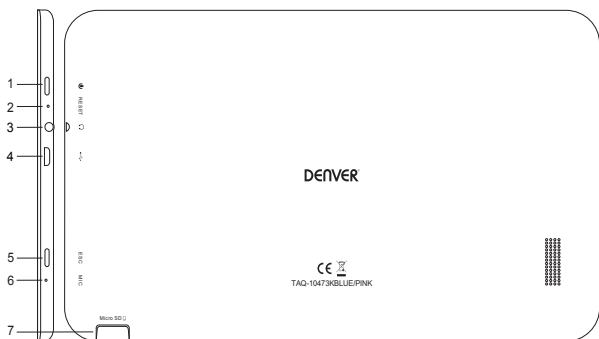

## 1. POWER

Press to turn the unit on, or to turn the screen on or off. Press and hold to access the Power Off menu.

## 2. RESET

Use a needle or paper clip to reset unit

## 3. Headphone

Audio output connection for headphones.

## 4. USB

Connect to USB device or a computer to transfer data (e.g. Music, videos, photos, files)

## 5. ESC

## 6. MIC

## 7. microSD

Load external microSD memory cards here.

# Getting Started

 
## Turning the Tablet on or off

To turn the tablet on:

Press and hold the Power key until the LCD screen turns on. Wait until the Home screen appears, the tablet is now ready for use.

To turn the tablet off:

1. Press and hold the Power key until the power off menu appears.

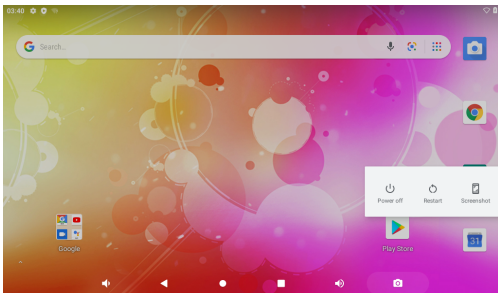

2. Touch Power off to turn off the tablet.

## Turning the Screen on or off (Standby)

When the tablet is on, you can turn off the screen to conserve battery power. Simply press the Power key once to turn the screen off. Press the Power key again to turn the screen back on.

 


To conserve battery life, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes). This Screen timeout option can be found in the Display menu.

# Getting Started

## Unlocking the Screen


When the screen turns off, you will have to unlock the screen when you turn it back on. To unlock the screen, drag the lock icon towards up side of the screen. This will unlock tablet.

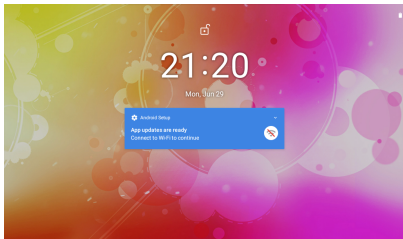

## About Applications

To enter into the application page, please slide upward on the home screen.

 Launcher screen:

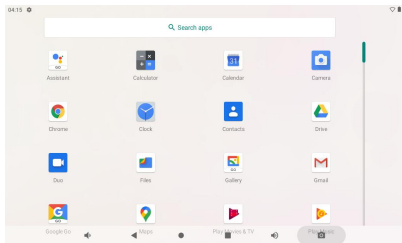

The screen shown above is for illustrative purposes only. Reserves the right to modify and improve the final list of applications available on the tablet.



# About Applications

## Preinstalled Applications

Some applications have been installed on your tablet for your convenience. These applications include:



Browse fast on your Android phone and tablet with the same Chrome browser you love on your desktop. Pick up where you left on your other devices with tab sync, search by voice, and save up to 60% of data usage while browsing.



Perform simple mathematical operations.



Take pictures or videos with the frontfacing camera.



Gmail is an easy to use email app that saves you time and keeps your messages safe. Get your messages instantly via push notifications, read and respond online & offline, find any message quickly and lots more.



Listen to millions of songs for any mood or situation, with recommendations from Google to help you navigate them.



Access the Settings menu to adjust the tablet's options.

## Preinstalled Applications

### Installing Applications


You can also download and install additional applications from the device's applications marketplace, Google Play, or other sources.

 
 
The tablet must be set to allow installation of applications from non-Market sources. The Unknown sources option can be set in the Application settings menu.

# Connecting to the Internet

## Connecting to Wireless Internet

1. Press the Settings  icon, find Network & Internet

2. Tap  to activate Wi-Fi.

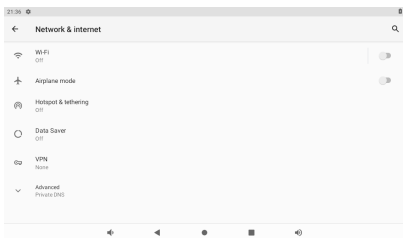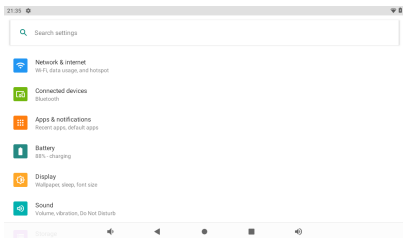


3. Tap Wi-Fi to start detecting networks. The available networks will be listed.

To manually add a network, select the Add Network button.

4. Select Connect from the pop up menu.

5.If the network is secured with a password, enter the password to continue.

 6.Once finished connecting, the display will show Connected under the name of the network.

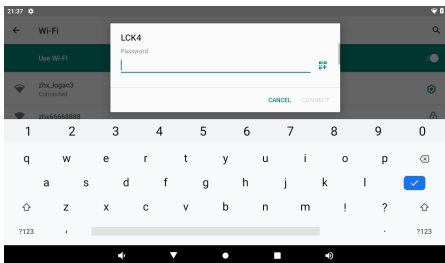

To conserve battery life, turn off Wi-Fi when not in use.


# Email
 
## Setting Up an Email account

1. Press Gmail icon  under App menu.

2. Enter your email address and password, then press Next.

If this does not work, you will need to manually configure your account. Before attempting to configure manually, re-enter you email and password to make sure they are correct.

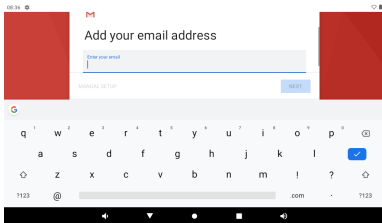

## Manually Configuring an Email account

It is recommended to consult an IT professional before attempting to manually configure your email address.

1. To set up your email manually, detailed information is required. Check your provider's website or phone support for individual provider information.

2. The first thing you will need to determine is the server type. While most servers are POP3, IMAP and Exchange are also supported services.

 
3. Enter your email address and password then press Next.

4. Fill in all information for the Incoming server portion of the manual setup.

5. Press Next and the app will test your settings. Wi-Fi is required to be active for this step.

6. Fill in all information for the Outgoing server settings.

 
7. Press Next and the app will test your settings. Wi-Fi is required to be active for this step.

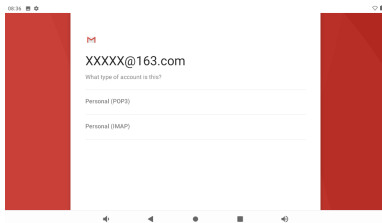


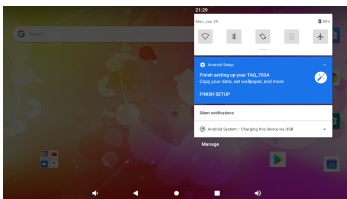 
# Transferring Files

## Transferring Files with a Computer

1. To begin transferring files to your computer, plug one end of the included Mini-USB to USB cord into the unit, and the other into the USB port on a computer.
2. Slide from upside downward till the device show below screen.

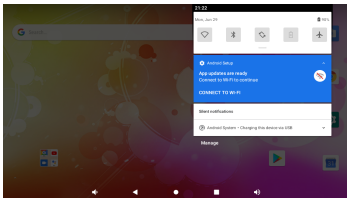

3. Tap the icon 



4. Click "Tap for more options" and choose "Transfer files". You will now be able to transfer files to your computer.



# Troubleshooting

## 1.1 Device can not connect to Wi-Fi

- Ensure the wireless network is working by testing it using another wireless device.
- Ensure the device and the wireless router is within the range of the wireless network to be connected too. Walls or other obstructions will reduce the possible distances between wireless devices.
- Ensure the security password being used is correct.

## 1.2 Device doesn't turn on

- You can not turn on the device when the battery charge is below the critical level, please charge the battery.
- Use a needle or paper clip to reset unit on the side of the device and check if it can restart the device
- Check if the charger is connected correctly.

## 1.3 Heat Issues

- When running multiple applications, using the screen on its brightest setting, or when being charged, this device can get quite hot. This is normal and should not cause any inconvenience when in use.

## 1.4 System has anomalies and doesn't work correctly

- Installing some third-party applications may cause the system not to operate correctly. Press the RESET button and perform a system reset to resolve this issue.

## 1.5 Cannot set E-mail Account or registration application

- Ensure that the MID is connected to a Wi-Fi network and can connect to the Internet.
- Ensure you E-mail settings have been entered correctly for the account being accessed.
- Make sure your system time and local time are correct.

## 1.6 Can not record

- Use a needle or paper clip to reset unit on the side of the device, then check if the record function works correctly.

## 1.7 The stand-by time of the device is too short

- The duration of the lithium battery varies with environmental temperature changes and the service conditions. If the environment temperature is too low or too high, the duration of the battery will be affected. It is recommended to use this device at normal temperature.
- Battery life is dependent on usage. High volume, WIFI, and the frequent use may cause the battery to be drained at a higher rate.

## 1.8 No sound via earphone

- Please check if the volume setting is 0.
- Please check if audio file is broken, and try to play another audio file to confirm. If the audio file is broken, it may cause severe noise or static.

## 1.9 The color distortion of video or picture display

- Use a needle or paper clip to reset unit on the back of the device to solve this issue.

## 1.10 Can not copy files

- Please check if the device is connected to the computer correctly.
- Please check if the memory space is full.
- Please check if the USB cable is broken.

## 1.11 Other troubles Please follow up the steps as below to fix the other troubles before you return the MID/Tablet PC to us:

- Step 1: Use a needle or paper clip to reset unit on the side of the device, then check if the function works correctly
- Step 2: Upgrade the firmware from the PC and restart the device and then check if the function works correctly.

# Specifications

Please visit [www.denver-electronics.com](http://www.denver-electronics.com). for the latest product information. Design, specifications, and manual are subject to change without notice.

RAM	2GB DDR3
Storage	16GB flash built-in; micro SD card slotStorage (max.32GB supported)
Display	10.1" TFT LCD (1024X600), Capacitive touchscreen
Wi-Fi Networking IE	IEEE 802.11 b/g/n
Audio Output	3.5mm headphone
PC Interface	USB 2.0 high speed
Additional Features	Built-in microphone Camera (2MP interpolated) 1W speaker Quad Core
Operating System	Android™ 10(Go edition)
Power	Rechargeable Li-poly battery power 4400mAh Power Adapter (5V,2A)

## Bluetooth Connectivity

This device features Bluetooth connectivity. To use this function, you should,

- (1) Open the setting menu and select "Bluetooth";
- (2) Slide the switch to turn on Bluetooth. The tablet will detect automatically all Bluetooth devices available in service range and list them.
- (3) Select one from the list to start pairing.

Once pairing is done, you can transfer files between the pair of devices.

Manufacturer's name or trade mark, commercial registration number and address	Shenzhen Run Sheng Feng Power Supply Technology Co., Ltd commercial registration number: 91440300580068676U 3 <sup>rd</sup> Floor, 4 <sup>th</sup> Building, Zone A Xinfu Industrial Park, Chongqing Road, Fuyong Street, Bao'an District, Shenzhen, China
Model identifier	RSF-DY080-0502000EUU
Input voltage	100-240V
Input AC frequency	50/60Hz
Output voltage	5V
Output current	2A
Output power	10W
Average active efficiency	78.79% at 115V 60Hz 79.09% at 230V 50Hz
Efficiency at low load (10%)	79.37% at 115V 60Hz 76.55% at 230V 50Hz
No-load power consumption	0.037W at 115V 60Hz 0.056W at 230V 50Hz

Google, Android, Google Play and other marks are trademarks of Google LLC.

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

# DENVER®

www.denver-electronics.com



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER ELECTRONICS A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

[www.facebook.com/denverelectronics](http://www.facebook.com/denverelectronics)

Hereby, Inter Sales A/S declares that the radio equipment type TAQ-10473KBLUE/PINK is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.denver-electronics.com](http://www.denver-electronics.com) and then click the search ICON on topline of website. Write modelnumber:TAQ-10473KBLUE/PINK.Now enter product page, and red directive is found under downloads/other downloads.

Wi-Fi Operating Frequency Range: 2412MHz - 2472MHz

Max Output Power: 13dbm

Bluetooth Operating Frequency Range: 2402MHz ~ 2480MHz



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Denver, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/denver-tab-taq-1047-216gb-akcija-cena/>