

Uputstvo za upotrebu (EN)

SENCOR kuvalo za vodu SWK 1013OR

SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-kuvalo-za-vodu-swk-1013or-akcija-cena/>

Electric kettle

User guide

EN



SENCOR®

SWK 1010WH / SWK 1011GR / SWK 1012BL
SWK 1013OR / SWK 1014RD / SWK 1015VT
SWK 1016YL / SWK 1017TQ / SWK 1018RS

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep the user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the warranty. In the case of transportation, pack the appliance using the original packaging materials only.

EN-1

CONTENTS

| | |
|---|----|
| IMPORTANT SAFETY INSTRUCTIONS | 3 |
| DESCRIPTION OF THE KETTLE | 6 |
| BEFORE FIRST USE | 7 |
| USING THE KETTLE | 7 |
| CLEANING AND MAINTENANCE | 8 |
| TECHNICAL SPECIFICATIONS | 9 |
| INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING | 14 |
| DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT | 14 |

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND SAVE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision. Keep this appliance and the power cord out of reach of children younger than 8 years of age.
- Children must not play with the appliance.
- Before connecting the electric kettle to a power socket check that the voltage stated on the rating label matches the electrical voltage in the socket.
- Connect the electric kettle only to a properly grounded socket.



Attention:

This electric kettle is not designed to be controlled using a programmed device, external timer switch or remote control.

- The electric kettle is designed for domestic use and similar places such as:
 - staff kitchens in stores, offices and other workplaces;
 - hotel or motel rooms and other living areas;
 - bed and breakfast establishments;
 - agricultural farms.
- Do not use the electric kettle outdoors.
- Do not place the electric kettle on window sills or on unstable surfaces. Always place the electric kettle on a stable, even and dry surface.
- Never use the electric kettle in the near vicinity of a bath, shower or swimming pool.

- Only use the electric kettle with the base that was supplied with it. Do not use the base supplied with this electric kettle for other types of kettles.
- Use the electric kettle only for boiling water.
- If the electric kettle is overfilled, then boiling water could splash out.
- Don't move the kettle lid or open it while the water is boiling.
- The body of the kettle is heated up while water is boiled. Do not touch the hot surface. This could cause skin burns. Use the handle for lifting and carrying the electric kettle.
- Pay extra attention when handling a kettle filled with hot water.
- The electric kettle is protected against damage caused by accidentally running it without water.
- If the electric kettle is running, do not leave it unattended.
- Always disconnect the electric kettle from the power socket if you will not be using it or before moving or cleaning it.
- Do not place the electric kettle on an electric or gas stove or in its vicinity, do not place it in the vicinity of an open fire or an appliance that is a source of heat.
- Ensure that the power cord does not come into contact with water or moisture.
- Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table, or that it does not touch a hot surface.
- Do not disconnect the electric kettle from the power socket by pulling on the power cord. This could damage the power cord or the power socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.
- Do not use the electric kettle if it has fallen on the floor, has visible signs of damage or if it is leaking.
- If the power cord is damaged, have it replaced at a professional service centre. It is forbidden to use the electric kettle if it has a damaged power cord or plug.


Electric kettle

SWK 1010WH / SWK 1011GR / SWK 1012BL / SWK 1013OR / SWK 1014RD / SWK 1015VT / SWK 1016YL / SWK 1017TQ / SWK 1018RS

EN

- To avoid the danger of injury by electrical shock, do not repair the electric kettle yourself or make any adjustments to it. All repairs of this electric kettle should be carried out at an authorised service centre. By tampering with the appliance you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

DESCRIPTION OF THE KETTLE

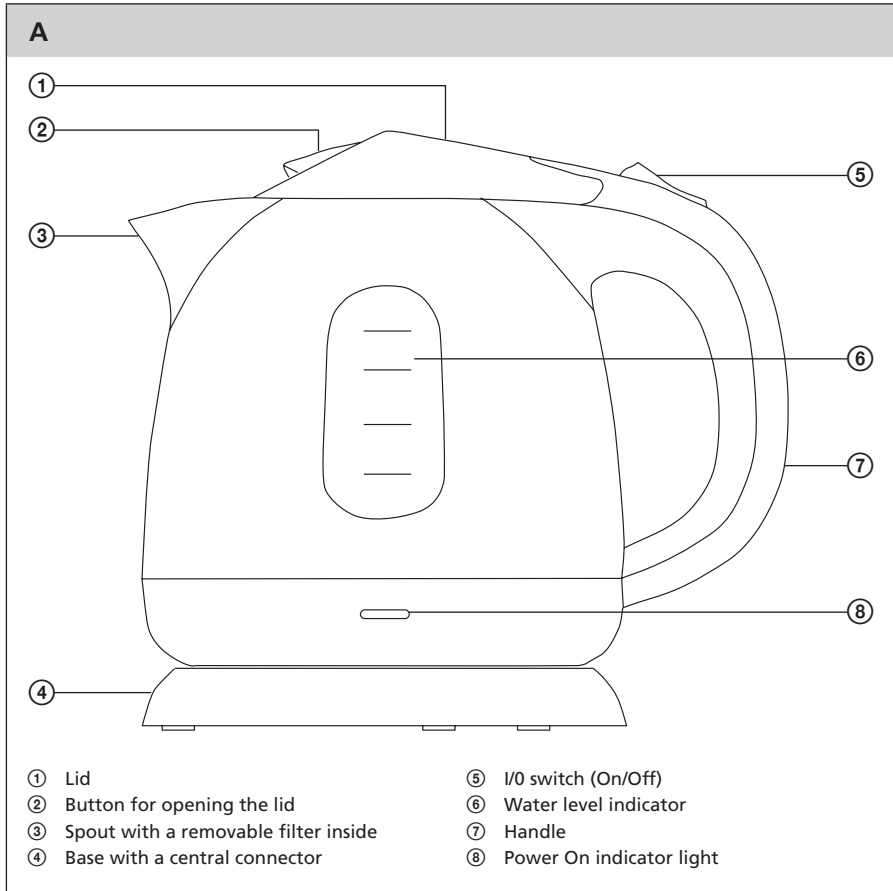

Electric kettle

SWK 1010WH / SWK 1011GR / SWK 1012BL / SWK 1013OR / SWK 1014RD / SWK 1015VT / SWK 1016YL / SWK 1017TQ / SWK 1018RS

EN

BEFORE FIRST USE

1. Remove all wrapping material from the kettle and its base.
2. Fill the kettle with clean water up to the maximum water mark. Boil the water and empty the contents of the kettle. Repeat this process 2 to 3 times.



Note:

To boil water in the kettle proceed according to the instructions in chapter Using the kettle.

3. Now the kettle is ready for use and for preparing warm beverages, etc.

USING THE KETTLE

1. Set the desired length of the power cord. Push the power cord into the groove in the base A④. Place the base A④ on a stable, even and clean surface.
2. Fill the kettle with the required amount of water. The water level must reach at least the minimum mark (0.3 l) and must not exceed the maximum mark (1 l). You may fill the kettle through the spout or through the opening after lifting the lid A①. To open the lid A①, press button A②. After filling the kettle with water, close the lid A① and push it down so that it is secured in the closed position.



Warning!

Never fill the kettle if it is located on the base A④.
If the kettle is overfilled, then boiling water could splash out.

3. Place the kettle on the base A④. Insert the power plug into the an electrical power socket. Check that the lid A① of the kettle is closed.
4. Start the kettle by moving the switch A⑤ to position I (On). The power On light A⑧ will illuminate.



Attention:

Do not turn on the kettle if it is empty. The incorrect use of the kettle may negatively affect its lifetime. If you accidentally turn on the kettle without water, the thermostat will, after reaching a certain temperature, interrupt the electric circuit and the power On light A⑧ will turn off. The kettle can be used again after several minutes, as soon as its stainless steel bottom has cooled down.

5. As soon as water boils the kettle will turn off automatically and the power On light A⑧ will turn off. Before taking the kettle off the base A④, check that it has turned itself off automatically. If it has not automatically turned itself off, turn off the kettle manually by moving the switch A⑤ to position 0 (Off).



Note:

The operation of the kettle can be interrupted at any time by moving the switch A⑤ to position 0 (Off).

6. Pour the boiled water into a prepared container, cup or mug. Make sure that the kettle remains in a horizontal position when it is carried, particularly if it is filled all the way up the maximum mark. If you wish to open the lid A① to refill the kettle, first empty all the contents from the kettle so that you are not scalded by the escaping steam.
7. After you finish using the kettle, disconnect the power cord from the el. power socket. Empty the kettle and allow it to cool down.

CLEANING AND MAINTENANCE

Cleaning the filter

- The removable filter serves to capture scale deposits and prevent them from getting into the prepared beverage. Regularly clean the filter under running water using a fine nylon brush or submerge it for several hours into a vinegar-water solution (recommended dilution ratio 1:2). After applying the solution rinse the filter under clean running water.

Cleaning the kettle

- Regularly remove water scale deposits from inside the kettle based on how frequently the kettle is used. During standard use of the kettle (3 to 5 times per day), we recommend to remove water scale deposits:
 - once per month in areas with hard and very hard water;
 - once every two to three months in areas with soft and medium soft water.
- To remove water scale deposits it is possible to use:
 - 8% white vinegar, generally available in stores. Put ½ l of vinegar into the kettle and allow it to settle for 2 hours without boiling. Then empty the kettle and before further use boil clean water in it four to five times.
 - citric acid. Boil ½ l of water in the kettle, into the boiled water add 30 g of citric acid and allow it to settle for about 30 minutes. Then empty the kettle and before further use boil clean water in it four to five times.
- To clean the exterior of the kettle use a dry cloth or a cloth dipped in a weak solution of neutral kitchen detergent. After applying the kitchen detergent, wipe the surface with a lightly damp cloth and then wipe dry.
- To clean the base A④ use only a dry cloth.
- To clean the kettle and the base A④ never use cleaning agents causing abrasion, petrol, solvents, etc.

Electric kettle

SWK 1010WH / SWK 1011GR / SWK 1012BL / SWK 1013OR / SWK 1014RD / SWK 1015VT / SWK 1016YL / SWK 1017TQ / SWK 1018BS

EN

TECHNICAL SPECIFICATIONS

| | |
|-------------------------|-------------|
| Nominal voltage..... | 220–240 V |
| Nominal frequency..... | 50/60 Hz |
| Rated power input | 900–1 100 W |
| Capacity | 1 l |

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING

Dispose of used packaging at a designated waste disposal facility.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents indicates that used electrical and electronic equipment is not to be discarded with ordinary municipal waste. For proper disposal, recovery and recycling, take these products to designated collection points. Alternatively, in some countries of the European Union or other European countries, you can return your products to your local retailer when purchasing equivalent new products.

Correct disposal of this product helps save valuable natural resources and helps prevent potential negative effects on the environment and human health that would result from improper disposal. For more details, contact your municipal office or the nearest collection site.

Improper disposal of this type of waste may be subject to fines under national regulations.

For business entities in the European Union

To dispose of an electrical or electronic equipment, request the necessary information from your retailer or supplier.

Disposal in countries outside the European Union

This symbol is valid in the European Union. To dispose of this product, request the necessary information on the correct disposal method from your municipal office or retailer.



This product meets all the basic requirements of the EU directives that apply to it.

Electric kettle

SWK 1010WH / SWK 1011GR / SWK 1012BL / SWK 1013OR / SWK 1014RD / SWK 1015VT / SWK 1016YL / SWK 1017TQ / SWK 1018RS

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-kuvalo-za-vodu-swk-1013or-akcija-cena/>