

Uputstvo za upotrebu (EN)

DENVER DCH-350 dron



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

 
Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/denver-dch-350-dron-akcija-cena/>



DCH-350
denver.eu

22/03/2023

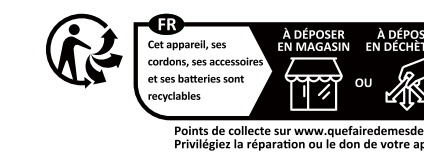

Le appareil, ses composants et ses batteries sont recyclables.

 
A DÉPOSER EN DÉCHÈTRE

Points de collecte sur www.quartierdemetropole.fr
Privilégiez la réparation ou le don de votre appareil !

For age 14+

Denver DCH-350

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USING THE PRODUCT

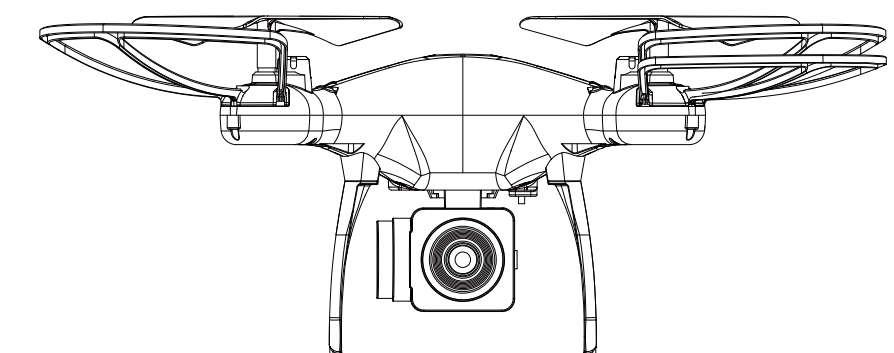

ENGLISH

Notice:

1 Instructions

Please read the user handbook carefully and then keep it in a safe place for future consultation and maintenance.

1.1 Important Notice

(1) This product is not a toy, it's a piece of complicated equipment which integrated with professional knowledge by mechanic, electric, air mechanics, high-frequency transmitter and so on, so it should be installed correctly and adjusted to avoid any accidents. The owner must always operate in a safe manner, if improper operation that caused human injured or property damage, then we DENVER A/S accept no liability for any safety duties from operation. As we have no control over the way they maintained, used and operated.

(2) This product is not suitable for users under 14 years of age.

(3) The use of the drone may be prohibited in some areas like train stations, airports, aircrafts, inhabited areas etc. You should check with the authorities whether the use of the drone is permitted in some public or private areas. Always use the drone bearing in mind not to breach people's privacy. We exclude liability for any wrong use of the drone.

ENG 1

(4) We DENVER accept no liability for any safety duties or fines arising from operation, usage or miscontrol after the sale of products. Warranty does not cover if drone crashes and get damaged.

1.2 Safety Precautions

Keep away from crowd when flying, since drone flight is a high-risk hobby. Misassembled or broken main frame or defective electronic equipment or unskilled operation may cause accidents of machine damaged or injured. Please pay special attention to safety operation.

(1) Keep away from people and obstacles

"The flying speed and status of the drone is uncertain, so it may cause potential danger." When choosing a flying site should stay clear of buildings, trees and power lines. AVOID flying in or near crowded areas. Meanwhile avoid flying in rain, storms, thunder and lightning to protect machinery and parts out of damage.

(2) Keep away from humid environments

Inside of drone is made up of precise electronic components. Stay away from humidity or water vapor to protect machinery and parts.

(3) Safety operation

Please fly your drone according to your physical status and flight skill. Fatigue, listlessness and mis-operation will increase possibilities of accidental hazard.

(4) Keep away from rotating blades

Keep your face and body as well as all spectators away from the rotating blades. The spinning blades of a model of this type can cause serious injury.

(5) We recommend flying the drone below 10 meters of height.

(6) Keep away from heat

A drone is made up of metal, fiber, plastic, electronic components, etc. Keep it away from heat and sunshine to avoid distortion, and damage.

1.3 Check List Before First Flight

(1) Flying field should be in an open space and we suggest at least 5M length *5M wide *3M height.

(2) Make sure the receiver and transmitter is fully charged.

(3) Please strictly obey the order of turn-on, turn-off before operation. When starting your flight, first turn on the transmitter, and connect the battery with drone last; When finishing your flight, please disconnect the battery from your drone first, turn off transmitter last.

An upset in the order of connection may cause your drone loose control to threaten yourself and others safely. Please follow a correct habit of turn-on and turn-off.

(4) Make sure the connection is solid between battery or motor. The ongoing vibration may cause bad connection of power terminal and make the drone uncontrollable.

ENG 2

Battery Installation & Charging

Controller



batteries

To install batteries: Open the cover of battery case, insert 3 x 1.5V AA batteries, according to indicated polarity (batteries not included).

 
Battery installation should be done under adult supervision only!

Do not mix old and new batteries.

Do not mix different types of batteries.

Charging


Connect one side of the USB connector with the battery, and the other side into any USB port of computer or a smartphone charger (not included).

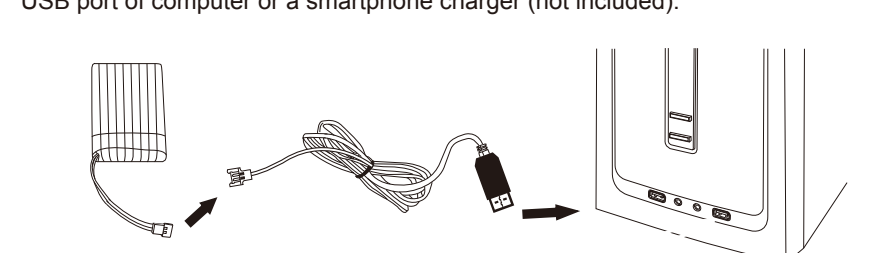

Drone


Replacing the damaged blades:

 Your set will come with 4 spare rotors, two type A (A1=A2) and two type B (B1=B2). You will see the "A" and "B" word on the canopy, then put the rotor on the motor accordingly


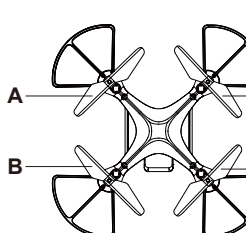


ENG 3

 Remote Control

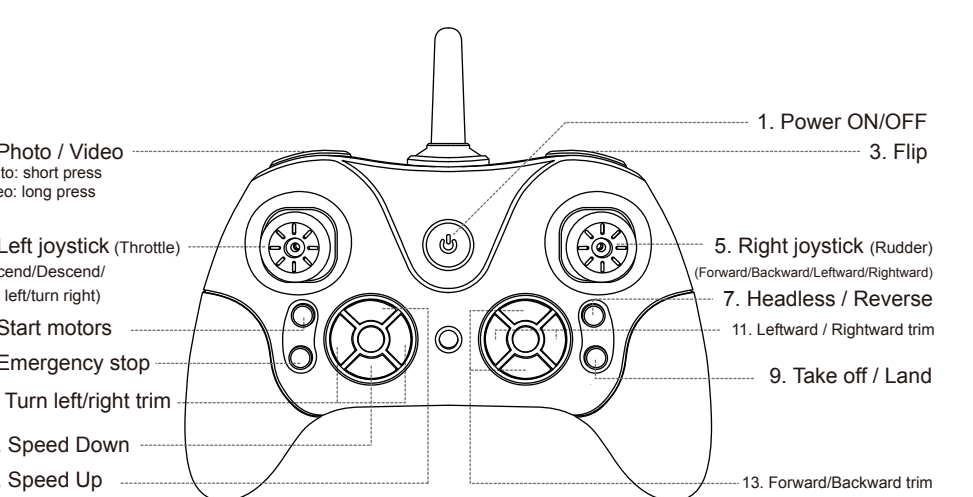

Standard Operation Steps

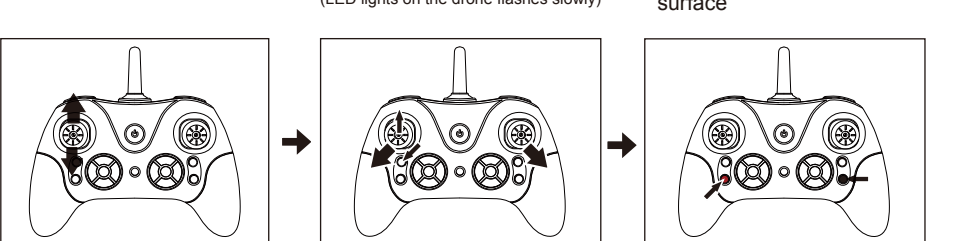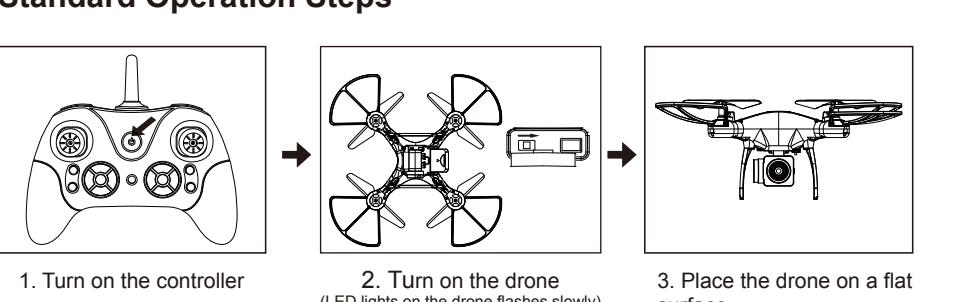  

4. Push the throttle up and down, a beep will sound: controller has connected with the drone (LED lights on the drone stops flashing)


5. To start motors (3 methods):
a. Push the throttle to the top position and release it quickly.
b. Press button **'Start motors'**
c. Pull the Throttle to the bottom left corner and Rudder to bottom right corner at the same time.

6. Press [Take-off], drone flies up and hovers at a fixed height; Press [Land], drone lands on the ground and motors stop. Press [Emergency], all motors stop and drone fall down directly

ENG 4


Calibration Reset (Very important!)

 Before first flying, Calibration Reset is necessary to be done, to make sure the drone will fly stably: Pull the throttle and rudder to **Bottom Left corner** at the same time for 3 secs, the LED lights on the drone flashes quickly, then let go the throttle and rudder. The LED lights on the drone stops flashing and keeps on. Calibration Reset complete.

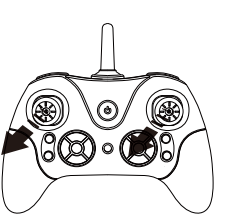

Headless Mode

 Start / Quit Headless Mode
Press the button on controller (as picture) you will hear beep sounds, then you get into headless mode and lights flash on the drone. Press it again to quit. At the moment when you start headless mode, the direction that controller is pointing to will be fixed as the directions of drone. No matter how you rotate the drone, the front direction won't change accordingly.

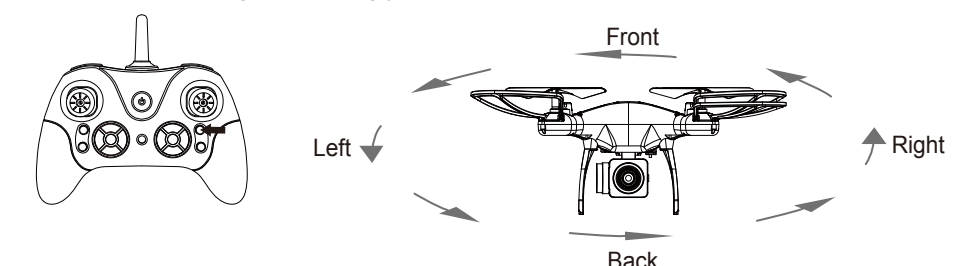

One Key Reverse

Press and hold this button (as picture), and you will activate One Key Reverse and the drone will now attempt to fly back towards its starting direction.

If you want to deactivate this mode, then push the right joystick (Rudder) to any direction.

Note: The drone will not land automatically, you still need to control the height of the drone when using the one key reverse flying mode.




Take Photo & Video


1. Insert the microSD card correctly into the camera when the drone is OFF.
2. Connect the camera to the drone by the standard power wire.
3. Power on the drone and connect it to the remote controller as per 'Standard Operation Steps'.
4. When the drone is in the air, press the **PHOTO** button, then one photo will be taken and

ENG 5

 saved into the microSD card (NOT included!) automatically. Meanwhile, the indicator light inside the camera makes a quick flash.
5. Press and hold the **VIDEO** button, the camera will start recording and the indicator light inside the camera keeps flashing. Press it again, the video will be saved into the microSD card and camera stops recording.
6. To enjoy the photo and video captured, power off the drone first and remove the microSD card from camera, then connect it to any computer.

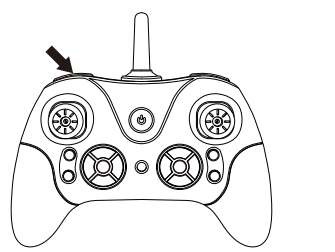


Flips and rolls

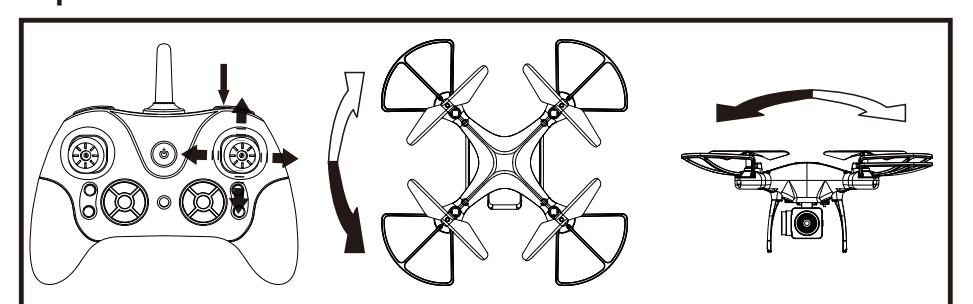 

After you have the basics of flying, you're ready to learn flip and roll your drone. To perform a flip or roll, press the **Flip** button, make sure the drone is at least 3 meters off the ground and quickly push the Rudder, in either direction to make the drone flip or roll. Once the manoeuvre is completed, steady the drone.

 Main Accessories

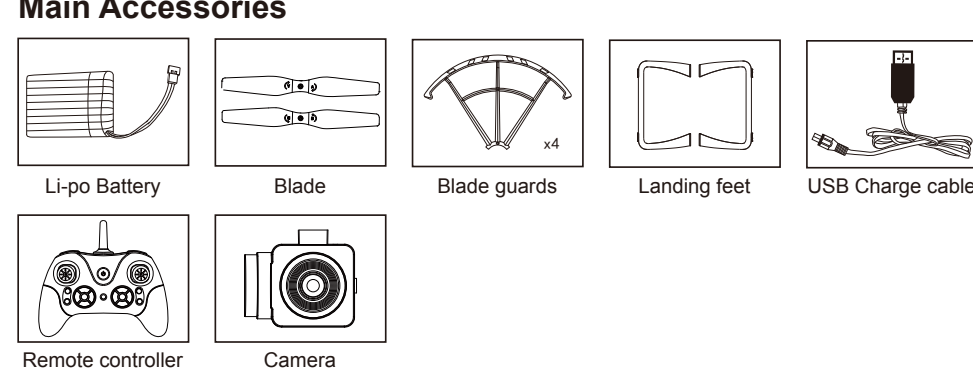

ENG 6

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.
ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste materials (discarded electric and electronic equipment and batteries) are not handled correctly.

Electric and electronic equipment and batteries are marked with the crossed out trash can symbol, as below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type DENVER DCH-350 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: Please enter: **denver.eu** and then click the search ICON on topline of website. Write model number: dch-350. Now enter product page, and red directive is found under downloads/other downloads.
Operating Frequency Range: 2458 MHz - 2473 MHz
Max Output Power: 25.9 W

DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark
www.facebook.com/denver.eu

Warning!
- Lithium battery inside!
- Do not try to open the device!
- Do not expose to heat, water, moisture or direct sunlight!

ENG 7

Contact

Nordics

Headquarter
Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: +45 851 379 369 40
(Push "1" for support)

E-Mail: support.de@denver.eu

For technical questions, please write to: support.hq@denver.eu

For all other questions please write to: contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.
Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: 0900-3437623

E-Mail: support.nl@denver.eu

Spain/Portugal

DENVER SPAIN S.A
Ronda Augustas y Louis Lumiere, n° 23 - nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain
Phone: +34 960 046 883

Mail: support.es@denver.eu

Portugal:
Phone: +35 1255 240 294

E-Mail: denver.service@satifiel.com

Germany

Denver Germany GmbH Service
Max-Emanuel-Str. 4
94036 Passau

Phone: +49 851 379 369 40

E-Mail: support.de@denver.eu

For technical questions, please write to: support.hq@denver.eu

For all other questions please write to: contact.hq@denver.eu

(for TV, E-Mobility/Hoverboards/Balanceboards, Smartphones & Tablets)

Tel.: +49 851 379 369 69

E-Mail: denver@fairfix.de

Austria

Lurf Premium Service GmbH
Deutschstrasse 1
1230 Wien

Phone: +43 1 904 3085

E-Mail: denver@lurfservice.at

If your country is not listed above,

please write an email to support@denver.eu



denver.eu
[facebook.com/denver.eu](http://www.facebook.com/denver.eu)

Version 1.1

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Denver, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/denver-dch-350-dron-akcija-cena/>