

## Uputstvo za upotrebu

WHITE SHARK bluetooth zvučnik GBT-619 Idakka crni



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/white-shark-bluetooth-zvucnik-gbt-619-idakka-crni-akcija-cena/>



# IDAKKA

BT SPEAKER

## User Manual



Please read user manual carefully and keep it for your records

### Notice:

Please read user manual carefully and keep it for your records.

### Specification:

 
- Bluetooth version: V5.0
- Wireless range: Up to 10m
- Rechargeable battery: 3.7V/2400mAh
- Output power: 10W
- Frequency range: 100Hz-20KHz
- Play time: 4-6 hours
- Charge time: 3-4 hours
- Function: BT/TF/FM/USB/AUX/Handsfree
- Dimension: 175×135×135mm
- Product weight: 825g

### Package includes:


- Wireless speaker
- 1\*Type-C cable
- 1\*Aux Cable
- 1\*User Manual
- 1\*PP bag
- 1\*Hanging strap

### Functional buttons:

- 1.ON/OFF
- 2.Mode switch to FM
- 3.Microphone
- 4.Play/Pause
- 5.Volume up/Next song
- 6.Volume down/Previous song



- 7.Type-C for charging
- 8.LED indicator light
- 9.U disk playback
- 10.TF card playback
- 11.Aux-in slot

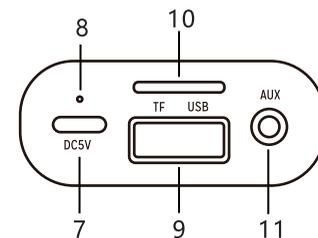

### Pairing:

To turn on the speaker, long press No.1 button to power on; To turn off the speaker, long press the No.1 button to power off. When you turn on the device, a sound will indicate "Bluetooth mode". Activate the Bluetooth feature on your phone, and set the phone to search for Bluetooth device "GBT-619 IDAKKA"

### Play/Pause Button:

- For incoming calls, click once to answer the call once again to hang up the call, hold the button for 2 seconds to reject the phone call.
- Click once to pause or play music; Click twice in short time to redial the last number.
- In FM mode, hold the play/pause button 2 seconds for frequency auto search, when you find the station that you want, click one more time to save the station in the Bluetooth speaker, then go to two volume buttons to choose the channel you want.
- If the FM signal is not very strong, you can insert the charging cable inside the speaker to strengthen the signal. (no need real charging under this situation)

### Next Music/Increase Volume Button:

- Short press to change to next music
- Long press to increase the volume

### Previous Music/Decrease Volume Button:

- Short press to change to previous music
- Long press to decrease the volume

### USB Reading/TF Card Reading:

Insert the USB drive/TF card into the speaker to play MP3 file automatically, to change to previous/next music, adjust the volume by following the speaker buttons.

### Aux-in Mode:

For AUX mode, please plug the included 3.5mm cable to the AUX hole, and connect the other end of the 3.5mm cable into your music device. A voice prompt will indicate "AUX mode" which means the connection is successful.

### Charging:

- Connect the small end of the Type-C charging cable (include) to the Type-C port located on the back of the speaker. Connect the larger end of the cable to your computer's USB port or an AC adaptor (not included). The LED indicator will turn red while charging.
- Once fully charged, the red LED will turn off.
- Charging could take up to 3-4 hours.

### Safety instructions:

- Do not disassemble, throw away or damage this Product. Consult your local waste collection agency for proper disposal or recycling methods.

- This product is not a toy. Use extra caution while children are using this product.
- Keep the wireless speaker away from direct sunlight, fire and high voltage equipment. Do not store the wireless speaker inside a car during hot weather. Remember, a closed car acts as a greenhouse allowing the inside temperature to possibly reach over 200 degrees. Device may become warm while charging.
- Be assured to turn product completely off when plugging and unplugging into outlet.
- Damage, shock, and/or injury can occur if this warning is not heeded properly.

### Notice for Use:

1. For the first use, please charge the battery first. Do not play music while charging.
2. Please use certified DC 5V cable for charging.
3. When music is played, if the sound is intermittent, it may be lack of power, please charge it firstly.
4. Active the Bluetooth feature on the phone, laptops, tablets, and set the device to search for wireless device. It will have the prompt voice to show when the pairing is done.
5. When using the mobile phone connection, if there is a call, the speaker will suspend music automatically; you can press the play button to answer the call, press the play button again to end the call, you also can hang up from the mobile phone.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda White Shark, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/white-shark-bluetooth-zvucnik-gbt-619-idakka-crni-akcija-cena/>