

Uputstvo za upotrebu (EN)

ENERGY SISTEM slušalice Style Pocket Space (M45559)
crne

ENERGY  SISTEM



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/energy-sistem-slusalice-style-pocket-space-m45559-crne-akcija-cena/>

ENGLISH

Introduction	4
Care and maintenance	4
Warning	4
Hearing protection	4
Safety	4
Features	5
General features	5
Technical specifications	5
Audio	5
Connectivity	5
Microphone	5
Battery	5
Compatibility	5
Product content	6
General overview	6
Main Functions	7
Switching on and off the device	7
Bluetooth® pairing	7
Playback control	7
Call control	7
Using the Voice Assistant feature	7
Charging the battery	7
Restoring default settings	8
Using silicone ear tips	8
Warranty	8
Declaration of conformity	9

ENERGY♥SYSTEM



earphones style pocket

Manual de usuario / User manual
Manual de l'utilisateur / Manual do usuário

Introduction

Thank you for trusting our company and buying the new *Earphones Style Pocket*. We hope you enjoy the product.

Care and maintenance

- Do not expose your *Earphones Style Pocket* to impacts, dust, humidity or high temperatures.
- Do not use neither corrosive nor abrasive cleaning products.
- Do not disassemble the device. All repair works should be carried out exclusively by qualified staff of Energy Sistem Technology, S.A.
- Please make sure your *Earphones Style Pocket* are off when you are not using them. Do not let them completely discharged for a long time.
- You can clean the earbuds' external surface and charging connectors with a clean cloth and hand sanitiser. Do not use these products to clean the ear tips or the internal mesh of the earphones. Avoid getting the charging ports and connectors wet.

Note: After every workout session, we recommend thoroughly drying the earphones before putting them back in the case.

Warning

Hearing protection

Listening to loud music can cause irreversible hearing loss. To avoid hearing damage, we recommend the following guidelines:

- Do not listen to loud music for long periods of time.
- Turn the volume down on the source device before using the earphones, then gradually increase the volume to a safe volume level.

Safety

For safety reasons and to avoid possible accidents, we recommend the following safety measures:

- Do not use the earphones while driving or carrying out any other activity that requires special attention.
- Keep the product, packaging and accessories out of the reach of children and pets to avoid accidents and choking hazard.

Features

General features

- True Wireless pocket earphones to listen to all your music wirelessly. Answer your calls clearly and in stereo thanks to Bluetooth 5.1 and built-in microphones. Use the charging case to enjoy 12 hours of battery life.

Technical specifications

Audio

- Frequency response: 20 Hz ~ 20 kHz
- Driver diameter: 6 mm
- Earbud design
- Type: dynamic

Connectivity

- Bluetooth® 5.1 (class 2) wireless technology.
- Frequency band: 2.4 GHz
- Maximum output power: < 20.00 dBm
- Compatible Bluetooth profiles: HSP / HFP / A2DP / AVRCP
- Compatible with SBC codecs
- Up to 20 m distance range
- True Wireless function with auto-pairing
- Hands-free function
- Voice assistant compatible with Google/Siri

Microphone

- Type: built-in microphone
- Sensitivity: -42 dB ± 3 dB (@1 kHz)
- Frequency response: 100 Hz ~ 10 kHz

Battery

Earbuds:

- Capacity: 25 mAh (each earbud) / 3.7 V
 - Type: lithium-polymer battery
 - Battery life at medium volume: 4 hours*
 - Charging time: 1.5 hours
 - Charging method: charging case
- This value is approximate. The battery life depends on the selected volume and the type of music.

Charging case:

- Capacity: 150 mAh / 3.7 V
- Type: lithium-polymer battery
- Extra battery life: 8 hours*
- Charging time: 1.5 hours
- Charging port: microUSB


Compatibility

- Smartphone
- Tablet
- Windows PC

Product content

- Earphones Style Pocket
- Charging case
- 3 interchangeable earbud sets
- MicroUSB cable
- Quick guide

General overview

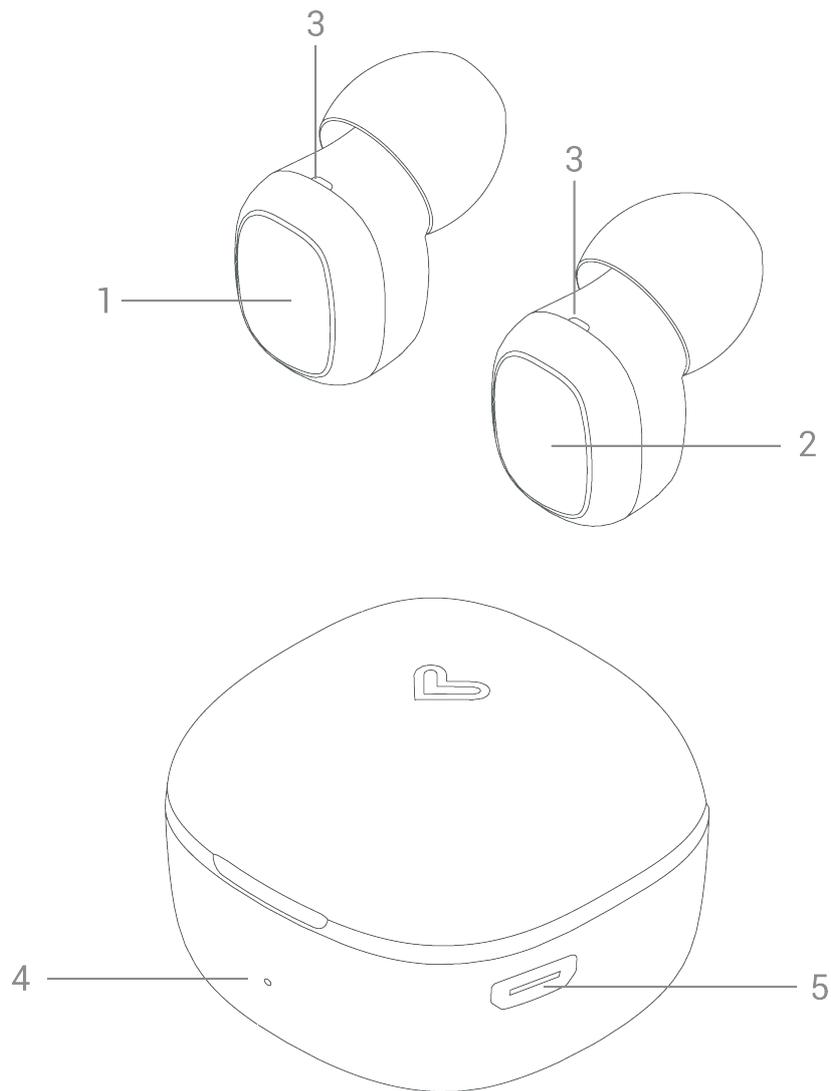

1. Left multifunction button
2. Right multifunction button
3. Microphone
4. Charging indicator (charging case)
5. MicroUSB charging port

Main Functions

Switching on and off the device

To switch on your *Earphones Style Pocket*, simply take them out of the charging case or press and hold the *Left and Right multifunction buttons (1 and 2)* for 2 seconds. You will hear a confirmation sound. Both earbuds sync automatically.

To switch off your *Earphones Style Pocket*, put them back in the charging case or press and hold the *Left and Right multifunction buttons (1 and 2)* for 5 seconds.

Bluetooth® pairing

Switch on your *Earphones Style Pocket*. Both earbuds sync automatically. Select *Earphones Style Pocket* from the list of Bluetooth devices on your smartphone or Bluetooth music player and press ?connect?. Both earbuds will be connected immediately and without codes. You will hear a confirmation sound when both units are paired.

If you previously paired the earbuds with a device, there is no need to repeat the pairing process. Just enable Bluetooth mode on your music player and switch on your *Earphones Style Pocket*. They will sync with it automatically.

Playback control

Play / Pause

Press the *Left or Right multifunction button (1 or 2)* twice in a row to resume playback or pause the music.

Volume + / Volume -

Press the *Left or Right multifunction button (1 or 2)* to turn the volume up or down.

Skipping to the next/previous track

Press and hold the *Left or Right multifunction button (1 or 2)* for 2 seconds to skip to the next or previous track during music playback.

Call control

Once the *Earphones Style Pocket* and your smartphone are paired, you can control calls from the earphones.

Answering / Ending a call

To answer an incoming call, press the *Left or Right multifunction button (1 and 2)* once. Press the same button twice to hang up.

Using the Voice Assistant feature

You can interact with your smartphone voice assistant using your *Earphones Style Pocket*. To do so, press the *Left multifunction button (1)* three times in a row. You can give the voice command after hearing the confirmation sound.

Charging the battery

Earphones

When the battery level of your *Earphones Style Pocket* is below 2%, you will hear a low battery warning sound. To charge the earphones' battery, put the earbuds back in the charging case. The *Charging indicator (charging case) (4)* flashes in white and switches off once the charging process is complete.

Charging case

When the battery level of the charging case is below 10%, the *Charging indicator (charging case) (4)* starts flashing. Plug the microUSB end of the provided cable into the *MicroUSB charging port (5)*, and the other end into a 5 V USB

charging device. The *Charging indicator (charging case) (4)* lights up red. Once the charging process is complete, it will turn white.

Important: We recommend not leaving neither your *Earphones Style Pocket* nor your charging case unused for long periods of time with an empty battery. We advise charging the battery at least once a month.

Restoring default settings

To restore the device to its default settings, follow the steps below:

- 1- Switch on the earbuds and tap either earbud six times in a row.
- 2- At this point they will switch off. Repeat the steps in the *Bluetooth® pairing* section.
- 3- Before repeating the *Bluetooth pairing* process, remove the previously paired device from the Bluetooth list on your smartphone.

Using silicone ear tips

The advantage of silicone ear tips is that they are washable and durable. Watch the video below to see how you can easily change them. [Video - How do I change the ear tips for my earphones?](#)

Warranty

Find the full warranty terms and conditions at:

<https://www.energysystem.com/terms-warranty>

Declaration of conformity

Issuer's name: Energy Sistem Technology, S.A. - CIF: A53107488

Address: C/ Calpe, 1 - 03509 Finestrat, Alicante (Spain)

Tel: +34 966 830 324

We declare under our sole and exclusive responsibility that the product:

Description: earphones

Brand: Energy Sistem

Model: Earphones Style Pocket

Manufacturer: Energy Sistem Technology, S.A.

Manufacturing country: China

referred to in this declaration complies with the essential norms and standards

- EN 55032:2015+A11:2020+A1:2020
- EN 55035:2017+A11:2020
- EN IEC 61000-3-2:2019
- EN 61000-3-3:2013+A1:2019
- EN 60663:2017
- EN IEC 62368-1:2020+A11:2020
- ETSI EN 301 489-1 v2.2.3 (2019-11)
- ETSI EN 301 489-17 v3.2.4 (2020-09)
- ETSI EN 300 328 v2.2.2 (2019-07)

in conformity with the provisions of the Directive 2014/53/EU of the European Parliament and of the Council of 16th April 2014.

Finestrat, 1st October 2022



Miguel Ángel Aragüez García

Innovation and Technology Director



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Energy Sistem, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/energy-sistem-slusalice-style-pocket-space-m45559-crne-akcija-cena/>