

Uputstvo za upotrebu


S BOX slušalice EB-TWS99 crne + 4 mic




Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/s-box-slusalice-eb-tws99-crne-4-mic-akcija-cena/>

 <p>TWS-99 BLUETOOTH EARBUDS USER MANUAL</p>	<p>Warning Read the below warning thoroughly before you start using your headset. Store this manual with product packaging. The safety precaution manual reduce the risk of fire or injury when correctly complied to.</p> <p>To reduce the risk of injury: Keep batteries out of reach of children. Do not heat, open, or dispose of battery pack in fire. Do not allow metal objects to touch the battery on the device. Do not expose battery pack to excessive heat.</p> <p>Paring 1: Auto Pairing Taking the earphones out of the charging case, and then the earphones will automatically turn on, sync together and enter pairing mode. 2: Syncing your earphones When earphones do not sync together or enter disconnected state during use. 1): Turn off both earphones and turn back on. 2): If that does not work, placing both earphones back into case, closing the charging case and then open the charging case again.</p>	<p>3): While earphones is out of the charging case. Press and hold both earphones for 3 seconds. This will force the earphones to turn off and on again and sync with each other. 3: Open up Bluetooth setting on your smart device and scan for TWS-99.</p> <p>Operation 1: Power on/off. 1) Take the earphones out of the charging case, automatically turn on. Put the earphones back to the charging case, automatically turn off. 2) Long press 3 seconds to turn on Long press 5 seconds to turn off. 2: Play/Pause music. When listening to music. Tap left/right earphones once to play or pause the music. 3: Previous /Next Song When listening to music. Quick double tap left earphones to go to previous song. Quick double tap right earphones to go to next song.</p>	<p>4: ANC Mode When taking the earphones out of the charging case, it is regular Bluetooth mode. Long press right earphones for 2 seconds to enter Transparent mode. Long press right earphones for 2 seconds again to enter Noise reduction mode. Long press right earphones for 2 seconds again to enter regular Bluetooth mode. 5: GAME Mode(50ms-60ms) When taking the earphones out of the charging case, it is regular Normal mode. Long press left earphones for 2 seconds to enter game mode. Long press left earphones for 2 seconds to enter music mode. 6: Answer/Hang up When there is an incoming call. Tap left or right earphones once to answer the call. Tap left or right earphones again to end the call.</p>	<p>7: Reject When there is an incoming call. Quick double tap left or right earphones to reject the call. 8: Voice assistant Quick tap left or right earphones 3 times to activate voice assistant.</p>
--	---	---	--	---

 <p>TWS-99 BLUETOOTH SLUŠALICE UPUTE</p>	<p>Upozorenje Molimo Vas da pročitate sjeđeća upozorenja prije korištenja ovih slušalica. Pohanrite ove upute zajedno s pakiranjem. Sigurnosne upute uvelike smanjuju rizik od vatre ili ozljeđea prilikom korištenja na ispravan način.</p> <p>Kako bi izbjegli rizik od ozljeđea: Držite baterije van dohvata djece. Ne zagrijavajte, ne otvarajte i ne bacajte baterije u vatru. Izbjegavajte kontakt između baterije uređaja i mekih objekata. Ne izlažite baterije izvoru velike topline.</p> <p>Povezivanje Prilikom vadenja slušalica iz kutijice za punjenje, slušalice se automatski uključuju i povezuju u način rada za spajanje na novi uređaj. 2: Sinkronizacija slušalica Kada je sinkronizacija slušalica neuspješna ili se slušalice odspajaju tijekom korištenja. 1): Isključite te ponovno uključite obje slušalice 2): Ukoliko to ne pomogne, postavite obje slušalice natrag u kutijicu za punjenje, zatvorite pa ponovno otvorite kutijicu.</p>	<p>3): Dok su slušalice van kutijice za punjenje, dodirnite i zadržite obje slušalice na 3 sekunde. Ovak postupak će prilično isključiti te ponovno uključiti slušalice i pokrenuti sinkronizaciju. 4): Otvorite Bluetooth opcije na vašem uređaju i potražite slušalice pod nazivom TWS-99.</p> <p>Rukovanje 1: Uključivanje / isključivanje 1) Vadenjem slušalica iz kutijice za punjenje, one se automatski uključuju. Vadenjem slušalica u kutijicu, one se automatski isključuju. 2) Zadržite prst na slušalicama 3 sekunde za uključivanje. Zadržite prst na slušalicama 5 sekundi za isključivanje. 2: Pusti / pauziraj glazbu Prilikom slušanja glazbe, dodirnite lijevu/desnu slušalicu za puštanje/pauziranje glazbe. 3: Prethodna / Sjeđeća pjesma Prilikom slušanja glazbe, brzim dvostrukim dodirnom lijeve slušalice prebacujete se na prethodnu pjesmu, a brzim dvostrukim dodirnom desne slušalice, prebaziite na sjeđeću.</p>	<p>4: ANC Način rada Vadenjem slušalica iz kutijice za punjenje, slušalice su u regularnom Bluetooth načinu rada. Zadržavanjem prsta 2 sekunde na desnoj slušalici, one ulaze u Transparentni način rada. Ponovnim zadržavanjem prsta 2 sekunde na desnoj slušalici, one ulaze u način rada Smanjenja buke. Ponovnim zadržavanjem prsta 2 sekunde na desnoj slušalici, one ulaze u regularni Bluetooth način rada. 5: "GAME" način rada(50ms-60ms) Vadenjem slušalica iz kutijice za punjenje, slušalice su u regularnom Normalnom načinu rada. Zadržavanjem prsta 2 sekunde na lijevoj slušalici, one ulaze u "game" / "igra" način rada. Ponovnim zadržavanjem prsta 2 sekunde na lijevoj slušalici, one ulaze u glazbeni način rada. 6: Odgovaranje/završavanje poziva Prilikom dolaznog poziva, dodirnite lijevu/desnu slušalicu za prihvatanje poziva. Ponovno dodirnite lijevu/desnu slušalicu za prekidanje poziva.</p>	<p>7: Odbijanje poziva Prilikom dolaznog poziva, brzim dvostrukim dodirnom lijeve/desne slušalice odbijate poziv. 8: Glasovni asistent Brzim trostrukim dodirnom lijeve/desne slušalice pokrećete glasovni asistent.</p>
--	--	---	--	--

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda S BOX, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/s-box-slusalice-eb-tws99-crne-4-mic-akcija-cena/>