

## Uputstvo za upotrebu (EN)

DeLonghi konvektorska grejalica HCM2030



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/delonghi-konvektorska-grejalica-hcm2030-akcija-cena/>

instructions






**ELECTRIC CONVECTOR HEATER**  
HCM Series



*Living innovation*

## Description of Appliance

The following terms are used throughout the instruction manual

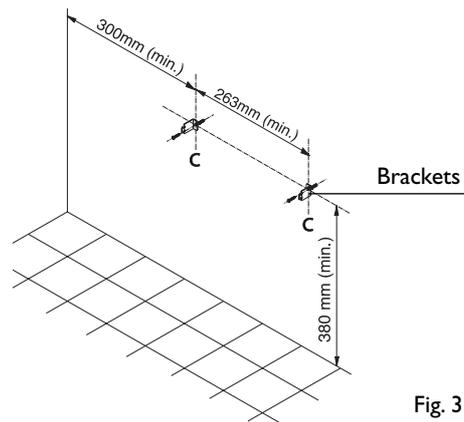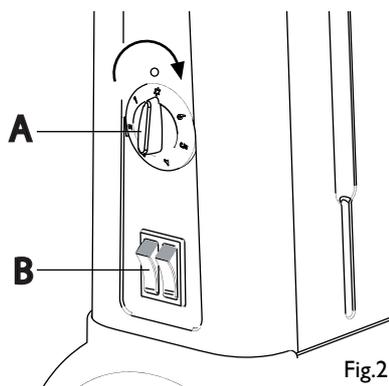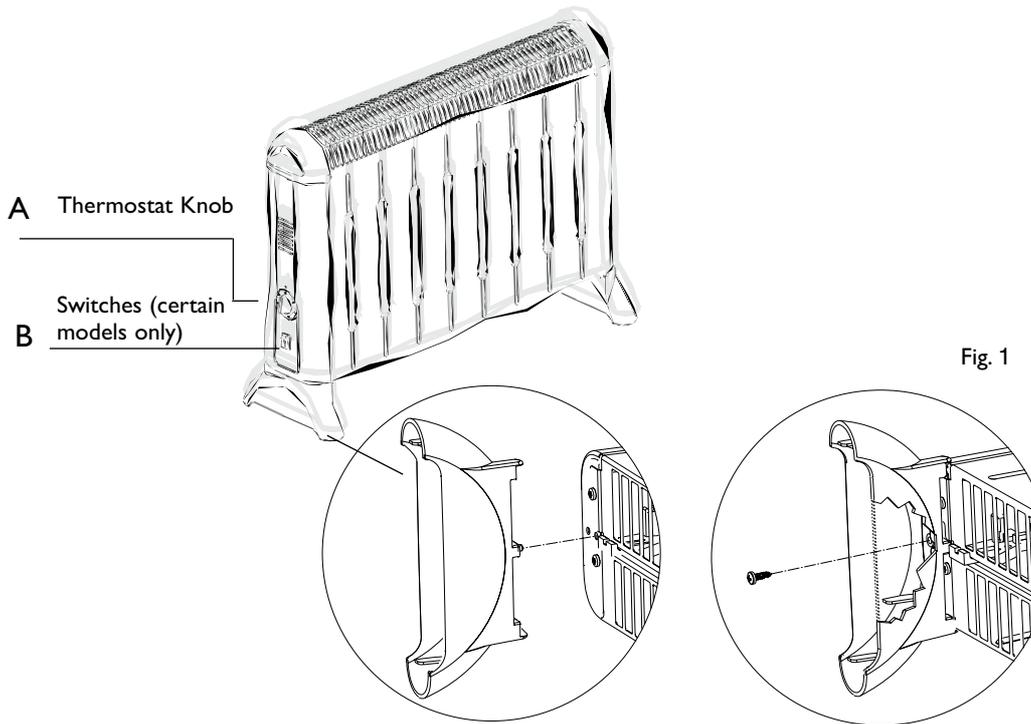

**Thank you for choosing this De'Longhi convector. To get the best results from your new heater please read these instructions carefully before use. This should ensure optimum results and maximum safety.**

### **SAFETY WARNINGS**

Important: to avoid the safety system resetting accidentally, this appliance must not be powered through an external timer.

- The first time you use the appliance, operate it for at least 15 minutes with the thermostat at maximum to eliminate the "new" smell. A little smoke due to the protective substances applied to the heating element before transport may be given off. This is completely normal and not a cause for concern.
- **Do not use the convector heater near bath tubs, showers, sinks or swimming pools. The appliance must not be placed directly under a fixed socket.**
- Do not rest the power cable on the appliance when hot.
- Always use the heater in a vertical position only.
- Do not obstruct the hot air outlet grilles or the air intake grille on the bottom or top of the appliance.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Heaters should never be used with an extension cord or outlet strip. Heaters should be plugged directly into an outlet.
- If the power cable is damaged, it must be replaced by the manufacturer, an authorised service centre in order to eliminate all risk. Please see guarantee leaflet for Customer Service details.
- Do not use this appliance in rooms measuring less than 4m<sup>2</sup>. You should avoid positioning it in currents of air which could disturb operation of the heater.

**A safety device trips** and turns the appliance off in the event of overheating or if it is placed in strong currents of air. To reset, unplug the appliance from the mains socket and leave to cool down (about five minutes), remove the cause of overheating, plug back into the mains and turn on again.



**WARNING:** In order to avoid overheating, never under any circumstances cover the appliance during operation.

**CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

**Important information for correct disposal of the product in accordance with EC Directive 2002/96/EC.**



At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

**HOW TO USE YOUR CONVECTOR**

**ASSEMBLING THE FEET**

- Fit the feet to the appliance as follows:
- Fasten the feet in position using the screws supplied (see fig. 1).

**OPERATION AND USE**

**Turning the appliance on**

**Models with thermostat only**

This appliance can be turned on by rotating its thermostat knob **(A)** clockwise until it stops at the last possible setting (fig. 2). To turn this appliance off, rotate the knob to its lowest position and remove its plug from the electrical outlet.

**Models with a thermostat and two switches**

Turn the thermostat knob clockwise **(A)** until it reaches its last possible setting, then press one switch (minimum power) or both switches **(B)** (maximum power) so the part of the switch area becomes visible (fig. 2).

**Adjusting the thermostat**

When the room has reached the desired temperature, turn the thermostat knob slowly in an anti-clockwise direction until you get to the setting — and not beyond it — where you hear a click. The thermostat will then adjust that set temperature automatically and keep it constant. If your appliance is the type with 2 switches, you could utilize only one of them during mild seasons and on days not particularly cold. You will thus use little electrical power and obtain even greater savings in energy consumption.

**Frost protection function (only for models with a thermostat)**

Turn the switch (or switches) to make the red area show, then turn the thermostat knob to the " ❄ " setting. When so regulated, this appliance will keep a room at a temperature of 5° C. while consuming a minimum of energy.

### Wall-mounting

**IMPORTANT:** Before drilling into any wall ensure no electrical cables are present in the area.

In order to wall mount your convector please proceed as follows:

1. Fix two brackets "C" following carefully the dimensions as indicated in description (fig. 3). Use a 6 mm masonry drill and suitable wall plugs and appropriate two screws and two brackets (provided).
2. Hang the convector on the two brackets fixed to the wall and insert metal bracket "D" into the bottom rear section of the base of the convector as indicated in figure 4.  
Mark the positions for fixing these brackets to the wall.  
(This bracket when fixed retains the base of the convector in a fixed position, preventing removal.)
3. Remove the convector heater from the hanging brackets and drill the wall and insert the brackets.
4. Fit the convector to the 2 brackets "C". Insert Bracket "D" to the convector base and fix bracket "D" to the wall plug using the screw (screws and brackets provided).

Your convector is now wall mounted.

**The appliances should not be installed directly under a wall power socket. Do not use your heater in a bathroom. The appliance should not be installed immediately below a permanent mains outlet.**

**Position the appliance so that the plug and the outlet can be easily reached even after installation.**

### MAINTENANCE

Always pull the plug out of its electrical outlet before beginning any cleaning.

This electric convector requires no special maintenance. All you have to do is dust it off with a soft, dry cloth — but do so only when the appliance is cold. Never use abrasive powders or solvents.

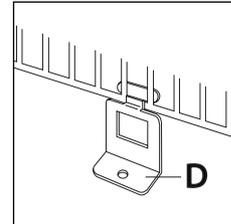


Fig.4

**Important - UK only**

- The wires in the cord are coloured as follows:  
Green and Yellow = Earth  
Blue = Neutral  
Brown = Live.
- The appliance must be protected by a 13A approved (BS1362) fuse.
- warning: this appliance must be earthed.

**Note:**

- For non-rewireable plugs the fuse cover **MUST** be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your De'Longhi Authorised Repairer (see guarantee leaflet).
- If a non-rewireable plug is cut off it must be destroyed immediately. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a 13A socket outlet.
- This appliance complies with European Economic Community Directive 2004/108/EEC.



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda DeLonghi, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/delonghi-konvektorska-grejalica-hcm2030-akcija-cena/>