

## Brzi vodič (EN)

VICTROLA VPT-1500-BLK Hi-Res Onyx gramofon

VICTROLA



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:


<https://tehnoteka.rs/p/victrola-vpt-1500-blk-hi-res-onyx-gramofon-akcija-cena/>

**VICTROLA**

**QUICK START  
GUIDE**


**HI-RES**

VPT-1500  
VPT-2500

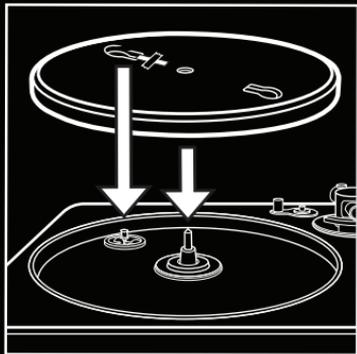

**SET THE SLIPMAT ASIDE  
AND PLACE THE PLATTER  
ONTO THE TURNTABLE.**


**ROTATE THE PLATTER  
UNTIL THE HOLE WITH THE  
GUIDE STRING IS DIRECTLY  
OVER THE MOTOR SPINDLE  
AS SHOWN.**

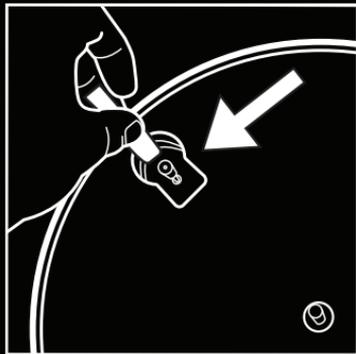


**CAREFULLY REMOVE THE  
TAPED GUIDE STRING  
AND USE THE STRING TO  
STRETCH THE BELT OVER  
THE MOTOR SPINDLE.**

**ONCE THE BELT IS  
INSTALLED AROUND THE  
MOTOR SPINDLE, DISCARD  
THE GUIDE STRING AND  
PLACE THE SLIPMAT ON  
THE PLATTER.**


# **TURNTABLE SETUP**

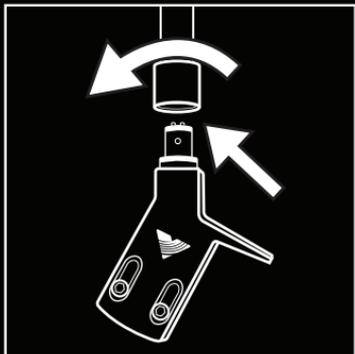

**INSERT THE HEADSHELL  
INTO THE TONEARM  
AND TIGHTEN THE  
TONEARM COLLAR  
COUNTER-CLOCKWISE  
UNTIL THE HEADSHELL  
IS SECURE.**

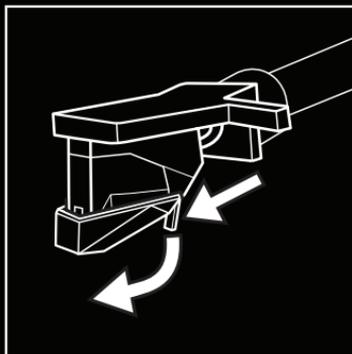


**ORTOFON 2M SERIES:  
(VPT-2500)  
PUSH THE STYLUS  
COVER TAB DOWN /  
FORWARD AND GENTLY  
SLIDE THE COVER OFF.**

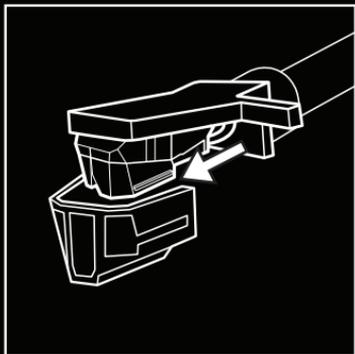

**AUDIO TECHNICA**  
**VM95 SERIES:**  
**(VPT-1500)**

**GENTLY PULL THE COVER  
OFF OF THE CARTRIDGE.**

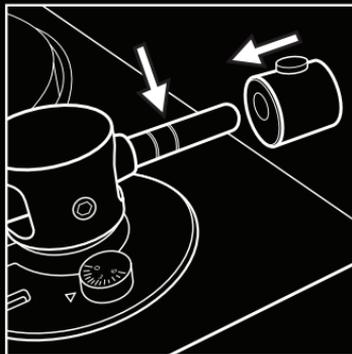


**SLIDE THE COUNTERWEIGHT  
ONTO THE TONEARM  
UNTIL THE FRONT OF THE  
COUNTERWEIGHT IS  
ALIGNED WITH THE BACK  
GROOVE ON THE TONEARM.**

**Note: Remove the two  
foam blocks from the  
tonearm before installing  
the counterweight.**



**ONCE ALIGNED WITH THE  
CORRECT GROOVE, TURN  
THE TOP SCREW  
CLOCKWISE TO TIGHTEN  
THE COUNTERWEIGHT.**

**Note: You may need to  
adjust the anti-skate if you  
notice distortion, skipping,  
or looping during playback.**

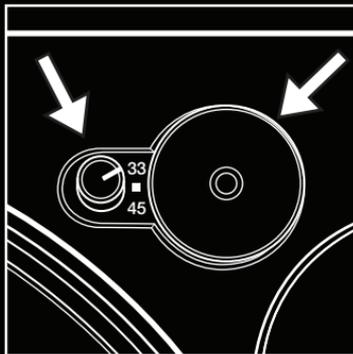

**USE THE SPEED SELECTOR  
KNOB TO SELECT YOUR  
RECORD SPEED.**

**PLACE THE 45 RPM  
ADAPTER ON THE SPINDLE  
NEXT TO THE SPEED  
CONTROL TO STORE  
WHEN NOT IN USE.**

## OPERATION GUIDE



**POWER ON**  
single press button




**SWITCH OUTPUT**  
single press button

switch between RCA output  
and Bluetooth output



**POWER OFF**  
press and hold button  
(1 sec)

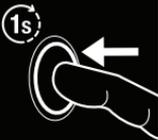

## LED COLOR GUIDE

### RCA MODE

flashes white (3x)  
then solid white



### BLUETOOTH MODE

**Ready To Pair**  
flashing blue

**Connected**  
solid blue (2 sec)  
then solid white



# TURNTABLE QUICK START

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Victrola, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/victrola-vpt-1500-blk-hi-res-onyx-gramofon-akcija-cena/>