

Uputstvo za upotrebu (EN)

MARSHALL bluetooth zvučnik Emberton III Cream

Marshall



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/marshall-bluetooth-zvucnik-emberton-iii-cream-akcija-cena/>

Marshall

**EMBERTON III
PORTABLE LOUDSPEAKER**

FULL ONLINE MANUAL

CONTENTS

INDEX

Getting started	005
Using the control knob	005
Charging the speaker	005
Battery indicator	005
Cleaning the speaker	006
Battery care guide	006
Pairing a new device	007
Resetting the speaker	007
Troubleshooting	008

DEVICE LAYOUT

ENGLISH



DEVICE LAYOUT

ENGLISH

① POWER BUTTON

Push and hold the power button to turn the speaker on or off.

② BLUETOOTH BUTTON

Push and hold the Bluetooth® button until the LED turns to a slow blue pulse to start pairing mode.

③ MICROPHONE

The microphone lets you use Emberton III as a speaker phone. Push the Bluetooth button to toggle the call between the speaker and your phone.

④ CONTROL KNOB

Use the control knob to manage your music playback, phone calls and more.

⑤ BATTERY INDICATOR

The 10-segment battery indicator shows the battery charge.

⑥ USB-C POWER INPUT

Charge the speaker by plugging in a USB power source via the included USB-C lead.

⑦ STRAP ANCHOR

The strap anchor provides a fastening point for a carry strap or your personal charm (not included).

INSTRUCTIONS

ENGLISH

GETTING STARTED

- I. Push and hold the Power button until the speaker turns on.
- II. Push and hold the Bluetooth button until the LED turns to a slow blue pulse.
- III. Select **EMBERTON III** from your audio device's Bluetooth list.

USING THE CONTROL KNOB

- Play/pause – push once
- Skip backward/forward – push left/right
- Turn up/down the volume – push up/down
- Receive/end a call – push once
- Reject a call – push twice

CHARGING THE SPEAKER

Use the included USB-C cable to connect the speaker to a USB power source (5 V, 3 A). The USB-C power input port is located on the right side of the speaker.

Note: Always make sure that the speaker is completely dry before charging it.

BATTERY INDICATOR

The 10-segment battery indicator shows the battery charge. A rising animation indicates that the battery is charging.

INSTRUCTIONS

ENGLISH

CLEANING THE SPEAKER

Clean your speaker regularly to keep it fresh and last longer.

Unplug any leads before cleaning the speaker and make sure everything is completely dry before plugging in a USB charger.

The silicone sleeve can be removed and cleaned separately. Gently clean it and the leads with a lint-free cloth, slightly damp with either:

- water,
- 70% isopropyl alcohol, or
- 75% ethyl alcohol

Carefully clean the speaker mesh and openings with a dry and soft brush, or a cotton swab.

- Do not use any sharp or metal objects.
- Do not use compressed air.
- Do not use products containing bleach or hydrogen peroxide.
- Do not submerge the speaker in any cleaning agents.
- Do not rinse the speaker under running water.

BATTERY CARE GUIDE

Your speaker comes equipped with high-performance lithium-ion batteries with a life span that is affected by charging and usage. Follow the guidelines below to keep your battery in great condition for as long as possible.

- Avoid using fast chargers if possible. Fast charging causes stress on the battery and will degrade it.
- Avoid letting the battery drain completely or charging it when it's already full. Try to keep the charge between 30% and 80%.
- If the speaker is stored for a long time, it is recommended to charge the speaker to about half-charge and then do a factory reset. Store the speaker in a cool, dark, and dry place.
- Avoid using or charging the speaker in hot and unventilated places, 45°C/113°F and above, such as in a parked car or by a window in direct sunlight.
- Avoid charging the battery at low temperatures, below 10°C/50°F and using the speaker below 0°C/32°F.
- Avoid strong mechanical shocks such as dropping the speaker on hard surfaces as it might harm the batteries.

Download the Marshall Bluetooth app and select the battery preservation level that best suits you and your speaker.

INSTRUCTIONS

ENGLISH

PAIRING A NEW DEVICE

Emberton III can be connected with 2 devices at a time and remembers up to 8 previously paired devices. When in range, it will try to reconnect with the last connected device.

- I. Push and hold the power button until the speaker turns on.
- II. Push and hold the Bluetooth button until the LED turns to a slow blue pulse.
- III. Select **EMBERTON III** from your audio device's Bluetooth list.

RESETTING THE SPEAKER

A factory reset will reset the speaker to its original settings, excluding any firmware updates.

Note: This will delete all user settings and the speaker will need to be set up again.

- I. Remove **EMBERTON III**, and **EMBERTON III [LE]** if present, from your sound device's Bluetooth list.
- II. Ensure that the speaker is on.
- III. Push and hold the Bluetooth button for 7 seconds. The Bluetooth indicator turns quickly red, and the speaker restarts.
- IV. The speaker has returned to its factory settings and is ready to be paired, see the section Getting started.

MARSHALL BLUETOOTH APP

Download the Marshall Bluetooth app to get the most out of your speaker and keep it up to date with the latest software.



TROUBLESHOOTING

ENGLISH

PROBLEM	CAUSE	ACTION
The speaker does not turn on	The battery has no charge.	Plug the speaker into a USB power source to charge it.
Cannot connect or pair with a Bluetooth device	Bluetooth is not enabled on your device (smartphone, tablet, computer).	Activate Bluetooth on your playback device.
	The speaker is not in pairing mode.	Make sure that the speaker is turned on before setting it in pairing mode, see Pairing a new device.
Erratic behaviour	The speaker is not using the latest firmware version.	Download the Marshall Bluetooth app and connect to the speaker. Follow the in-app instructions to ensure that Emberton III has the latest firmware version.
	There is a software error.	Perform a factory reset, see Resetting the speaker. Emberton III needs to be set up again.

TROUBLESHOOTING

ENGLISH

PROBLEM	CAUSE	ACTION
<p>Bluetooth connection drops out</p>	<p>The Bluetooth devices are too far apart, or the connection is affected due to obstacles.</p> <p>There is a strong electric field surrounding the speaker. Items such as microwave ovens, wireless network adapters, fluorescent lights and gas cookers use the same frequency range as the Bluetooth device. This may lead to electrical disturbances.</p>	<p>Move the devices closer to each other so that they are unobstructed by obstacles such as walls or doors.</p> <p>Move the speaker to another spot or turn off or move the interfering electronic device.</p>

All intellectual property in the product and packaging (including the MARSHALL trade mark, copyright, designs, and patents) are owned by Marshall Group AB and may not be used without permission. All rights reserved. The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Marshall Group AB is under license. Google Play is a trademark of Google LLC. App Store is a service mark of Apple Inc., registered in the U.S. and other countries Marshall Group AB, Centralplan 15, 111 20 Stockholm, Sweden. R 1.1

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Marshall, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/marshall-bluetooth-zvucnik-emberton-iii-cream-akcija-cena/>