

## Uputstvo za upotrebu (EN)

MARSHALL slušalice Minor IV Black

*Marshall*



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/marshall-slusalice-minor-iv-black-akcija-cena/>

*Marshall*

**MINOR IV – TRUE WIRELESS**

**FULL ONLINE MANUAL**

# CONTENTS


## INDEX

---

|                                     |     |
|-------------------------------------|-----|
| <b>Getting started</b> .....        | 005 |
| <b>Touch controls</b> .....         | 005 |
| <b>Charging the earbuds</b> .....   | 005 |
| <b>Charging the case</b> .....      | 005 |
| <b>Cleaning your Minor IV</b> ..... | 006 |
| <b>Battery care guide</b> .....     | 006 |
| <b>Pairing a new device</b> .....   | 007 |
| <b>Resetting the earbuds</b> .....  | 007 |
| <b>Troubleshooting</b> .....        | 008 |

# DEVICE LAYOUT

# ENGLISH

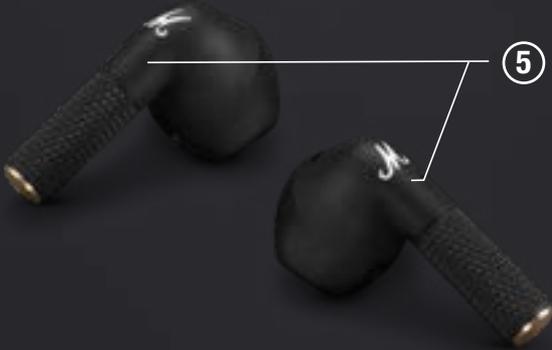

## DEVICE LAYOUT

## ENGLISH

---

- 1 CHARGING CASE INDICATOR**  
The LED shows the case battery charge, from red through yellow to green (0–100%). It pulses blue while in Bluetooth® pairing mode.
- 2 CHARGING CASE BUTTON**  
Quick press to see the charging case battery level. With the earbuds in the case and the lid open, push and hold for 2 seconds to initiate pairing.
- 3 WIRELESS CHARGING**  
Charge the case by placing it on a wireless charging pad.
- 4 USB-C POWER INPUT**  
Charge the case by plugging it into a USB power source.
- 5 TOUCH CONTROLS**  
Touch the left or right earbud to control your music, phone calls and more.

# INSTRUCTIONS

# ENGLISH

---

## GETTING STARTED

- I. Open the charging case.
- II. Press and hold the button on the bottom of the case until the LED turns to a slow blue pulse.
- III. Select **MINOR IV** from your sound device's Bluetooth list.
- IV. Download the Marshall Bluetooth app and follow the in-app instructions to complete the setup.

## TOUCH CONTROLS

Touch the left or right earbud to control your music, phone calls and more. The long touch behaviour can be customised in the app.

- Play/pause – single tap
- Skip forward – double tap
- Skip backward – triple tap
- Increase the volume – long touch the right earbud
- Decrease volume – long touch the left earbud
- Receive/end a call – double tap
- Reject a call – long touch any earbud

## CHARGING THE EARBUDS

Put your earbuds back in the case and close the lid to turn them off and begin charging.

## CHARGING THE CASE

Use a wireless charger or plug the case into a USB power source to charge it. The case is fully charged when the front-facing LED is steady green.

To charge the case using a wireless charger, follow the instructions below.

- I. Place the charging case with its back flat against the wireless charging pad.
- II. Make sure that the front LED lights up to indicate that the case is charging.
- III. Once the LED light has turned steady green the case is fully charged.

# INSTRUCTIONS

# ENGLISH

---

## CLEANING YOUR MINOR IV

Earbuds come in close contact with your skin frequently and sometimes for long periods of time. This will over time cause build-up of dirt and grease that can affect performance and may cause skin irritation. Clean your earbuds regularly to keep them fresh and make them last longer.

Unplug any cables before cleaning the case. Make sure everything is completely dry before using the earbuds, putting the earbuds back in the case, or plugging in a USB charger.

Use a disinfectant wipe or a lint-free cloth, slightly damp with 70% isopropyl alcohol or 75% ethyl alcohol to gently clean the exterior surfaces of the earbuds and the case. Avoid getting moisture in any openings or in the speaker mesh. Carefully clean those areas with a dry and soft brush, or a cotton swab.

- Do not use any sharp objects.
- Do not use compressed air.
- Do not use products containing bleach or hydrogen peroxide.
- Do not submerge the earbuds in any cleaning agents.

## BATTERY CARE GUIDE

Your earbuds come equipped with high-performance lithium-ion batteries and battery life span is affected by charging and usage. Follow the guidelines below to keep your batteries in great condition for as long possible.

- Avoid using fast chargers if possible. Fast charging causes stress on the battery and will degrade it.
- Avoid letting the battery drain completely or charging it when it's already full. Try to keep the charge between 30% and 80%.
- If the earbuds are stored for a long time, it's recommended to charge the earbuds to about half-charge and then do a factory reset. Store the earbuds and case in a cool, dark, and dry place.
- Avoid using or charging the earbuds in hot and unventilated places, 45°C/113°F and above.
- Avoid charging the battery at low temperatures, below 10°C/50°F and using the earbuds below 0°C/32°F.
- Avoid strong mechanical shocks such as dropping the earbuds or case on hard surfaces as it might harm the batteries.

Download the Marshall Bluetooth app and select the battery preservation level that best suits you and your earbuds.

# INSTRUCTIONS

# ENGLISH

## PAIRING A NEW DEVICE

Minor IV can be connected with two devices at a time and remembers up to 8 previously paired devices. When in range, they will try to reconnect with the last connected device.

- I. Place the earbuds in the case and keep the lid open.
- II. Press and hold the button on the bottom of the case until the LED turns to a slow blue pulse.
- III. Select **MINOR IV** from your sound device's Bluetooth list.

Note: Minor IV can be connected with two devices at a time.

## RESETTING THE EARBUDS

If your earbuds become erratic or unresponsive, follow the instructions below.

- I. Place the earbuds in the case and close the lid to restart the earbuds.  
If the problem persists, perform a factory reset.

Note: This will delete all user settings and the earbuds will need to be paired again.

- I. Remove **MINOR IV**, and **Minor IV [LE]** if present, from your sound device's Bluetooth list.
- II. Place the earbuds in the case and keep the lid open.
- III. Press and hold the button on the bottom of the case for 10 seconds and release when the LED turns purple.
- IV. The earbuds have returned to their factory settings and are ready to be paired, see section Getting started.

### MARSHALL BLUETOOTH APP

Download the Marshall Bluetooth app to get the most out of your earbuds and keep them up to date with the latest software.



## TROUBLESHOOTING

## ENGLISH

| PROBLEM   | CAUSE   | ACTION   |
|---|---|--|
| <b>The earbuds do not turn on</b>                     | The battery has no charge.  | Place the earbuds in the case to charge them.<br><br>If the case LED does not turn on, use a USB power source or a wireless charging plate to charge the case. |
|   | Bluetooth is not enabled on your device (smartphone, tablet, computer). | Activate Bluetooth on your playback device.  |
| <b>Cannot connect or pair with a Bluetooth device</b> | The earbuds are not in pairing mode.                                    | Make sure that the earbuds are in the case with the case lid open when start paring, see Pairing a new device.   |
|   | The earbuds are not using the latest firmware version.                  | Download the Marshall Bluetooth app and connect to the earbuds. Follow the in-app instructions to ensure that Minor IV has the latest firmware version.        |
| <b>Erratic behavior</b>                               | There is a software error.  | Perform a factory reset, see Resetting the earbuds.<br><br>The earbuds need to be set up again.  |

All intellectual property in the product and packaging (including the MARSHALL trademark, copyright, designs, and patents) are owned by Marshall Group AB and may not be used without permission. All rights reserved. The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Marshall Group AB is under license. Google Play is a trademark of Google LLC. App Store is a service mark of Apple Inc., registered in the U.S. and other countries Marshall Group AB, Centralplan 15, 111 20 Stockholm, Sweden. Produced in China. R 1.2

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Marshall, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/marshall-slusalice-minor-iv-black-akcija-cena/>