

Uputstvo za upotrebu (EN)

SENCOR stajler za kosu SHS 8550BK

SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-stajler-za-kosu-shs-8550bk-akcija-cena/>



EN ■ Hot Air Curling Iron

Translation of the original manual

Important safety instructions**READ CAREFULLY AND STORE FOR FUTURE USE.**

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.

**Warning:**

Do not use this appliance in the vicinity of water.



- In the event that you use the appliance in the bathroom, unplug it from the socket after use by removing the plug from the socket, as the vicinity of water poses a danger, even when the appliance is turned off.
- To ensure additional safety, it is recommended to install an Residual Current Device (RCD) into the electric circuit to the bathroom with a maximum current rating of 30 mA. Ask the electrician for advice.



Warning:

Do not use this appliance near baths, showers, washbasins or other containers containing water.

- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all the parts of the appliance.
- Before connecting this appliance to a power socket, make sure the voltage stated on the label of the appliance corresponds to the voltage in your power socket.
- Never use accessories, which have not been supplied with this appliance or which are not designed for this appliance.
- Ensure that the power cord and plug cannot come into contact with water or dampness.
- Do not spray the appliance with water or any other liquid. Do not submerge this appliance and any of its components in water, or any liquids.
- In the event that the appliance were to fall into water, IMMEDIATELY disconnect the power plug from the power socket. Under no condition should you reach for the appliance into the water while it is connected to the power socket. There is a risk of a hazardous situation arising.
- This appliance is designed for household use. Do not use it in industrial environment, or outdoors!
- Do not use sprays in the vicinity of the appliance.
- When not using the appliance, disconnect it from the power grid. Before cleaning or moving it, proceed in the same manner.
- Make sure that it has cooled down completely before storing it.
- Do not blow hot air at persons or animals that are sensitive to hot air.
- Do not place the appliance on or near an electric or gas stove. Do not place the product within near heat producing products such as fireplaces etc.
- Do not use any attachments other than those supplied or recommended by the manufacturer.
- Never block the vents of the appliance. Keep the vents clean. Do not place any objects into the vents.
- Do not use the appliance if it has a damaged power cord or power plug.
- In no case should you attempt to repair the appliance yourself, do not make any modifications to it – danger of injury by electrical shock! Entrust all repairs and adjustments to a specialised company/service. Failure to do so will expose you to the risk of voiding the warranty policy.
- Do not place the power cord of the appliance near hot surfaces or over sharp objects. Do not place heavy objects on the power cord, position the cord so that it is not stepped on, or tripped over. Make sure the power cord does not hang over the edge of a table or that it is not touching a hot surface.
- Do not disconnect the appliance from the power socket by pulling the power cord – it may damage the power cord / power socket. Disconnect the power cord from the power socket by gently pulling the plug of the power cord.
- Do not use the appliance for any other purposes than those for which it was designed.
- The manufacturer takes no responsibility for damages caused by the incorrect use of this appliance and its accessories (injuries, burns, scalding, fire, food spoilage, etc.).

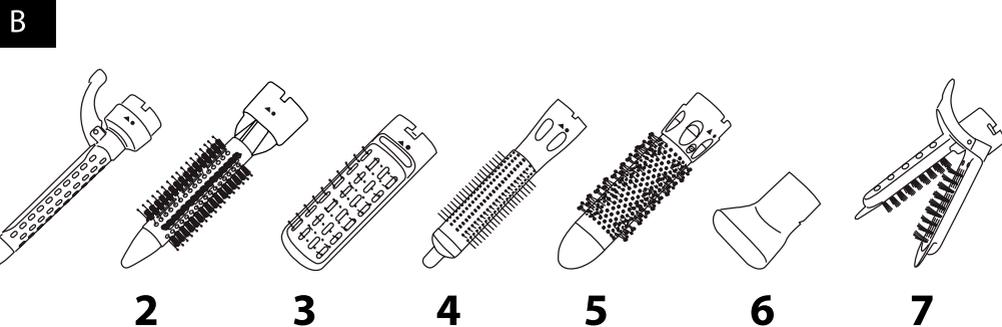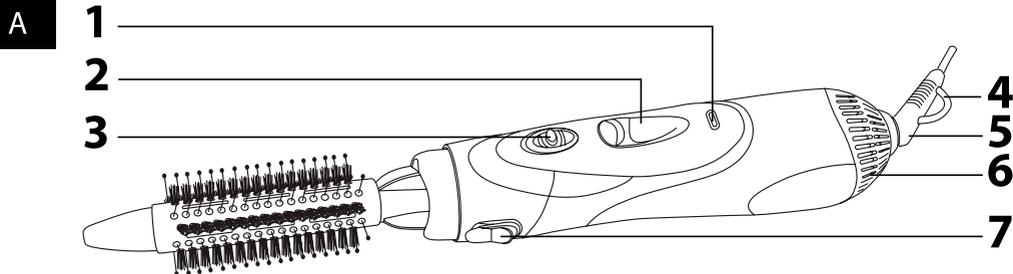

- Prior to using this product, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of products. Only use the product in the manner described in this user's manual. Keep the user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original shipping cardboard box, packaging material, receipt and warranty card for the duration of warranty. In the case of transportation, pack the product using the original packaging materials only.

DESCRIPTION

A1 Ionisation control light	A3 „COOL CARE“ button
A2 Main power switch	A4 Hanging loop
0 - Turned off	A5 Turning end of the power cord
1 - 1st power level	A6 Air suction opening grill
2 - 2nd power level	A7 Safety for attachment release
B1 Curling tongs (diameter 18 mm)	B5 Large brush with flexible pins
B2 Small brush (diameter 20 mm)	(diameter 31 mm)
B3 Flat brush	B6 Concentrator
B4 Brush with retractable pins (diameter 28 mm)	B7 Straightening brush

INSTRUCTIONS FOR USE

- 1) Attach an appropriate attachment on to the curling iron so that the arrow on the curling iron and the symbol on the attachment point at each other. Then turn the attachment, to lock in the safety.
- 2) Insert the power plug into the power socket.
- 3) Using the main switch select the desired power level.
- 4) Commence drying / forming your hair.
- 5) After finishing with the curling iron or when the attachment needs to be changed for another, you can remove it by simultaneously pressing the safety while turning the attachment.



Tip:

To achieve the best results wash your hair with shampoo before using the dryer, then dry your hair using a towel to reduce excessive moisture and then comb your hair. We recommend the use of a conditioner or hair lotion, which simplifies the combing and then drying your hair.

“COOL CARE” button

- The “COOL CARE” button can be used in combination with any power level and is ideal for fixing a hairstyle after drying with hot air.

Hanging loop

- If while drying you need to put the fan down, you can hang it on the hanging loop.

Ionisation function

- This hot air curling iron uses negative ions for rapid drying of hair from the roots to the tips and so the application of heat is more gentle. Negative ions limit the creation of static electricity and help to keep your hair in perfect condition by allowing moisture to enter deep into the hair structure, where it remains locked in.

ACCESSORIES

Curling tongs

- Ideal for creating curls.

Small brush

- Appropriate for shaping fine or relatively short hair, or for combing out.

Flat brush

- Thanks to the special design of this brush, hot air is focused on the scalp, which causes hair to stand up at the roots to the maximum degree.

Brush with retractable pins

- The retractable pins make it more comfortable to remove the brush from the hair after drying. To retract or extend the pins, press down on the plastic end at the top of the brush and turn it. The pins will be extended / retracted.

Brush with flexible pins

- Appropriate for shaping of strong and naturally wavy hair.

Concentrator

- If you wish to dry your hair by blowing or if you want to dry a specific part of your hair, use the concentrator nozzle, which will direct the air current to the desired location.

Straightening brush

- Serves to simultaneously brush out and straighten hair.

MAINTENANCE AND CLEANING

- Before cleaning disconnect this product from the power source.
- To clean the outer parts of the product, use a soft cloth dipped in lukewarm water. Do not use aggressive cleaning products and solvents as this could damage the surface of the product.
- After every use we recommend to clean the air opening suction grill, where very often hair is sucked in.

TECHNICAL SPECIFICATIONS

Nominal voltage	220 – 240 V ~
Nominal frequency	50 Hz
Input power	1000 W
Safety class (with regard to electric shock protection)	II
Noise level	78 dB(A)

The declared noise emission level for this appliance is 78 dB(A), which represents level A of the acoustic power relative to the reference acoustic power of 1 pW.

Safety class for electrical shock protection:



Class II – Electrical shock protection is provided by double or heavy-duty insulation.

Amendments to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-stajler-za-kosu-shs-8550bk-akcija-cena/>