

Uputstvo za upotrebu (EN)

MERCUSYS MW300UH USB WiFi Adapter

MERCUSYS[®]



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/mercusys-mw300uh-usb-wifi-adapter-akcija-cena/>

Wireless USB Adapter


For Wi-Fi 7 adapters:

1. Ensure your Router or Access Point supports the Wi-Fi 7 standard.
2. It is recommended to use the adapter on Windows 11 (64-bit) or above.


1 Connect to a Computer

It is recommended to connect your adapter to a USB 3.0 (SS) port.

Option 1: Directly

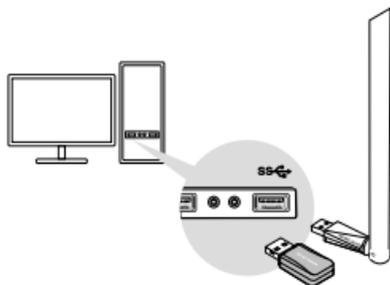

Option 2: Via the USB Extension Cable (If provided)

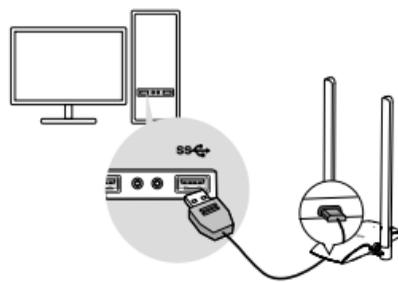

Images may differ from your actual product

©2025 MERCUSYS 7100001370 REV1.6.0

2 Install Driver

Follow **Method 1** if the adapter supports Plug and Play feature. If not, please try **Method 2**.

Method 1: Plug and Play

- This adapter supports **Plug and Play** feature. Plug the adapter in and then it is ready to use.
- If your operating system does not support this feature, follow the steps below:
 - a. Download the driver or check the new release at www.mercusys.com/support.
 - b. Unzip the downloaded folder and run the **Setup.exe** or **SetupInstall.exe**.
 - c. Follow the instructions to complete the installation.

Tips:

- If you can't install the driver successfully, disable the antivirus software and firewall, then try again.
- If an unknown publisher message pops up, select **Yes** to continue.
- If Windows User Account Control requires admin credentials, type user name and password of your Windows administrator account.

For more driver installation support, refer to **Troubleshooting > T2**.

Method 2: via Internal Driver Installation

- a. Go to **My Computer** or **This PC**.
- b. Find out **MERCUSYS** Disk/CD Drive then run the **SetupInstall.exe** to start driver installation.
Note:
If you cannot find the setup program, download the driver at www.mercusys.com/support.
- c. Follow the instructions to complete the installation.

3 Join a Wireless Network

- a. Click the network icon on the taskbar (the icon might look like one of these: , , , or ).
- b. Select your Wi-Fi network, click **Connect** and enter the password when prompted.



Troubleshooting

If you have problems during the installation, please refer to the following online FAQs.

- T1. Check if the Driver is Successfully Installed:
<https://www.mercusys.com/faq-262>
- T2. Can't Install the Driver in the Windows Systems:
<https://www.mercusys.com/faq-817>
- T3. Can't Find the Hardware Version of the Adapter:
<https://www.mercusys.com/faq-633>
- T4. How to Manually Install / Update Adapters on Windows 10/11:
<https://www.mercusys.com/faq-265>
- T5. How to fix Windows 7 Security issues (if supported):
<https://www.mercusys.com/faq-912>

Safety Information

- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use the device where wireless devices are not allowed.
- Keep the device away from water, fire, humidity or hot environments.
- This equipment can be powered only by equipments that comply with Power Source Class 2 (PS2) or Limited Power Source(LPS) defined in the standard of IEC 62368-1.

Mercusys hereby declares that Wireless USB Adapter is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017.

The original UK declaration of conformity may be found at <https://www.mercusys.com/support/ukca/>

Mercusys hereby declares that Wireless USB Adapter is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2011/65/EU and (EU) 2015/863.

The original EU declaration of conformity may be found at <https://www.mercusys.com/en/ce>



Support

For technical support, user guides, the driver and more information, please visit <https://www.mercusys.com/support>.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Mercusys, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/mercusys-mw300uh-usb-wifi-adapter-akcija-cena/>