

## Uputstvo za upotrebu

TESLA ugradna rerna BO910MBP

TESLA



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/tesla-ugradna-rerna-bo910mbp-akcija-cena/>

TESLA

# BUILT-IN OVEN

B0910MBP

User Manual



Product images are for illustrative purposes only and may differ from the actual product.

# SAFETY INFORMATION

---

## Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

## Explanation of symbols



### **Danger**

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



### **Warning of electrical voltage**

This symbol indicates that there is a danger to life and health of persons due to voltage.



### **Warning**

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



### **Caution**

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



### **Attention**

The signal word indicates important information (e.g. damage to property), but not danger.



### **Observe instructions**

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

 **WARNING!**

- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the surface is cracked, switch of the appliance to avoid the possibility of electric shock.

 **PROHIBIT!**

- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- A steam cleaner is not to be used.
- The appliance is not intended to be operated by means of an external timer or a separate remote control system.
- Do not use the oven unless you are wearing something on your feet. Do not touch the oven with wet or damp hands or feet.
- When the door or drawer of oven is open do not leave anything on it, or you may unbalance your appliance or break the door.
- Do not allow children to go near the oven when it is operating, especially when the grill is on.

 **CAUTION!**

- Please use the product under an open environment.
- During use, the appliance becomes very hot. Care should be taken to avoid touching heating elements inside the oven.
- Ensure that the appliance is switched off before replacing the oven lamp to avoid the possibility of electric shock.
- The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring specifications.
- Children should be supervised to ensure that they do not play with the appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
- Accessible parts may become hot during use. Young children should be kept away.
- An all-pole disconnection means must be incorporated in the fixed wiring in accordance with the wiring rules.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


**ATTENTION!**

- When the oven is first switched on, it may give off an unpleasant smell. This is due to the bonding agent used for the insulating panels within the oven. Please run the new empty product with the conventional cooking function, 250°C, 30 minutes to clean oil impurities inside the cavity.
- During the first use, it is completely normal that there will be slight smoke. If it does occur, you should wait for the smell to be cleared before putting food into the oven.
- Only use the temperature probe recommended for this oven. Oven door should not be opened often during the cooking period. The appliance must be installed by an authorized technician and put into use. The producer is not responsible for any damage that might be caused by defective placement, and installation by unauthorized personnel.
- When the door or drawer of oven is open do not leave anything on it, or you may unbalance your appliance or break the door.
- Some parts of appliance may keep its heat for a long time; it is required to wait for it to cool down before touching onto the points that are exposed to the heat directly.
- If you will not use the appliance for a long time, it is advised to plug it off.

# PRODUCT OVERVIEW

## Oven


When taking out food, please wear heat-insulating gloves to prevent burns! Pay attention to the hot air when opening the oven door

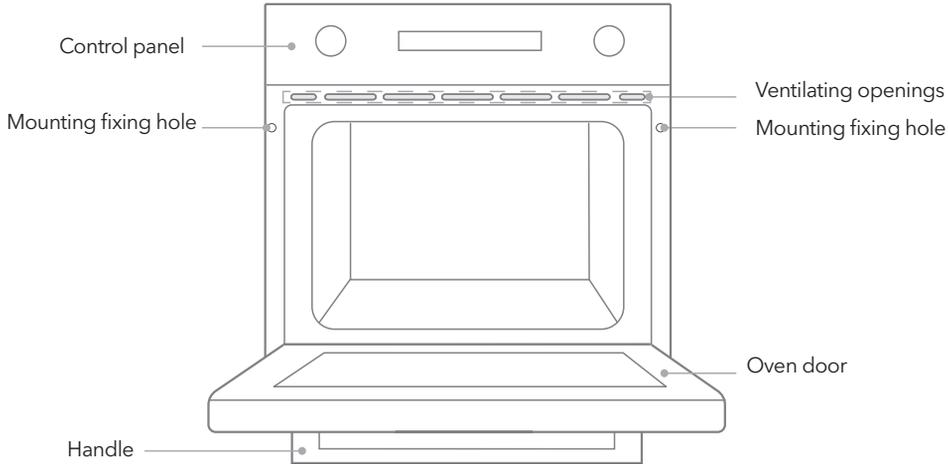


## Accessories




**Grill rack x1**  
Grill food or place heat-resistant cooking containers

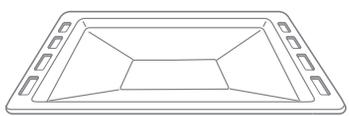

**Grill tray x1**  
Cooking food or receiving food scraps

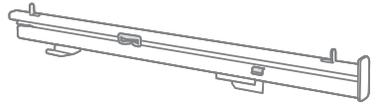


**Slide rail x2**  
Only for some models

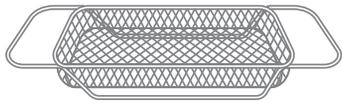

**Air fry basket x1**  
Air fry function-specific



**Probe x1**  
Only for some models

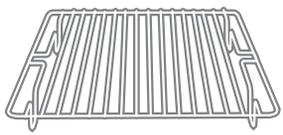


**Small grill rack x1**  
Cook smaller portions of food  
Only for some models

# Accessories



**Baffle plate**  
Block food debris

Only for some models

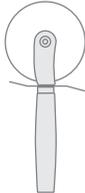


**Pizza knife**  
Cut pizza

Only for some models



**Pizza tray**  
Special accessories for  
pizza function  
Only for some models

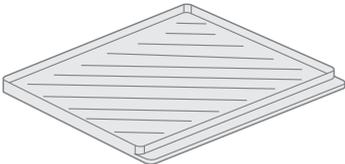


**Frying tray**  
Heated meat food (Both the front and  
the back can be used)

Only for some models



**Grill stick**  
String meat and vegetables

Only for some models


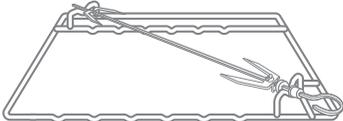


**Rotating grill rack**  
Barbecue, such as chicken  
and turkey.

Only for some models

# Accessories Use


For the oven to work properly, the grill rack and grill tray should only be placed between the first and fifth levels. When used together, place the grill tray under the grill rack.

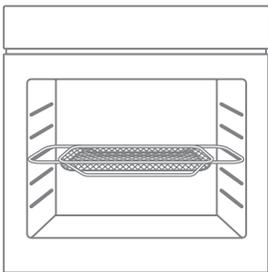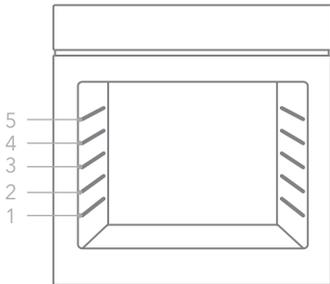

Only for some models

# QUICK START GUIDE


## Oven Control Panel

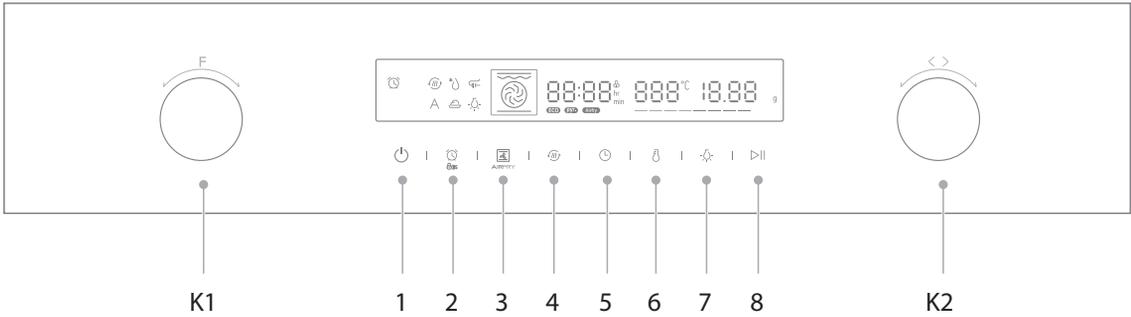

icon	Introduction
1 	Cancel the current setting and return to the standby state.
2  	Press briefly to enter the reminder function setting. Press and hold for 3 seconds to enter or exit the child lock state.
3  AIRFRY	Provide fast and even heat distribution, the hot air also takes away the moisture on the surface of the food, generating crunchy and crispy frying.
4 	Preheat the cavity to ensure the taste of the food.
5 	Enter the time setting state.
6 	Enter the temperature setting state.
7 	Press this key to turn on or of the lamp.
8 	Start or pause cooking.
K1	Select the cooking function.
K2	Adjust the time or temperature.

# PRODUCT INSTALLATION



## Cupboard Diagram (Standing Cupboard)

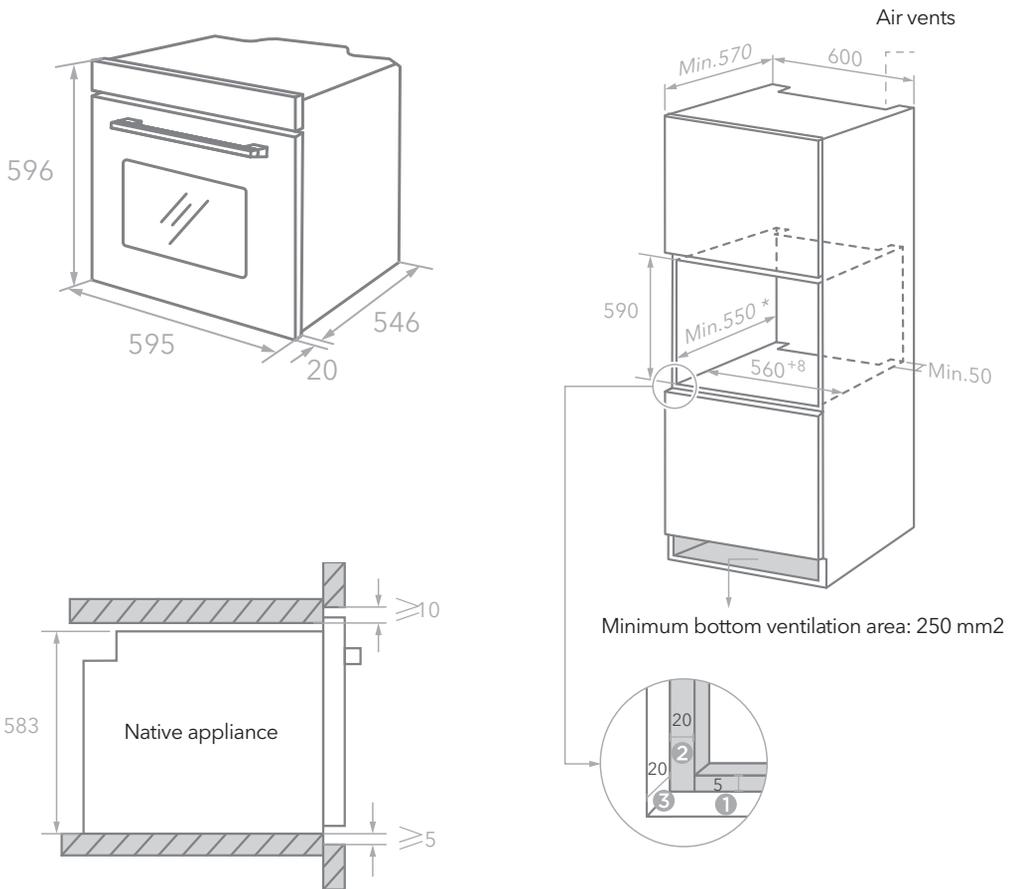


- ❶ Reserve 5 mm for the door panel at the top and bottom respectively.
- ❷ Reserve 20 mm for the door panel on the left and right respectively.
- ❸ Reserve 20 mm for the door panel in thickness.

1. The thickness of the cupboard board is 20 mm.
2. If the power socket is installed on the back of the appliance, the depth of the cupboard opening shall be increased from a minimum of 590 mm to 620 mm.
3. The dimensions in the figures are in mm.


# Cupboard Diagram (Ground Cupboard)

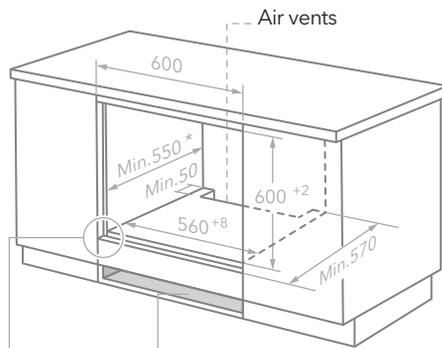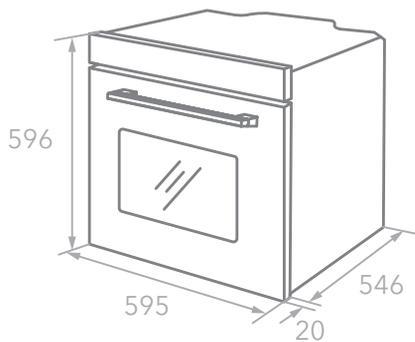


Minimum bottom ventilation area: 250 mm<sup>2</sup>

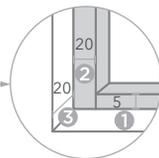

- ① Reserve 5 mm for the door panel at the top and bottom respectively.
- ② Reserve 20 mm for the door panel on the left and right respectively.
- ③ Reserve 20 mm for the door panel in thickness.

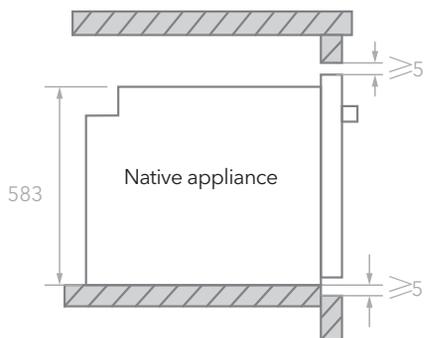

Without hob

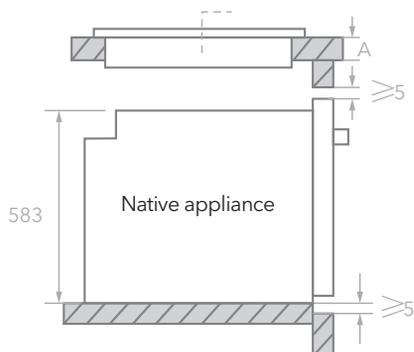

With hob

If the appliance is installed under the hob, the minimum thickness of worktop A is shown below:

Hob type	worktop A
Induction hob	37 mm
Full-surface induction hob	47 mm
Gas hob	30 mm
Electric hob	27 mm

- 1. The thickness of the cupboard board is 20 mm.
- 2. If the power socket is installed on the back of the appliance, the depth of the cupboard opening shall be increased from a minimum of 590 mm to 620 mm.
- 3. The dimensions in the figures are in mm.

## Installation Important Instructions

### ! Content that means [mandatory]

1. The safe operation of this appliance can only be guaranteed if it has been installed to a professional standard in accordance with these installation instructions. The installer shall be liable for any damage resulting from incorrect installation.
2. The entire installation process requires two professional installers. Wear dry protective gloves during installation to avoid scratches or electric shock.
3. Fitted units must be heat-resistant up to 90°C, and adjacent unit fronts up to 70°C.
4. Please use a 16A socket.

### ⊘ Content that means [Prohibit]


1. Be very careful when moving or installing the appliance to avoid damage to the appliance or damage to the cupboards.
2. Before starting up the appliance, remove all packaging materials and accessories from the cavity.
3. The power socket shall be accessible to users (such as next to the cupboard) for easy power.
4. After installation is complete, make sure that the power plug is firmly inserted into the socket.
5. Please refer to the "Cupboard Diagram" for the requirements of net depth of the cupboard. The clearance between the cupboard bottom board and the rear board (or wall) shall not be less than 50 mm.

### ⚠ Content that means [note]



1. Do not install the appliance behind a decorative door or the door of a kitchen unit, as this may cause the appliance to overheat.
2. Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transit.
3. Do not block the vent of the appliance and the gap between the cupboard and the appliance.
4. Use extreme caution when moving or installing the appliance. It is very heavy, do not lift the appliance by the door handle.
5. If the power cord or power plug is damaged, stop using the appliance immediately, to avoid fire, electric shock or other injuries.

## Installation steps




1. Please customize the cupboard according to the "Cupboard Diagram".
2. Before installation, please check for normal power sockets and appropriate grounding, and check whether the cupboard dimension meets the installation requirements.
3. Place the appliance in designated locations in the kitchen, install it in a vertical cupboard, and connect the power supply.
4. To locate the mounting fixing holes, open the appliance door and look at the side frame of the appliance (position shown above).
5. Fix the appliance to the cupboard with two rubber plugs A and screws B provided with the appliance.

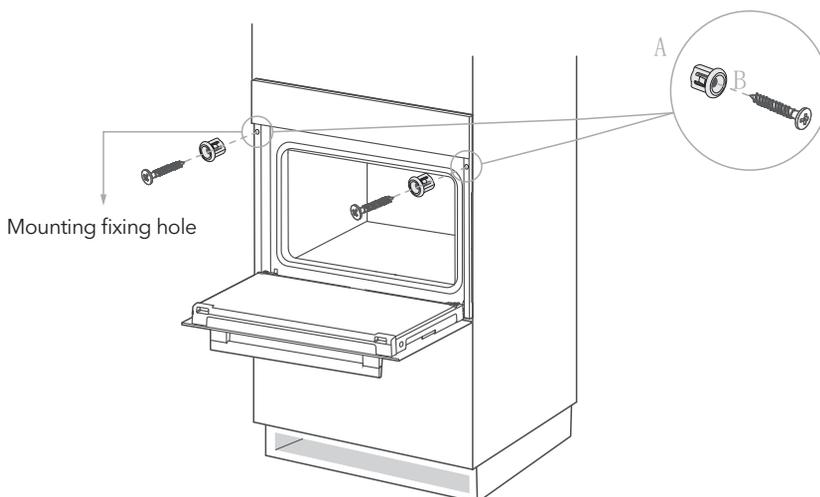

## Accessory installation

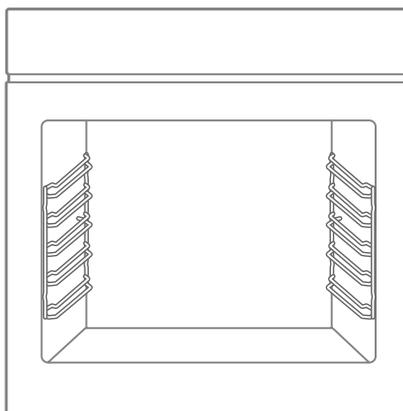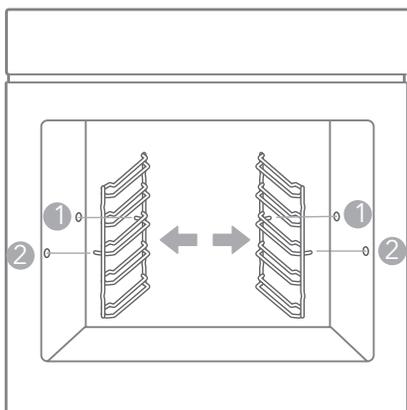

## Accessory installation (Only for some models)

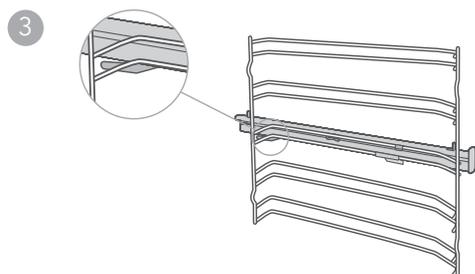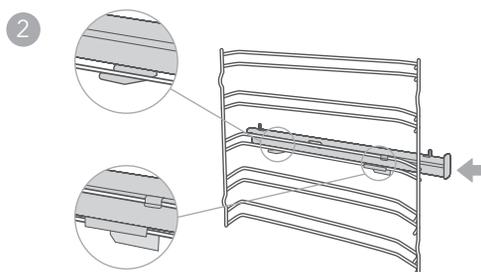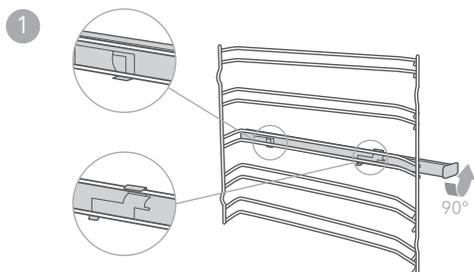

# OPERATION INSTRUCTIONS

## First Use

1. Before using it for the first time, please clean the oven and accessories to a certain extent. Remove the oven packaging shipping protection parts. Remove all accessories (eg: baking trays, grills, foam, etc.) from the cavity.
2. Thoroughly clean the attachment with soapy water and a rag or soft brush.
3. Wipe the cavity and oven surfaces with a soft damp cloth.
4. To avoid fire, please make sure that the cavity is free of any remaining packing materials and accessories when using it for the first time.
5. When using it for the first time, keep the kitchen highly ventilated (open the hood and windows). During this time, keep children and pets out of the kitchen and keep the doors of adjacent rooms closed.
6. To remove the smell of new products, run the following:


Oven Mode	Temperature	Time
 Conventional	250°C	0.5 Hour

## Setting the clock

Before using your oven, set the clock.


If you want to modify the clock again, please follow steps 1 .

1. In the standby state, Press the "⌚" key.
2. Turn knob K2 to adjust the hour digit.
3. Press the "⌚" key to confirm.
4. Turn knob K2 to adjust the minute digits.
5. Press the "⌚" key to complete the clock setting.

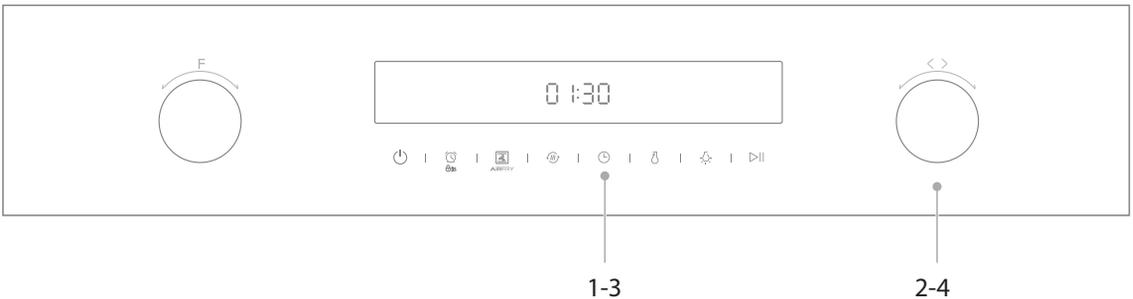

## Reminder function

1. In the standby state and during cooking, press " " key to enter the reminder setting.
2. Turn knob K2 to adjust the hour digit.
3. Press the " " key to confirm.
4. Turn knob K2 to adjust the minute digits.
5. Press the " " key to complete the setting.

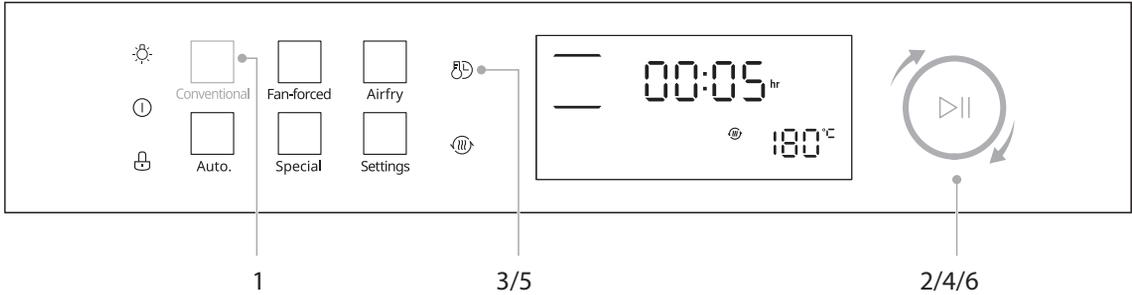


### NOTE

1. During cooking, press the " " key to view the reminder time.
2. A reminder has been set. During cooking, press the " " key twice to modify the reminder time.

## Barbecues function

1. In standby state or reminder state, turn knob K1 to select the function.
2. Turn knob K2 to adjust the temperature.
3. Press " " to enter the time setting.
4. Turn knob K2 to adjust the time.
5. Press the " " key to start cooking.

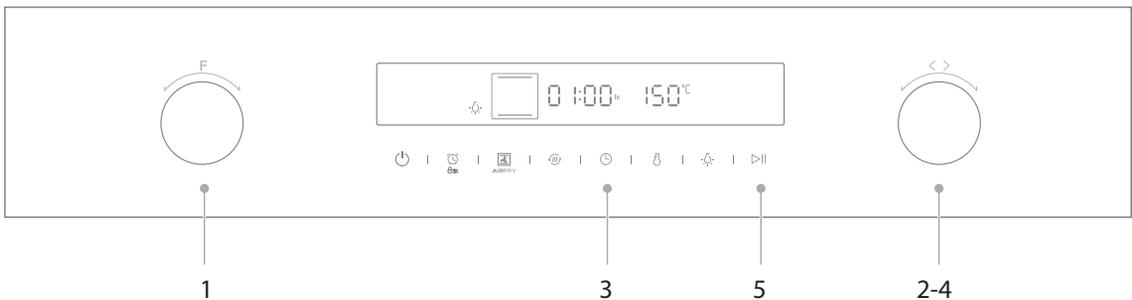

### NOTE


1. During cooking, press the " " key to modify the temperature; Press the " " key to modify the time.
2. During cooking, the function can be changed by turning the knob K1, and the time remains unchanged. The temperature is the default temperature of the current function, and it will start running 6 seconds after the change.

## Function table

Number	Icon	Function	Time	Temperature	Preheat
1		Conventional	0-9 hour	30-250°C	Optional
2		Convection	0-9 hour	50-280°C	Optional
3	 eco	Energy saving	0-9 hour	140-240°C	No
4		Conventional+fan	0-9 hour	50-250°C	Optional
5		Single grill	0-9 hour	150-250°C	Optional
6		Double grill+fan	0-9 hour	50-250°C	Optional
7		Double grill	0-9 hour	150-250°C	Optional
8		Pizza	0-9 hour	50-250°C	Optional
9		Bottom heating	0-9 hour	30-220°C	Optional
10		Defrost	0-9 hour	50°C	No
11		Fermentation	0-9 hour	30-45°C	No
12		Pyrolytic	2 hour	450°C	No

## Quick preheating

1. In standby state or reminder state, turn knob K1 to select the function.
2. Turn knob K2 to adjust the temperature.
3. Press "⌚" to enter the time setting.
4. Turn knob K2 to adjust the time.
5. Press the "🌀" key.

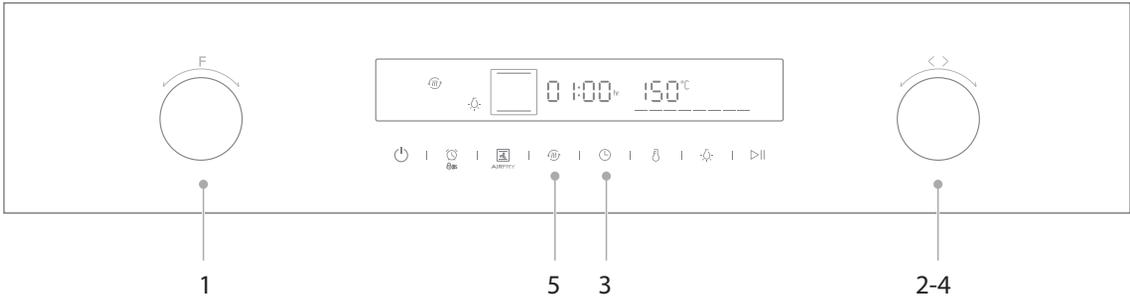

### NOTE

1. Preheating can shorten the cooking time and improve the taste of food.
2. After preheating, put the ingredients in the oven for cooking.
3. When the preheating temperature is reached, the buzzer sounds and the progress bar is always on.

## Probe function (Only for some models)

1. In the standby state, disassemble the short end of the probe into the hole in the upper right corner of the oven cavity.
2. Insert the long end of the probe into the centre of the food (avoid fat and bones).
3. Turn the knob K1 to select the function. ( )
4. Turn knob K2 to adjust the temperature.
5. Press the "▶||" key to start cooking.

## Pyrolytic function


1. Open the kitchen window to keep it ventilated.
2. Remove all accessories from the oven cavity.
3. Turn the knob K1 to select the pyrolytic function.
4. Press the "▶||" key to start.

## Child lock function

1. Press the "🔒" key for 3 seconds to enter or release the child lock state.

## Airfry function

1. In the standby or reminder state, press the "AIRFRY" key.
2. Turn knob K2 to adjust the temperature.
3. Press "⌚" to enter the time setting.
4. Turn knob K2 to adjust the time.
5. Press the "▶||" key to start cooking.

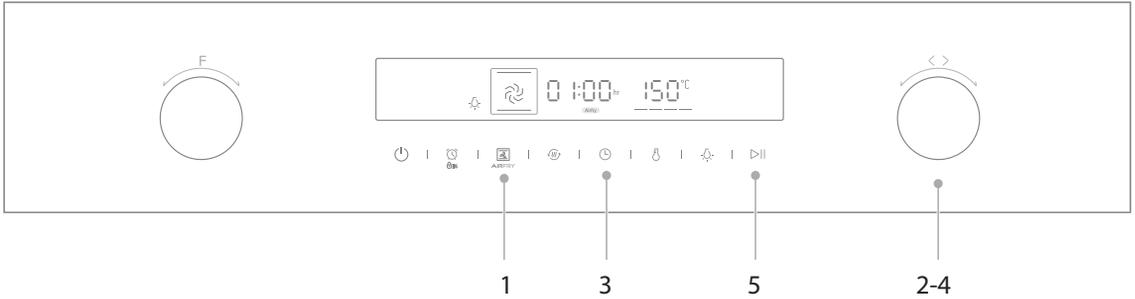


### NOTE

1. During cooking, press the "🔧" key to modify the temperature; Press the "⌚" key to modify the time.

## Automatic menu

1. In standby state, press and hold the "AIRFRY" key for 3 seconds to enter the automatic menu setting.
2. Turn knob K2 to select the menu.
3. Press the "▶||" key to start cooking.

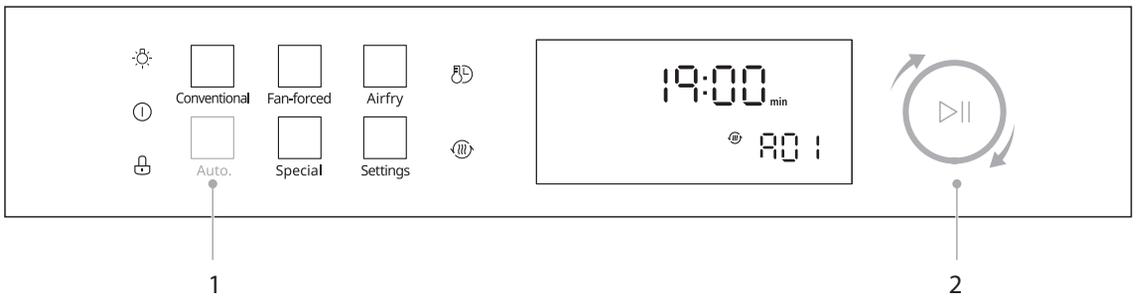

### NOTE

1. For the menu without the preheating program, the countdown starts directly after it is started.
2. For the menu with a preheating program, you need to wait for preheating before putting the ingredients in the oven.

## Automatic menu table

Code	Menu name	Weight	Mode	Time	Temperature	Preheat
Ar01	French Fries	350g	 AIRFRY	19min	200°C	Yes
Ar02	French Fries	750g	 AIRFRY	23min	230°C	Yes
Ar03	Chicken drumsticks	500g	 AIRFRY	20+10min	250°C	No
Ar04	Chicken drumsticks	1000g	 AIRFRY	20+12min	250°C	No
Ar05	Chicken Nugget	200g	 AIRFRY	17min	250°C	Yes
Ar06	Vegetable Nuggets	180g	 AIRFRY	11.5min	250°C	Yes
Ar07	Mozzarella Fries	120g	 AIRFRY	10min	250°C	Yes
Ar08	Onion Rings thick cut	160g	 AIRFRY	11.5min	220°C	Yes
Ar09	Breaded Mushrooms	125g	 AIRFRY	13min	230°C	Yes
Ar10	Breaded Mushrooms	250g	 AIRFRY	13min	230°C	Yes

## Suggested menu table

Menu name	Form	Mode	Time	Temperature	Level
Sponge cake (simple) in a box shape	Box		50min	170°C	2
Sponge cake (simple) in a box shape	Box		70min	140°C	1
Sponge cake with fruits in a round form	Round form		50min	150°C	1
Sponge cake with fruits on a tray	Tray		70min	140°C	1
Raisins brioche muins (yeast cake)	Muin form		Preheat: 19min Baking: 11min	220°C	2

Menu name	Form	Mode	Time	Temperature	Level
Gugelhupf (with yeast)	Tray		Preheat: 11min Baking: 60min	150°C	1
Muins	Muin form		Preheat: 8.5min Baking: 30min	160°C	1
Muins	Muin form		Preheat: 8.5min Baking: 30min	150°C	1
Apple yeast cake on a tray	Tray		Preheat: 10min Baking: 42.5min	160°C	1
Water sponge cake (6 eggs)	Spring form		Preheat: 9.5min Baking: 41min	160°C	1
Water sponge cake (4 eggs)	Spring form		Preheat: 9min Baking: 26min	160°C	1
Water sponge cake	Spring form		Preheat: 9.5min Baking: 41min	160°C	1
Apple Yeast cake on a tray	Tray		Preheat: 8min Baking: 42min	150°C	2
Hefezopf (Callah)	Tray		40min	150°C	2
Small cakes 20	Tray		36min	150°C	2
Small cakes 40	Tray		Preheat: 10min Baking: 34min	150°C	2+4
Butter yeast cake	Tray		Preheat: 8min Baking: 30min	150°C	2
Shortbread	Tray		Preheat: 8min Baking: 13min	170°C	2
Shortbread 2 trays	Tray		Preheat: 8.3min Baking: 12min	160°C	2+4
Vanilla cookies	Tray		Preheat: 8min Baking: 10min	160°C	2
Vanilla cookies	Tray		Preheat: 8min Baking: 14min	150°C	2+4
White bread (1 kg flour) box shape	Box		Preheat: 9min Baking: 50min	170°C	1
White bread (1 kg flour) box shape	Box		Preheat: 12min Baking: 45min	170°C	1

Menu name	Form	Mode	Time	Temperature	Level
Fresh Pizza (thin)	Tray		Preheat: 9.5min Baking: 21min	170°C	2
Fresh Pizza (thick)	Tray		Preheat: 10min Baking: 45min	170°C	2
Fresh Pizza (thick)	Tray		Preheat: 8min Baking: 41min	170°C	2
Bread	Tray		Preheat: 9min Baking: 30min	190°C	1
Beef tender loin 1.6 kg	Tray		55min	180°C	2
Meatloaf 1 kg meat	Tray		75min	180°C	1
Chicken 1 kg	Tray		50min	180°C	Rack:2 Tray:1
Fish 2.5 kg	Tray		70min	170°C	2
Ribs tomahawk cooked B.T.	Tray		85min	120°C	3
Pork Roast of the neck 1.2 kg	Tray		82min	160°C	1
Chicken 1.7 kg	Tray		78min	180°C	Rack:2 Tray:1

**Demo mode**

1. In the standby state, press and hold the "⏸" key to enter the demo mode setting state, and the initial state is OFF.
2. Turn the knob K2 to turn the demo mode on or off.

**NOTE**

1. Demonstration mode, with power-of saving data function. For example, when the demo mode is on, turn off the power and turn it on again, and the demo mode is still on.
2. You can press the cancel key to exit the setting, or wait for 3 seconds to automatically exit the demo mode setting state and return to the standby state.
3. When the demo mode is on, the heating tube does not work after the function is started.

**Sabbath mode**

1. In standby mode, press the "⏸" key for 3 seconds to enter Sabbath mode.
2. Turn the knob K2 to adjust the time. (24~80 hours)
3. Press the "▶||" key to start, and 5A8 will be displayed.

**NOTE**

1. Sabbath mode has the function of power-of saving data. Save cooking data every 25 minutes. If the power is cut off during operation, after power on again, the Sabbath mode will continue to run until the cooking time is 0, or press the key to return to standby mode.
2. During work, only the "⏸" key is valid, and other keys are invalid.
3. During work, the lamp does not work.

# CLEANING AND MAINTENANCE

## Cleaning

Disconnect the power supply before cleaning and maintenance.

To ensure the life of the oven, it should be thoroughly cleaned frequently. The cleaning steps are as follows:


1. After cooking, wait for the oven to cool completely.
2. Remove oven accessories, rinse with warm water and dry.
3. Clean up food debris from the oven chamber. You can clean up the residue manually or through the Pyrolytic function.
4. Wipe the oven with a soft cloth stained with detergent, then with a dry soft cloth.

### NOTE


1. Do not use sharp cleaning tools, hard brush and corrosive cleaning products, so as not to damage the oven and its accessories.
2. Do not use a rough scrubbing agent or sharp metal spatula to clean the door glass.

## Lamp Replacement

1. To prevent the lamp from being damaged, put a towel in the cavity.
2. Turn counterclockwise to remove the glass cover (corner lamp); Gently pry open the glass cover with a flat-head tool (side lamp).
3. Pull out the wick and replace it (don't turn it).
4. Install the glass cover back and take out the towel.

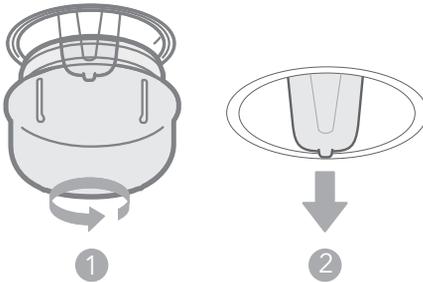

Corner lamp

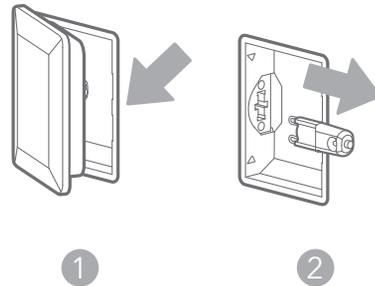

side lamp

Only for some models

### WARNING!

To avoid electric shocks-please ensure that the electricity supply to the appliance is switched of and the appliance is fully cold. before removing the lamp lens.

## SPECIFICATIONS

Power Supply	220-240V~ , 50Hz-60Hz
Electric Power	3.2kW
Lamp Power	25*2W
Product Size	72L

## Door Cleaning


With good care and cleaning, your appliance will retain its appearance and remain fully functional for a long time to come. For cleaning purposes and to remove the door panels, you can detach the appliance door. There is a lock lever on the left and right hinges of the appliance door. When the locking levers are closed, the appliance door is secured in place. It cannot be detached. When the locking levers are open in order to detach the appliance door, the hinges are locked. They cannot snap shut.

### WARNING!

1. The hinges on the appliance door move when opening and closing the door, and you may be trapped. Keep your hands away from the hinges.
2. If the hinges are not locked, they can snap shut with great force. Ensure that the locking levers are always fully closed or, when detaching the appliance door, fully open.

### Removal and installation of oven door

1. Open the appliance door fully.
2. Fold open the two locking levers on the left and right.
3. Close the appliance door as far as the limit stop.
4. With both hands, grip the door on the left- and right-hand side, and pull it out upwards.
5. The plastic inlay in the door cover may become discoloured. To carry out a thorough cleaning, you can remove the cover. Press the left and right switches the cover.
6. After removing the door cover, the rest parts of the appliance door can be easily taken of so that you can go on with the cleaning. When the cleaning of the appliance door has finished, put the cover back in place and press on it until it clicks audibly into place.

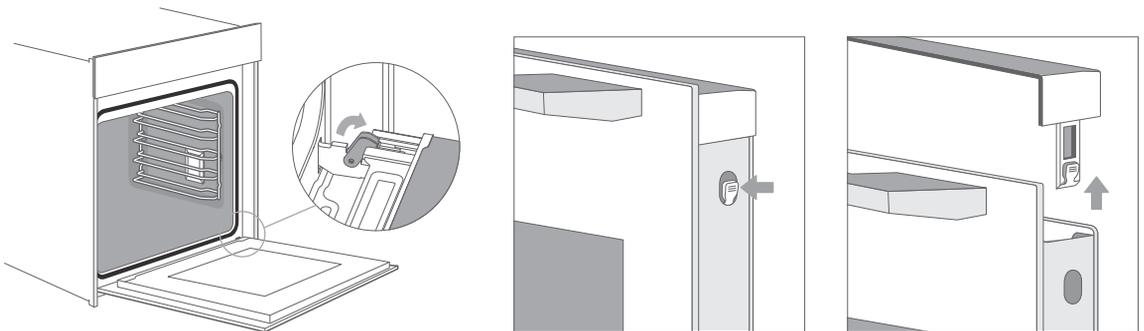

### NOTE

Reattach the appliance door in the opposite sequence to remove.

# TROUBLESHOOTING

If the problem cannot be solved or other problems occur, please contact the after-sales service.

Problem	Possible reason	Solution
Unable to start	• Power is not connected	• Connect power supply
	• The main power switch is not turned on	• Turn on the power switch
	• The oven door is not closed	• Close the oven door
The lamp does not come on	• It's broken	• Contact after-sales service
Has a pungent odour or smoke	• first use	• No processing required
The food is not cooked	• Temperature is too low	• Use a higher temperature
	• Food portion is too large	• Cook food in smaller pieces or extend the cooking time.
Burnt or uneven food	• The temperature is set too high or the heating time is too long	• Adjust the cooking temperature or time
	• The food is too close to the heating tube	• Adjust the placement layers of accessories
The fan did not stop working after stopping the heating	• Fan delays blowing for heat dissipation	• No processing required

## DISPOSAL AND RECYCLING

### Important instructions for the environment



Compliance with the WEEE Directive and Disposing of the Waster Product:

This product complies with the EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).



This symbol indicates that this product shall not be disposed of with other household wastes at the end of its service life. Used devices must be returned to the official collection point for the recycling of electrical electronic devices. To find these collection systems please contact your local authorities or retailer where the product was purchased. Each household performs an important role in recovering and recycling old appliances. Appropriate disposal of used appliances helps prevent potential negative consequences for the environment and human health.

### Compliance with RoHS Directive

The product you have purchased complies with the EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

### Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

# INFORMACIJE O BEZBEDNOSTI

---

## Namenska upotreba

Sledeće smernice o bezbednosti su namenjene da spreče nepredviđene rizike ili oštećenja usled nesigurnog ili nepravilnog rukovanja uređajem. Proverite ambalažu i uređaj po dolasku kako biste se uverili da je sve u ispravnom stanju radi sigurne upotrebe. Ukoliko uočite bilo kakva oštećenja, molimo vas da kontaktirate prodavca ili distributera. Imajte na umu da izmena ili prilagođavanje uređaja nije dozvoljena iz razloga bezbednosti. Nenamenska upotreba može prouzrokovati opasnosti i gubitak prava na garanciju.

## Objašnjenje simbola



### **Opasnost**

Ovaj simbol označava opasnosti po život i zdravlje ljudi usled izuzetno zapaljivog gasa.



### **Upozorenje na električni napon**

Ovaj simbol označava opasnost po život i zdravlje ljudi zbog napona.



### **Upozorenje**

Ova signalna reč ukazuje na opasnost sa srednjim nivoom rizika koja, ako se ne izbegne, može dovesti do smrti ili teških povreda.



### **Oprez**

Ova signalna reč ukazuje na opasnost sa niskim nivoom rizika koja, ako se ne izbegne, može dovesti do manjih ili umerenih povreda.



### **Pažnja**

Ova signalna reč ukazuje na važne informacije (npr. oštećenje imovine), ali ne predstavlja opasnost.



### **Pratite uputstva**

Ovaj simbol označava da uređaj treba da koristi i održava samo servisni tehničar u skladu sa uputstvima za rad.

---

Pažljivo pročitajte ova uputstva za rad pre korišćenja/puštanja u rad uređaja i čuvajte ih u neposrednoj blizini mesta instalacije ili uređaja za kasniju upotrebu!

### UPOZORENJE!

- Uređaj i njegovi dostupni delovi se zagrevaju tokom korišćenja. Treba biti oprezan da se izbegne dodirivanje grejnih elemenata. Decu mlađu od 8 godina treba držati podalje, osim ako nisu kontinuirano nadgledana.
- Ovaj uređaj mogu koristiti deca uzrasta od 8 godina i starija, kao i osobe sa smanjenim fizičkim, senzornim ili mentalnim sposobnostima ili nedostatkom iskustva i znanja, ukoliko su pod nadzorom ili su primila uputstva o bezbednoj upotrebi uređaja i razumeju povezane rizike. Deca se ne smeju igrati sa uređajem. Čišćenje i održavanje uređaja ne smeju obavljati deca bez nadzora.
- Ako je površina napukla, isključite uređaj da biste izbegli mogućnost električnog udara.

### ZABRANJENO!

- Ne koristite gruba abrazivna sredstva za čišćenje ili oštre metalne strugače za čišćenje stakla na vratima rerne, jer mogu ogrebat površinu, što može dovesti do razbijanja stakla.
- Paročistač se ne sme koristiti.
- Uređaj nije namenjen za rad putem spoljnog tajmera ili posebnog sistema daljinskog upravljanja.
- Ne koristite rernu osim ako imate nešto na nogama. Ne dodirujte rernu mokrim ili vlažnim rukama ili nogama.
- Kada su vrata ili fioka rerne otvoreni, ne ostavljajte ništa na njima, jer možete destabilizovati uređaj ili slomiti vrata.
- Ne dozvolite deci da priđu rerni dok radi, posebno kada je roštilj uključen.

### OPREZ!

- Molimo vas da koristite proizvod na otvorenom.
- Tokom korišćenja, uređaj se zagreva. Treba biti oprezan da se izbegne dodirivanje grejnih elemenata unutar rerne.
- Uverite se da je uređaj isključen pre nego što zamenite lampu rerne kako biste izbegli mogućnost električnog udara.
- Sredstva za isključivanje moraju biti ugrađena u fiksno ožičenje u skladu sa tehničkim specifikacijama ožičenja.
- Deca treba da budu pod nadzorom kako bi se osiguralo da se ne igraju sa uređajem.

- Ovaj uređaj nije namenjen za korišćenje od strane osoba (uključujući decu) sa smanjenim fizičkim, senzornim ili mentalnim sposobnostima, ili nedostatkom iskustva i znanja, osim ako su pod nadzorom ili su primili uputstva o korišćenju uređaja od strane osobe odgovorne za njihovu bezbednost.
- Dostupni delovi mogu postati vrući tokom korišćenja. Mlađa deca treba da budu držana podalje.
- Sredstvo za isključivanje mora biti ugrađeno u fiksno ožičenje u skladu sa pravilima ožičenja.
- Ako je napojni kabl oštećen, mora ga zameniti proizvođač, njegov servisni agent ili slične kvalifikovane osobe kako bi se izbegle opasnosti.


**PAŽNJA!**

- Kada se rerna prvi put uključi, može se osećati neprijatan miris. To je zbog vezivnog sredstva koje se koristi za izolacione panele unutar rerne. Molimo vas da pokrenete novi prazan uređaj sa konvencionalnom funkcijom kuvanja na 250°C, 30 minuta kako biste očistili uljne nečistoće unutar komore.
- Tokom prvog korišćenja, potpuno je normalno da se pojavi lagani dim. Ako se to desi, treba sačekati da miris nestane pre nego što stavite hranu u rernu.
- Koristite samo temperaturnu sondu koja je preporučena za ovu rernu. Vrata rerne ne bi trebalo često otvarati tokom perioda kuvanja. Uređaj mora da bude instaliran i pušten u rad od strane ovlašćenog tehničara. Proizvođač nije odgovoran za bilo kakva oštećenja koja mogu nastati usled nepravilnog postavljanja i instalacije od strane neovlašćenog osoblja.
- Kada su vrata ili fioka rerne otvoreni, ne ostavljajte ništa na njima, jer možete destabilizovati uređaj ili slomiti vrata.
- Neki delovi uređaja mogu zadržavati toplotu dugo vremena; potrebno je sačekati da se ohlade pre nego što se dotaknu delovi koji su direktno izloženi toploti.
- Ako nećete koristiti uređaj duže vreme, savetuje se da ga isključite iz struje.


# PREGLED PROIZVODA

## Rerna

Kada iznosite hranu, molimo vas da nosite toplotno izolovane rukavice kako biste sprečili opekotine! Obratite pažnju na vruć vazduh prilikom otvaranja vrata rerne.

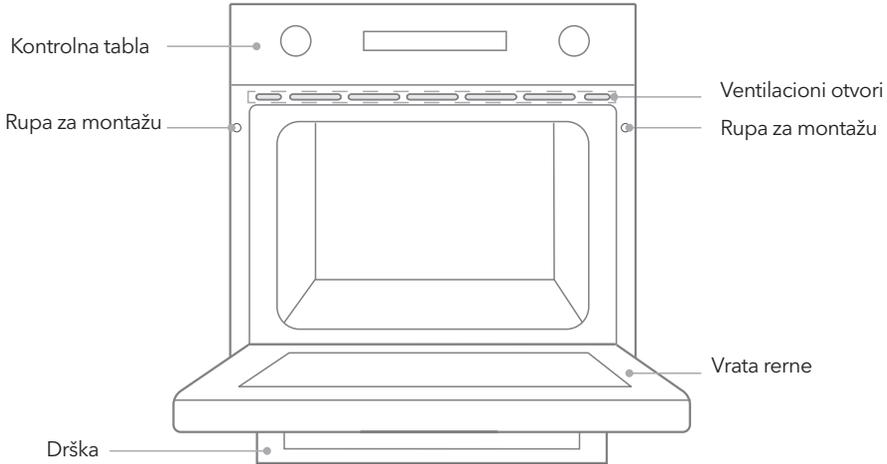


## Dodaci

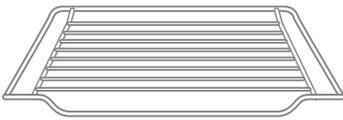


### Rešetka za roštilj x1

Roštiljajte hranu ili stavite posude za kuvanje otporne na toplotu.

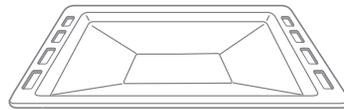


### Pleh za roštilj x1

Kuvanje hrane ili prikupljanje ostataka hrane.

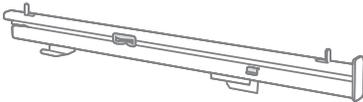

### Klizna šina x2

Samo za neke modele

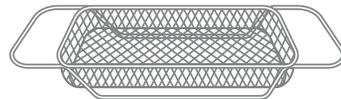


### Korpa za prženje na vazduhu x1

Posebna funkcija prženja na vazduhu



### Sonda x1

Samo za neke modele

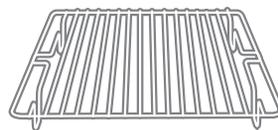

### Small grill rack x1

Za kuvanje manjih porcija hrane


Samo za neke modele

## Dodaci




**Pregradna ploča**  
Blokirajte ostatke hrane

Samo za neke modele

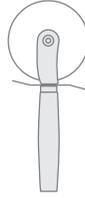


**Nož za picu**  
Isecite picu

Samo za neke modele

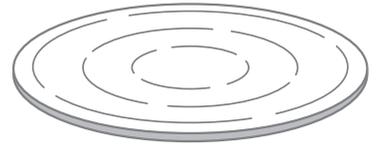

**Pleh za picu**  
Specijalni dodaci za funkciju pizza

Samo za neke modele

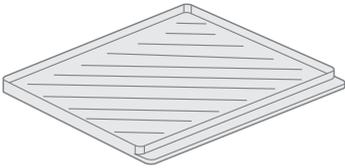


**Posuda za prženje**  
Zagrevanje mesa (mogu se koristiti i prednji i zadnji deo)

Samo za neke modele



**Ražanj za roštilj**  
Za nizanje mese i povrća

Samo za neke modele



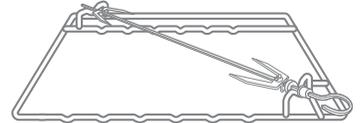


**Rotirajuća rešetka za roštilj**  
Roštilj, poput piletine i ćurke

Samo za neke modele

## Upotreba dodataka


Da bi rena ispravno radila, rešetka i posuda za roštilj treba da se postave samo između prvog i petog nivoa. Kada se koriste zajedno, stavite posudu ispod rešetke za roštilj.

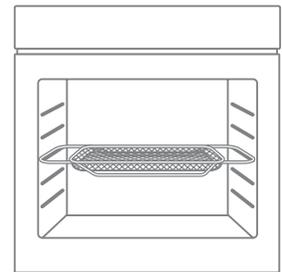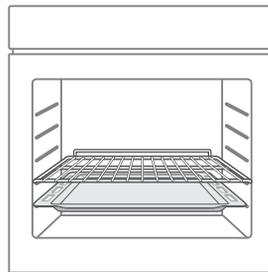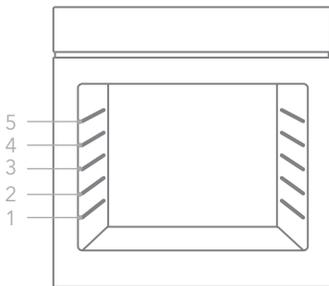

Samo za neke modele

# VODIČ ZA BRZO POKRETANJE





## Kontrolna tabla rene

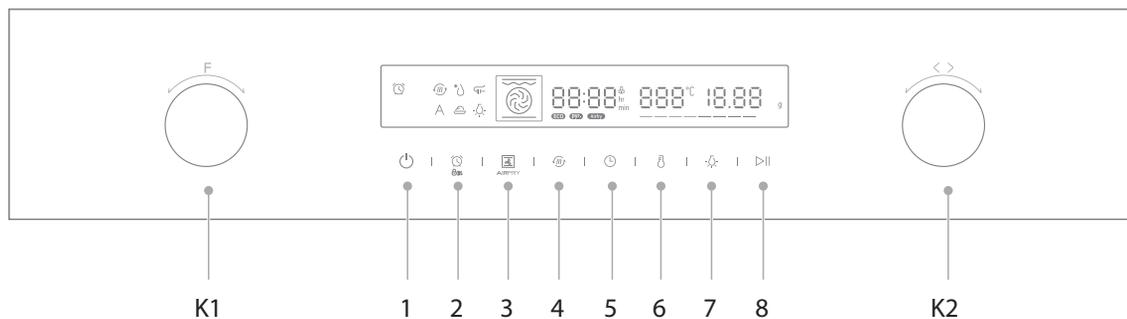

Ikona	Uvod
1	Otkazite trenutne postavke i vratite se u stanje čekanja
2	Kratko pritisnite da biste ušli u podešavanje funkcije podsećanja. Pritisnite i zadržite 3 sekunde da biste ušli ili izašli iz stanja zaključavanja za decu.
3	Obezbeđuje brzu i ravnomernu distribuciju toplote, a vrući vazduh takođe uklanja vlagu sa površine hrane, čime se stvara hrskava i krckava hrana.
4	Zagrejte komoru da biste osigurali ukus hrane.
5	Udite u režim podešavanja vremena.
6	Udite u režim podešavanja temperature.
7	Pritisnite ovaj taster da uključite ili isključite lampu.
8	Započnite ili pauzirajte kuvanje.
K1	Izaberite funkciju kuvanja.
K2	Podesite vreme ili temperaturu.

# INSTALACIJA PROIZVODA




## Dijagram ormara (stojeći ormar).

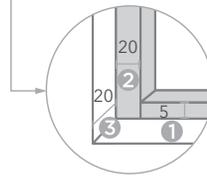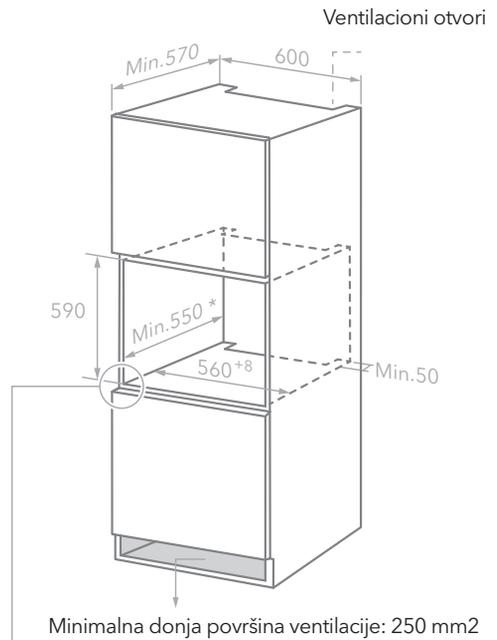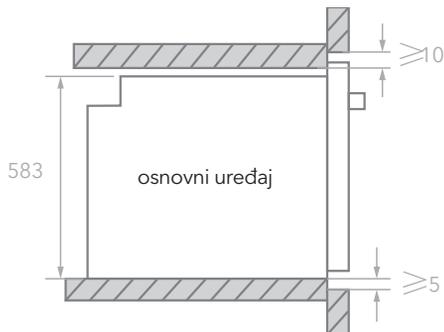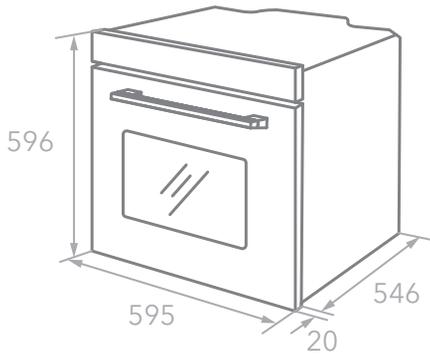


- ❶ Ostavite 5 mm za vrata na vrhu i dnu.
- ❷ Ostavite 20 mm za vrata s leve i desne strane.
- ❸ Ostavite 20 mm za debljinu vrata.

1. Debljina ploče ormara je 20 mm.
2. Ako je utičnica instalirana na zadnjoj strani uređaja, dubina otvora ormara treba da se poveća sa minimum 590 mm na 620 mm.
3. Dimenzije na slikama su u mm.

## Dijagram ormara (podni ormar)

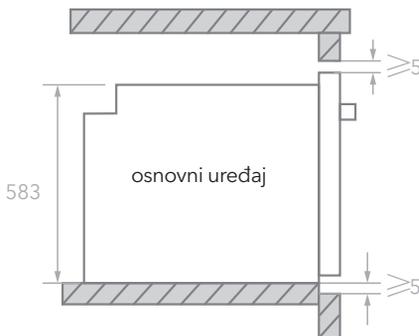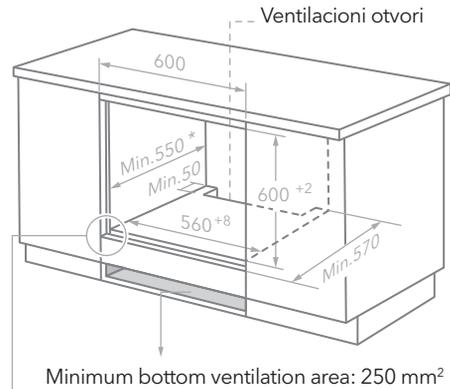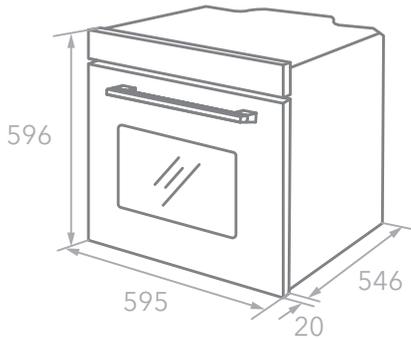

Bez ploče za kuvanje

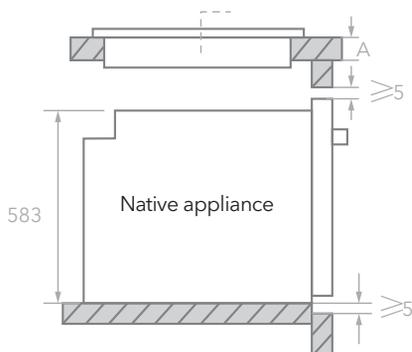

Sa pločom za kuvanje

- ① Ostavite 5 mm za vrata na vrhu i dnu
- ② Ostavite 20 mm za vrata s leve i desne strane.
- ③ Ostavite 20 mm za debljinu vrata.

Ako je uređaj instaliran ispod kuhinjske ploče, minimalna debljina radne površine A je prikazana u nastavku:

Tip kuhinjske ploče	radna ploča A
Indukciona kuhinjska ploča	37 mm
Indukciona kuhinjska ploča punih površina	47 mm
Gasna kuhinjska ploča	30 mm
Električna kuhinjska ploča	27 mm

1. Debljina ploče ormara je 20 mm.
2. Ako je utičnica instalirana na zadnjoj strani uređaja, dubina otvora ormara treba da se poveća sa minimum 590 mm na 620 mm.
3. Dimenzije na slikama su u mm.

## Važne instrukcije za instalaciju

### ! Sadržaj koji znači [obavezno]

1. Sigurno korišćenje ovog uređaja može se garantovati samo ako je instaliran prema profesionalnim standardima u skladu sa ovim uputstvima za instalaciju. Instalater će biti odgovoran za svaku štetu koja proizađe iz nepravilne instalacije.
2. Ceo proces instalacije zahteva dva profesionalna instalatera. Nosite suve zaštitne rukavice tokom instalacije kako biste izbegli ogrebotine ili električni udar.
3. Ugrađene jedinice moraju biti otporne na toplotu do 90°C, a prednje strane susednih jedinica do 70°C.
4. Molimo koristite utičnicu od 16A.

### ⊘ Sadržaj koji znači [Zabranjeno]


1. Budite veoma oprezni prilikom pomeranja ili instalacije uređaja kako biste izbegli oštećenje uređaja ili oštećenje ormara.
2. Pre nego što uključite uređaj, uklonite sve materijale od pakovanja i dodatke iz komore.
3. Utičnica treba da bude dostupna korisnicima (na primer, pored ormara) radi lakšeg napajanja.
4. Nakon završene instalacije, proverite da li je utikač čvrsto umetnut u utičnicu.
5. Molimo vas da pogledate "Dijagram ormara" za zahteve neto dubine ormara. Razmak između donje ploče ormara i zadnje ploče (ili zida) ne sme biti manji od 50 mm.

### ⚠ Sadržaj koji znači [napomena]



1. Ne instalirajte uređaj iza dekorativnih vrata ili vrata kuhinjskog elementa, jer to može prouzrokovati pregrevanje uređaja.
2. Proverite uređaj na oštećenja nakon vađenja iz pakovanja. Ne povezujte uređaj ako je oštećen tokom transporta.
3. Ne blokirajte ventilaciju uređaja i razmak između ormara i uređaja.
4. Budite izuzetno oprezni prilikom pomeranja ili instalacije uređaja. Veoma je težak, ne podižite uređaj za ručku vrata.
5. Ako je kabl za napajanje ili utičnica oštećena, odmah prestanite sa korišćenjem uređaja kako biste izbegli požar, električni udar ili druge povrede.

## Koraci instalacije




1. Molimo prilagodite ormar prema "Dijagramu ormara".
2. Pre instalacije, proverite da li su utičnice normalne i da li je odgovarajuće uzemljenje, i proverite da li dimenzije ormara ispunjavaju zahteve za instalaciju.
3. Postavite uređaj na određena mesta u kuhinji, instalirajte ga u vertikalni ormar i povežite napajanje.
4. Da biste locirali rupe za montažu, otvorite vrata uređaja i pogledajte bočni ram uređaja (pozicija prikazana gore).
5. Fiksirajte uređaj na ormar pomoću dva gumena čepa A i šrafova B koji su isporučeni sa uređajem.

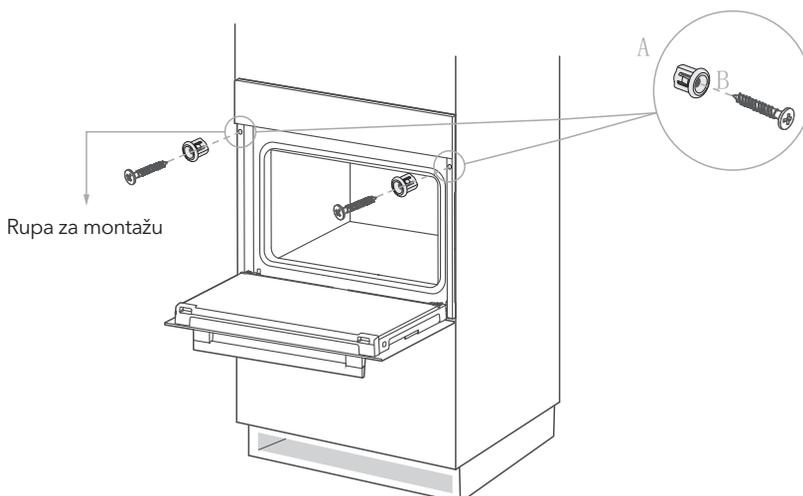

## Instalacija dodatne opreme

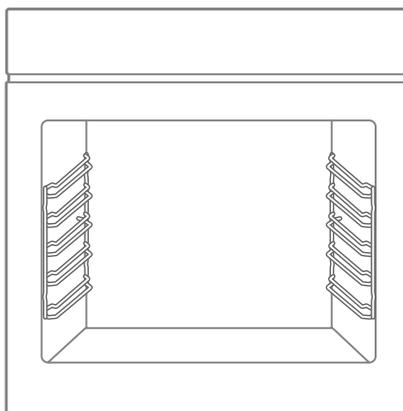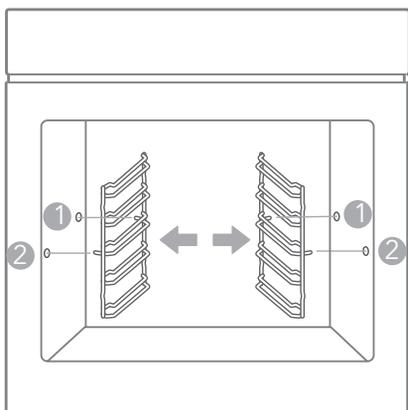

## Instalacija dodatne opreme (samo za neke modele)

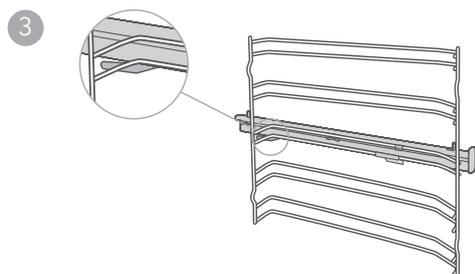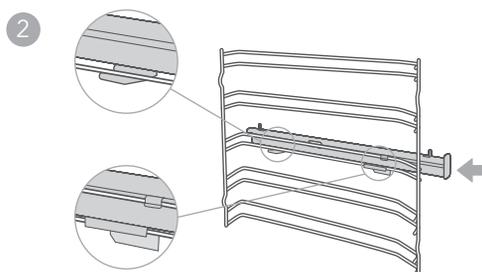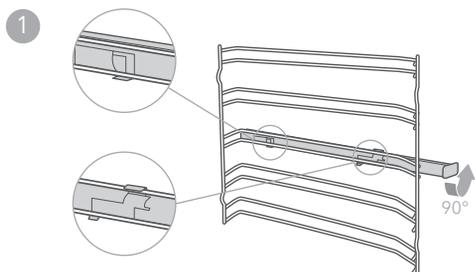

# UPUTSTVO ZA RAD

## Prva upotreba

1. Pre prve upotrebe, molimo očistite rernu i dodatke do određenog stepena. Uklonite zaštitne delove ambalaže rerne. Uklonite sve dodatke (npr. plehove, rešetke, sunder, itd.) iz komore.
2. Temeljno očistite dodatke sapunastom vodom i krpom ili mekom četkom.
3. Obrišite komoru i površine rerne mekom vlažnom krpom.
4. Da biste izbegli požar, molimo osigurajte da je komora slobodna od preostalih pakovnih materijala i dodataka kada je prvi put koristite.
5. Prilikom prve upotrebe, održavajte kuhinju dobro ventiliranom (otvorite ventilaciju i prozore). Tokom ovog vremena, držite decu i kućne ljubimce van kuhinje i zatvorite vrata susednih prostorija.
6. Da biste uklonili miris novog proizvoda, pokrenite sledeće:


Režim rerne	Temperatura	Vreme
 Konvencionalno	250°C	0.5 sata

## Podešavanje sata

Pre korišćenja rerne, podesite sat.


Ako želite ponovo da modifikujete sat, molimo pratite korake 1.

1. U režimu mirovanja, pritisnite taster "⌚"
2. Okrenite dugme K2 da prilagodite broj sati.
3. Pritisnite taster "⌚" da potvrdite.
4. Okrenite dugme K2 da prilagodite broj minuta.
5. Pritisnite taster "⌚" da završite podešavanje sata.

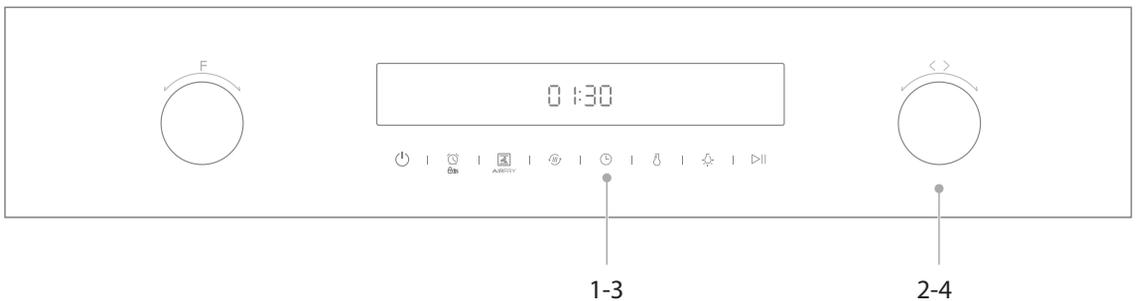

## Funkcija podsetnika

1. U režimu mirovanja i tokom kuvanja, pritisnite taster "🕒" da uđete u podešavanje podsetnika.
2. Okrenite dugme K2 da prilagodite broj sati.
3. Pritisnite taster "🕒" da potvrdite.
4. Okrenite dugme K2 da prilagodite broj minuta.
5. Pritisnite taster "🕒" da završite podešavanje.

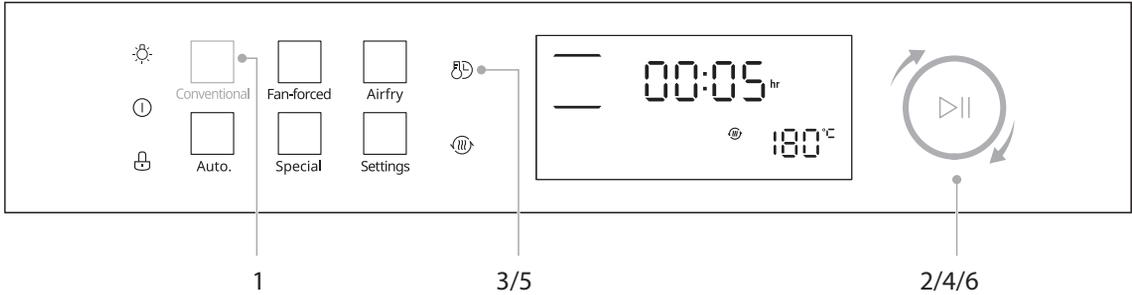


### NAPOMENA

1. Tokom kuvanja, pritisnite taster "🕒" da pregledate vreme podsećanja.
2. Podsećanje je postavljeno. Tokom kuvanja, pritisnite taster "🕒" dva puta da izmenite vreme podsećanja.

## Funkcija roštiljanja

1. U režimu mirovanja ili podsećanja, okrenite dugme K1 da odaberete funkciju.
2. Okrenite dugme K2 da prilagodite temperaturu.
3. Pritisnite "🕒" da uđete u podešavanje vremena.
4. Okrenite dugme K2 da prilagodite vreme.
5. Pritisnite taster "▶||" da započnete kuvanje.

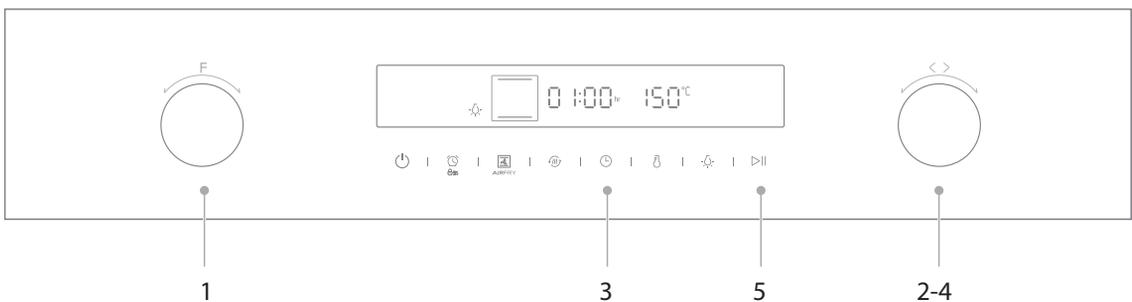

### NAPOMENA


1. Tokom kuvanja, pritisnite taster "F" da izmenite temperaturu; pritisnite taster "🕒" da izmenite vreme.
2. Tokom kuvanja, funkcija se može promeniti okretanjem dugmeta K1, a vreme ostaje nepromenjeno. Temperatura je podrazumevana temperatura trenutne funkcije i počinje da se primenjuje 6 sekundi nakon promene.

## Tabela funkcija

Broj	Ikona	Funkcija	Vreme	Temperatura	Zagrevanje
1		Konvencionalno	0-9 sati	30-250°C	Opciono
2		Konvekcija	0-9 sati	50-280°C	Opciono
3		Ušteda energije	0-9 sati	140-240°C	Ne
4		Konvencionalno + ventilator	0-9 sati	50-250°C	Opciono
5		Jedan roštilj	0-9 sati	150-250°C	Opciono
6		Dvojni roštilj + ventilator	0-9 sati	50-250°C	Opciono
7		Dvojni roštilj	0-9 sati	150-250°C	Opciono
8		Pizza	0-9 sati	50-250°C	Opciono
9		Donje grejanje	0-9 sati	30-220°C	Opciono
10		Odmrzavanje	0-9 sati	50°C	Ne
11		Fermentacija	0-9 sati	30-45°C	Ne
12		Piroliza	2 sata	450°C	Ne

## Brzo prethodno zagrevanje

1. U režimu mirovanja ili podsećanja, okrenite dugme K1 da odaberete funkciju.
2. Okrenite dugme K2 da prilagodite temperaturu.e.
3. Pritisnite "⌚" da uđete u podešavanje vremena.
4. Okrenite dugme K2 da prilagodite vreme.
5. Pritisnite taster "⏏"

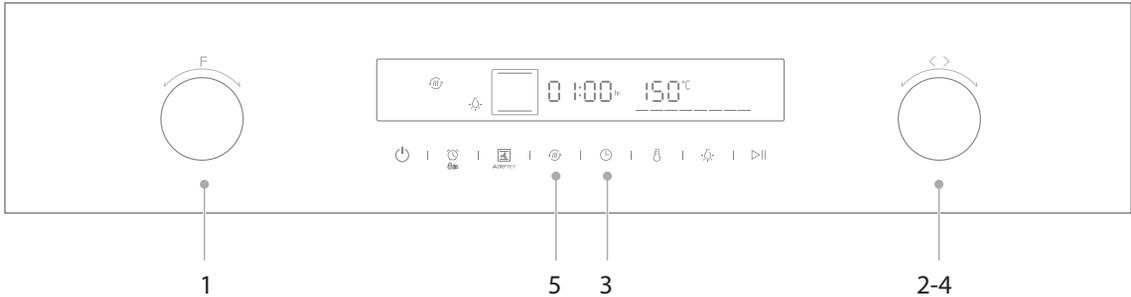

### NAPOMENA

1. Prethodno zagrevanje može skratiti vreme kuvanja i poboljšati ukus hrane.
2. Nakon prethodnog zagrevanja, stavite sastojke u rernu za kuvanje.
3. Kada se dostigne temperatura prethodnog zagrevanja, zvučnik se oglašava, a trakica napretka je uvek uključena.

## Funkcija sonde (samo za neke modele)

1. U režimu mirovanja, rastavite kratki deo sonde u rupu u gornjem desnom uglu rerne.
2. Umetnite dugi deo sonde u centar hrane (izbegavajte masnoću i kosti).
3. Okrenite dugme K1 da odaberete funkciju. ( )
4. Okrenite dugme K2 da prilagodite temperaturu.
5. Pritisnite taster "▶||" da započnete kuvanje.

## Funkcija pirolize


1. Otvorite kuhinjski prozor da obezbedite ventilaciju.
2. Uklonite sve dodatke iz komore rerne.
3. Okrenite dugme K1 da odaberete pirolitičku funkciju.
4. Pritisnite taster "▶||" da započnete.

## Funkcija zaključavanja za decu

1. Pritisnite taster "⏏" na 3 sekunde da uđete ili oslobodite režim zaključavanja za decu.

## Funkcija prženja na vrućem vazduhu (Air fry)

1. U režimu mirovanja ili podsetnika, pritisnite taster "  " AIRFRY
2. Okrenite dugme K2 da prilagodite temperaturu.
3. Pritisnite "  " da uđete u podešavanje vremena.
4. Okrenite dugme K2 da prilagodite vreme.
5. Pritisnite taster "  " da započnete kuvanje.

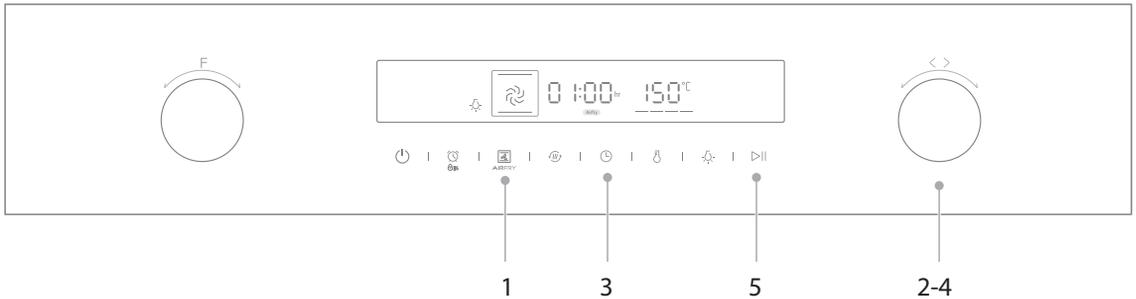


### NAPOMENA

1. Tokom kuvanja, pritisnite taster "  " da izmenite temperaturu; pritisnite taster "  " da izmenite vreme.

## Automatski meni

1. U režimu mirovanja, pritisnite i držite taster "  " na 3 sekunde da uđete u podešavanje automatskog menija. AIRFRY
2. Okrenite dugme K2 da izaberete meni.
3. Pritisnite taster "  " da započnete kuvanje.

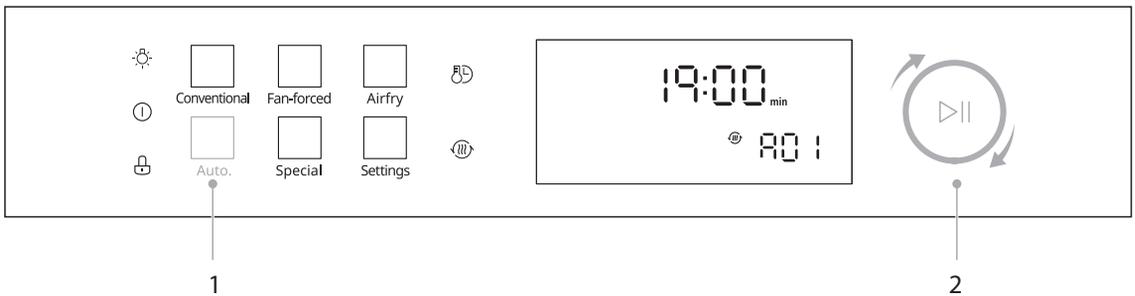

### NAPOMENA

1. Za meni bez programa prethodnog grejanja, odbrojavanje počinje odmah nakon što je pokrenut.
2. Za meni sa programom prethodnog grejanja, potrebno je sačekati da se prethodno završi pre nego što stavite sastojke u renu.

## Tabela automatskog menija

Kod	Naziv menija	Težina	Režim	Vreme	Temperatura	Zagrevanje
Ar01	Pomfrit	350g	 AIRFRY	19min	200°C	Da
Ar02	Pomfrit	750g	 AIRFRY	23min	230°C	Da
Ar03	Pileća krilca	500g	 AIRFRY	20+10min	250°C	Ne
Ar04	Pileća krilca	1000g	 AIRFRY	20+12min	250°C	Ne
Ar05	Pileći nugget	200g	 AIRFRY	17min	250°C	Da
Ar06	Površni nugget	180g	 AIRFRY	11.5min	250°C	Da
Ar07	Mocarela pomfrit	120g	 AIRFRY	10min	250°C	Da
Ar08	Prstenovi crnog luka, debelo sečeni	160g	 AIRFRY	11.5min	220°C	Da
Ar09	Pohovane pečurke	125g	 AIRFRY	13min	230°C	Da
Ar10	Pohovane pečurke	250g	 AIRFRY	13min	230°C	Da

## Predložena tabela menija

Naziv menija	Forma	Režim	Vreme	Temperatura	Nivo
Biskvit (jednostavan) u obliku kutije	Kutija		50min	170°C	2
Biskvit (jednostavan) u obliku kutije	Kutija		70min	140°C	1
Biskvit sa voćem u okruglom obliku	Okrugli oblik		50min	150°C	1
Biskvit sa voćem u plehu	Pleh		70min	140°C	1
Brioš mafini sa rozinama	Oblik za mafine		Zagrevanje: 19min Pečenje: 11min	220°C	2

Naziv menija	Forma	Režim	Vreme	Temperatura	Nivo
Gugelhupf (sa kvascem)	Pleh		Zagrevanje: 11min Pečenje: 60min	150°C	1
Mafini	Oblik za mafine		Zagrevanje: 8.5min Pečenje: 30min	160°C	1
Mafini	Oblik za mafine		Zagrevanje: 8.5min Pečenje: 30min	150°C	1
Jabukov biskvit sa kvascem u plehu	Pleh		Zagrevanje: 10min Pečenje: 42.5min	160°C	1
Biskvit od vode (6 jaja)	Oblik za torte sa oprugom		Zagrevanje: 9.5min Pečenje: 41min	160°C	1
Biskvit od vode (4 jaja)	Oblik za torte sa oprugom		Zagrevanje: 9min Pečenje: 26min	160°C	1
Biskvit od vode	Oblik za torte sa oprugom		Zagrevanje: 9.5min Pečenje: 41min	160°C	1
Jabukov biskvit sa kvascem u plehu	Pleh		Zagrevanje: 8min Pečenje: 42min	150°C	2
Hefezopf (halva)	Pleh		40min	150°C	2
Mali kolači 20	Pleh		36min	150°C	2
Mali kolači 40	Pleh		Zagrevanje: 10min Pečenje: 34min	150°C	2+4
Biskvit sa puterom	Pleh		Zagrevanje: 8min Pečenje: 30min	150°C	2
Keks	Pleh		Zagrevanje: 8min Pečenje: 13min	170°C	2
Keks 2 pleha	Pleh		Zagrevanje: 8.3min Pečenje: 12min	160°C	2+4
Vanilice	Pleh		Zagrevanje: 8min Pečenje: 10min	160°C	2
Vanilice	Pleh		Zagrevanje: 8min Pečenje: 14min	150°C	2+4
Beli hleb (1 kg brašna) u obliku kutije	Kutija		Zagrevanje: 9min Pečenje: 50min	170°C	1
Beli hleb (1 kg brašna) u obliku kutije	Kutija		Zagrevanje: 12min Pečenje: 45min	170°C	1

Naziv menija	Forma	Režim	Vreme	Temperatura	Nivo
Sveža Pica (tanka)	Pleh		Zagrevanje: 9.5min Pečenje: 21min	170°C	2
Sveža Pica (deblja)	Pleh		Zagrevanje: 10min Pečenje: 45min	170°C	2
Sveža Pica (deblja)	Pleh		Zagrevanje: 8min Pečenje: 41min	170°C	2
Hleb	Pleh		Zagrevanje: 9min Pečenje: 30min	190°C	1
Govedi file 1.6 kg	Pleh		55min	180°C	2
Mesna vekna	Pleh		75min	180°C	1
Piletina 1 kg	Pleh		50min	180°C	Rešetka: 2 Pleh: 1
Riba 2.5 kg	Pleh		70min	170°C	2
Rebra tomahawk kuvana B.T.	Pleh		85min	120°C	3
Pečeni svinjski vrat 1.2 kg	Pleh		82min	160°C	1
Piletina 1.7 kg	Pleh		78min	180°C	Rešetka: 2 Pleh: 1

**Demo mod**

1. U režimu mirovanja, pritisnite i držite taster "⏻" da biste ušli u podešavanje demo moda, a početno stanje je ISKLJUČENO.
2. Okrenite dugme K2 da uključite ili isključite demo mod.

**NAPOMENA**

1. Demonstracioni mod, sa funkcijom očuvanja podataka pri isključenju napajanja. Na primer, kada je demo mod uključen, isključite uređaj i ponovo ga uključite, demo mod će i dalje biti uključen.
2. Možete pritisnuti taster za otkazivanje da izađete iz podešavanja, ili sačekati 3 sekunde da automatski izađete iz podešavanja demo moda i vratite se u režim mirovanja.
3. Kada je demo mod uključen, grejna cev ne radi nakon pokretanja funkcije.

**Sabbath mod**

1. U stanju pripravnosti, pritisnite taster "⏻" na 3 sekunde da biste ušli u Sabbath mod.
2. Okrenite dugme K2 da podesite vreme. (24~80 sati).
3. Pritisnite taster "▶||" da pokrenete, i prikazaće se 5A8.

**NAPOMENA**

1. Sabbath mod ima funkciju očuvanja podataka pri isključenju napajanja. Podaci o kuvanju se čuvaju svakih 25 minuta. Ako dođe do prekida napajanja tokom rada, nakon ponovnog uključanja, Sabbath mod će nastaviti da radi dok vreme kuvanja ne dođe do 0, ili pritisnite taster da biste se vratili u režim mirovanja.
2. Tokom rada, samo taster "⏻" je funkcionalan, dok su ostali tasteri neaktivni.
3. Tokom rada, lampa ne radi.

# ČIŠĆENJE I ODRŽAVANJE

## Čišćenje

Isključite napajanje pre čišćenja i održavanja.

Da biste osigurali dug vek retni, potrebno je često i temeljno čišćenje. Koraci čišćenja su sledeći:


1. Nakon kuvanja, sačekajte da se rena potpuno ohladi.
2. Izvadite dodatke iz rene, isperite ih toplom vodom i osušite.
3. Očistite ostatke hrane iz unutrašnjosti rene. Ostatke možete ukloniti ručno ili pomoću pirolitičke funkcije.
4. Obrišite renu mekom krpom natopljenom deterdžentom, a zatim suvom mekom krpom.

### NAPOMENA


1. Nemojte koristiti oštre alate, tvrdi četku i korozivne proizvode za čišćenje, kako ne biste oštetili renu i njene dodatke.
2. Nemojte koristiti gruba abrazivna sredstva ili oštre metalne špatule za čišćenje stakla na vratima.

## Zamena lampe

1. Da biste sprečili oštećenje lampe, stavite peškiri u unutrašnjost.
2. Okrenite u suprotnom smeru kazaljke na satu da uklonite stakleni poklopac (ugao lampe); Pažljivo otvorite stakleni poklopac ravnim alatom (bočna lampica).
3. Izvucite fitilj i zamenite ga (ne okrećite).
4. Vratite stakleni poklopac i izvadite peškiri.

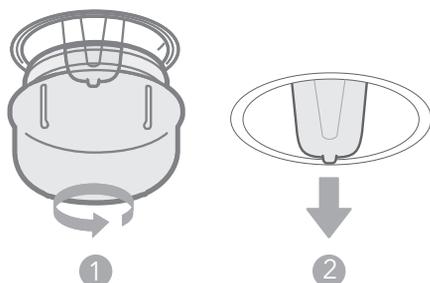

Ugaona lampica

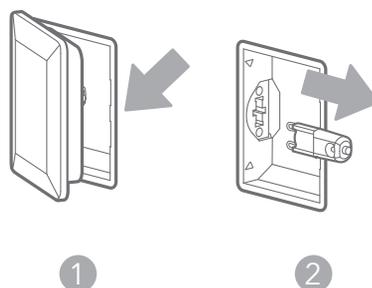

Bočna lampica

Samo za neke modele

### UPOZORENJE!

Da biste izbegli električni udar, molimo vas da osigurate da je napajanje uređaja isključeno i da je uređaj potpuno hladan pre nego što uklonite stakleni deo lampe.

## SPECIFIKACIJE

Napajanje	220-240V~, 50Hz-60Hz
Električna snaga	3.2kW
Snaga lampe	25*2W
Veličina proizvoda	72L

## Čišćenje vrata


Uz dobru negu i čišćenje, vaš uređaj će zadržati svoj izgled i ostati potpuno funkcionalan još dugo vremena. Za potrebe čišćenja i uklanjanja panela vrata, možete odvojiti vrata uređaja. Na levim i desnim šarkama vrata uređaja nalazi se poluga za zaključavanje. Kada su poluge za zaključavanje zatvorene, vrata uređaja su obezbeđena na mestu. Ne mogu se odvojiti. Kada su poluge za zaključavanje otvorene da bi se odvojila vrata uređaja, šarke su zaključane. Ne mogu se zatvoriti.

### UPOZORENJE!

1. Šarke na vratima uređaja se pomeraju prilikom otvaranja i zatvaranja vrata, i možete se uhvatiti. Držite ruke dalje od šarki.
2. Ako šarke nisu zaključane, mogu se snažno zatvoriti. Osigurajte da su poluge za zaključavanje uvek potpuno zatvorene ili, kada odvajate vrata uređaja, potpuno otvorene.

### Uklanjanje i postavljanje vrata reme

1. Potpuno otvorite vrata uređaja.
2. Preklopite dve poluge za zaključavanje na levoj i desnoj strani.
3. Zatvorite vrata uređaja do tačke zaustavljanja.
4. Obema rukama uhvatite vrata sa leve i desne strane i povucite ih nagore.
5. Plastični umetak u poklopcu vrata može izgubiti boju. Da biste izvršili temeljno čišćenje, možete ukloniti poklopac. Pritisnite leve i desne prekidače na poklopcu.
6. Nakon uklanjanja poklopcu vrata, ostale delove vrata uređaja možete lako ukloniti kako biste nastavili sa čišćenjem. Kada završite sa čišćenjem vrata uređaja, vratite poklopac na mesto i pritisnite ga dok se ne čuje jasno "klik".

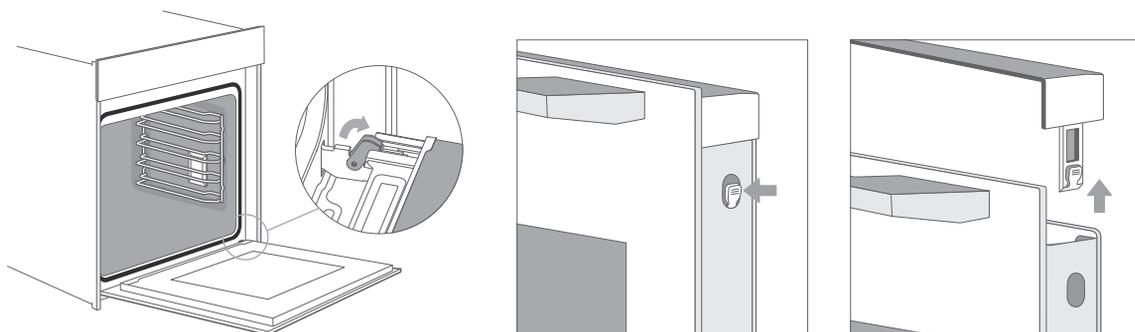

### NAPOMENA

Ponovo postavite vrata uređaja obrnutim redosledom od uklanjanja.

# REŠAVANJE PROBLEMA

Ako problem ne može biti rešen ili se pojave drugi problemi, molimo vas da kontaktirate službu za korisnike.

Problem	Mogući uzrok	Rešenje
Nemogućnost pokretanja	• Napajanje nije povezano	• Povežite napajanje
	• Glavni prekidač napajanja nije uključen	• Uključite prekidač napajanja
	• Vrata rerne nisu zatvorena	• Zatvorite vrata rerne
Lampa se ne pali	• Oštećeno je	• Kontaktirajte službu za korisnike
Jak miris ili dim	• Prva upotreba	• Nema potrebe za obradom
Hrana nije skuvana	• Temperatura je preniska	• Koristite višu temperaturu
	• Porcija hrane je prevelika	• Kuvajte hranu u manjim komadima ili produžite vreme kuvanja.
Zapečena ili nejednako pečena hrana	• Temperatura je postavljena previsoko ili je vreme grejanja predugo	• Podesite temperaturu kuvanja ili vreme
	• Hrana je previše blizu grejne cevi	• Podesite slojeve za postavljanje dodataka
Ventilator nije prestao da radi nakon gašenja grejanja	• Ventilator kasni sa duvanjem za disipaciju toplote	• Nema potrebe za obradom

## ODLAGANJE I RECIKLAŽA

### Važne instrukcije za zaštitu životne sredine



Usaglašenost sa WEEE direktivom i odlaganje otpadnog proizvoda:

Ovaj proizvod je u skladu sa EU WEEE direktivom (2012/19/EU). Ovaj proizvod nosi oznaku za otpadnu električnu i elektronsku opremu (WEEE).



Ova oznaka ukazuje da se ovaj proizvod ne sme odlagati sa drugim kućnim otpadom na kraju svog veka trajanja. Korišćeni uređaji moraju se vratiti na zvaničnu tačku prikupljanja za reciklažu električnih i elektronskih uređaja. Da biste pronašli ove sisteme prikupljanja, obratite se lokalnim vlastima ili prodavcu kod kojeg je proizvod kupljen. Svaka domaćinstvo ima važnu ulogu u oporavku i reciklaži starih uređaja. Pravilno odlaganje korišćenih uređaja pomaže u sprečavanju potencijalno negativnih posledica za životnu sredinu i ljudsko zdravlje.

### Usaglašenost sa RoHS direktivom

Proizvod koji ste kupili je u skladu sa EU RoHS direktivom (2011/65/EU). Ne sadrži štetne i zabranjene materijale navedene u direktivi.

### Informacije o pakovanju



Materijali za pakovanje proizvoda su proizvedeni od reciklabilnih materijala u skladu sa našim nacionalnim propisima o zaštiti životne sredine. Ne odlažite materijale za pakovanje zajedno sa domaćim ili drugim otpadom. Onesite ih na tačke prikupljanja materijala za pakovanje koje su odredile lokalne vlasti.

TESLA

tesla.info



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Tesla, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/tesla-ugradna-rerna-bo910mbp-akcija-cena/>