

Uputstvo za upotrebu (EN)

BUYDEEM toster DT640E-Cozy Greenish

BUYDEEM



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/buydeem-toster-dt640e-cozy-greenish-akcija-cena/>

BUYDEEM

DT640

4Slice Metal Toaster
INSTRUCTION MANUAL




BUYDEEM

Shenzhen Buydeem Technology Co., Ltd

Room 3801, Building A, Tanglangcheng West, No.3333 Liuxian
Boulevard, Nanshan District, Shenzhen, China.

DT640-91-A1

 Please refer to the real product in case of any change.

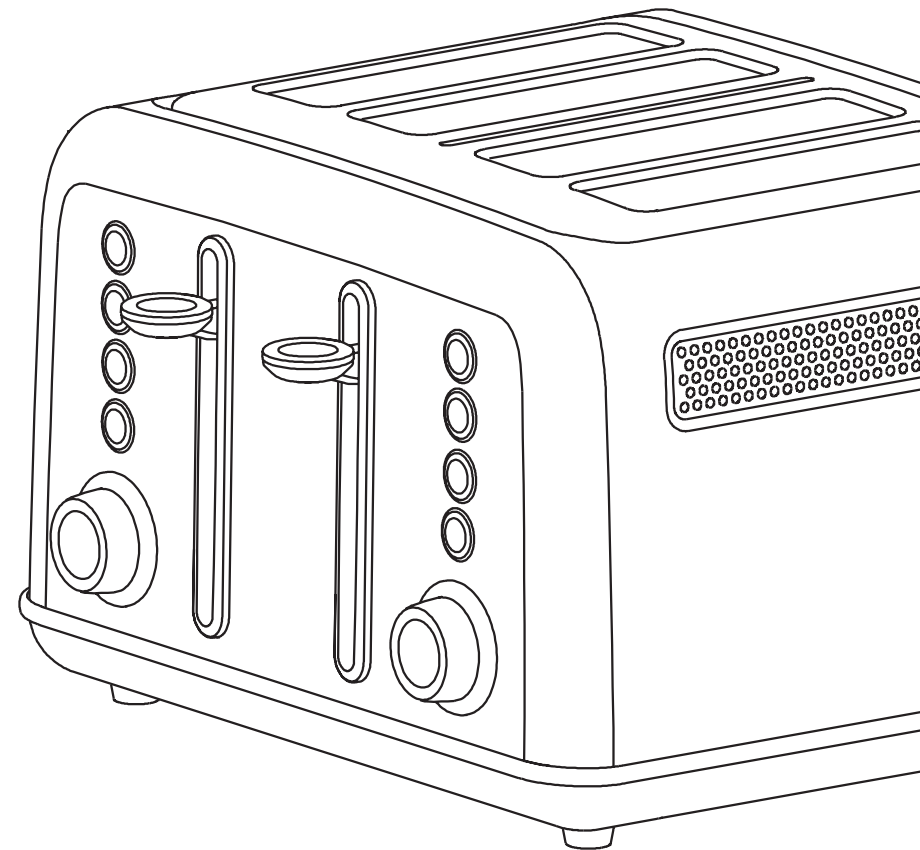

Thank you for purchasing BUYDEEM product. For your safety and continued enjoyment of this product, always read the instruction manual carefully before using.

TABLE OF CONTENTS:

Important safeguards	02~03
Features and Benefits	04~05
Use and Care	06~09
Cleaning and Maintenance	10~11
Warranty	12

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be taken, including the following:

1. Read all instructions.
2. **Always unplug from outlet when not in use and before cleaning. Allow to cool before cleaning or handling.**
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against electrical shock, do not place any part of the toaster in water or other liquids. See instructions for cleaning.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or if it is not operating properly. Return the toaster to the store or retailer where purchased for examination or repair.
7. The use of accessory attachments not recommended by BUYDEEM may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or countertop or touch hot surfaces.
10. Do not place toaster on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster for other than its intended use.
12. Oversized foods, metal foil packages or utensils must not be inserted in the toaster, as they may involve a risk of fire or electric shock.
13. A fire may occur if the toaster is covered or touching flammable materials, such as curtains, draperies or walls, when in operation.
14. Do not attempt to dislodge food when the toaster is plugged into electrical outlet.
15. To avoid possibility of fire, do not leave toaster unattended during use.
16. To disconnect, push the Cancel button, then remove plug from wall.
17. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
18. When heating toaster pastries, always use the lightest toast color setting.

IMPORTANT SAFEGUARDS

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

Name	Toaster		Model	DT640	
Voltage	120V, 60Hz	Power	1800W	Capacity	4Slice
Materials	Food grade materials including Stainless steel 430 & 220, Aluminum sheet				

FEATURES AND BENEFITS

1. **Toasting slots**

Toaster slots toast a variety of items.

2. **Cancel Button**

Interrupts toasting process.

3. **Extra-Lift Carriage Control Lever**

Brings the toast close to the top of the toaster, making it easy to remove the smallest items.

4. **Bagel / Muffin Button**

Reduces heat on uncut side of bagel.

LED lights when selected.

5. **Defrost Button**

Defrosts and toasts frozen bread.

LED lights when selected.

6. **Reheat Button**

Reheats without browning or toasting.

LED lights when selected.

7. **Browning Control**

Slide lever sets selected shade. 7 browning levels toast from light to dark.

 
8. **Cord Storage**

Takes up excess cord and keeps countertop neat.

9. **Slide-out Crumb Tray**

Pulls out to clean crumbs that collect in bottom of toaster.

FEATURES AND BENEFITS

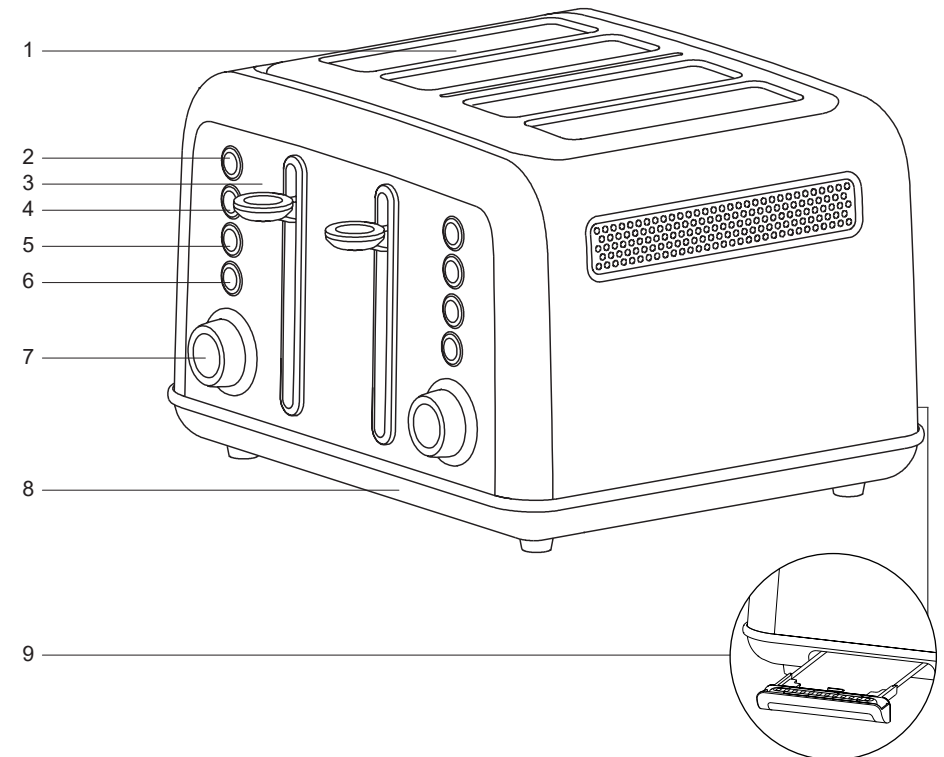


USE AND CARE

Unwind the power cord. Make sure the crumb tray is in place and there is nothing in the toaster slots.

1. Insert Slice(s) of Bread

 
Be sure that the carriage is in the up position.

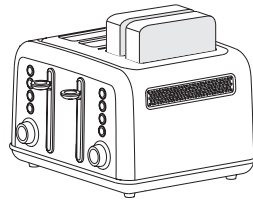

2. Set the Browning Control

Slide lever to the desired position:


Lever Setting	Color
1-2	light
3-5	medium
6-7	dark

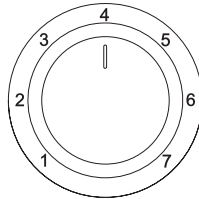 

3. To Begin Toasting

Press the carriage control lever until it locks into the down position.

 NOTE: The Cancel button will illuminate with a white light when the toaster is in operation.

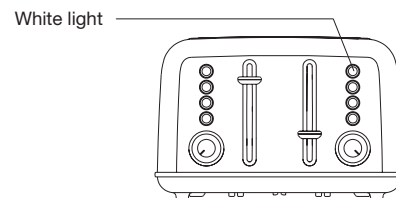

4. To Stop Cycle

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply press the Cancel button. After use, unplug the toaster from the electrical outlet.

USE AND CARE

Some Notes on Browning:

Toasting is a combination of cooking and drying of the bread. Therefore, differences in moisture level from one bread to another could result in different toasting times.

- For slightly dry bread, use a lower setting than you daily use.
- For very fresh bread or whole-wheat bread, use a higher setting than you daily use.
- Breads with very uneven surface (such as English muffins) require a higher toast setting.
- Thickly cut pieces of bread (including bagels) will take longer to toast. Since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may need toast two times.
- When toasting raisin or other fruit breads, remove any loose raisins, etc., from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slot.

- Before toasting bagels, slice each bagel into two equal halves.

• Frozen Waffles, Pancakes, French Toast and Frozen Bagels:

These items should be warmed before toasting, using the Defrost function. Select your preferred browning shade. Press carriage lever and then select Defrost. For example, when toasting a frozen bagel, select the browning level, press carriage lever, then Bagel button and Defrost. White Bagel and Defrost lights indicate these features are active.

• Toaster Pastries:

Exercise caution with toaster pastries; the filling can become quite hot, long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming.

 
USE AND CARE

Bagel/Muffin Button

The **Bagel feature** just toasts the cut side of bagel, no toasting on the other side.

1. Insert slice(s) of bread or halved bagels.


Be sure that carriage is in the up position, and put the cut side of bagel on the mid of slots.

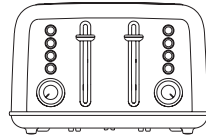

2. Set the browning control.

3. Press the carriage lever until it locks into position.


 
4. Press Bagel/Muffin button. White LED indicates bagel feature is activated.

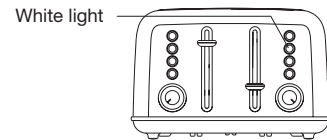

The **Muffin feature** will toast on both side for English muffin.

1. Insert slice(s) of English muffin.

  Be sure that carriage is in the up position.

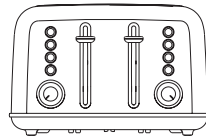


2. Set the browning control.

3. Press the carriage lever until it locks into position.

4. Press Bagel/Muffin button for over two seconds.

Red LED indicates bagel feature is activated.

 Press over two seconds, red light.

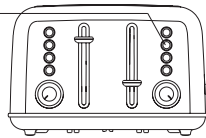

To Stop Cycle:

When the cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simple press the Cancel button to finish the toasting. After use, please unplug your toaster from the electrical outlet

USE AND CARE

Defrost Button

The Defrost button is designed to first defrost and then toast the bread, which extends the toasting cycle slightly.

1. Insert slice(s) of bread.

Be sure that the carriage lever is in the up position.

2. Set the Browning control.

3. Press the carriage control lever until it locks into position.

4. Press the Defrost button. White LED indicates feature is activated.

Reheat Button

The reheat feature allows you to reheat bread without browning or toasting.

1. Insert Slice(S) of bread.

Be sure that the carriage lever is in the up position.

2. Press the carriage control lever until it locks into position.

3. Press the reheat button. White LED indicate feature is activated.

To Stop Cycle:

When the cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simple press the Cancel button to finish the toasting. After use, please unplug your toaster from the electrical outlet

Tips:

- Never force foods into toasting slot. Foods should fit freely between the guide wires.
- Do not place buttered breads in toaster, as this could create a fire hazard.
- Uneven toasting is usually due to bread slices of uneven thickness.
- After use, unplug your toaster from the electrical outlet.

CLEANING AND MAINTENANCE

Always allow the toaster to cool completely before cleaning.

1. Always unplug the toaster from the electrical outlet.
2. Do not use abrasive cleansers. Simply wipe the exterior with a clean, damp cloth and dry thoroughly. Apply any cleaning agent to a cloth, not to the toaster before cleaning.
3. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. Never operate the toaster without crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slot, as this could damage toaster and cause a safety hazard.
5. Never wrap the cord around the outside of the toaster. Use the cord storage cleats on the underside of the toaster.
6. Any other servicing should be performed by an authorized service representative.

CLEANING AND MAINTENANCE

Warranty and service instructions.

- If the product is damaged, please contact the after-sales customer service center of selling channel or send to the service maintenance place for repair.
- The warranty is limited to the product defects and damage caused by correct use according to the instruction manual. Damaged caused by improper use or other non-product quality issues will be charged for maintenance.
- If you need more information or service, please contact the after-sales center of purchase channel, or visit BUYDEEM website: buydeemglobal.com.

No free maintenance is allowed if Fault caused by failure to operate according to the user manual

- Damage caused by improper use, storage and maintenance.
- Damage caused by assembly, disassembly and repair by our company's non-designated maintenance department.
- Damage caused by force majeure.

In order to protect the customer's interests, BUYDEEM reserves the right to modify the product features and the components so as to ensure the normal use of product.

WARRANTY

Warranty card

BUYDEEM

Dear Customer,

Thank you so much for your purchase! The product comes with a ONE-YEAR warranty.

Should you ever needs one, please have the following information handy when contacting us:

Product Model No.: _____ **Product Name:** _____

Factory Serial No.: _____ **Order Date:** _____

Order ID: _____ **Customer Name:** _____

Customer Phone: _____ **Customer email:** _____

Please feel free to email us if have any questions or concerns.

Customer service email: support@buydeemshop.com

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda BUYDEEM, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/buydeem-toster-dt640e-cozy-greenish-akcija-cena/>