

Uputstvo za upotrebu (EN)

BUYDEEM toster DT730E-Ink Grey

BUYDEEM



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/buydeem-toster-dt730e-ink-grey-akcija-cena/>

BUYDEEM

DT730

2Slice Automatic Toaster
INSTRUCTION MANUAL




BUYDEEM

Shenzhen Crastal Technology Co.,Ltd

Block 7&8, D Industrial Zone, Buchong, Shajing, Bao' an, Shenzhen City,
Guangdong province P.R.China

DT730-91-A1

Please refer to the real product in case of any change.

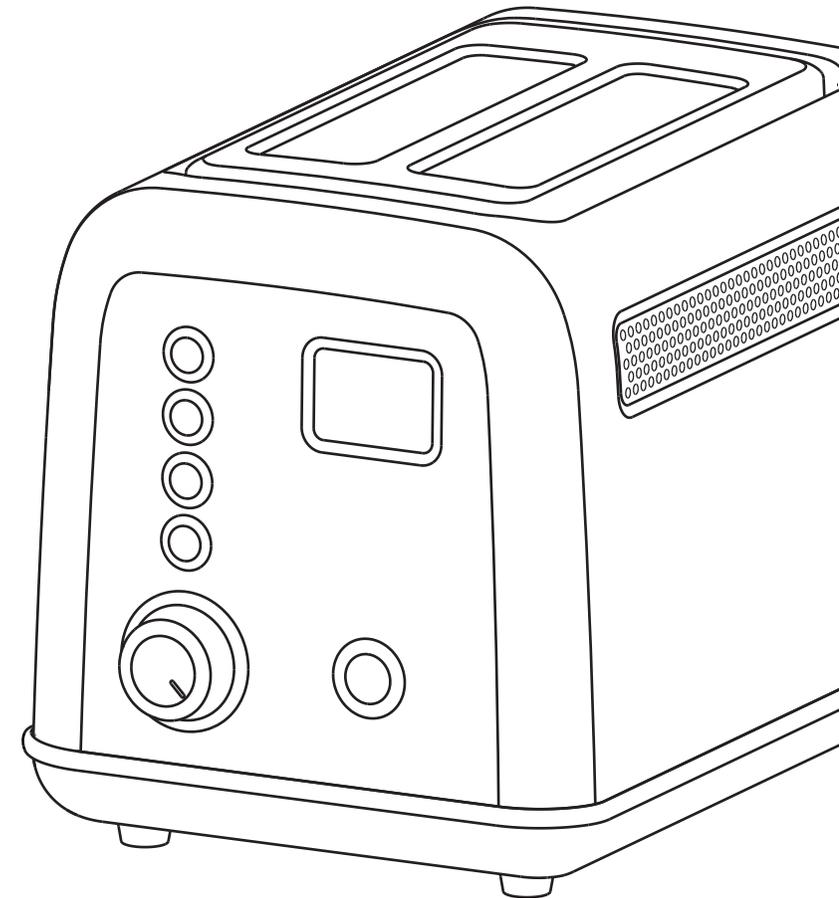

**Thank you for purchasing the BUYDEEM product.
Please read this manual and related illustrations carefully
before using this product to grant you access to complete
support from BUYDEEM.**

Contents:

| | |
|--------------------------|-------|
| IMPORTANT SAFEGUARDS | 02~03 |
| Technical Specifications | 03 |
| Understanding Product | 04~05 |
| Using Product | 06~10 |
| Special Feature | 11 |
| Cleaning and Storage | 12 |
| Simple troubleshooting | 13 |
| Warranty and maintenance | 14~15 |

NOTICE

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- Do not touch hot surface. Use handles or knobs.
- To protect against electrical shock do not immerse cord, plug, or (state specific part or parts in question) in water or other liquids.
- Close supervision is necessary when and appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by BUYDEEM may cause injury.
- When heating toaster pastries, always use the lightest toast color setting.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Oversized foods, metal foil packages or utensils must not be inserted in the toaster, as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- To avoid possibility of fire, do not leave toaster unattended during use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
- Do not attempt to dislodge food when toaster is plugged in .
- Sort Cord Instruction:
 - a) A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
 - b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

NOTICE

c) If a longer detachable power-supply cord or extension cord is used:

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

Household Use Only Save These Instructions.

Technical Specifications

| | | | | | |
|---------------|-------------------------------------------------------------|-------------|---------------|----------|--------|
| Product Name | Toaster | | Product Model | DT730 | |
| Rated Voltage | 120Vac, 60Hz | Rated Power | 900W | Capacity | 2Slice |
| Materials | Food-Grade Materials including SUS430 & 220, Aluminum sheet | | | | |

UNDERSTANDING PRODUCT

1. Toasting slots

Wide slots toast a variety of items.

2. Bagel Icon

Place bagel properly for toasting.

3. Bagel Button

Press the button, to perfectly toast the cut side of bagel.
LED lights when selected.

4. Muffin Button

Press the button for muffin toasting.
LED lights when selected.

5. Defrost Button

Press the button, defrost and toast the frozen bread.
LED lights when selected.

6. Reheat Button

Press the button, reheats only without browning or toasting.
LED lights when selected.

7. Toast/Cancel Button

Press the button, activates toasting cycle or cancel toasting process.
LED lights when selected.

8. Control Knob

Turn the knob, browning settings from light to dark with nice browning levels.

9. LCD Countdown Window

Displays the browning settings selected, and counting down that you know when the toasting is ready.


10. Slide-out Crumb Tray

Pull out to clean crumbs that collect in bottom.

11. Cord Storage

Storage power cord on bottom and keep countertop neat.

UNDERSTANDING PRODUCT

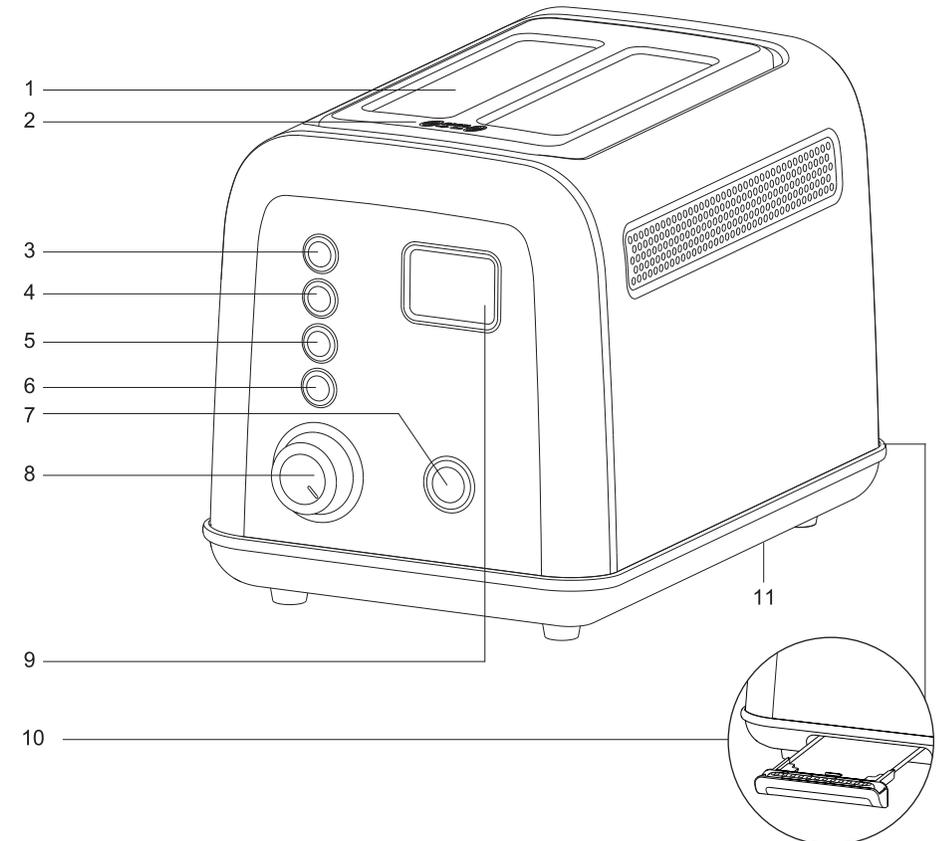


USING PRODUCT

First use


1. Remove all packaging, labels and accessories inside and outside the toaster before the first use.
2. During the first use, turn on the power and do not put any bread in it; select high setting (7 to 9) and press “Toast/Cancel” button, and wait for the program to complete. Repeat this empty toasting action 2-3 times.

Note:

- Do not soak the toaster in water or rinse it with water;
- When toaster is working, do not touch the body with your hands or place your hands near the bread slot.

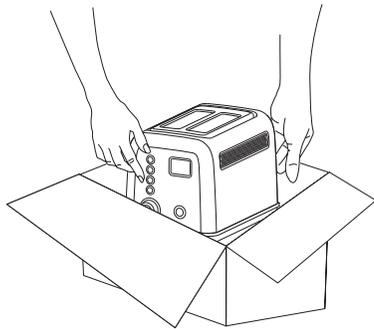

Empty toasting for 2-3 times

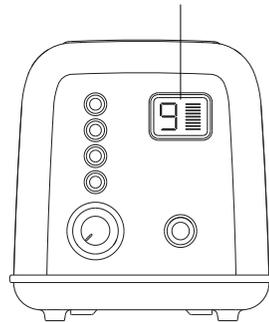


USING PRODUCT

Introduction to usage modes

Unplug the power cord and check that the crumb tray is in place and make sure there is no food in slot.

Step 1: Put the slices of bread into the slot

This toaster has 2 slots and can hold up to 1 piece of bread in each of the 2 slots at one time.

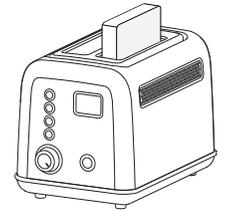

Tips:

- Never force food into toasting slot, and should fit freely between guide wires.
- Do not place buttered breads in toaster, as this could cause a fire hazard.

Step 2: Select browning setting


Turn the control knob(+/-), the LCD displays the browning setting selected. There are 9 settings for selecting and the browning levels increase from setting 1 to 9.

| Browning Settings | Shade |
|-------------------|--------|
| 1-3 | light |
| 4-6 | medium |
| 7-9 | dark |

Step 3: Select function mode

“bread” mode

Insert slice(s) bread and turn the control knob to select desired toasting setting. Press the “Toast/Cancel” button to start, white LED indicates mode is activated.

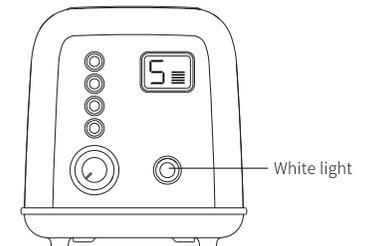


USING PRODUCT

“Bagel” mode

Insert the half-cut bagel into slot, make sure the cut side should always face toward the centre of toaster. An embossed icon located on the top of toaster, shows you the right way to insert the bagel.


Press the “Bagel” and “Toast/Cancel” button to start, both white LED indicates the mode is activated.

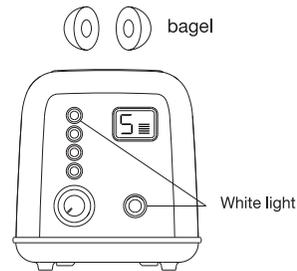

“Muffin” mode

Insert the muffin into slot, turn the control knob to select desired toasting setting.

Press the “Muffin” and “Toast/Cancel” button to start, both white LED indicates the mode is activated.

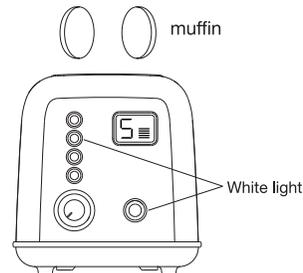

“Defrost” mode

This mode is designed to first defrost and then toast the bread, which extends the toasting cycle slightly.

Insert slice(s) bread and turn the control knob to select desired toasting setting.

Press the “defrost” and “Toast/Cancel” button to start, both white LED indicates mode is activated.

“Defrost + Bagel” mode

This mode is designed to first defrost and then toast the bagel, which extends the toasting cycle slightly.

Insert the half-cut bagel into slot and turn the control knob to select desired toasting setting.

Press the “Bagel”, “defrost” and “Toast/Cancel” button to start, three white LED indicates the mode is activated.

USING PRODUCT

“Defrost + Muffin” mode

This mode is designed to first defrost and then toast the muffin, which extends the toasting cycle slightly.

Insert the muffin into slot and turn the control knob to select desired toasting setting.

Press the “Muffin”, “defrost” and “Toast/Cancel” button to start, three white LED indicates the mode is activated.

“Reheat” mode

This mode is designed to reheat without browning.

Insert the bread into slot. Press “Reheat” and “Toast/Cancel” buttons to start, both white LED indicates the mode is activated.

Tips:

when selected reheat mode, you could not select bagel, muffin or defrost mode at the same time.

To stop the mode

When above modes are completed, the toaster will raise the bread automatically. If you want to stop the mode before finishing, simple press the “Toast/Cancel” button to end the toasting. After use, please unplug your toaster from electrical outlet.

Step 4: Take out the bread

After the toasting process is ended, the toaster will beep 3 sounds and the bread lift up automatically.

Tips:

- After use, please unplug your toaster from electrical outlet.
- If the bread is stuck in the trough, pull out the plug and carefully take the bread out after the product has cooled down.
- Do not use knives or other sharp tools, avoid damage to the metal parts in slots.

USING PRODUCT

Some Notes on Browning:

Toasting is a combination of cooking and drying of the bread. Therefore, the difference in moisture level from one bread to another can result in varying toasting times.


- For slightly dry bread, use a lower setting than you use normally.
- For very fresh bread or whole-wheat bread, use a higher setting than you use normally.
- Breads with very uneven surface(such as English muffins) will require a higher toast setting.
- Thickly cut pieces of bread(including bagels) will take longer to toast. Since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose raisins from bread surface before placing into toaster. This will help prevent fruit pieces from falling into toaster or sticking on the guide wires in the slot.
- Before toasting bagels, slice each bagel into two equal halves.
- Frozen waffles, Pancakes, French Toast and Frozen Bagels: these items should be warmed before toasting by using the Defrost function. For example, when toasting a frozen bagel, turn the control knob and select your preferred browning setting, press the Bagel and Defrost button, then press Toast/Cancel button to start. White Bagel and Defrost lights indicate these features are active.
- Toaster Pastries: Exercise caution with toaster pastries; the filling can become quite hot, long before the surface of pastries becomes browned. Never leave toaster pastries unattended during toasting or warming.

SPECIAL FEATURES

Special memory function setting


When toaster plug on, it is defaulted to setting 5 on LCD countdown display. In order to convenient for daily operation, you can change the default setting to the corresponding settings of your favorite taste.

1. Press and hold “Defrost” and “Reheat” buttons for more than 2 seconds simultaneously, The LCD countdown display starts flashing, means enter the “Memory Function Setting”

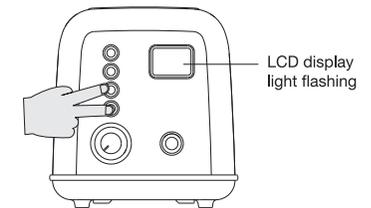

2. Turn the control knob and select the default setting of your favorite taste.

3. Press the “Toast/Cancel” button and the toaster will beeps 3 times. Then the “Memory Function Setting” is completed.

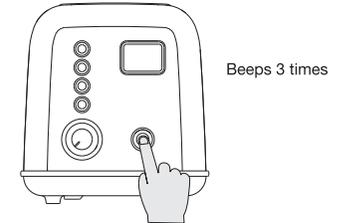

4. Next time when plug on, the LCD countdown display will default the setting you selected.

Tips:

When enter the “Memory Function setting”, the “Toast/Cancel” button is not pressed within 15 seconds, the toaster will make 3 times very quick beeps to exit the setting.

CLEANING AND STORAGE

1. Cleaning and Storage

- Unplug the toaster before cleaning it. Clean or storage the toaster after it has cooled down completely.
- Please wipe the surface of toaster with a clean wet cloth. Do not use corrosive detergent or metal appliances to wipe.
- When you want to clean the slot inside, turn the toaster upside down and shake it gently until the residue falls out.
- Do not immerse the product in water or pour water for cleaning;

2. Crumb Tray Cleaning of crumb tray

- Please pull crumb tray out on the bottom of toaster and clean it regularly.
- please do not to insert bread into the toaster without placing the crumb tray.

3. Toaster Storage

- Please wrap the power line into storage tray on the bottom of toaster.
- After use, wait the toaster has cooled down completely and storage it.

SIMPLE TROUBLESHOOTING

Simple Troubleshooting

| Fault phenomenon | Troubleshooting |
|------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Smoke from the toaster | In first use, the empty toasting may caused smoke which is a normal phenomenon; |
| | Selecting a higher toasting setting that is not suitable for this type of bread, may caused smoke. Please press "Toast/Cancel" button to stop the toasting process. Next time, select a lower setting when toast the same type bread. |
| | Selecting a higher toasting setting that is not suitable for this type of bread, may caused smoke. Please press "Toast/Cancel" button to stop the toasting process. Next time, select a lower setting when toast the same type bread. |
| bread stuck in the slot | First, unplug the toaster and cool it down completely, and then take out the bread carefully. When taking out the bread, be careful and not to damage the heating element. Do not use sharp metal tools to remove the bread. |
| The baked bread is too dark or too light | First, check whether any other unsuitable setting is selected by mistake. Choose a lower or higher settings for adjustment according to the bread type and your own taste. |

WARRANTY AND MAINTENANCE

Warranty and Maintenance

- If the product is damaged, please contact the after-sales customer service center of selling channel or send to the service maintenance place for repair.
- The warranty is limited to the product defects and damage caused by correct use according to the instruction manual. Damaged caused by improper use or other non-product quality issues will be charged for maintenance.
- If you need more information or service, please contact the after-sales center of purchase channel.

No free maintenance is allowed if Fault caused by failure to operate according to the user manual.

- Damage caused by improper use, storage and maintenance.
- Damage caused by assembly, disassembly and repair by our company's non-designated maintenance department.
- Damage caused by force majeure.

In order to protect the customer's interests, BUYDEEM reserves the right to modify the product features and the components so as to ensure the normal use of product.

WARRANTY AND MAINTENANCE

Warranty card

BUYDEEM

Dear Customer,

Thank you so much for your purchase! The product comes with a ONE-YEAR warranty. Should you ever needs one, please have the following information handy when contacting us:

Product Model No.: _____ **Product Name:** _____

Factory Serial No.: _____ **Order Date:** _____

Order ID: _____ **Customer Name:** _____

Customer Phone: _____ **Customer email:** _____

Please feel free to email us if have any questions or concerns.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda BUYDEEM, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/buydeem-toster-dt730e-ink-grey-akcija-cena/>