

Uputstvo za upotrebu (EN)

SENCOR paročistač SSC 3510WH

SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-parocistac-ssc-3510wh-akcija-cena/>

SENCOR®

SSC 3510WH



STEAM CLEANER

Translation of the original manual

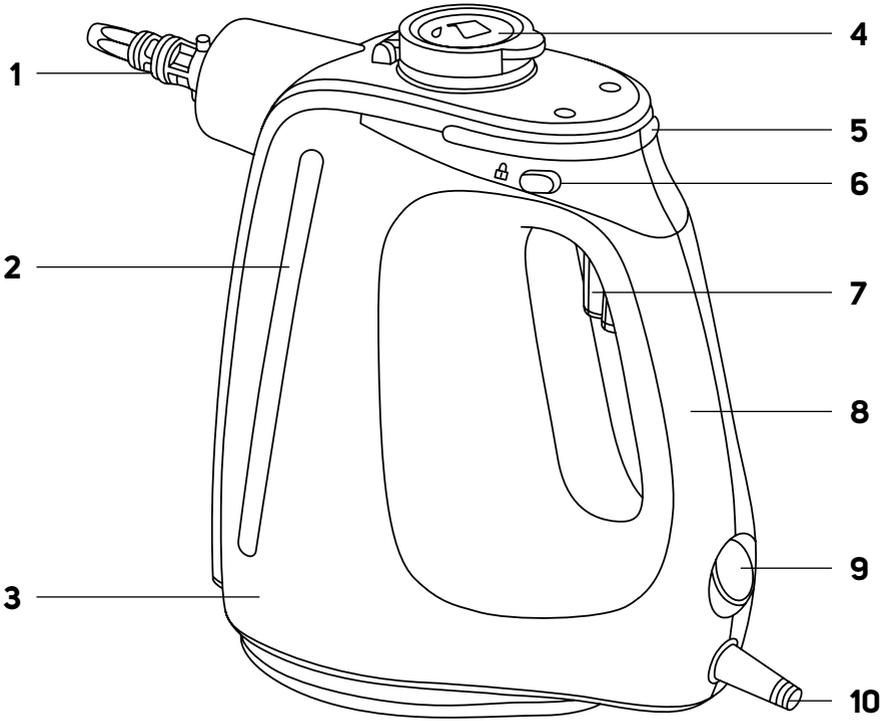


 
 
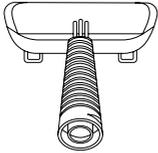
 
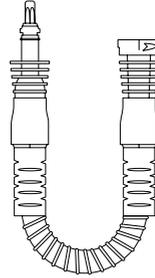
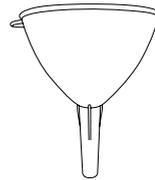
SENCOR®





SSC 3510WH




A



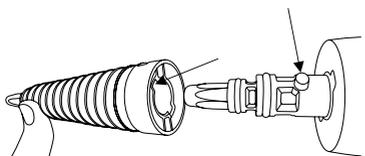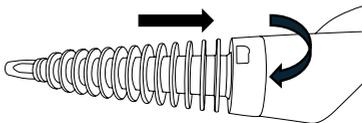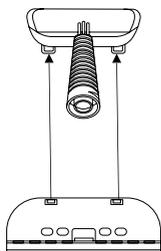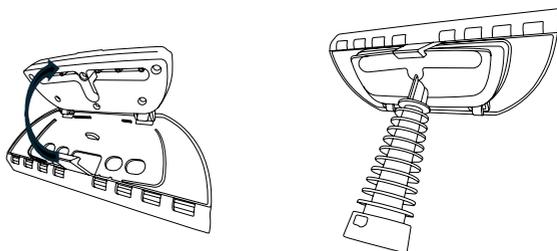
B**1****2****3****4****5****8****6****7****9****10**

C1**C2****C3****C4****C5**

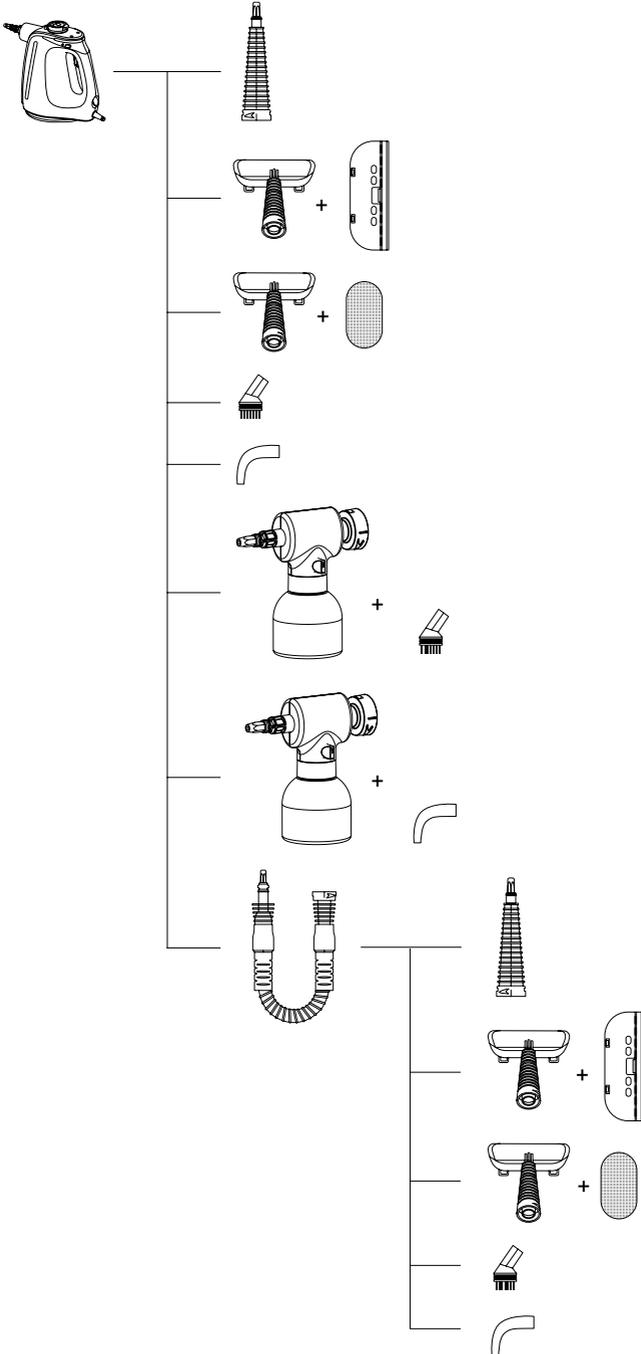
C6




D1

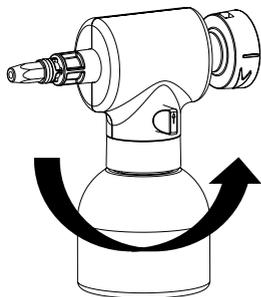

D2

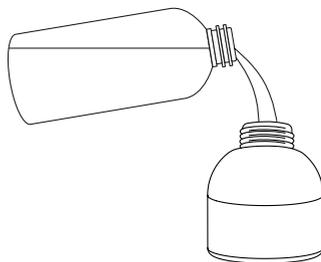

D3

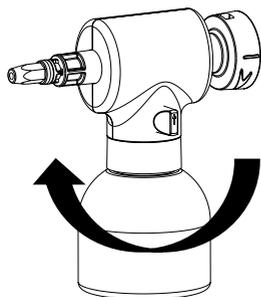

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance is not to be used by children.
- This appliance may be only used by persons with physical, sensory or mental impairments or by inexperienced persons provided they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance must not be carried out by children. Keep the power cable out of reach of children.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.
- Only use clean water in the appliance. Do not use any other liquids or add any detergents to the water.
- Pull the plug out of the socket before cleaning or maintaining the appliance.



WARNING:

Danger of scalding.

- Liquid or steam must not flow towards equipment containing electrical components, such as the interior of the oven.
- The filling hole must not be opened during use. Follow the instructions for safe water container refilling in this manual.
- The appliance must not be left unattended while connected to the power supply.
- The appliance must not be used if it has fallen and/or if there are visible signs of damage or leaks.
- Do not allow access to children if the appliance is live or cooling.

Additional Important Safety Instructions for Use of the Appliance

- This appliance is designed for use in households, offices and similar types of areas. Do not use in industrial surroundings.
- Do not expose the appliance to direct sunlight and do not place it near open fire or appliances that are a source of heat.
- Before connecting the plug of the power cord to a power socket, make sure that the nominal voltage listed on the steam cleaner's rating plate matches the electrical voltage of the power outlet.
- Make sure that the power cable does not touch hot surfaces or sharp objects. Position the cable so that it is not tripped over.
- Do not immerse the appliance, power cord or plug in water or other liquids or rinse them under running water.
- Before switching on the appliance, make sure it is correctly assembled.
- Make sure that the air outlet or suction opening is not blocked when the appliance is in operation.
- Do not point the steam dispenser at people, animals, other appliances, etc.
- Do not expose the appliance to dripping or spraying water.
- Always store indoors.
- Do not touch the appliance with wet hands.
- Do not use the appliance in an enclosed area filled with fumes released by oil paints, paint thinners, certain anti-moth substances, flammable dust or other explosive or toxic fumes.
- Do not use the appliance on leather, wax-polished furniture or floors, synthetic fabrics, velvet or other delicate steam-sensitive materials.
- Do not use the appliance to heat the room.
- Only use the accessories supplied with the appliance or recommended by the manufacturer. Use of other accessories may cause fire, electric shock or injury.
- Never fill the water tank with descaling, aromatic, alcohol or detergent as this may damage it.
- Do not use the appliance to clean the following:
 - smouldering cigarettes, burning objects, matches or hot ashes;
 - flammable or volatile substances;
 - sharp objects such as shards, needles, pins, etc.;
 - flour, plaster, cement and other building materials;
- The detergent container is filled with a non-foaming saponate that is suitable for use in a steam cleaner, or you can use a solution of vinegar and water in a ratio of 1:2.
- Do not fill the container with foaming detergents, chemicals, solvents, etc.
- Failure to follow the instructions regarding a suitable cleaning agent may cause serious health risks (e.g. skin burns, mucous membranes, etc.). Always follow the detergent manufacturer's instructions and the instructions in this user's manual.
- Make sure the room is ventilated thoroughly. Always switch off the appliance and unplug the power cord from the mains socket after use, before cleaning or maintenance.
- Disconnect the power cord from the socket by pulling the plug, not the cord. Otherwise, damage to the power cord or the socket may occur.
- Do not use the appliance if it is not working correctly, if it has been damaged or has been submerged in water. Do not repair or modify the appliance yourself. All repairs should be carried out by an authorised service centre. Tampering with the appliance may result in the loss of your legal rights regarding faulty performance or warranty for quality.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste.



Read the user's manual.

EN Steam cleaner

User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have found all its components. It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

CLEANER DESCRIPTION

A1 Cleaner nozzle	A6 Power switch lock
A2 Water tank with MAX line	A7 Power switch
A3 Cleaner body	A8 Handle
A4 Lid	A9 Main power switch
A5 Heating indicator	A10 Power cord

DESCRIPTION OF ACCESSORIES

B1 Straight nozzle	B6 Round brush nozzle
B2 Window squeegee	B7 Curved nozzle
B3 Microfibre sleeve	B8 Flexible hose
B4 Minimop	B9 Detergent container
B5 Measuring cup	B10 Funnel

PURPOSE OF USE

- The Sencor SSC 3510WH steam cleaner is designed to clean and disinfect your home. You can use it to clean and remove dirt, e.g. from tiles, joints, washbasins, sinks, etc. Thanks to very high temperature steam, it removes most of the greasy dirt, dried dirt or bacteria, etc.
- The steam cleaner is supplied with a detergent container. This will make cleaning more effective.

STEAM CLEANER ACCESSORIES

Straight nozzle

This is used to clean tiles, paving and other hard floor surfaces with fixed joints; taps and sanitary fixtures; toys, tables and other worktops; hard-to-reach places.

Minimop with a sleeve

This is used for steaming clothes and for cleaning clothes, upholstered furniture, curtains, bed linen, etc.

Minimop with squeegee

This is used to clean windows, mirrors and walls of shower cabins.

Round brush nozzle

It is used to clean: stoves, grills and barbecue utensils (if recommended by the manufacturer); tiles and other hard floor surfaces with fixed joints; taps and sanitary ware; toys, tables and other worktops.

Curved jet

It is used for cleaning: taps and sanitary fixtures; toys, tables and other worktops; hard-to-reach places.

Flexible hose

This is designed to extend the range of the used accessories and easier handling.

Detergent container

Using a suitable cleaning agent, it is used to clean: stoves, grills and barbecue utensils (if recommended by the manufacturer); tiles and other hard floor surfaces with fixed joints; taps and sanitary ware; toys, tables and other worktops.



Note:

A suitable cleaning agent is a non-foaming detergent suitable for use in a steam cleaner, or a solution of vinegar and water in a ratio of 1:2. Do not use foaming detergents, chemicals, bleach, solvents, etc. Follow the instructions of the detergent manufacturer.



Important:

Before using the steam cleaner on any surface or textiles, it is recommended to test in a small place to make sure that high temperature steam will not affect or damage the material.

Do not use steam on the glued edge of the laminate as this could get loose.

Do not use a steam cleaner to clean unsealed wooden or parquet floors.

Do not use a steam cleaner to clean painted or plastic-coated surfaces to avoid damage or danger.

When using a microfibre sleeve, it is recommended to steam it before applying it to the surface to be cleaned.

Steam may damage the seal of the window frame and at low temperatures may cause stress on the surface of the window glass, which may cause the glass to break.

A round brush can scratch sensitive surfaces. Do not use the brush on such surfaces.

Do not use a steam cleaner:

- for cleaning stubborn stains, blowing out dirt from corners or crevices, etc.;
- to wipe off damp dust;
- to remove slight wrinkles from hanging clothes. Steam and dry the clothes at a distance of 10–20cm.

SETUP BEFORE USE

- Remove the steam cleaner and all accessories from the packaging. Make sure to remove all the parts. Check for any damage to the cleaner and its accessories.
- Remove any protective films and advertising labels from the cleaner and all accessories.

Cleaner assembly/disassembly



Warning:

Before inserting or removing the accessory, always make sure that the steam cleaner is turned off and disconnected from the power socket.



Warning:

Allow the steam cleaner to cool completely before removing the accessory to avoid scalding from the hot steam.

- Accessories (straight nozzle, minimop, round brush nozzle or curved nozzle) can be mounted either on the steam cleaner nozzle or on the flexible hose nozzle.
- Fit the attachment so that the tabs on the nozzle fit into the cut-outs at the end of the attachment – see figure **C1**. Turn the attachment or accessory anticlockwise until you feel resistance – see figure **C2**.
- The round brush nozzle and the curved nozzle are equipped with a hexagonal inner frieze that fits directly onto the nozzle. Attach the

accessory onto the nozzle and push until you feel resistance – see figure **C3**.

- Put the window squeegee on the minimop so that the hooks at the bottom of the squeegee fit into the holes at the bottom of the minimop – see figure **C4**. Then fold the spatula onto the minimop until the lock at the top of the spatula clicks behind the top edge of the minimop – see figure **C5**.
- To remove the accessory, turn it clockwise until you feel resistance, and then pull the accessory away from the nozzle.
- Remove the round brush nozzle or the curved nozzle by pulling it away from the nozzle.
- To remove the window squeegee from the minimop, release the lock in the top part of the squeegee and lift the squeegee away from the minimop. Then release the hooks in the bottom part of the spatula from the holes in the bottom part of the minimop.

For more information on the using combinations of the individual accessories, please refer to **C6**.

Filling the Water Tank

1. Place the steam cleaner on a flat and stable surface.
2. Open the lid and insert the funnel into the filling hole.
3. Using the measuring cup, pour clean water into the tank up to the MAX mark.
4. Remove the funnel and close the lid.



Warning:

Do not exceed the MAX line during filling.



Warning:

Always fill the tank with clean drinking or distilled water if water in your distribution system is hard. Do not use any detergents, chemical detergents, vinegar, etc. There is a risk of serious damage to the steam cleaner.

Filling water

If the water in the tank runs out during the use of the cleaner, turn it off and disconnect it from the power socket. Then open the lid and pour clean water into the tank. Close the lid to continue using.



Warning:

Never fill the tank with water while the steam cleaner is powered and in operation.

USING THE STEAM CLEANER

1. Assemble the steam cleaner with the required accessories.
2. Fill the water tank. Check that the lid is closed properly.
3. Make sure that the switch lock is in the **I** position.
4. Fully unwind the power cord and connect the power cord plug in the mains socket.
5. Set the main power switch to the **I** position. The switch will light up. At the same time, the heating indicator light will light up. This indicates that the steam cleaner is heating up.
6. When the heating indicator goes out, the steam cleaner is ready for use.
7. Turn the switch lock to the **I** position.
8. Press the switch and after a while steam will start to escape from the accessory outlet.
9. Keep the switch pressed. When you release the switch, the steam discharge will stop. The switch can be locked in the pressed position. Press the switch and gently slide it downwards. If you need to interrupt or end the steam dispensing, move the switch upwards.
10. Slowly move the accessory over the area that you wish to clean.
11. When the cleaning is finished, release the switch and turn the switch lock to the **I** position.
12. Turn the main power switch to the **O** position and disconnect the power plug from the mains socket.

Allow the steam cleaner to cool down completely before cleaning it or changing accessories. When cleaning, please follow the instructions in the "Cleaning and Maintenance" section.



Note:

While the steam cleaner is in use, the heating indicator will turn on and off. This means that the water in the tank is being heated to steam temperature. The steam cleaner can be used normally even when the heating indicator light is on.



Tip:

Wipe the cleaned area with a dry cloth. The cleaned area will be glossy, with no steam droplet marks.

If you notice a decrease in steam output, the water tank is almost empty and will need to be refilled.

If you completely drain the water from the tank, the heater will shut off to prevent damage due to overheating.



Note:

Residual steam may be discharged from the steam cleaner even if the switch is not held down. This is a normal condition when the residual steam is being released by inertia.



Note:

While the steam cleaner is being cooled, residual steam may condense and form water droplets at the end of the nozzle. This is a normal occurrence.

USE OF DETERGENT CONTAINER

Filling the container

1. Unscrew the tank – see figure **D1**; and pour in the cleaning agent – see figure **D2**.
2. Screw the tank back – see figure **D3**. Make sure it is tightened correctly.

Using the steam cleaner with detergent container

1. Make sure that the steam dial is in the **I** position.
2. Attach the detergent container to the steam cleaner nozzle.
3. Fit the round brush nozzle or the curved nozzle.
4. Plug the power cord into the mains socket.
5. Set the main power switch to the **I** position. The switch will light up. At the same time, the heating indicator light will light up. This indicates that the steam cleaner is heating up.
6. When the heating indicator goes out, the steam cleaner is ready for use.
7. Turn the switch lock to the **I** position.
8. Turn the control on the detergent container to the **I** position.
9. Press the switch and after a while steam will start to escape from the accessory outlet.
10. Keep the switch pressed. When you release the switch, the steam discharge will stop. The switch can be locked in the pressed position. Press the switch and gently slide it downwards. If you need to interrupt or end the steam dispensing, move the switch upwards.
11. Slowly move the accessory over the area that you wish to clean.
12. When the cleaning is finished, release the switch and set the switch lock to the **I** position.
13. Turn the control on the detergent container to the **I** position.
14. Turn the main power switch to the **O** position and disconnect the power plug from the mains socket.

Allow the steam cleaner to cool down completely before cleaning it or changing accessories. When cleaning, please follow the instructions in the "Cleaning and Maintenance" section.



Note:

Pour in non-foaming detergent suitable for use in a steam cleaner, or a solution of vinegar and water in a ratio of 1:2 into the detergent container. Do not use foaming detergents, chemical substances, bleach, solvents, etc.

**Warning:**

Failure to follow the instructions regarding a suitable cleaning agent may cause serious health risks (e.g. skin burns, mucous membranes, etc.). Always follow the detergent manufacturer's instructions and the instructions in this user's manual. Ensure that the room is sufficiently ventilated.

CLEANING AND MAINTENANCE

- Before cleaning or maintenance, make sure that the steam cleaner is turned off by setting the main switch to the 0 position and disconnected from the power supply.
- Allow the steam cleaner and its accessories to cool down completely. Keep in mind that when the steam cleaner cools down, the hot steam turns into water vapor. Part of the water vapor accumulates on the dispensing opening and turns into water droplets, so it is important to allow the steam cleaner and accessories to dry completely.

**Warning:**

If handled incorrectly, there is a risk of serious scalding by hot steam.

**Warning:**

To prevent electric shock, do not immerse the steam cleaner, its base or the power cord in water or other liquids.

- Never use abrasive cleaning agents, solvents, etc. for cleaning.
- Neglecting cleaning and maintenance may affect the steam cleaner operation and lead to reduced performance.
- Do not use steel wool, sharp objects or other appliances for cleaning.

Emptying the tank

Empty the water tank after each use. Otherwise, limescale may build up on the container walls.

1. Move the steam cleaner over a wash basin or sink.
2. Open the lid.
3. Pour out the tank contents.
4. Rinse the tank with clean water.
5. Leave the lid open to allow the tank to dry.

**Warning:**

Do not leave any water in the tank. Otherwise, limescale may build up on the container walls.

Cleaning the steam cleaner and accessories

- Wipe the steam cleaner and the accessories outer with a soft sponge slightly dampened in warm water.
- Wipe with a dry cloth.
- Allow all parts to dry thoroughly before storing.
- Wash the sleeve by hand in warm water with a small amount of fine linen detergent. Rinse and wring. Allow to dry.

**Warning:**

No part of your steam cleaner and its accessories is suitable for dishwasher use.

**Warning:**

The microfibre sleeve is not designed to be washed in a washing machine or to be dried in a tumble dryer.

Removing limescale deposits

If limescale builds up, follow the steps below to remove it.

1. Dissolve approximately 10g of descaling agent in 200ml water.

2. Pour the solution into the tank and allow it to act for 6 hours.
3. Turn the steam cleaner on and allow it to heat up. Press the switch and leave the steam cleaner running until the tank is empty.
4. Rinse the tank and repeat the procedure as needed.

STORAGE

Store the steam cleaner and its accessories in a dry and dark place out of reach of children and pets.

TROUBLESHOOTING

Problem	Solution
The steam cleaner does not dispense steam.	Check that power plug connected to the mains socket.
	Check that the main power switch is in the I position.
	Check that the water tank is filled with water.
The steam cleaner does not work.	Check that the main power switch is in the I position.
	Check that power plug connected to the mains socket.
The steam cleaner is clogged with limescale.	Carry out the descaling procedure according to the instructions above.
The steam cleaner is discharging steam even if the button is not held down.	This is a normal phenomenon, it is the residual steam that comes from the cleaner by inertia.

Original spare accessories

SSCC 0016 Replacement mopping textile sleeves

TECHNICAL SPECIFICATIONS

Rated voltage.....	220-240 V ~
Rated frequency.....	50-60 Hz
Rated input.....	1,350 W
Water tank capacity.....	550 ml
Dimensions.....	294 × 142 × 230 mm
Weight.....	1,2 kg
Protection level.....	IPX4

Changes to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the location designated by the municipality for waste disposal.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be added to ordinary municipal waste. For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

To dispose of electric or electronic equipment, request necessary information from your retailer or supplier.

Disposal in Other Countries Outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.

FAST ČR, a.s.
U Sanitasu 1621
CZ-251 01 Říčany
www.sencor.com
info@sencor.cz

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-parocistac-ssc-3510wh-akcija-cena/>