

Uputstvo za upotrebu (EN)

SENCOR stajler za kosu SHS 9100RS

SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-stajler-za-kosu-shs-9100rs-akcija-cena/>

SENCOR®

SHS 9100RS



CURL HAIR DRYER

Translation of the original manual

 



SENCOR®


SHS 9100RS




A

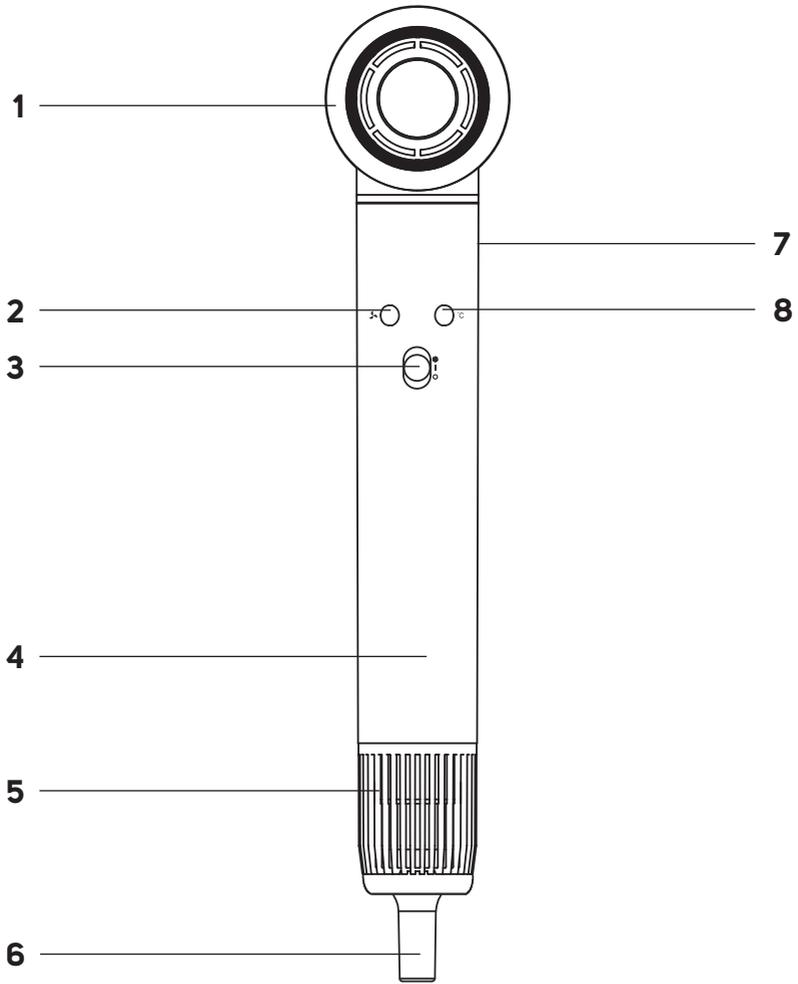


9

 





10

 

11

 

12

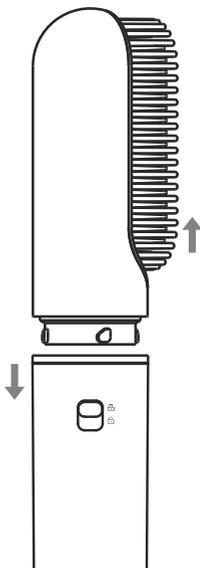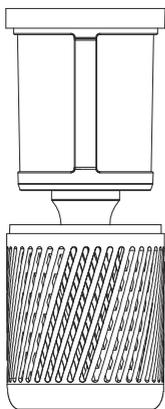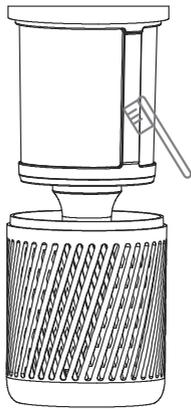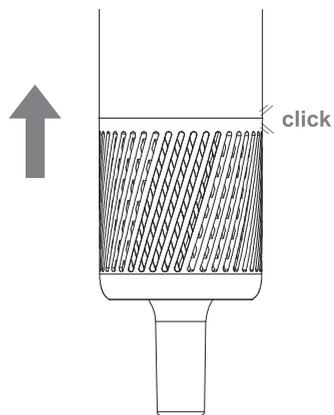B**B1****B2****C****C1****C2****C3**

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance must not be performed by children without supervision.
- If the power cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cable damaged.

**Warning:**

Do not use this appliance near water.

**Warning:**

Do not use this appliance near baths, showers, washbasins or other containers containing water.

- If the appliance is used in the bathroom, unplug it from the socket after use by removing the plug from the socket,

as the presence of water poses danger, even when the appliance is turned off.

- To insure additional safety, it is recommended to install an Residual Current Device (RCD) into the electric circuit to the bathroom with a maximum current rating of 30 mA. Ask the electrician for advice.

-
- Carefully unpack the product and take care not to throw away any part of the packaging until all the product parts have been identified.
 - Before connecting this appliance to a power socket, make sure the voltage stated on the label of the appliance corresponds to the voltage in your power socket.
 - Never use accessories which have not been supplied with this appliance or which are not designed for this appliance.
 - Sure that the power cord and plug cannot come into contact with water or dampness.
 - Do not spray the product with water or any other liquid. Do not submerge this appliance and any of its components in water or any other liquids.
 - This product is designed for household use. Do not use it in industrial environment or outdoors!
 - Do not use sprays in the vicinity of the appliance.
 - If you will not be using the appliance, disconnect it from the electrical grid. Before cleaning or moving the appliance, proceed in the same manner.
 - Make sure the appliance is fully cold before storing.
 - Do not expose sensitive people or animals to hot air.
 - Do not place the appliance on or near an electrical or gas stove. Do not place the device within near heat producing devices such as fireplaces etc.
 - Do not use attachments other than those supplied or specified by the manufacturer.
 - Do not use the appliance if it has a damaged power cord or power plug.
 - In no case should you attempt to repair the appliance yourself; do not make any modifications to it - danger of electric shock! Entrust all repairs and adjustments of this device to a specialised company/service. Failure to do so will expose you to the risk of voiding the warranty policy.
 - Do not place the power cord of the appliance near hot surfaces or over sharp objects. Do not place heavy objects on the power cord, position the cord so that it is not stepped on or tripped over. Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface.
 - Do not disconnect the appliance from the power socket by pulling the power cord - it may damage the power cord / power socket. Disconnect the cable from the power socket by gently pulling the plug of the power cord.
 - Do not use the product for any other purposes than those intended.
 - Ensure that when turning on the product, that the air inflow or outflow grill is not covered.
 - Ensure that no hair or threads remain in any of the openings of the curl hair dryer.
 - The manufacturer is not responsible for damages caused by the incorrect use of this product or its accessories (food spoilage, injuries, burns, scalding, fire, etc.).

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



This product complies with all the essential requirements of the applicable EU directives.



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste.



Product with protection class II
Electrical shock protection is provided by double or heavy-duty insulation.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
 - Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
 - It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.
5. Press the temperature button repeatedly to set the required temperature: cold air (the lower led is lit) - warm air (the middle led is lit) - hot air (the upper led is lit).
 6. Dry your hair gradually or style it.
 7. If you do not want to use the curl hair dryer, press the switch and turn it to position 0 (off).
 8. Allow the curl hair dryer to cool down on a heat-resistant mat before cleaning and storing.

Cold air styling

1. Turn the switch to the ❄️ position so that you can shape your hair with cold air.
2. Press the speed button repeatedly to set the desired speed: low (the lower LED light is on) - medium (the middle LED light is on) - high (the upper LED light is on).
3. If you do not want to use the curl hair dryer, press the switch and turn it to position 0 (off).

CURL HAIR DRYER DESCRIPTION

A1 Drying head	A7 Attachment release lock
A2 Speed button	A8 Temperature button
A3 On/off switch	A9 Narrow curling attachment
A4 Handle	A10 Wide curling attachment
A5 Filter protection grid	A11 Brush
A6 Power cable	A12 Hair styling attachment

BEFORE FIRST USE

- Before first use, remove the curl hair dryer from the packaging and detach all promotional labels and stickers. Make sure that the curl hair dryer is not damaged.

PURPOSE OF USE

- The Sencor SHS 9100RS curl hair dryer is designed for drying hair and for trimming and curling dry hair.

ASSEMBLING/REPLACING ATTACHMENTS



Warning:

Before assembling or replacing the attachments, always make sure that the curl hair dryer is switched off and the power plug is disconnected from the mains socket.

- Attach the attachment you want to use to the curl hair dryer handle and insert it into the handle until you hear a click – see figure **B1**.
- If you need to remove the attachment, press the release button down towards the symbol  and pull the attachment upwards.



Warning:

Before removing the attachment, please make sure that it's cool. There is a risk of serious burns.



Warning:

To avoid the risk of electric shock, do not immerse the curl hair dryer, attachments or power cord in water or any other liquid.

Cleaning the accessories and attachments

- Wipe the curl hair dryer's outer surface with a clean, dry cloth.
- Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance that could damage the surface of the appliance.

Cleaning the filter and protective grille

- Regularly remove dust, dirt and hair from the protective grid and filter.
1. Carefully pull the protective grid downwards from the filter - see figure **C1**.
 2. Remove any dirt. Use a soft and dry cloth or a brush with fine bristles for cleaning - see figure **C2**.
 3. After cleaning, click the protective grid back - see figure **C3**. The protective grill can be easily attached to the filter edge thanks to the magnet.



Warning:

Do not clean the filter or the protective grille with water. This may lead to a serious appliance damage.

Storage

Store the curl hair dryer in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

USING THE CURL HAIR DRYER

1. Carefully comb your hair and assemble the curl hair dryer with the desired attachment.
2. Plug the power cord into the mains socket.
3. Move the power switch to position I (on).
4. Press the speed button repeatedly to set the desired speed: low (the lower LED light is on) - medium (the middle LED light is on) - high (the upper LED light is on).

TROUBLESHOOTING

Problem	Cause	Solution
The curl hair dryer won't turn on.	The power cord plug is incorrectly inserted in the mains socket.	Insert the power plug into a properly grounded mains socket.
	No voltage is present in the socket.	Check that the circuit breaker has not tripped, or plug another appliance into the socket.
	The curl hair dryer is damaged.	Contact an authorised service centre.
LED indicators are flashing.	Unusual input voltage.	Check the voltage in your mains socket.
	The curl hair dryer is overheating.	Check that the inlet and outlet openings are not blocked. Turn off the curl hair dryer, allow it to cool down and turn it on again.
	Engine malfunction.	Contact an authorised service centre.
The LEDs did not turn on.	Control panel error.	Contact an authorised service centre.
Unusual illumination of LEDs.		
The switch is not working properly.		
The power cord/plug is excessively hot.	The power cord/plug is damaged.	
Burns can be smelled during use.	Internal components are damaged.	



Note:

If the problem persists or cannot be found in the above table, turn the curl hair dryer off, unplug the power cord from the mains socket and contact your authorized service centre.

TECHNICAL SPECIFICATIONS

Rated voltage.....	220–240V ~
Rated frequency.....	50–60 Hz
Rated input power.....	1300W
Dimensions.....	65 × 58 × 305mm
Weight.....	380g

We reserve the right to change the text and technical specifications.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the location designated by the municipality for waste disposal.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

To dispose of electric or electronic equipment, request necessary information from your retailer or supplier.

Disposal in Other Countries Outside the European Union

To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-stajler-za-kosu-shs-9100rs-akcija-cena/>