

## Uputstvo za upotrebu (EN)

SAGE kuvalo za vodu SKE735BTR

**Sage**<sup>®</sup>



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sage-kuvalo-za-vodu-ske735btr-akcija-cena/>

# *the Soft Top™ Luxe*

BKE735 / SKE735



EN USER GUIDE

# **Sage®**



## Contents

- 2 Sage® Recommends Safety First
- 5 Components
- 6 Functions
- 6 Care & Cleaning
- 7 Guarantee

## **SAGE® RECOMMENDS SAFETY FIRST**

**At Sage® we are very safety conscious. We design and manufacture appliances with your safety foremost in mind. We also ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.**

## **IMPORTANT SAFEGUARDS**

**READ ALL INSTRUCTIONS  
BEFORE USE AND SAVE  
FOR FUTURE REFERENCE**

- A downloadable version of this document is also available at [sageappliances.com](http://sageappliances.com)
- Before using for the first time please ensure that your electricity supply is the same as shown on the rating label on the underside of the appliance. If you have any concerns please contact your local electricity company.

- Remove and safely discard any packaging materials before first use.
- To eliminate a choking hazard for young children, safely discard the protective cover fitted to the power plug.
- This kettle has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Position the appliance on a stable, heat resistant, level, dry surface away from the edge and do not operate on or near a heat source such as a hot plate, oven or gas hob.
- Do not operate the kettle on a sink drain board.
- Do not place the kettle on or near a hot gas burner, electric element or where it could touch a heated oven.
- Position the appliance at least 20cm from walls or heat / steam sensitive materials and provide adequate space above and on all sides for air circulation.
- Always ensure the kettle is properly assembled before use. Follow the instructions provided in this book.
- The kettle must be used only with the power base supplied.
- This kettle is not intended to be operated by means of an external timer or separate remote control system.

- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Do not place anything on top of the lid.
- Always ensure the appliance is turned OFF, unplugged at the power outlet and has been allowed to cool before cleaning, attempting to move or storing.
- Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour water too quickly.
- Do not remove the kettle from the power base during operation. Ensure the kettle is switched to 'off' position after the water has boiled before removing the kettle from the power base.
- Do not move the kettle while it is switched on.
- Do not open the lid during operation.
- Do not overfill the kettle past the maximum water level mark. If the kettle is overfilled, boiling water may be ejected.
- Keep the kettle clean. Follow the cleaning instructions provided in this book.
- Children should not play with the appliance.
- The appliance can be used by children aged 8 or older and persons with reduced physical, sensory or mental capabilities or a lack of experience and knowledge, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Misuse may cause injury.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Sage Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Sage® service centre.
- This appliance is for household use only. Do not use the appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide

### **IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES**

- Fully unwind the power cord before operating.
- Do not let power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.

additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

- The appliance and its cord should be kept out of reach of children aged 8 years and younger.
- Cleaning of the appliance should not be carried out by children unless they are 8 years or older and supervised.
- For safety reasons it is recommended you plug your Sage® appliance directly into its own electrical outlet on a dedicated circuit separate from other appliances. If the electrical circuit is overloaded with other appliances, your appliance may not function properly. Using in conjunction with a power strip or extension cord is not recommended.



#### WARNING

Do not operate the kettle on an inclined surface. Do not move the kettle while it is switched on.



The symbol shown indicates that this appliance should not be disposed of in normal household waste. It should be taken to a local authority waste collection centre designated for this purpose or to a dealer providing this service. For more information, please contact your local council office.



To protect against electric shock, do not immerse the kettle base, power base, power cord or power plug in water or allow moisture to come in contact with these parts. Avoid spilling water onto the power base's connector.

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY



## Components



- |   |   |
|---|---|
| <p>A. Cushion controlled lid with viewing window.</p> <p>B. Removable scale filter.</p> <p>C. Stainless steel vessel.</p> <p>D. 1.7 litre / 7 cup capacity</p> <p>E. BPA Free* dual water windows.</p> <p>F. Auto shut off &amp; boil dry protection.</p> | <p>G. Rapid boil 2400W concealed element.</p> <p>H. Lid release button.</p> <p>I. Ergonomic Handle.</p> <p>J. Illuminated power 'On/Off' switch with ready bell.</p> <p>K. Multi directional base with cord storage. Sage® Assist™ plug (not shown)</p> |
|---|---|

\*Sage® makes its BPA free claim for this product based on independent laboratory testing performed for all the food contact plastic materials of the product per EU Commission regulation No 10/2011.



### Rating Information

220-240V ~ 50-60Hz 2000-2400W



## Functions

### BEFORE FIRST USE

Remove any promotional material attached to your kettle. It is recommended that before first use, the kettle is filled to the maximum level with cold tap water, boiled and water discarded. Your kettle will only operate when positioned on the power base with the 'On/Off' switch in the 'On' position. The kettle will automatically switch off once the water has boiled.

### OPERATION OF YOUR KETTLE

To fill the kettle, remove it from the power base and open lid by pressing the lid release button. Fill with the desired amount of water.



#### NOTE

Always fill the kettle between the minimum (500ml) and maximum (1700ml) marks on the water window. Too little water will result in the kettle switching 'Off' before the water has boiled. Filling above the maximum mark (MAX) may result in boiling water splashing from the kettle.

Ensure the lid is locked firmly into place. Position the kettle securely onto the power base. Insert the power plug into a 230/240V power outlet and switch on.

Press the 'On/Off' switch to the 'On' position for water to boil.



#### NOTE

This kettle must only be used with the power base supplied. Use caution when pouring water from your kettle, as boiling water will scald. Do not pour the water too quickly.

The kettle will automatically switch 'Off' once the water has boiled. Lift the kettle from the power base and pour the water. Take care to hold the kettle level, especially when filled to the maximum level. To re-boil it may be necessary to wait for up to 30 seconds to allow the control to reset.

If further heating of the kettle is not required, switch 'Off' at the power outlet, unplug the power cord and empty the water from the kettle. Replace the kettle onto the power base and close the lid.

### SAFETY BOIL DRY PROTECTION

The kettle is fitted with a safety device, which protects against overheating should the appliance be operated with insufficient water.

If this occurs, the kettle will stop heating. Switch 'Off' at the power outlet and allow kettle to cool before refilling. Remove the kettle from the power base and add water. Return the kettle to the power base. The safety device will then automatically reset.

For additional safety, your kettle is fitted with an additional thermal cut out. In the event of overheating, the kettle will automatically shut down to prevent further damage. Should this occur, take your kettle to an authorized Sage® Service Centre.



## Care & Cleaning

Always switch 'Off' at the power outlet and unplug the appliance from the power outlet before cleaning.

### REMOVABLE FILTER

The kettle features a removable mesh filter to remove scale deposits for cleaner water. To remove the scale deposits from the filter, open the lid and slide the filter up and out of the kettle.

The filter can be cleaned by running under hot water and rubbing with a cleaning cloth or brush. To replace filter, simply slide the filter down into the slot behind the spout of the kettle and push back into position.



#### NOTE

The filter could become damaged with time. Please check regularly and replace if found damaged.



#### NOTE

The concealed element in the base of the kettle is made from high quality stainless steel. Any brown stains appearing are the result of mineral deposits and are not rust.

## DESCALING


It is essential that regular descaling takes place. Frequency will depend on the usage of the kettle and the hardness of the water in your area. A build-up of scale may cause the inside of the kettle to discolour and ultimately may damage the element. This will affect the efficiency of the appliance and may invalidate the warranty agreement. We recommend the use of Sage® “the Descaler” as it's specially formulated for descaling kettles. To order visit [www.sageappliances.com](http://www.sageappliances.com)



### WARNING

Causes skin irritation. Wash hands thoroughly after handling. Wear protective gloves/protective clothing/eye protection/face protection.

1. Empty one sachet (25g) into 1 litre of warm water, stir to dissolve.
2. Pour into the kettle.

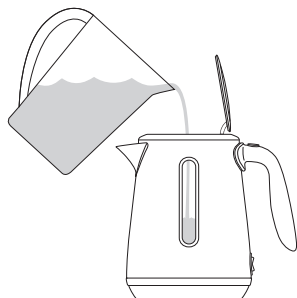

3. Leave stand for 5 minutes.
4. After 5 minutes, discard the solution.
5. Rinse the kettle twice with fresh clean water.



### NOTE

Do not use chemicals, alkaline cleaning agents, steel wool or abrasive cleaners to clean the inside or outside of the kettle. Use a mild cleaning agent with a soft damp cloth.

## STORAGE

Ensure the kettle is switched off, clean and dry before storing. Ensure the lid is closed and locked securely into place. Wrap the power cord around the cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.



## Guarantee

### 2 YEAR LIMITED GUARANTEE

Sage Appliances guarantees this product for domestic use in specified territories for 2 years from the date of purchase against defects caused by faulty workmanship and materials. During this guarantee period Sage Appliances will repair, replace, or refund any defective product (at the sole discretion of Sage Appliances).

All legal warranty rights under applicable national legislation will be respected and will not be impaired by our guarantee. For full terms and conditions on the guarantee, as well as instructions on how to make a claim, please visit [www.sageappliances.com](http://www.sageappliances.com).



## Notes



# Notes



## Notes



# Notes

GBR

BRG Appliances Limited  
Unit 3.2, Power Road Studios,  
114 Power Road, London, W4 5PY  
Freephone (UK Landline): 0808 178 1650  
Mobile Calls (National Rate): 0333 0142 970

DEU

AUT

Sage Appliances GmbH  
Campus Fichtenhain 48, 47807 Krefeld,  
Deutschland  
Deutschland: 0800 505 3104  
Österreich: 0800 80 2551

FRA

Sage Appliances France SAS  
Siège social: 66 avenue des Champs  
Élysées – 75008 Paris  
879 449 866 RCS Paris  
France: 0800 903 235

IRE

Ireland  
1800 932 369

NLD

Netherlands  
0800 020 1741

ITA

Italy  
800 909 773

ESP

Spain  
900 838 534

PTP

Portugal  
0800 180 243

POL

Poland  
00800 121 8713

BEL

Belgium  
0800 54 155

CHE

Switzerland  
0800 009 933

LUX

Luxembourg  
800 880 72

DNK

Denmark  
80 820 827

SWE

Sweden  
0200 123 797

FIN

Finland  
0800 412 143

NOR

Norway  
80 024 976

# Sage®

[www.sageappliances.com](http://www.sageappliances.com)

Registered in England & Wales No. 8223512  
Registered in Germany No. HRB 81309 (AG Düsseldorf)  
Registered in France No. 879 449 866 RCS

**EN** Due to continued product improvement, the products illustrated or photographed in this document may vary slightly from the actual product.

**DE** Aufgrund unserer kontinuierlichen Produktverbesserungen kann die hier gezeigte Abbildung geringfügig vom tatsächlichen Produkt abweichen.

**FR** En raison de leur amélioration continue, les produits représentés ou photographiés dans le présent document peuvent différer légèrement du produit réel.

**NL** Vanwege voortdurende productverbeteringen, kunnen de afgebeelde producten in dit document licht afwijken van het eigenlijke product.

**IT** A causa del continuo miglioramento dei prodotti, il prodotto descritto o illustrato in questo documento può variare leggermente rispetto al prodotto reale.

**ES** Perfeccionamos nuestros productos continuamente, por lo que el artículo podría diferir ligeramente de la ilustración o la fotografía en este documento.

**PT** Devido à melhoria contínua dos produtos, os produtos ilustrados ou fotografados neste documento podem variar ligeiramente do produto real.

**PL** Ze względu na stale przeprowadzane ulepszenia, produkty przedstawione na ilustracjach lub zdjęciach w tym dokumencie mogą różnić się od używanego produktu.

**DA** På grund af løbende produktudvikling kan de illustrerede eller fotograferede produkter i dette dokument variere en smule fra det faktiske produkt.

**SV** På grund av kontinuerlig produktförbättring kan produkterna som visas i illustrationerna och fotografierna i detta dokument skilja sig något från den faktiska produkten.

**FI** Jatkuvan tuotekehittelyn seurauksena kuvituksen tuotteet eivät välttämättä ole täysin samanlaisia kuin varsinaiset tuote.

**NO** På grunn av kontinuerlig produktutvikling kan produktene som er vist eller avfotografert i dette dokumentet, variere noe fra det faktiske produktet.

Copyright BRG Appliances 2022

BKE735 / SKE735 UK UG1 B22

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sage, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sage-kuvalo-za-vodu-ske735btr-akcija-cena/>