

CARBON

ESPRESSO MACHINE

EM-CA308B

KORISNIČKO UPUTSTVO



Pažljivo pročitajte ovo uputstvo pre nego što koristite aparat i sačuvajte ga za buduću upotrebu.

Sadržaj

Uvod	5
Pre prve upotrebe	7
Punjenje ili dopunjavanje rezervoara za vodu	7
KAKO KORISTITI APARAT	9
ODRŽAVANJE	10

PRE UPOTREBE

Pre upotrebe, pažljivo pročitajte ovaj priručnik, kao i uputstva za bezbednost!

- **Povežite uređaj samo sa uzemljenom utičnicom.**
- Ovaj uređaj je namenjen samo za kućnu upotrebu. Prilikom korišćenja električnih uređaja, uvek treba pratiti osnovne sigurnosne mere kako bi se izbegli požari, električni udari, opekotine ili druge povrede i oštećenja.
- Pažljivo pročitajte ova uputstva za rad i bezbednost.

VAŽNE MERE BEZBEDNOSTI

Kada koristite električne uređaje, posebno u prisustvu dece, uvek se pridržavajte osnovnih bezbednosnih mera, uključujući sledeće:

1. Isključite aparat za kafu pre nego što priključite bilo kakve dodatke, očistite aparat ili rešavate bilo kakve smetnje.
2. Držite aparat za kafu i dodatke van doseg a dece. Ne ostavljajte decu bez nadzora sa aparatom. Redovno proveravajte aparat i kabl.
3. Proverite da li aparat za kafu i dodaci rade ispravno. Ako postoji bilo kakvo oštećenje ili ako aparat ne funkcioniše ispravno, odmah prestanite sa upotrebom aparata.
4. Držite aparat i kabl/kablove daleko od toplote, direktne sunčeve svetlosti, vode, vlage, oštrih ivica itd.
5. Koristite samo originalne dodatke. Nemojte povezivati nekompatibilne proizvode.
6. Osnova i spoljašnjost aparata za kafu nisu otporni na vodu. Držite ih suvim u svakom trenutku.
7. Aparat za kafu ne sme da bude stavljen u vodu ili bilo koju tečnost niti da dođe u kontakt sa takvim tečnostima pod bilo kojim okolnostima. Ne rukujte aparatom vlažnim rukama. Ako aparat postane vlažan, odmah isključite glavni utikač iz utičnice i **NEMOJTE** da dirate vodu.
8. Koristite aparat samo u skladu sa njegovom namenom.
9. Ovaj aparat nije namenjen za upotrebu od strane osoba (uključujući decu) sa smanjenim fizičkim, senzornim ili mentalnim sposobnostima, ili nedostatkom iskustva i znanja, osim ako im nije obezbeđen nadzor ili uputstvo od strane odgovorne osobe.
10. Deca treba da budu pod nadzorom kako bi se osiguralo da se ne igraju sa aparatom.
11. Ako je kabl za napajanje oštećen, mora ga zameniti proizvođač, njegov servisni agent ili slično kvalifikovane osobe kako bi se izbegao rizik.
12. Da biste izbegli požar, ne koristite aparat u prisustvu eksplozivnih ili zapaljivih isparenja.
13. Ne uključujte aparat za kafu kada nije napunjen vodom.
14. Priključite aparat samo na odgovarajući uzemljeni naponski izvor.
15. Da biste bili sigurni da je aparat isključen, izvadite utikač iz utičnice.
16. Uvek izvadite utikač pre nego što: Premestite aparat. Očistite ili obavite održavanje. Koristite ga nakon dužeg perioda neupotrebljavanja.
17. Nikada ne stavlajte kabl ili ga ne povlačite preko oštrih ivica ili uglova.
18. Opasnost od električnog šoka! Oštećeni kablovi za napajanje mogu se zameniti samo u servisnom centru.

Uvod


Čestitamo na kupovini! Ovaj espresso aparat za kafu je proizveden sa velikom pažnjom. Ako ga pravilno održavate, nagradiće vas mnogim godinama dobrog rada. Pre nego što počnete da koristite vaš novi aparat, molimo vas da pažljivo pročitate ovo uputstvo za upotrebu, i da obratite posebnu pažnju na mere bezbednosti.

Tehničke specifikacije:

- Model: EM-CA308B
- Napon/snaga: AC 220-240V 50/60Hz 1400W
- Pritisak pumpe: 20Bar (max.)
- Težina proizvoda: 3kg
- Rezervoar za vodu: 1L


Lista proizvoda u pakovanju:

1. Rezervoar za vodu
2. Aparat za kafu
3. Posuda za odvod vode
4. Uputstvo za upotrebu
5. 3 kapsule/adaptera + 1 inox filter
6. Kašičica za kafu/kompresor za prah

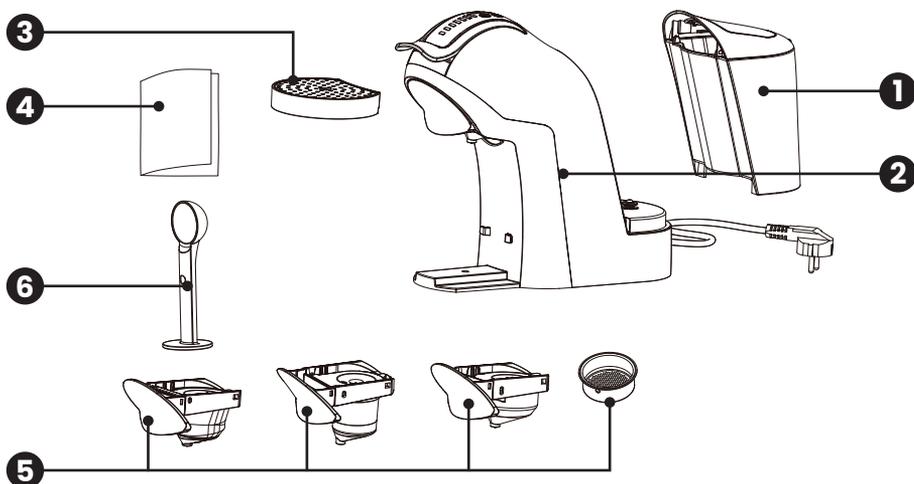

Karakteristike

1. Dugme za uključivanje/isključivanje
2. Dugme za podešavanje temperature
3. Dugme za pripremu kafe
4. Dugme za predinfuziju
5. Dugme za podešavanje protoka
6. Pod za kapsule
7. Kapsula za kafu
8. Izlaz za kafu
9. Držač za posudu za kapanje
10. Posuda za kapanje
11. Rezervoar za vodu
12. Poklopac rezervoara za vodu
13. Unutrašnji poklopac rezervoara

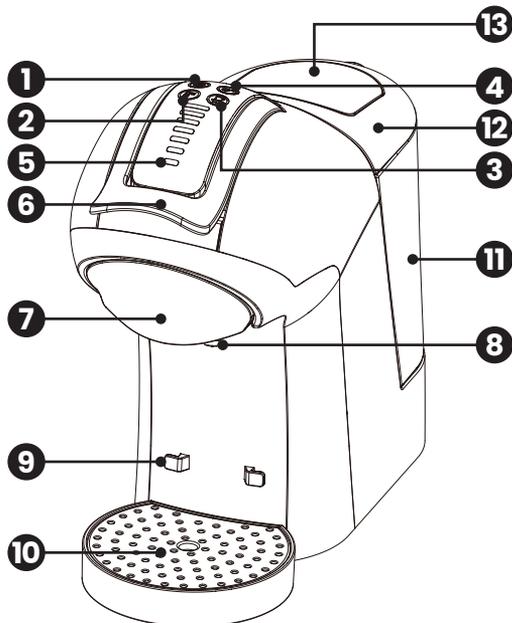

NAPOMENA: Ovaj aparat može koristiti 3 adaptera + 1 S/S filter i koristiti Nespresso original kapsule, Dolce Gusto kapsule, i filter za mlevenu kafu.

Lista adaptera i filtera:


NESPRESSO ORIGINAL KAPSULE



DOLCE GUSTO KAPSULE



FILTER za mlevenu kafu

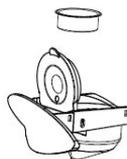

- NAPOMENA:**
1. Proverite da li je napon vaše kućne mreže isti kao što je označeno na ploči sa specifikacijama aparata.
 2. Bacite sve plastične kese kako biste sprečili opasnost za decu!
 3. Čuvajte pakovanje za transport aparata (npr. za preseljenje, servisiranje itd.).
 4. Možda ćete naći malo preostale vode u aparatu. Da bismo osigurali da aparat savršeno funkcioniše, testiran je sa vodom pre nego što je napustio fabriku.

Pre prve upotrebe

1. **Pažnja:** Nepravilno rukovanje električnim uređajem može biti opasno i smrtonosno. Obratite pažnju na bezbednosne mere u ovom uputstvu, posebno na sledeće:
2. Opasnost od opekлина: Budite oprezni sa vrućom vodom!
3. Ne koristite aparat kada je rezervoar za vodu prazan ili kada je nivo vode niži od MINIMALNOG.
4. Ne otvarajte dršku dok aparat priprema kafu.
5. Uvek izvadite utikač pre čišćenja aparata.
6. Koristite aparat samo u suvoj prostoriji.
7. Temeljno isperite rezervoar za vodu sa svežom vodom pre nego što ga koristite prvi put. Očistite aparat za kafu vlažnom krpom.

Punjenje ili dopunjavanje rezervoara za vodu

1. Pre nego što prvi put koristite aparat ili nakon dužih pauza (npr. odmora), aparat mora biti ispran. Ovaj kratak postupak može temeljno očistiti unutrašnje cevi.
2. Postoje dva načina za punjenje rezervoara za vodu: direktno u aparat koristeći, na primer, posudu, ili uklanjanjem rezervoara za vodu:


Punjenje BEZ UKLANJANJA rezervoara:

1. Podignite poklopac za rezervoar vode.
2. Napunite rezervoar hladnom vodom za piće.
3. Maksimalni kapacitet je 1,0 litara.
4. Spustite poklopac rezervoara.



Punjenje UKLANJANJEM rezervoara:

1. Podignite poklopac, rezervoar za vodu će izaći iz sedišta, lako ga možete izvaditi iz aparata.
2. Napunite rezervoar do oznake "MAX" hladnom vodom za piće (maksimalni kapacitet je 1,0 litara).
3. Polako stavite rezervoar za vodu na osnovu dela aparata za rezervoar i pritisnite ga tako da pravilno legne u date žlebove.

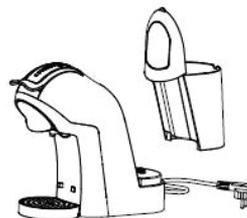

Povezivanje napajanja

1. Aparat priključite samo na odgovarajući, lako dostupni, uzemljeni izvor napajanja. Proverite da li napon izvora napajanja odgovara onom navedenom na ploči sa specifikacijama. Upotreba pogrešnog priključka poništava garanciju.

Pritisnite dugme za uključivanje/isključivanje

1. Uključite aparat pritiskanjem dugmeta za uključivanje/isključivanje, svetlo za uključivanje/isključivanje treperi, što znači da aparat zagreva vodu, a sva ostala svetla su polusvetla.
2. Sva svetla će biti potpuno svetla nakon što se zagrevanje završi.




Podešavanje zapremine

1. Zapreminu možete lako podesiti kliznim dugmetom na traci za zapreminu.

Podešavanje temperature

1. Temperaturu možete lako podesiti dodiranjem na dugme.
2. Postoje tri temperature podešavanja za model EM-308B: topla (narandžasto svetlo), normalna (zelena svetla), vruća (crvena svetla).

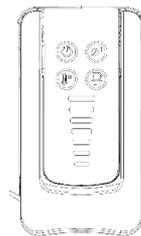

Pre-infuzija

1. Možete izabrati pre-infuziju jednostavnim dodiranjem dugmeta.

Postavljanje adaptera na aparat

1. Izaberite kapsulu i postavite je u odgovarajući adapter, otvorite dršku i stavite adapter.



Priprema kafe

1. Stavite šolju na posudu za kapanje. Dodirnite dugme za pripremu kafe nakon što ste podesili zapreminu i temperaturu. Aparat će se automatski zaustaviti i uživajte u svojoj kafi!

Standby režim

1. **Zadato podešavanje:** Standby režim 9 minuta.
2. Aparat će se automatski isključiti nakon 9 minuta, a sva svetla će se ugasiti.
3. Dodirnite bilo koje dugme kako biste probudili aparat ako želite da ga koristite.

Auto isključivanje

1. **Zadato podešavanje:** aparat će se automatski isključiti nakon 1 sata neaktivnosti. Dodirnite dugme za uključivanje/isključivanje kako biste ponovo uključili aparat.

KAKO KORISTITI APARAT

1. Postavite aparat na ravnu i toplotno otpornu površinu.
2. Otvorite ručku.
3. Ovaj aparat može da koristi 3 adaptera + 1 S/S filter i koristi Nespresso original kapsule, Dolce Gusto kapsule, i filter za mlevenu kafu.
4. Izaberite adapter koji vam je potreban.
5. Postavite odgovarajući adapter u prostor za pripremu.
6. Zatvorite ručku.
7. Dodajte hladnu vodu (pročišćenu vodu) u rezervoar do maksimalnog kapaciteta. Ili izvadite rezervoar iz aparata i napunite ga vodom.
Napomena: Kada vadite i vraćate rezervoar, držite ga uspravno. Pritisnite ga lagano prilikom umetanja kako biste osigurali da je ventil na dnu rezervoara usklađen sa ventilom za vodu na aparatu.
8. Stavite veći kapacitet šolje ispod izlaza za vodu.
9. Povežite aparat sa napajanjem i uključite ga.
10. Pritisnite dugme za uključivanje/isključivanje da biste uključili aparat, a svetlo dugmeta će treperiti.
11. Nakon zagrevanja, svetlo će ostati upaljeno i funkcija izbora kafe će biti aktivirana.
12. Dodirnite ekran da biste odabrali tri temperature: normalno, toplo ili vruće.
13. Dodirnite ekran da biste odabrali sedam različitih opcija zapremine vode.
14. Otvorite ručku i stavite odgovarajući adapter u prostor za pripremu, zatim zatvorite ručku i postavite šolju ispod izlaza za kafu.
15. Nemojte otvarati ručku dok kafa nije gotova.
16. Uvek očistite aparat za kafu nakon svake upotrebe. Očistite unutrašnju površinu aparata sa vodom, a spoljašnju i unutrašnju površinu osušite suvom krpom.

ODRŽAVANJE

ČIŠĆENJE

1. Opasnost od smrtonosnog električnog udara i požara. Nikada ne uranjajte aparat niti deo aparata u vodu.
2. Uverite se da je aparat isključen iz struje pre nego što ga počnete čistiti.
3. Ne koristite jaka sredstva za čišćenje ili rastvarače.
4. Ne koristite oštre predmete, četke ili oštre abrazive.
5. Ne stavljajte aparat u mašinu za pranje sudova.
6. Čišćenje šolje za kafu.

KOMPLETNO ČIŠĆENJE

Osušite aparat sa svežom i čistom krpom ili papirom i ponovo sastavite sve delove. Redovno čistite izlaz za kafu i unutrašnjost aparata vlažnom krpom.

SAVETI UPOZORENJA

1. Zabranjeno je punjenje vodom dok aparat radi.
2. Zabranjeno je otvaranje ručke dok se kafa priprema.
3. Iznad adaptera za kapsule se nalazi oštra igla.
4. Zabranjeno je stavljanje ruku ili prstiju na bilo koji deo blizu igle nakon što je adapter uklonjen.

SKLADIŠTENJE

Izvadite aparat iz utičnice kada se ne koristi. Dozvolite da se ohladi pre nego što ga odložite na sigurno i suvo mesto. Nikada ne omotavajte kabl oko aparata. To može dovesti do oštećenja kabla. Pažljivo rukujte kablom i izbegavajte njegovo trganje, uvijanje ili naprezanje, posebno kod priključaka.



Zaštita životne sredine

Ne odlažite uređaj s običnim komunalnim otpadom kada se pokvari, već ga odnesite u zvanični sabirni centar za reciklažu. Time ćete doprineti zaštiti životne sredine.



CARBON

ESPRESSO MACHINE

EM-CA308B

USER MANUAL



FOR INDOOR HOUSEHOLD USE ONLY

Please read this manual carefully before you use the appliance and save it for future reference.

Content

Introduction	17
Before using it for the first time	19
Fill or refill the water tank	19
HOW TO USE	21
MAINTENANCE	22

BEFORE USE

Before use, please read this manual carefully, and the safety instructions before operating the appliance!

- **Only connect the appliance to an earthed wall socket.**
- This appliance is for household use only. When using electrical appliances, basic safety precautions should always be followed to avoid fires, electric shocks, burns or other injuries and damage.
- Read these operating and safety instruction carefully.

IMPORTANT SAFETY INSTRUCTION

Before use, please read this manual carefully, and the safety instructions before operating the appliance!

1. Switch off the Coffee Maker before attaching any accessories, cleaning the Coffee Maker or dealing with any disturbance.
2. Keep the Coffee Maker and accessories out of the reach of children. Do not leave children unsupervised with the kettle. Check the Coffee Maker and the cord cable regularly.
3. Check if the Coffee Maker and accessories are operating properly or not. If there is any damage or if the Coffee Maker is not operating properly, stop using the Coffee Maker immediately.
4. Keep the Coffee Maker and cord/cable away from heat, direct sunlight, water, moisture sharp edges etc.
5. Use original accessories only. Do not connect incompatible products.
6. The base and exterior of the Coffee Maker are not water-resistant. Keep them dry at all times.
7. The Coffee Maker must not be placed in water or any liquid or come in contact with such under any circumstances. Do not handle the Coffee Maker with wet or moist hands. If the Coffee Maker become wet or moist, remove the main plug from the socket immediately and DO NOT reach into the water.
8. Use the Coffee Maker only for its intended purpose.
9. This appliance is not intended for use by the persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by the person who is responsible for their safety.
10. Children should be supervised to ensure that they do not play with the appliance.
11. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
12. To avoid fire, do not operate it in the presence of explosive or flammable fumes.
13. Do not turn on the coffee maker when it is not filled with water.
14. Connect only to a properly grounded power point.
15. To make sure that the machine is switched off, remove the plug from the power point.
16. Always pull out the power plug before: Relocating the machine. Cleaning or maintenance. Long periods of disuse.
17. Never clamp or run the power cable over sharp corners or edges.
18. The danger of electric shock! Damaged power cables may only be replaced at the customer service centre.



Introduction

Congratulation on your purchase!

This espresso coffee machine is manufactured with the greatest care. If you look it after properly it will reward you with many years of good service.


Before using your new machine, please read this operating manual carefully, paying particular attention to the safety precautions.

Technical Specifications:

- Model: EM-CA308B
- Machine Type: Multi-capsule espresso machine
- Rating: 220V-240V 50-60Hz 1400W
- Pump Pressure: 20Bar (max.)
- Product Weight: 3.0kg
- Water Tank: 1L


Parcel list of products

1. Water tank
2. Coffee machine
3. Water catch tray
4. Product Manual
5. 3 capsule pods/adapters + 1 stainless steel pocket
6. Coffee scoop/powder compactor

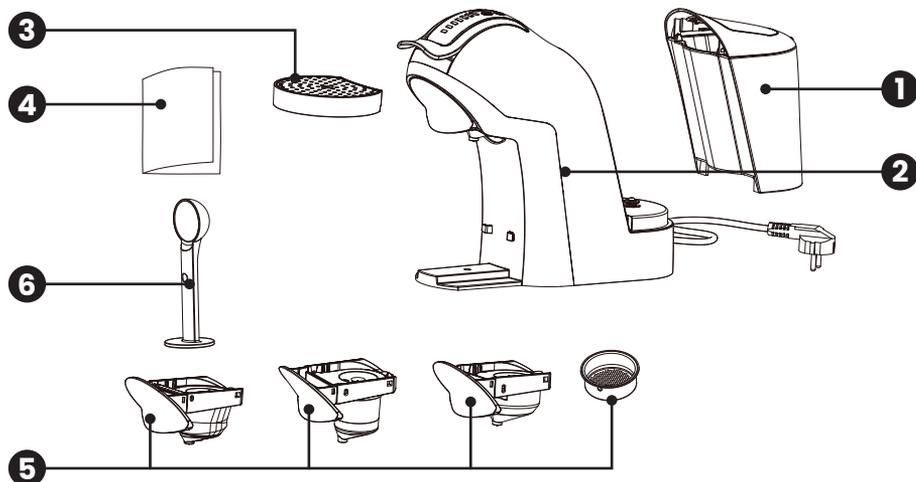

Features

1. Power button
2. Temperature selection button
3. Brewing coffee button
4. Pre-soak button
5. Flow rate selection button
6. Operating pod
7. Coffee pod
8. Coffee exports
9. Drip tray holder
10. Drip tray
11. Water tank
12. Water tank cap
13. Inner cover of the tank

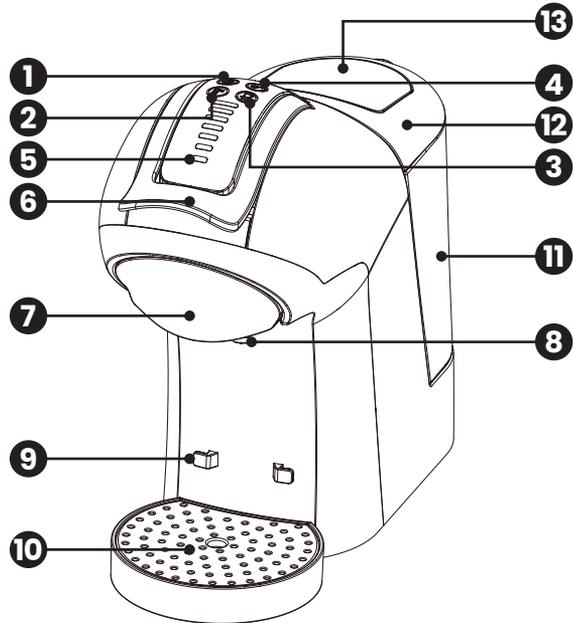

NOTE: This machine can fit 3 adaptor + 1 S/S filter and use Nespresso original line capsule, Dolce Gusto capsule, Ground coffee filter.

Adapter and filter list:

NESPRESSO ORIGINAL CAPSULES



Dolce Gusto capsules



Ground coffee filter



- NOTE:**
1. Check that your home power supply voltage is the same as marked on the machine rating plate.
 2. Destroy all plastic bags to prevent danger to children.
 3. Keep the packaging for transporting the machine (e.g. for removals, servicing, etc.).
 4. You may find a little water remaining in the machine. In order to ensure that this machine works perfectly, it was tested with water before leaving the factory.

Before using it for the first time

1. **Caution:** Improper handling of electrical equipment is dangerous and can be lethal. Please pay attention to the safety precautions in this manual, in particular, the following:
2. The danger of scalding: beware of hot water!
3. Do not operate the machine with an empty water tank or with water less than the MINIMUM level.
4. Do not open the handle when the machine is brewing.
5. Always pull out the power plug before cleaning the machine.
6. Only use the machine in a dry room.
7. Thoroughly rinse out the water tank with fresh water before using it for the first time. Clean the Capsule coffee machine using a damp cloth only.

Fill or refill the water tank

1. Before using it for the first time or after long pauses (e.g. holidays) the machine must be flushed out. This short procedure can flush out and cleans the internal piping thoroughly.
2. There are two ways to fill the water tank: directly into the machine, by using for example a jug or by removing the water tank:

Filling **WITHOUT REMOVING** the tank

1. Raise the water filling window
2. Fill the tank with cold drink water
3. The maximum capacity is 1.0 litre
4. Low down the window



Filling **BY REMOVING** the water tank

1. Lift the lid, the water tank will come out from the seat, you can remove the water tank from the machine easily.
2. Fill the tank up to the "MAX" mark with cold drink water (the maximum capacity is 1.0 litre).
3. Insert the water tank slowly on the water tank base and push it to seat the position correctly.



Connect the power supply

1. Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the warranty.

Press the On/off button

1. Switch on the machine by touch the On/off button, the On/off light
2. is flashing means the machine is heating and all other lights are half
3. bright only. All lights will be full bright after heating finished.




Setting volume

1. You can set volume by slide on the volume level bar easily.

Setting temperature

1. You can set temperature by touch the button easily.
2. There are three temperature setting for EM-CA308B model
warm (orange light), normal (green light), hot (red light).

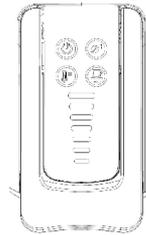


Pre-infusion

1. You can select pre-infusion by touch the button easily.

Fit your adapter on the machine

1. Select your capsule and insert to adapter accordingly, open the lever and insert the adapter.

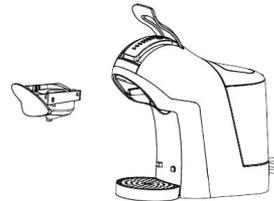

Brew coffee

1. Put a cup on the drip tray. Touch the brew button after volume and temperature was setted. The machine will stop automatically and enjoy your coffee!

Standby Mode

1. **Factory Default setting:** Standby Mode 9 mins
2. The machine will be turned off after 9 mins, and all the indicator lights will be off.
3. Touch any button to wake up the machine if you want to work with it.

Auto shut off Mode

1. **Factory Default setting:** the machine will auto shut off after 1 hour.
2. Touch On/off button to switch on the machine.

HOW TO USE

1. Place the machine on a flat and heat-resistant surface.
2. Open the handle.
3. This machine can fit 3 adaptor + 1 S/S filter and use Nespresso original line capsule, Dolce Gusto capsule, Ground coffee filter.
4. Select the adaptor you need.
5. Put requested adapter into the brew chamber.
6. Close the handle.
7. Add cold water (purified water) into the tank to maximum capacity. Or take the tank out of the machine and fill it with water. **Note** that when removing and inserting the water tank, keep it up and down vertically. Press down gently on the water tank during insertion to ensure that the valve at the base of the water tank is combined with the water valve seat on the housing.
8. Put the larger capacity cup under the water outlet.
9. Connect the power and start the machine.
10. Press the "On/Off" button to start the machine and the button indicator lights intermittently.
11. After preheating, the indicator light keep on and the coffee selection function is activated.
12. Touch the screen, you can make three temperatures choices normal/warm/hot.
13. Touch the screen, you can make seven kinds of water volume touch selection.
14. Open the handle and put requested adapter into the brew chamber, then close the handle and place the coffee cup under the outlet.
15. Do not open the handle until the coffee is finished.
16. Always clean the Coffee Maker after each use. Clean the inner surface of the Coffee Maker with water, then dry the outer and inner surface with a dry fabric.

MAINTENANCE

CLEANING

1. Risk of fatal electrical shock and fire. Never immerse the appliance or part of it in water.
2. Be sure to unplug the machine before cleaning.
3. Do not use any strong cleaning agent or solvent cleaner.
4. Do not use sharp objects, brushes, or sharp abrasives.
5. Do not place in a dishwasher.
6. Brewing cup cleaning.

HOLISTIC CLEANING

Dry with a fresh and clean towel, cloth, or paper, and reassemble all parts. Clean the coffee outlet and inside the machine regularly with a damp cloth.

WARNING TIPS

1. Prohibit pulling water to the machine
2. Prohibit opening the handle when brewing
3. There is a sharp needle upper the capsule adaptor.
4. Prohibit putting the hand or finger on any part near the needle after the adaptor is removed.

STORAGE

Unplug the unit whenever it is not in use. Allow it to cool, then store it in a safe, dry location. Never wrap the cord around the appliance. This will cause the cord to wear and break prematurely. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.



Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

CARBON
ESPRESSO MACHINE
EM-CA308B