

Uputstvo za upotrebu (EN)

SENCOR aparat za kafu SCC 3000BK

SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-aparat-za-kafu-scc-3000bk-akcija-cena/>

SENCOR®

SCC 300BK



MULTI-CAPSULE COFFEE MACHINE

Translation of the original manual





SENCOR®


SCC 3000BK




A

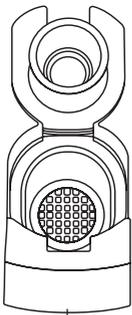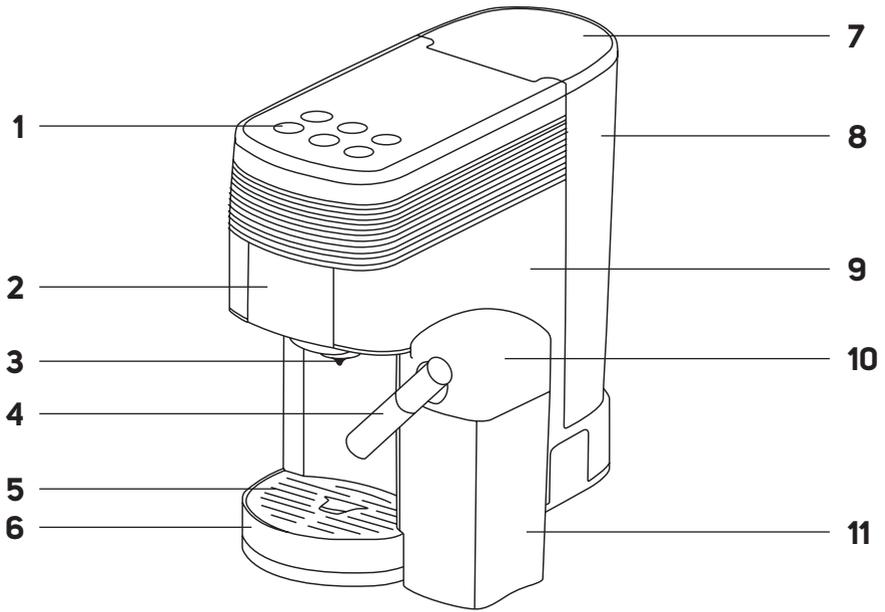

12

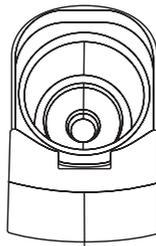


13

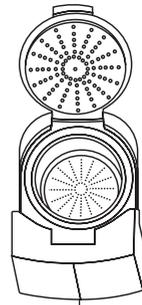

14




B

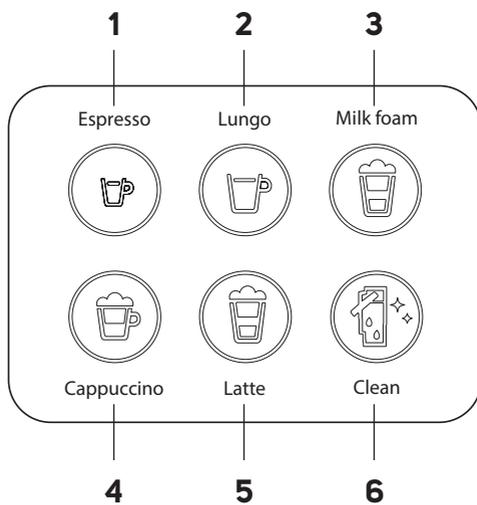


C1

C2

C3

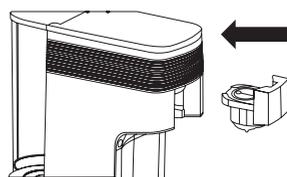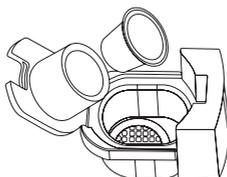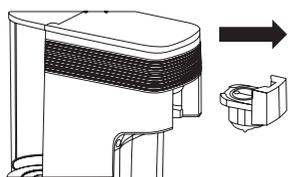

D

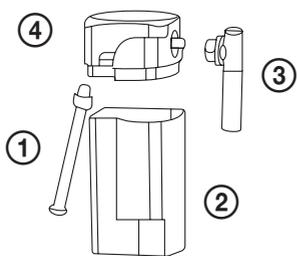

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- Children aged 8 and above may use this appliance if supervised or instructed in the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and user maintenance must not be carried out by children unless they are over 8 years old and under supervision.
- Keep the appliance and its power cord out of the reach of children under 8 years of age.
- The appliance may be used by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, provided they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.
- This appliance is intended for household use. It is also suitable for personal non-commercial use in spaces such as:
 - kitchenettes in shops, offices and other workplaces;
 - spaces in agriculture;
 - hotel, motels and other residential areas;

- bed and breakfast establishments.
- The appliance must not be immersed in water during cleaning.



WARNING:

Prevent the plug from getting wet.

- Clean the surfaces that come into contact with water according to the instructions in this manual.



WARNING:

There is a risk of injury if used incorrectly.

- The surface of the heating element contains residual heat after use.
- The appliance must not be placed in a cabinet when in use.

-
- Before connecting the appliance to a power socket, make sure that its nominal voltage indicated on the rating plate matches the electrical voltage of the socket.
 - Connect the appliance only to a properly earthed socket. For safety reasons, we do not recommend using adaptors or extension cables.
 - Do not place the appliance on windowsills, sink drain trays or unstable surfaces. Always place the appliance on a stable, flat and dry surface.
 - Do not place the appliance on an electric or gas stove or near an open flame.
 - Never use the appliance in the immediate vicinity of a bath, shower or swimming pool.
 - The appliance is designed for coffee preparation. Use the appliance only for its intended purpose.
 - Do not use the appliance outdoors.
 - Use the appliance according to the instructions in this user manual. Failure to do so may result in injury, damage to the appliance, or a hazardous situation.
 - Leave at least 15 cm of free space around and above the appliance to ensure proper air circulation during operation.
 - Do not use the top surface of the appliance to store other items.
 - Fill the water tank with clean, cold water. Do not pour hot water or other liquids into it or place any objects inside it.
 - Before turning on the appliance, make sure that:
 - the drip tray and its grid are properly installed;
 - the water tank is filled with a sufficient amount of water and correctly installed. The water level must not exceed the maximum mark.
 - Never operate the appliance with an empty water tank. There is a risk of damage to the appliance.
 - Take extra care when operating the appliance to avoid scalding with hot water or steam.
 - Regularly check the water level in the tank while using the appliance. If the water level drops below the minimum mark, refill the tank according to the instructions in this manual.
 - There is a sharp needle above the adaptor inside the appliance used to pierce the capsule during operation. Take extra care to avoid injury. Do not put your hands inside the appliance when the holder is removed.
 - Be careful when handling a full drip tray. The water can be hot and there is a risk of scalding or burns.
 - Do not move the appliance with a cup of coffee placed on the drip tray grid or with cups placed on the cup warming surface.
 - Ensure that the power cable does not come into contact with hot surfaces.
 - Unplug the appliance from the power socket by pulling the plug, not the power cable. Otherwise, damage to the power cable or the socket may occur.
 - Make sure that the power cable and plug do not come into contact with water or other fluids.
 - Fully unwind the power cord before use.

- Do not let the power cord hang over the edge of a table or worktop, touch hot surfaces, or become tangled. Do not place heavy objects on the power cord.
 - For safety reasons, we recommend connecting the appliance in an independent electrical circuit separated from other appliances. Do not use adaptors or extension cords to connect the appliance to a mains socket.
 - To prevent electric shock, do not immerse the appliance, its base or the power cord in water or other liquids.
-

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have found all its components. It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

DESCRIPTION OF THE COFFEE MACHINE

A1 Control panel	A10 Milk container lid
A2 Capsule holder / filter	A11 Milk container
A3 Coffee dispensing nozzle	A12 Holder for Nespresso-type capsules and similar
A4 Milk dispensing nozzle	A13 Holder for Dolce Gusto-type capsules and similar
A5 Drip grid	A14 Ground coffee holder
A6 Drip tray	A15 Measuring cup / tamper
A7 Water tank lid	
A8 Water tank	
A9 Coffee machine body	

DESCRIPTION OF THE CONTROL PANEL

B1 Espresso button	B4 Cappuccino button
B2 Lungo button	B5 Latte button
B3 Milk Foam button	B6 Clean button

PURPOSE OF USE

- The Sencor SCC 3000BK coffee machine is designed for preparing coffee from capsules and ground coffee.

PREPARATION BEFORE USE

Before First Use

- Before first use, remove all packaging and advertising labels/stickers from the appliance.
- Place the coffee machine on a flat, firm and stable surface well away from the mains socket. Ensure there is enough free space around the coffee machine (at least 10 centimetres) for proper air circulation.



Warning:

The coffee machine is not intended for use as a built-in appliance and must not be placed in a cabinet when in use.

- Remove the water tank, milk container, drip tray with grid, and measuring cup / tamper. Wash them in warm water with a little kitchen detergent, rinse and wipe dry.
- Wipe the outer surface of the coffee machine and the holders with a slightly damp cloth. Dry thoroughly.
- Put all the washed parts back into the machine.

Filling the Water Tank

Always make sure that the power cord is disconnected from the mains socket before filling the tank. Always fill the water tank with clean, cold drinking water.

1. Lift the lid and gently tilt the water tank away from the body of the coffee machine. Then remove it from the back of the coffee machine.
2. Fill the tank with water up to the MAX mark.
3. Insert the tank back into the machine and press lightly to connect the contacts on the bottom of the tank and the coffee machine. Close the lid.



Warning:

The maximum capacity of the water tank is 1.3 litres. Do not overfill it. Always adhere to the maximum line marked on the tank. Never fill the tank with warm or heated water, sparkling water or other liquids such as milk. This could damage the appliance.



Note:

Do not leave the water in the tank for more than one day. You should always use fresh water to make quality coffee. Otherwise, the taste of the final beverage may be negatively affected.

You can fill the water tank while it is inserted in the coffee machine. In this case, lift the lid and pour water into the tank. Close the lid after filling.



Warning:

Take care when pouring water to avoid spilling it on the coffee machine or the power cord.

Filling the Milk Container

Fill the milk container if you are preparing Cappuccino or Latte coffee. When the milk container is connected, the **Cappuccino** and **Latte** buttons will light up on the control panel, but the milk frothing button will be off.

1. Remove the milk container from the body of the coffee machine.
2. Remove the lid and pour fresh cold milk into the container.
3. Attach the lid and connect the assembled container to the machine, ensuring the connector on the back of the lid fits into the opening in the coffee machine. When inserting, always ensure the milk dispensing nozzle is positioned over the drip grid.



Note:

We recommend using fresh whole milk.

USING THE COFFEE MACHINE

Flushing the Coffee Machine

Before using the coffee machine for the first time, or after a longer period of non-use, it's essential to flush it to clean the internal piping and components.

1. Ensure the water tank is full and that there is no capsule or ground coffee in the holder. Place a cup on the drip tray grid to catch the water.
2. Plug the power cord into the mains socket.
3. Turn on the coffee machine by pressing any button to start the preheating.
4. Once the machine has preheated, press the coffee brewing button (without milk) to start the process. Water will be drawn into the internal piping, heated, and then flow through the brewing head into the cup.
5. Once the flushing process is complete, you will hear an alert sound, and the control panel will light up.
6. Empty the cup and the coffee machine is now ready to use.

Connecting to Power Supply

Plug the power cable into a properly grounded mains socket. A short beep will sound. All the buttons on the control panel will turn off.

Turning On the Coffee Machine

Press any button on the control panel to switch on the coffee machine. The preheating process will begin. During this time, the buttons on the control panel will flash. Preheating typically takes 45 seconds. Once the buttons on the control panel are lit, the machine is preheated and ready to use.

- If the holder is inserted, and the milk container is installed, all buttons will light up.
- If the holder is inserted but the milk container is not installed, only the **Espresso** and **Lungo** buttons will light up.
- If the holder is not inserted but the milk container is installed, only the **Milk Foam** and **Clean** buttons will light up.
- If neither the holder nor the milk container is inserted, the buttons on the control panel will light up and then turn off one by one.

Espresso and Lungo Coffee Preparation

The coffee machine comes with two capsule holders and one holder for ground coffee. You will be able to prepare your favourite coffee.

1. Check the water tank. Refill if necessary.
2. Remove the holder from the machine – see Figure C1.
3. Insert the appropriate capsule into the selected holder – see Figure C2, or fill with ground coffee and tamp it down using the cup/tamper.



Warning:

Always use the correct holder for the capsule type. Do not combine capsules and holders. There is a risk of serious damage to the holder and the coffee machine.

4. Reinsert the holder into the coffee machine – see Figure C3.
5. Place a cup under the coffee dispensing nozzle.
6. Fill the milk container with fresh cold milk. Follow the instructions in the **"Filling the Milk Container"** section.
7. Plug the coffee machine into the mains socket and switch it on by pressing any button.
8. The preheating process will begin. Wait until the coffee machine is preheated.
9. Press the button for the selected drink, and the machine will start. The button for the selected drink will flash, and the coffee preparation will begin.
10. The brewing process will automatically stop once the preset amount of coffee has been dispensed into the cup.
11. Remove the holder. Dispose of the used capsule environmentally according to the manufacturer's instructions. Dispose of the coffee grounds in a compost bin.



Warning:

The holder, used capsule, or coffee grounds may be very hot. There is a risk of burns if handled incorrectly.



Warning:

Do not insert your hands into the upper part of the internal space of the machine when the holder is removed. There is a sharp needle that serves to pierce the capsule during use. Take extra care to avoid injury.



Note:

You can cancel the coffee preparation process by briefly pressing the button for the drink currently being prepared.



Note:

The extraction time and temperature for Espresso or Lungo can be adjusted in the advanced settings – see the **"ADVANCED COFFEE MACHINE SETTINGS"** section.

Cappuccino and Latte Coffee Preparation

When preparing a Cappuccino or Latte, ensure the milk container is filled with milk and attached to the machine.

1. Press the coffee drink button, and the coffee machine will start.
2. The milk frothing process will begin first, and after a few moments, hot milk and foam will flow into the cup.

3. Once the preset amount of hot milk and foam has been dispensed, the coffee preparation process will begin.
4. Wait until the preparation process automatically stops.
5. After finishing the preparation, clean the milk nozzle and the milk container. It is recommended to run the automatic cleaning process using the **Clean** button – see the **"Automatic Cleaning"** section further in the manual.



Note:

After preparing Cappuccino or Latte, the **Clean** button will start flashing, reminding the user to clean the coffee machine. If you plan to make another Cappuccino or Latte, briefly press the **Clean** button. The flashing will stop, and you will be able to prepare another cup of coffee.



Note:

If you don't use all the milk in the container, remove the container from the machine and store it in the refrigerator. Unused milk can be stored until the next day at most. We do not recommend storing it for longer.



Note:

The dispensing time and temperature for Cappuccino or Latte can be adjusted in the advanced settings – see the **"ADVANCED COFFEE MACHINE SETTINGS"** section.

Preparing Hot Milk and Milk Foam

The coffee machine allows you to prepare hot milk and milk foam separately.

1. Press the **Milk Foam** button and the hot milk and foam preparation process will start.
2. Wait until the preparation process automatically stops.

After finishing the preparation, clean the milk nozzle and the milk container. It is recommended to run the automatic cleaning process using the **Clean** button – see the **"Automatic Cleaning"** section further in the manual.



Note:

The time for dispensing hot milk and foam can be adjusted in the advanced settings – see the **"ADVANCED COFFEE MACHINE SETTINGS"** section.

Table of the default dispensing time for individual beverages

Beverage	Dispensing Time
Espresso	25 s
Lungo	45 s
Cappuccino	50 s
Latte	55 s
Milk foam	40 s
Automatic Cleaning	50 s



Note:

You can adjust the dispensing time in the advanced settings – see the **"ADVANCED COFFEE MACHINE SETTINGS"** section.

Automatic Shut-Off

The coffee machine is equipped with an automatic shut-off function after 10 minutes of inactivity. Press any button to turn the coffee machine back on.

Refilling the Water Tank

If the water in the tank runs out during use, it needs to be refilled.

1. Lift the lid and gently tilt the water tank away from the body of the coffee machine. Then remove it from the back of the coffee machine.
2. Fill the tank with water up to the MAX mark.
3. Insert the tank back into the machine and press lightly to connect the contacts on the bottom of the tank and the coffee machine. Close the lid.

ADVANCED COFFEE MACHINE SETTINGS

Adjusting the Espresso and Lungo Coffee Dispensing Time

The coffee machine allows you to adjust the dispensing time of coffee to your personal preference. Follow these steps:

1. Place a cup under the coffee dispenser.
2. Press and hold the **Espresso** or **Lungo** button for approximately 3 seconds until a short beep sounds. Then release the button.
3. Briefly press the **Espresso** or **Lungo** button when the desired amount of coffee has been dispensed into the cup (coffee will flow for the duration of your preference). The setting will be saved in memory.
4. Once all the buttons on the control panel light up, the coffee machine is ready for use again.

Adjusting the Cappuccino Coffee Dispensing Time

The coffee machine allows you to adjust the dispensing time of coffee and hot milk or milk foam according to your personal preferences.

- To enter settings, press and hold the **Cappuccino** button for approximately 3 seconds until the **Cappuccino** and **Espresso** buttons start flashing.

Default hot milk dispensing time + new coffee dispensing time:

1. Place a cup under the coffee dispenser.
2. Press the **Cappuccino** button, and the coffee machine will start dispensing hot milk and milk foam. Hot milk and milk foam will flow according to the default machine settings.
3. Once the hot milk and foam have finished dispensing, press and hold the **Espresso** button for about 3 seconds until a short beep sounds. Then release the button.
4. Briefly press the **Espresso** button when the desired amount of coffee has been dispensed into the cup (coffee will flow for the duration of your preference). The setting will be saved in memory.
5. Once all the buttons on the control panel light up, the coffee machine is ready for use again.

New hot milk dispensing time + default coffee dispensing time:

1. Place a cup under the coffee dispenser.
2. Press and hold the **Cappuccino** button for about 3 seconds until a short beep sounds. Then release the button.
3. Briefly press the **Cappuccino** button when the desired amount of hot milk and foam has been dispensed into the cup.
4. Briefly press the **Espresso** button, and the coffee will be dispensed according to the default machine settings. The setting will be saved in memory.
5. Once all the buttons on the control panel light up, the coffee machine is ready for use again.

New hot milk dispensing time + new coffee dispensing time:

1. Place a cup under the coffee dispenser.
2. Press and hold the **Cappuccino** button for about 3 seconds until a short beep sounds. Then release the button.
3. Briefly press the **Cappuccino** button when the desired amount of hot milk and foam has been dispensed into the cup.
4. Once the hot milk and foam have finished dispensing, press and hold the **Espresso** button for about 3 seconds until a short beep sounds. Then release the button.
5. Briefly press the **Espresso** button when the desired amount of coffee has been dispensed into the cup (coffee will flow for the duration of your preference). The setting will be saved in memory.
6. Once all the buttons on the control panel light up, the coffee machine is ready for use again.

Adjusting the Latte Coffee Dispensing Time

The coffee machine allows you to adjust the dispensing time of coffee and hot milk or milk foam according to your personal preferences.

- To enter settings, press and hold the **Latte** button for about 3 seconds until the **Latte** and **Espresso** buttons start flashing.

The principle for adjusting the Latte coffee dispensing time is the same as for Cappuccino, described above.

Adjusting the Milk Dispensing Time

The coffee machine allows you to adjust the dispensing time of hot milk and milk foam according to your personal preferences. Follow these steps:

1. Place a cup under the coffee dispenser.
2. Press and hold the **Milk Foam** button for approximately 3 seconds until a short beep sounds. Then release the button.

3. Briefly press the **Milk Foam** button when the desired amount of hot milk and foam has been dispensed into the cup (milk will flow for the duration of your preference). The setting will be saved in memory.
4. Once all the buttons on the control panel light up, the coffee machine is ready for use again.

Adjusting the Coffee Temperature Level

The coffee machine allows you to adjust the coffee dispensing temperature with 7 available levels. The default temperature level is level 3.

Ensure that the holder is inserted and the milk container is attached to the coffee machine.

- To enter settings, press both the **Lungo** and **Milk Foam** buttons simultaneously. A short beep will sound, the **Espresso** and **Lungo** buttons will blink briefly, and then all buttons on the control panel will turn off. Adjust the temperature level according to the table below.

Temperature Level	Settings	Action
3	Default settings	All buttons are off.
2	Press the Espresso button briefly.	The button blinks twice.
1	Press the Espresso button briefly.	The button blinks once.
4	Press the Lungo button briefly.	The button blinks once.
5	Press the Lungo button briefly.	The button blinks twice.
6	Press the Lungo button briefly.	The button blinks three times.
7	Press the Lungo button briefly.	The button blinks four times.

- To confirm the temperature level setting, briefly press the **Milk Foam** button. The setting will be saved, and all buttons will light up.
- To restore the default level, press and hold the **Espresso** and **Lungo** buttons. The buttons will blink three times to confirm.



Note:

Always ensure you have entered the settings and saved changes using the **Milk Foam** button.

Setting the Automatic Shut-Off Time

The coffee machine allows you to set the time after which it automatically shuts off. Ensure that the holder is inserted and the milk container is attached to the coffee machine.

- To access the automatic shut-off time settings, press and hold the **Espresso** and **Milk Foam** buttons. All buttons will turn off.

Level	Period	Action
3	30 minutes	Briefly press the Espresso button and the button will blink three times.
2	4 hours	Briefly press the Espresso button and the button will blink twice.
1	10 minutes	Briefly press the Espresso button and the button will blink once.

The default setting is level 1 (10 minutes).

- To confirm the temperature level setting, briefly press the **Milk Foam** button. The setting will be saved, and all buttons will light up.

Restoring Factory Default

If you need to restore the original factory settings and erase all custom settings, perform a factory reset.

Press and hold the **Espresso** and **Lungo** buttons simultaneously. Both buttons will blink three times, followed by a short beep.

CARE AND CLEANING

- Before cleaning the appliance, always disconnect the plug of the power cord from the mains socket and let it to cool sufficiently.
- Clean the coffee machine after each use.
- Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance, as these could damage the surface of the appliance. None of the components of this appliance are dishwasher safe.



Warning:

To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid.

Automatic Cleaning

Always run the automatic cleaning after using the milk container to remove milk residues.

1. Place a cup or small bowl under the dispensing nozzle of the container.
2. Pour fresh cold water into the milk container.
3. Press the **Clean** button.
4. A short cleaning of the internal system will start and the water will flow into the cup.
5. Allow the coffee machine to complete the automatic cleaning process.

Cleaning the Holders

1. Remove the holder from the coffee machine. Dispose of the used capsule environmentally according to the manufacturer's instructions. If you used ground coffee, dispose of the coffee grounds in a compost bin.
2. Rinse the holder under warm running water and dry it with a clean cloth.
3. After removing the holder, wipe the underside of the interior of the coffee machine with a slightly damp sponge and a clean cloth.
4. Put the holder back into the coffee machine.



Warning:

Do not insert your hands into the upper part of the internal space of the machine when the holder is removed. There is a sharp needle that serves to pierce the capsule during use. Take extra care to avoid injury.

Cleaning the Drip Tray and Grid

1. Carefully remove the drip tray, take off the grid, and empty the tray.
2. Wash the tray and grid in warm water with a little kitchen detergent and rinse with clean water. Dry thoroughly.

Cleaning the Water Tank

1. Remove the water tank from the coffee machine and pour out the water.
2. Rinse the tank with clean, warm water and wipe dry.

Cleaning the Exterior of the Coffee Machine

Wipe the coffee machine with a soft, slightly dampened sponge and wipe dry with a clean cloth.

Cleaning the Milk Container (Fig. D)

We recommend cleaning the milk container regularly after each use. Otherwise, milk residues could accumulate inside, promoting bacterial growth, unpleasant odours, and potentially serious health issues.

1. Remove the milk container from the body of the coffee machine.
2. Take off the lid and pour any remaining milk into a suitable container for refrigeration.
3. Remove the silicone tube from the bottom of the lid.
4. Disconnect the milk dispensing nozzle by twisting it downwards and pulling it out. Remove the stainless steel cover from the nozzle.
5. Wash all parts thoroughly in warm water with a little kitchen detergent. Rinse with clean water and wipe dry, or allow to dry freely.

Reassemble the milk container in reverse order.

DESCALING

Over time, minerals from the water can build up inside the machine's system. It is a natural process. Therefore, regular descaling is necessary. Mineral deposits can negatively affect the taste of your coffee. Descal the coffee machine after every 300 to 400 cups, or when the coffee dispensing decreases.

1. Fill the water tank with a solution of water and descaling agent. Use a descaling agent suitable for capsule coffee machines and follow the instructions provided with the descaling agent.
2. Insert the holder into the coffee machine.
3. Place a large bowl under the spout to catch the used descaling solution and mineral deposits.
4. Use the **Lungo** button to run the descaling process. Always wait for the descaling cycle to complete before pressing it again. Repeat until the water tank is empty.
5. If necessary, refill the water tank with more descaling solution and run the descaling process again using the **Lungo** button.
6. Once the tank is empty, remove it, rinse it thoroughly, and refill it with clean water. Reinsert the tank into the coffee machine.
7. Use the **Lungo** button to flush the coffee machine. Repeat this process with 2 to 3 tanks of clean water.
8. During the descaling process, regularly empty the bowl. Be cautious as the liquid may be extremely hot.

STORAGE

Before storing the appliance, ensure it is clean, dry, and completely cool. Perform the descaling process. Store the appliance in a well-ventilated, dry place out of reach of children and pets.

TROUBLESHOOTING

Problem	Cause	Solution
No buttons are lit, or only some of them are.	The coffee machine is not connected to the power supply.	Properly insert the plug into the power socket.
	The holder is not inserted.	Insert the holder into the coffee machine.
	The milk container is not installed.	Attach the milk container to the coffee machine.
The coffee machine is not dispensing coffee.	The water tank is empty.	Refill the water tank.
	You have used the incorrect holder.	Use the appropriate holder for the type of capsule or ground coffee.
The holder cannot be removed.	The pressure has not been released.	Allow the coffee machine to cool down for 3 to 4 hours.
The coffee machine is beeping.	The water tank is not installed or is not correctly inserted.	Correctly insert the water tank into the body of the coffee machine.
The Clean button is still blinking.	The Clean button will blink for 10 seconds after completing a milk-based drink or frothing milk. It indicates the need for cleaning. To stop the blinking, remove the milk container from the machine or press the Clean button. Even if the Clean button is blinking, it does not affect the correct operation of the coffee machine.	
The coffee machine did not start preparing Cappuccino or Latte.	The holder is not properly inserted.	Insert the holder correctly into the coffee machine.
	The milk container is not installed.	Attach the milk container to the coffee machine.
The prepared milk foam is not sufficient.	To ensure rich and quality milk foam, always use cold whole milk. Regularly clean the coffee machine, milk foam container, and frothing system.	
The coffee machine shut off by itself.	The automatic shut-off time has elapsed.	
The Espresso, Lungo and Milk Foam buttons are flashing.	The coffee machine's internal system has overheated.	Unplug the machine from the power socket and allow it to cool down for at least 30 minutes.



Note:

If the problem persists or is not listed above, switch off the coffee machine, unplug it from the power supply, and contact an authorised service centre.

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220–240 V~
Rated frequency.....	50/60 Hz
Rated input.....	1450 W
Noise level.....	75 dB
Dimensions (coffee machine only).....	253 × 117 × 290 mm
Weight (coffee machine only).....	3 kg

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED

PACKAGING MATERIAL

Dispose of used packaging material at the location designated by the municipality for waste disposal.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be added to ordinary municipal waste. For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

To dispose of electric or electronic equipment, request necessary information from your retailer or supplier.

Disposal in Other Countries Outside the European Union

To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.

Changes to text and technical parameters are reserved.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-aparat-za-kafu-scc-3000bk-akcija-cena/>