

Uputstvo za upotrebu (EN)

SENCOR aparat za kuvanje pirinča SRM 1550SS

SENCOR

Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-aparat-za-kuvanje-pirinca-srm-1550ss-akcija-cena/>



EN ■ Fully-automatic Rice Cooker

Translation of the original manual

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- Keep the appliance and its power cord out of the reach of children younger than 8 years.
- This rice cooker is designed for domestic use and similar locations such as:
 - kitchens in stores; offices and other workplaces;
 - in agriculture;
 - for guests of hotels, motels and other similar locations;
 - in bed and breakfast establishments.
- The surface of the heating element retains residual heat after use.
- The surfaces of the appliance that come into contact with food must always be cleaned according to the instructions in this user's manual.
- Make sure that no water or any other liquid splashes on the power plug or the power socket, and that the hot steam emitted from the appliance is also kept away. If this, nevertheless, occurs, disengage the circuit breaker of the power socket and then carefully dry the power socket and the power plug before further use.

**Warning:**

Incorrect use may lead to injuries.

**Warning:**

Using non-original accessories may result in a dangerous situation arising.

- This appliance is designed for use in indoor areas only. Never use this appliance outdoors or in an industrial environment.
- This appliance is designed for cooking rice and steam cooking food. Do not use the appliance for any other purposes than those for which it is intended.
- This appliance must be used only in accordance with the instructions contained in this user's manual.
- Before connecting the appliance to a power socket, check that the nominal voltage on its rating label matches the voltage in the power socket to which you wish to connect it. Connect the power plug only to a properly grounded power socket. Do not use an extension cord.
- Fully unwind the power cord before using it.
- Only use the appliance with the original accessories that came with it.
- When assembling the lid, proceed according to the instructions in this user's manual. The lid handle must be attached to the lid pointing towards the side opposite the steam exhaust outlet.
- Only use the appliance on an even, dry, clean, stable surface and heat resistant surface. Do not use the appliance on the drip area of the kitchen sink.
- Do not place the appliance on the edge of a table, on unstable, inclining or uneven surfaces, on an electric or gas stove and other sources of heat, or in their vicinity.
- Do not use the appliance on heat sensitive surfaces as such surfaces could be damaged.
- Only use the removable inner bowl supplied with this appliance. Never use a different bowl.
- Do not use a cracked, dented or otherwise damaged inner bowl. A damaged removable inner bowl must be replaced by a new bowl of the original type.
- Before inserting the removable inner bowl into the rice cooker unit, check that the outer surface of the removable bowl and the inner area of the rice cooker are completely clean and dry. To prevent damaging the appliance, there must be no dried on food remains, etc. on the outer surface of the inner bowl and the surface of the heating element.
- Before connecting the appliance to a power socket, make sure that the removable inner bowl is properly seated in the rice cooker unit, that the removable inner bowl is filled with water and foodstuffs and that the lid is correctly positioned on the removable inner bowl. Do not overfill the removable inner bowl.
- Do not connect the appliance to a power socket or turn it on without the removable inner bowl located in the rice cooker unit.
- Do not use the appliance with an empty removable inner bowl.


**Warning:**

Do not pour water into the rice cooker unit, do not pour rice into it or place any other foodstuffs into it. Foodstuffs and water are put only into the removable inner bowl.


- When the appliance is in operation, the lid must be properly positioned on the removable inner bowl.
- Do not place any items on to the lid.

- During operation there needs to be sufficient area for air circulation above the appliance and around it. Do not use the appliance in the vicinity of heat sensitive materials. Do not cover the appliance or block its vents.
- Make sure that the steam exhaust outlet does not point towards heat sensitive materials or you or other people. Hot steam may cause serious scalding.
- Do not leave the rice stirring and serving spoon or any other kitchen utensils inside the removable inner bowl when using the “KEEP WARM” function.
- The temperature of accessible surfaces on the appliance is high when the appliance is in operation and for a certain time afterwards.
- When handling the appliance after finishing cooking, it is necessary to be very careful not to touch the rice cooker unit or any other parts of the appliance because they may still be hot as a result of residual heat.
- Do not touch the hot surface. After turning off and disconnecting the appliance from the power socket, use the handles to lift and carry the appliance. For reasons of increased safety, we recommend using kitchen gloves.
- Use the handle for lifting and carrying the lid. When lifting the lid, to prevent scalding, it is necessary to take care that the steam escaping from the inner bowl is not directed at you. For reasons of increased safety, we recommend using kitchen gloves.
- The water from the lid may only drip into the removable inner bowl; it must not drip into the rice cooker unit.
- When the lid is hot, do not place it on heat sensitive surfaces.
- The appliance must not be left without supervision when it is in operation.
- Always turn off and disconnect the appliance from the mains power socket when not using it, when leaving it without supervision, before removing the inner bowl or steamer insert, before cleaning, maintenance or moving it. Never move the appliance during operation.
- It is necessary to pay exceptional care when moving the appliance when it is filled with hot food or liquids.
- Always allow the appliance to fully cool down before removing the inner bowl or the steamer insert and before cleaning.
- Regularly clean the appliance after each use according to the instructions in the chapter Cleaning and maintenance. Do not perform any maintenance on the appliance apart from the cleaning procedure described in chapter Cleaning and maintenance.
- No part of this appliance is intended for washing in a dishwasher.
- To prevent an electrical hazard, never submerge the rice cooker, the power cord or the power plug into water or any other liquid.
- Do not place any items on the power cord. Make sure the power cord does not hang over the edge of a table, that it is not touching a hot surface or sharp objects.
- Disconnect the appliance from the power socket by pulling the power plug out of the power socket. Do not disconnect the appliance from the power socket by pulling on the power cord. Otherwise, this could damage the power cord or the power socket.
- Do not use the appliance when it is not functioning correctly or after it has fallen on the floor, been submerged in water or is damaged in any other way. Hand it over to an authorised service centre for inspection or repair.
- In order to prevent a hazardous situation arising, do not repair the appliance yourself or modify it in any way. For all repairs, contact an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

A

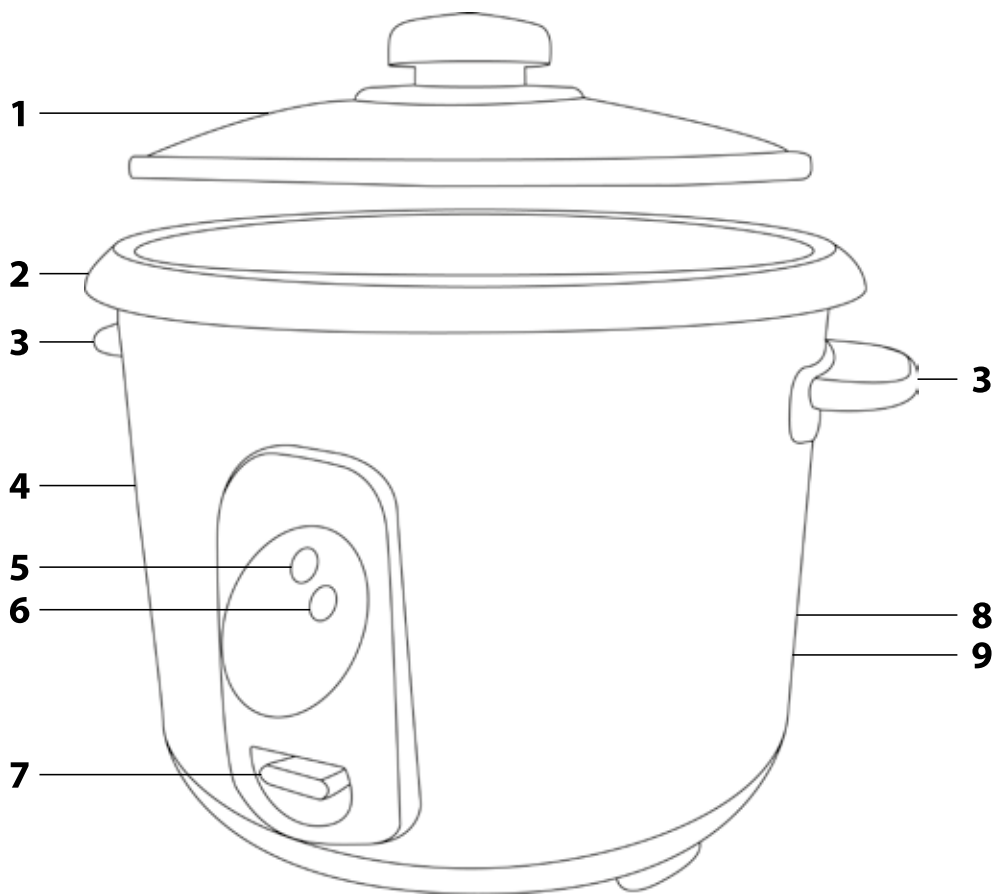

B

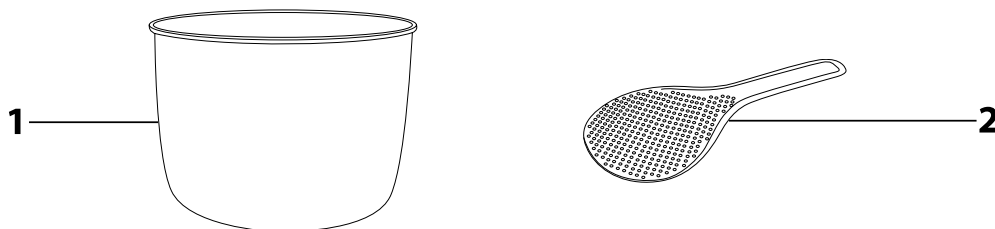

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

A1 Glass lid with a handle and an excess steam release hole

A2 Inner removable bowl with a non-stick finish

A3 Handle

A4 Outer pot

A5 WARM indicator light
indicates the keep warm mode

A6 COOK indicator light
indicates the rice cooking mode

A7 Switch for changing between the WARM and COOK modes

A8 Power cable (no illustration)

A9 Power switch (no illustration)

DESCRIPTION OF SUPPLIED ACCESSORIES

B1 Rice and water measuring cup

B2 Stirring spoon

BEFORE FIRST USE

- 1) Take the rice cooker and its accessories out of the packaging materials.
- 2) Wash the removable bowl **A2**, the lid **A1**, the measuring cup **B1** and the spoon **B2** in warm water with dishwashing detergent. Then rinse all these parts under clean running water and dry them thoroughly.

USING THE RICE COOKER

- 1) Place the removable bowl **A2** on the kitchen bench or another even and stable surface. Using the supplied measuring cup **B1** measure the required amount of rice.



Attention:

A maximum of 2–8 level measuring cups of rice can be cooked in a single batch.

Transfer the rice to a strainer and rinse through using running water. Transfer the rinsed rice into the removable bowl **A2** and evenly spread it out from the centre towards the wall of the bowl. Add the appropriate amount of cold water. You will find the recommended rice and water dosage ratio in the table below.

Number of level measuring cups of uncooked rice

Amount of water

2 measuring cups

Add water up to the 2 CUP mark on the removable inner bowl **A2**.

3 measuring cups

Add water up to the 3 CUP mark on the removable inner bowl **A2**.

4 measuring cups

Add water up to the 4 CUP mark on the removable inner bowl **A2**.

5 measuring cups

Add water up to the 5 CUP mark on the removable inner bowl **A2**.

6 measuring cups

Add water up to the 6 CUP mark on the removable inner bowl **A2**.

7 measuring cups

Add water up to the 7 CUP mark on the removable inner bowl **A2**.

8 measuring cups

Add water up to the 8 CUP mark on the removable inner bowl **A2**.



Note:

Two measuring scales are marked on the measuring cup **B1**. One measuring scale is used for measuring rice ($\frac{1}{4}$, $\frac{1}{2}$, $\frac{3}{4}$ cup or one level measuring cup) and the second scale is used for measuring water (40 to 160 ml).

A single level measuring cup is equal to 140 g of uncooked rice.



Attention:

The rice to water ratio can be modified as necessary. However, make sure that the water level does not exceed the 1.5 l water level mark on the inside wall of the removable bowl **A2**. Otherwise boiling water could spray out during the cooking process.

- 2) Insert the bowl **A2** into the outer pot **A4** and cover it with the lid **A1**. Make sure that bowl **A2** is correctly seated in the outer pot **A4**.
- 3) Insert the power plug into an electrical power socket. Slide the power switch to position I (turned on).
- 4) When the appliance is turned on using power switch **A9**, the WARM mode (keep warm function) is automatically started. This is indicated by the WARM **A5** indicator light being lit. To start the COOK (cook rice) mode, slide the switch **A7** downwards. The COOK indicator light **A6** will turn on. Do not slide switch **A7** back to the upper position while the rice is cooking.
- 5) The rice will be cooked in approximately 30 minutes. Afterwards, the rice cooker will automatically switch to the WARM mode. The WARM mode can keep the rice warm for up to 6 hours. After this, the rice cooker will turn off.



Tip:

The rice will taste better if you allow it to finish cooking in the WARM mode for 10 to 20 minutes.



Note:

To maintain flavour, we recommend that you do not keep the rice warm for longer than 3 hours. Otherwise it may dry out.

- 6) If you wish to serve the rice, carefully lift the lid **A1** and put it aside. Gently stir the rice using the spoon **B2** and serve.



Attention:

To avoid damaging the non-stick finish of the removable bowl **A2**, do not use metal kitchen utensils to stir the rice.

- 7) Another batch of rice can be cooked after several minutes as soon as it is possible to start the COOK mode.



Note:

Do not attempt to hold down the switch **A7** in the lower position.

- 8) When you have finished using the appliance, slide the power switch **A9** to position 0 (turned off). If you will not be using the rice cooker, disconnect it from the power socket.

CLEANING AND MAINTENANCE

- Check that the power cord is disconnected from the power socket and allow the rice cooker to cool down. Take the removable bowl **A2** out of the outer pot **A4** and remove any remaining rice.
- Wash the removable bowl **A2**, the lid **A1**, the measuring cup **B1** and the spoon **B2** in warm water with dishwashing detergent. Then rinse these parts under flowing water and dry them.



Attention:

Do not wash the removable bowl **A2** in a dishwasher.

- Clean the outer pot **A4** using a lightly damp cloth and then wipe dry.
- Do not use abrasive cleaning products, steel wool, petrol, solvents, etc. for cleaning.

STORAGE

- Store the assembled rice cooker in a dry, clean place that is out of reach of children.

TECHNICAL SPECIFICATIONS

Nominal voltage range.....	220–240 V
Nominal frequency.....	50/60 Hz
Rated power input.....	500 W
Capacity.....	1.05 kg of uncooked rice + 1.5 l water

We reserve the right to change the text and technical specifications.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-aparat-za-kuvanje-pirinca-srm-1550ss-akcija-cena/>