

## Uputstvo za upotrebu (EN)

SENCOR kuhinjska vaga SKS 7100SS

**SENCOR**



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-kuhinjska-vaga-sks-7100ss-akcija-cena/>

# SENCOR®

## SKS 7100SS



### KITCHEN SCALE

Translation of the original manual




**SENCOR®**

**SKS 7100SS**



**A**

**1**

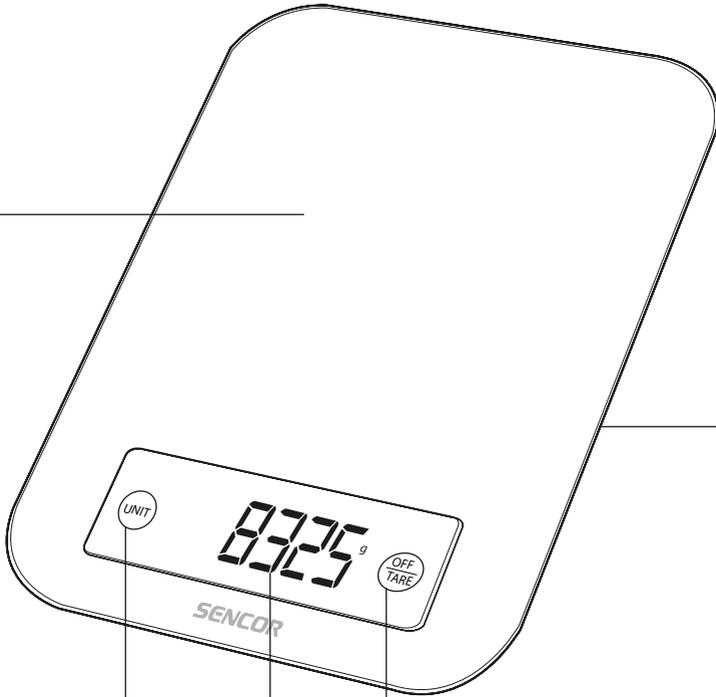

**5**

**2**

**3**

**4**

# EN Kitchen Scale

## Important safety instructions

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance is designed for household use. Do not use it for commercial purposes, for weighing animals or for other purposes for which it is not intended.
- This appliance may be used by children and persons with reduced physical, sensory or mental abilities or with insufficient experience and knowledge if they are properly supervised.
- Children must be supervised to ensure that they do not play with the appliance.
- Do not use the appliance outdoors, do not locate it on unstable surfaces, on electric or gas cooktops, in the vicinity of an open flame or other sources of heat.
- Do not expose the appliance to direct sunlight or high humidity and do not use it in an excessively dusty environment.
- During use, it is necessary to ensure that the appliance is located on an even, smooth, hard and stable surface. Otherwise, this may result in weighing inaccuracies.
- In the event that the maximum weighing capacity is exceeded, remove the excessively heavy food or item from the weighing platform to prevent possible damage to the appliance.
- Do not use the appliance as a place for placing items. It must be ensured that no items are placed on the appliance during storage.
- Always use new batteries of the same type. Never combine used and new batteries or various types of batteries. Never put the batteries in a fire, short circuit them or damage them in any way. Dispose of them ecologically at the end of their lifetime. Never throw batteries out with communal waste.
- If you will not be using the appliance for an extended period of time, remove the batteries. If the battery were to leak into the inner area of the appliance, this could damage it.
- Do not use rechargeable batteries to power this appliance.
- Keep the batteries out of children's reach as they may present a hazard to a child. In the event that a child swallows a battery, immediately seek medical help.
- Keep the appliance clean. When cleaning it, follow the instructions in chapter Cleaning and maintenance. Do not submerge the appliance under water or any other liquid and do not rinse it under running water.
- Do not repair the appliance yourself or make any adjustments to it. Have all repairs performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

# EN Kitchen Scale

## User's manual

- Thank you for purchasing a SENCOR brand product and we hope that you will be happy with it.
- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

### DESCRIPTION OF THE APPLIANCE

- |                                                                                |                                                                                                                                                             |
|--------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>A1</b> Weighing surface                                                     | <b>A4</b> OFF/TARE button for turning the scale on and off, for zeroing the weight of the item located on the scale and for weighing additional ingredients |
| <b>A2</b> UNIT button for toggling between metric and imperial measuring units | <b>A5</b> Battery compartment (on the underside)                                                                                                            |
| <b>A3</b> Numerical display                                                    |                                                                                                                                                             |

### POWER SOURCE

- This scale also comes with two type AAA 1.5 V batteries. Remove the battery compartment cover. Insert new batteries of the same type. Ensure correct polarity as shown at the bottom of the battery compartment and put on the cover.
- When the display shows "LO", it is necessary to replace both batteries with new ones.
- Remove the battery compartment cover and take out the flat batteries. Insert new batteries of the same type. Ensure correct polarity as shown at the bottom of the battery compartment and put on the cover.

### SELECTING A WEIGHT AND VOLUME MEASURING UNIT

- Press the UNIT button and select a weight unit in the order: g – lb:oz – oz – ml. The display will show the respective icon.

### USING THE SCALE

- Place the scale on an even and stable surface.
- To turn on the scale, gently push down on the weighing surface. "0" will appear on the display. Place the ingredients that you wish to weigh into the middle of the weighing surface. The weight of the weighed ingredients will be shown on the display.
- If you need to weigh several ingredients one after the other and to always begin at zero after weighing one ingredient, press the OFF/TARE button to zero out the value on the display and to be able to weigh another ingredient.
- When you have finished weighing, long press the OFF/TARE button to turn the scale off.
- The scale will automatically turn off after 60 seconds of inactivity.

### ERROR MESSAGES

Display	What to do
Lo	Batteries are flat. Replace the batteries. More information in chapter "Power source".
unSt	The value shown on the display is unstable or the scale is not located on an firm and level surface. Place the scale on a firm and level surface and repeat the weighing process.
EEEE	The maximum weighing capacity of the scale is exceeded. Remove the ingredients to prevent damaging it.

### CLEANING AND MAINTENANCE

- To clean the scale, use a soft sponge lightly dampened in warm water. Wipe dry using a clean wiping cloth.
- For cleaning, do not use steel wool, cleaning products with an abrasive effect, solvents, etc. Otherwise, the surface of the appliance may be damaged.
- Do not submerge the scale under water or any other liquid and do not rinse it under running water.

### TECHNICAL SPECIFICATIONS

Power source.....	2x 1.5V type AAA batteries
Weighing capacity.....	10 kg / 22 lb
Weighing precision.....	1 g, 0.1 lb:oz, 0.05 oz, 1 ml
Unit selection.....	g / lb:oz / oz / ml

We reserve the right to change text and technical specifications.

### INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling, hand these products over to determined collection points. Alternatively, in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

#### For business entities in European Union states

If you want to dispose of electrical or electronic equipment, ask your retailer or supplier for the necessary information.

#### Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-kuhinjska-vaga-sks-7100ss-akcija-cena/>