

## Uputstvo za upotrebu (EN)

SENCOR kuvalo za vodu SWK 0950WH

**SENCOR**



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-kuvalo-za-vodu-swk-0950wh-akcija-cena/>

# SENCOR®

SWK 0950WH  
SWK 0951BK



**ELECTRIC KETTLE**  
Translation of the original manual




**SENCOR®**


**SWK 0950WH  
SWK 0951BK**



**A**

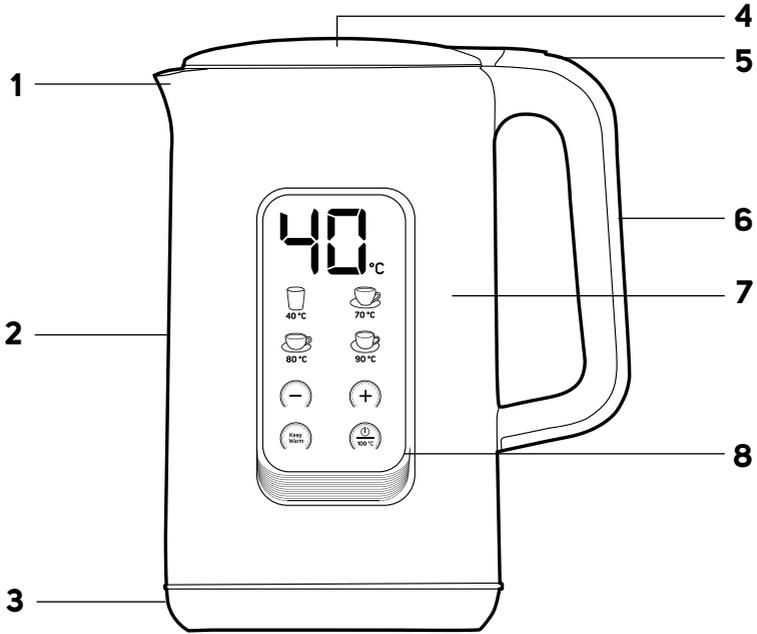

**B**

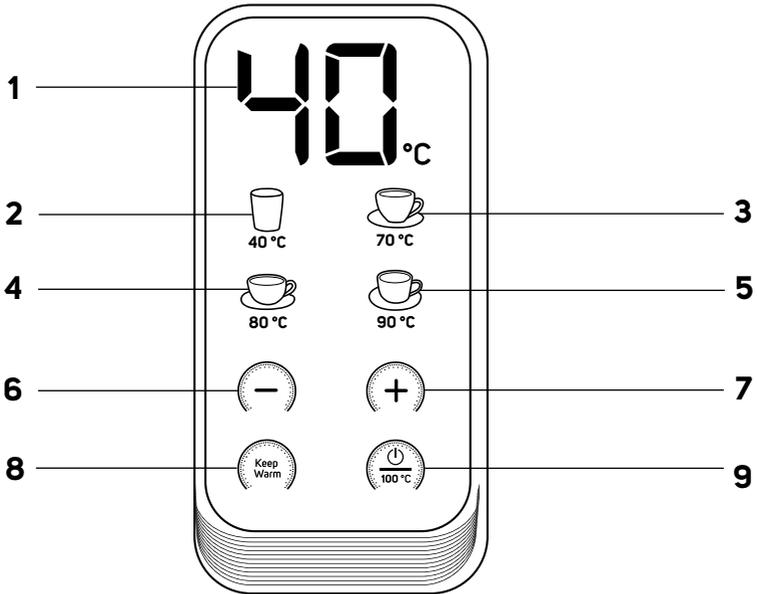

## Important Safety Instructions

### READ CAREFULLY AND STORE FOR FUTURE USE.

#### General Warnings

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and user maintenance shall not be done by children unless they are older than 8 years and supervised.
- Keep the appliance and its power cord out of reach of children younger than 8 years of age.
- If the power cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cable damaged.
- This appliance is intended for household use.  
The appliance is also designed for the following:
  - personal non-commercial use in premises such as staff kitchens in stores, offices and other workplaces;

- personal non-commercial use in areas such as agriculture;
- personal non-commercial use by guests in hotels, motels and other residential areas;
- personal non-commercial use in areas such as bed and breakfast businesses.
- Do not wash the kettle or its base under running water. Do not submerge the fast boil kettle or its base in water or any liquids.
- If the kettle is overfilled, hot water may splash out.



**WARNING:**

Do not open the lid while the water is boiling.

- Use the kettle only with the supplied base. Do not use the base with other types of appliances.



**WARNING:**

Avoid spilling on the plug (center connector).

- Follow the cleaning instructions in the chapter BEFORE FIRST USE and FOR CLEANING and MAINTENANCE.



**WARNING:**

Incorrect use may lead to injury.

- The surface of the heating element contains residual heat after use. Do not touch hot surface.

### **Additional Important Safety Instructions for Use of the Appliance**

- Unwind the power cord in full before use. Make sure that the power cable does not hang over the edge of the table or touch hot surfaces or sharp objects.
- Before connecting the appliance to power, make sure that its power ratings match those of the wall socket. Connect the appliance only to a properly earthed socket.
- Do not place the appliance on windowsills, sink drain trays or uneven/unstable surfaces. Only place the appliance on a stable, even, clean and dry surface.
- Do not place the appliance on or near an electrical or gas stove. Keep it at a sufficient distance from open fire, heating elements and other sources of heat.
- Do not use the appliance outdoors, in excessively dusty or humid environments or in the near vicinity of a bath, shower or swimming pool.
- To prevent electric shock, do not immerse the appliance, the power cord or the power cord plug in water or other liquid.
- Only use the appliance to heat up drinking water. Do not use it to warm up other liquids or food.
- During operation, a clear space of at least 20 cm around the appliance and above it must be kept. Do not use the appliance near materials or objects sensitive to heat or steam.
- During use, the appliance must not be placed under the power socket to prevent it from being exposed to hot steam escaping from the appliance.
- Do not cover the appliance while in use, while connected to a power socket or when it is filled with water or heated.
- Fill the kettle with cold water. Remove the kettle from its base before filling. Do not fill the kettle when placed on the base.
- Fill the kettle with water to at least the MIN mark, but do not overfill it above the MAX mark.
- When placing the kettle on and removing from the base, make sure that the centre connector does not come into contact with water.
- Prevent the control panel from coming into contact with water or any other liquid. The liquid around the control panel with the display could enter the appliance and cause it to malfunction.
- Do not turn on the appliance when it is empty. Incorrect use may negatively affect the appliance's lifetime. For the case of accidental empty start-up, the appliance is equipped with a thermal protection to protect it from damage.
- Before turning the kettle on the lid must be closed properly.
- To prevent the risk of scalding with hot water or steam, do not open the lid while the water is being heated or immediately after the heating has finished.
- Pay special attention when lifting and carrying a kettle containing hot water. Never lift the kettle by its lid or body. Use the handle for lifting and carrying the kettle.
- Take extra care when emptying the kettle to avoid scalding with hot water or steam.
- Before refilling, please empty the kettle completely. Open the lid only after the kettle has been emptied. Do not pour ice-cold water into the kettle when it is hot.
- Always switch unplug the appliance from the mains socket when left unattended, after use and before cleaning or moving.
- Unplug the appliance from the power socket by pulling the plug. Do not pull the power cord. Otherwise, damage to the power cord or the socket may occur.
- Do not connect or disconnect the power cord plug to or from the power socket with wet hands.
- Do not use the appliance if it is not working properly or shows any signs of damage. Take it to an authorised service centre for inspection or repair.
- To avoid the risk of electric shock, do not repair or modify the appliance yourself. All repairs should be carried out by an authorised service centre. Tampering with the appliance may result in the loss of your legal rights regarding faulty performance or warranty for quality.

# EN Electric Kettle

## User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
- It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

### DESCRIPTION OF THE APPLIANCE

<b>A1</b> Spout	<b>A7</b> Minimum and maximum level marks are marked inside the kettle.
<b>A2</b> Kettle body	
<b>A3</b> Base with a central connector	
<b>A4</b> Lid	<b>A8</b> Touch control panel with LED display
<b>A5</b> Open lid button	
<b>A6</b> Handle	

### DESCRIPTION OF THE CONTROL PANEL WITH LED DISPLAY

<b>B1</b> The temperature display shows the set or current water temperature.	<b>B7</b> Touch button for temperature setting, each press of the button increases the set temperature by 5°C, setting range 40°C to 100°C
<b>B2</b> 40°C preset temperature touch button	<b>B8</b> Touch button for setting/ cancelling the "Keep Warm" mode
<b>B3</b> 70°C preset temperature touch button	<b>B9</b> Touch button to cancel the settings made, prematurely turn off the kettle and quickly start heating to 100°C
<b>B4</b> 80°C preset temperature touch button	
<b>B5</b> 90°C preset temperature touch button	
<b>B6</b> Touch button for temperature setting, each press of the button reduces the set temperature by 5°C, setting range 40°C to 100°C	

### BEFORE FIRST USE

- Remove all wrapping material, including advertising labels or stickers, from the kettle and its base.
- In order to remove any impurities from the production process, allow clean water to boil in the kettle several times before using it for the first time. Please follow the instructions below.
- Remove the kettle from the **A3** base. Unwind the entire length of the power cord from the bottom of the **A3** base and run it through the groove in the **A3** base. Place the **A3** base on an even, dry and stable surface.
- Press the **A5** button to open the **A4** kettle lid. Fill the kettle with clean drinking water up to the MAX mark. Close the **A4** lid properly.



#### Warning:

Never fill the kettle when it is placed on the **A3** base. Do not overfill the kettle. There is a risk of boiling water splashes.

- Place the kettle on the **A3** base. Insert the power cord plug into a wall power socket.

- Press the **B9** touch button. Heat the water to 100°C. When the water is brought to the boil, the kettle will switch off automatically.
- Empty the contents of the kettle. Allow the kettle to cool for a while and boil clean water two to three more times. Now the kettle is ready for use.

### USING YOUR KETTLE

- Remove the kettle from the **A3** base. Unwind the entire length of the power cord from the bottom of the **A3** base and run it through the groove in the **A3** base. Place the **A3** base on an even, dry and stable surface.
- Press the **A5** button to open the **A4** kettle lid. Fill the kettle with clean, drinking water. The minimum and maximum amount of water is marked inside the kettle with MIN | 0.5 L and MAX | 1.7 L.
- Close the **A4** lid properly.



#### Warning:

Never fill the kettle when it is placed on the **A3** base. Do not overfill the kettle. Otherwise there is a danger of splashing hot water.

- Place the kettle on the **A3** base. Insert the power cord plug into a wall power socket.
- Once connected to the socket, the kettle enters the setting mode. A beep sound will be made and the touch control panel with LED display **A8** will be illuminated. The **B1** temperature indicator will show the current water temperature inside the kettle.

#### Quick Start of Water Heating to 100°C

- To quickly start water heating to 100°C, press the **B9** touch-button. The kettle will automatically start heating the water to 100°C. When heating starts, the **B6**–**B9** touch control buttons will be illuminated and the **B1** indicator will show the current water temperature.
- When the boiling point has been reached, a sound is made and the heating of the water is automatically stopped.
- After 30 seconds, the kettle will switch to the stand-by mode automatically.
- When the kettle is lifted from the **A3** base, the control panel with the **A8** display turns off.

#### Heating with Setting Water Temperature

- Use the **B2**, **B3**, **B4** or **B5** touch buttons to select one of the preset temperatures or use the **B6** and **B7** touch buttons to set the desired temperature. Each time the **B6** or **B7** touch-button is pressed, the temperature setting changes by 5°C. The **B1** indicator shows the set temperature. To cancel the settings, press the **B9** button. All touch buttons will be lit again on the control panel. Please make the settings again.
- Shortly after selecting the preset temperature or the temperature setting the water heating starts automatically. After the start of heating, the **B1** indicator will show the current water temperature. Touch buttons **B8** and **B9** and the touch button for the preset temperature you have selected, or touch buttons **B6** and **B7** if you have set the temperature manually, will light up on the control panel.
- When the set temperature is reached, a sound will be made and the water heating will be stopped automatically.
- After 30 seconds, the kettle will switch to the stand-by mode automatically.
- When the kettle is lifted from the **A3** base, the control panel with the **A8** display turns off.

## Heating with Setting and Maintaining Water Temperature

- According to the instructions in chapter **Heating with Setting Water Temperature**, select the preset temperature or set the temperature manually. Press touch button **B8** to activate the “Keep Warm” function. The **B8** touch button will flash. The “Keep Warm” function can be deactivated by pressing the **B8** button again.
- Water heating will be started automatically. After the start of heating, the **B1** indicator will show the current water temperature. On the control panel, touch button **B9** and the touch button of the preset temperature you have selected will light up, or touch buttons **B6** and **B7** will light up if you have set the temperature manually. The **B8** touch button will flash. This signals the setting of the “Keep Warm” function.
- When the set temperature is reached, a beep sounds and the kettle will automatically switch to the “Keep Warm” mode. The set water temperature will be maintained for 2 hours. The memory function allows the kettle to be lifted 10 times from the base during this time without disabling the “Keep Warm” function. This is provided that you return the kettle to the base with water that has not dropped by 8°C or more below the set temperature. If you have partially emptied the kettle, at least 0.5 litres of water must remain in the kettle before returning it to the base. Otherwise, the kettle will not work properly.
- After 2 hours, an acoustic signal sounds and the kettle enters set-up mode. After 30 seconds, the kettle will switch to the stand-by mode automatically.
- When the kettle is lifted from the **A3** base, the control panel with the **A8** display turns off.

### “Stand-by” Mode

- In the standby mode, the **B9** touch-button flashes slowly. Other control panel elements and the **A8** display are off.
- To switch the kettle to the setting mode, press the **B9** touch button. The control panel with the **A8** display will light.
- Hold down the **B9** touch-button for 3 seconds to put the kettle back into standby mode.

### Cancellation of Settings and Premature Termination of Water Heating or “Keep Warm” Mode

- Press the **B9** button to cancel the settings made or to terminate prematurely:
  - water heating;
  - heating and maintaining water temperature;
  - “Keep Warm” mode.
- After use, disconnect the power cord from the mains socket. Empty the kettle and allow it to cool down. Do not leave the water in the kettle for further use.

### PROTECTION AGAINST OVERHEATING WHEN SWITCHED ON EMPTY

- The kettle is equipped with a thermal protection to protect it against overheating if you switch it on empty or with insufficient amount of water. If such a situation occurs, the kettle will automatically turn off. Disconnect the power cord from the mains socket and allow the kettle to cool. The thermal fuse resets once it has cooled down and the kettle can be used again.

### CLEANING AND MAINTENANCE

- Disconnect the power cord from the mains socket. Empty the kettle and allow it to cool down fully.
- Do not use wire cloths, abrasive cleaners, thinners, etc. for cleaning to prevent the surface from being damaged.



#### Warning:

To prevent the risk of electric shock, do not immerse the appliance, power cord, or plug into water or any other liquid, nor wash these parts under running water.

None of the components of this appliance is dishwasher safe.

- Wipe the kettle outer surface with a lightly damp cloth as needed and then wipe it dry with a clean, dry cloth. Do not press too hard on

the control panel with the display. Wipe the bottom part that attaches the kettle to the **A3** base with a dry cloth only to prevent moisture from entering the centre connector.

- To clean the **A3** base, use a dry cloth only.

### Removing Lime Scale Deposits

- As the lime scale deposited on the bottom inside the kettle reduces the efficiency of the heating element and adversely affects the kettle lifetime, remove it regularly depending on the kettle use frequency.
- During standard use (3 to 5 times per day), we recommend water scale deposits be removed:
  - Once per month in areas with hard and very hard water;
  - Once every two to three months in areas with soft and medium soft water.
- To remove lime scale deposits, you can use a solution prepared from water and common 8% vinegar or citric acid. The recommended ratio of water to vinegar is 2:1. The recommended dosage of citric acid is 2 tablespoons per 1 litre of water.
- According to the above instructions, prepare 1l of solution and pour it into the kettle. Heat the solution to 90°C and leave it in the kettle for 30 to 60 minutes. Then empty the kettle and before further use boil clean water in it four to five times.
- Do not neglect regular cleaning.

### STORAGE

- Before storing, ensure that the power plug is disconnected from the mains socket and the appliance is clean and dry.
- Store the appliance in a clean and dry place out of reach of children and animals.

### TECHNICAL SPECIFICATIONS

Rated voltage range .....	220–240 V
Rated frequency .....	50–60 Hz
Rated power input .....	1850–2200 W
Capacity .....	1.7 l

We reserve the right to change the text and technical specifications.

### INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material in the designated waste disposal area determined by the municipality

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product.

By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

### For Business Entities in European Union States

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

### Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.



This product complies with all the essential requirements of the applicable EU directives.





Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-kuvalo-za-vodu-swk-0950wh-akcija-cena/>